


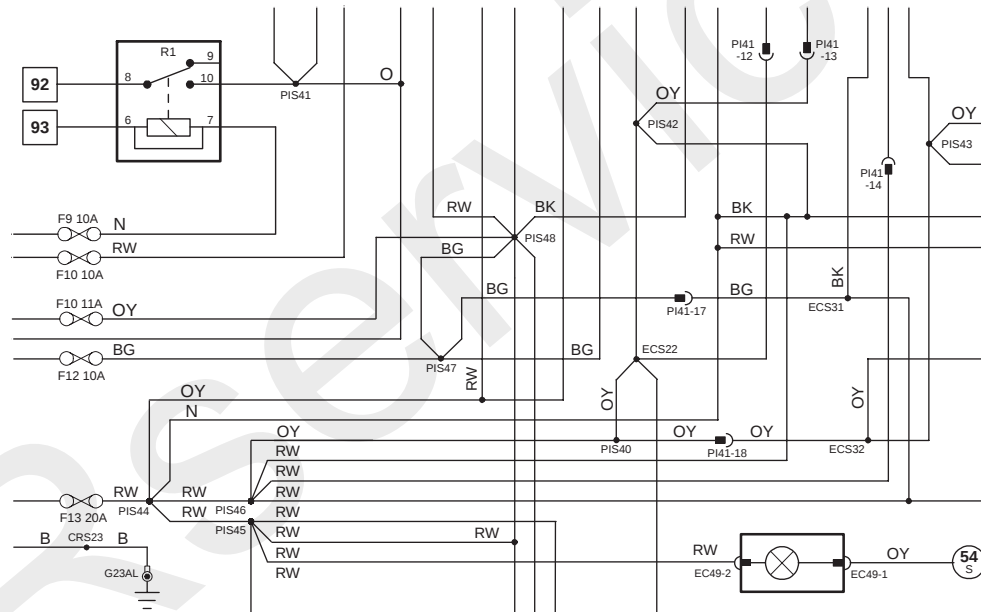

Electrical Wiring Diagrams



Range Rover Sport

VIN:147226>



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE DUKE OF EDINBURGH
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK

PREVIOUS APPOINTMENT TO THE LATE QUEEN ELIZABETH THE QUEEN MOTHER 1964 - 2007

Electrical Wiring Diagrams

Range Rover Sport

Published by Technical Communications, Land Rover
Publication Part No. JLR 13 34 21_1E, September 2007

PREFACE

While every effort is made to ensure accuracy, design changes to the vehicle may be made in the period between the completion of this publication and the introduction of vehicles.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, recording or other means without prior written permission from Land Rover.

© 2007 Land Rover

CONTENTS

ABBREVIATIONS

.....	3
-------	---

USING THIS PUBLICATION

Health and safety	4
Using this publication	4
Section numbering	4
Circuit sheet numbering	4
Understanding the circuit diagrams	4

204-04 - WHEELS AND TIRES

Tire pressure monitoring system	6
---------------------------------------	---

204-05 - VEHICLE DYNAMIC SUSPENSION

Air suspension	7
----------------------	---

204-06 - RIDE AND HANDLING OPTIMIZATION

Terrain Response	9
Dynamic Response	11

205-02 - REAR DRIVE AXLE AND DIFFERENTIAL

.....	12
-------	----

206-05 - PARKING BRAKE AND ACTUATION

.....	14
-------	----

206-09 - ANTI-LOCK CONTROL

Steering angle sensor	16
.....	17

211-04 - STEERING COLUMN

Clock spring	19
Adjustable - memory	21

303-03 - ENGINE COOLING

PV8SC	22
Cooling Fans - Diesel	23

303-06 - STARTING SYSTEM

Ignition switch	24
-----------------------	----

303-14 - ELECTRONIC ENGINE CONTROLS

PV8SC	25
DV6 - EU3	32
DV6 - EU4	37
DV8	43
PV8NA	50

307-01 - AUTOMATIC TRANSMISSION

Petrol	57
Diesel	60

308-07 - FOUR WHEEL DRIVE SYSTEMS

Transfer box - Diesel	63
Transfer box - Petrol	65

310-01 - FUEL TANK AND FUEL LINES

.....	67
-------	----

310-03 - SPEED CONTROL

.....	69
-------	----

412-01 - CLIMATE CONTROL

TSD	71
-----------	----

412-02 - AUXILIARY CLIMATE CONTROL

Rear window heater	75
Windshield heater	76
Fuel fired booster heater	77
Cool box	78

413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

.....	79
-------	----

413-01 - INSTRUMENT CLUSTER

.....	84
-------	----

413-06 - HORN

.....	87
-------	----

413-13 - PARKING AID

.....	88
-------	----

CONTENTS

414-01 - BATTERY, MOUNTING AND CABLES

Ground distribution	91
Transit relay	103
Splices	104
Central junction box	128
Battery junction box	137

414-02 - GENERATOR AND REGULATOR

Charging - PV8	144
Charging - DV8	145
Charging - DV6 (EU4)	146
Charging - DV6 (EU3)	147

415-00 - INFORMATION AND ENTERTAINMENT SYSTEM

Low line	148
High line - Harman Kardon	156

417-01 - EXTERIOR LIGHTING

Trailer socket - NAS	167
Lighting control switch	169
Headlamps - cornering	170
Headlamps - adaptive front lighting system	171
Headlamps - high intensity discharge	173
Fog lamps - NAS	176
Headlamps	177
Stop and reverse lamps	180
Trailer socket	181
Turn signal indicators and hazard flashers	183
Fog lamps - non NAS	185

417-02 - INTERIOR LIGHTING

.....	186
-------	-----

418-00 - MODULE COMMUNICATIONS NETWORK

MOST	189
Diagnostic socket	204
CAN bus - high speed	205
CAN bus - medium speed	209

419-01 - ANTI-THEFT SYSTEM

Passive	211
Active	212

501-09 - REAR VIEW MIRRORS

Electrochromic	215
Heated	216
Fold back	217
Non memory	218
Memory	219

501-10 - SEATING

Memory	221
Non memory	223
Heated - rear	225
Heated - front	227
Lumbar support - non memory	228
Lumbar support - memory	229

501-11 - GLASS, FRAMES AND MECHANISMS

Window lift	230
-------------------	-----

501-12 - INSTRUMENT PANEL AND CONSOLE

Cigar lighter	232
.....	233

501-14 - HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

Tailgate power striker	234
Central locking system	235

501-16 - WIPERS AND WASHERS

Washer jets - heated	240
Power wash	241
Rear	242
Front	244

501-17 - ROOF OPENING PANEL

.....	245
-------	-----

501-20 - SUPPLEMENTAL RESTRAINT SYSTEM

Non NAS	246
NAS	249

ABBREVIATIONS

Abbreviation	Description
ABS	Anti-lock braking system
AFS	Adaptive front lighting system
AUTO	Automatic transmission
CAN	Controller area network
DSC	Dynamic stability control
D4	Diesel engine - Straight-four
DV6	Diesel engine - V6
DV8	Diesel engine - V8
EGR	Exhaust gas recirculation
FET	Field effect transistor
GPS	Global positioning system
HS CAN	High speed controller area network bus
PV6	Petrol engine - V6
PV8	Petrol engine - V8
PV8NA	Naturally aspirated engine - V8
PV8SC	Super charged engine - V8
LH	Left-hand
LIN	Local interconnect network
MAF/IAT	Mass air flow / intake air temperature
MS CAN	Medium speed controller area network bus
NAS	North American specification
PDC	Park distance control
RH	Right-hand
TPMS	Tire pressure monitoring system
TSD	Touch screen display

USING THIS PUBLICATION

Health and safety

Always follow health and safety guidelines, specifically those detailed in the Workshop Manual.

Using this publication

The information provided in this publication is for use only by competent, qualified auto-electricians. Good product knowledge is assumed, as well as the ability to access and use recommended test equipment and other reference material provided.

Test equipment and other reference material

The information in this publication should be used in conjunction with the recommended test equipment; refer to Workshop Manual. Other reference material includes: Technical Service Bulletins (TSB) and the Workshop Manual.

The Electrical Reference Library (ERL) may also prove useful since it provides detailed connector information.

Battery disconnection and reconnection

It is imperative that any information relating to battery disconnection and reconnection is followed; refer to the appropriate sections in the Workshop Manual.

Fault Diagnosis

Always use the recommended test equipment for correct and reliable fault diagnosis, refer to the Workshop Manual.

Harness Repair

Repairs should only be undertaken for connectors where a Service Repair Kit is available; refer to the appropriate Electrical Reference Library (ERL).

Note: Fibre Optic circuits cannot be repaired; refer to the Workshop Manual.

Section numbering

The sections in this publication are ordered to match the Global Outline numbering system as found in the current Workshop Manual. The Power and Ground distribution circuits can be found under section 414-01, BATTERY, MOUNTING AND CABLES.


Note: Where circuit diagrams show more than one sub-system, the circuit will be located in the section that carries the first-named sub-system, for example: Starting and Charging will be located under section 303-06 Starting System, since 'Starting' is the first-named sub-system.

Circuit sheet numbering

The figures in brackets to the left of the page number indicate a circuit sheet number and the total number of sheets per circuit, for example (01 / 05) represents sheet 1 of 5.

Understanding the circuit diagrams

Components

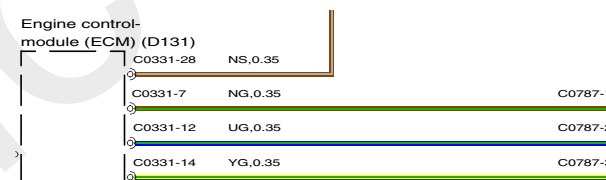

After each component description, a translation code is displayed in brackets, for example: Starter relay (R102), Engine control-module (ECM)(D131). The codes can be ignored.

Note: A dotted outline indicates that the component identified is not shown in its entirety.

Connectors

Connectors and header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C0292-1 identifies connector 292, pin number 1. Wire insulation colours are listed in a table at the end of this section. Where wires have a predominant colour with a secondary colour tracer, the main colour is identified first, i.e. WH-BK - white with a black tracer.

USING THIS PUBLICATION

 
Wire length (Power and Ground Distribution only)

The wire length (in millimetres) is displayed after the colour and cross sectional area; for example, SR,0.35,480. In this example, the figure, 480 indicates the approximate position of the harness splice is 480mm from connector C2335.


Line Types



Crossed wires as illustrated above show an example of how a twisted pair of wires may be represented on the circuits.



The arrows illustrated above show an example of the page break symbols, identifying that the circuit continues at the corresponding letter on the sheet number indicated.

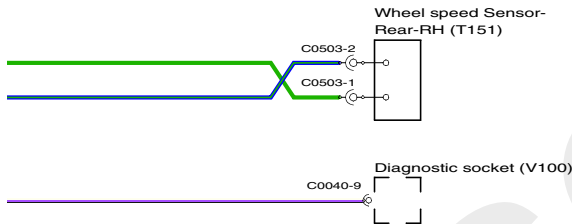


The cup and ball symbol represents the male and female halves of connector. Most connectors plug directly into a component but some are wired directly to the component using a 'flylead' as with C503 above.


Ground points

Ground points are identified with an eyelet symbol and a connector number, except where components are grounded through its fixings, when only the eyelet is shown.


Colour Codes

CODE	COLOUR
BK or B	BLACK
BN or N	BROWN
BU or U	BLUE
GN or G	GREEN
GY or S	GREY (slate)
OG or O	ORANGE
PK or K	PINK
RD or R	RED
VT or P	PURPLE
WH or W	WHITE
YE or Y	YELLOW

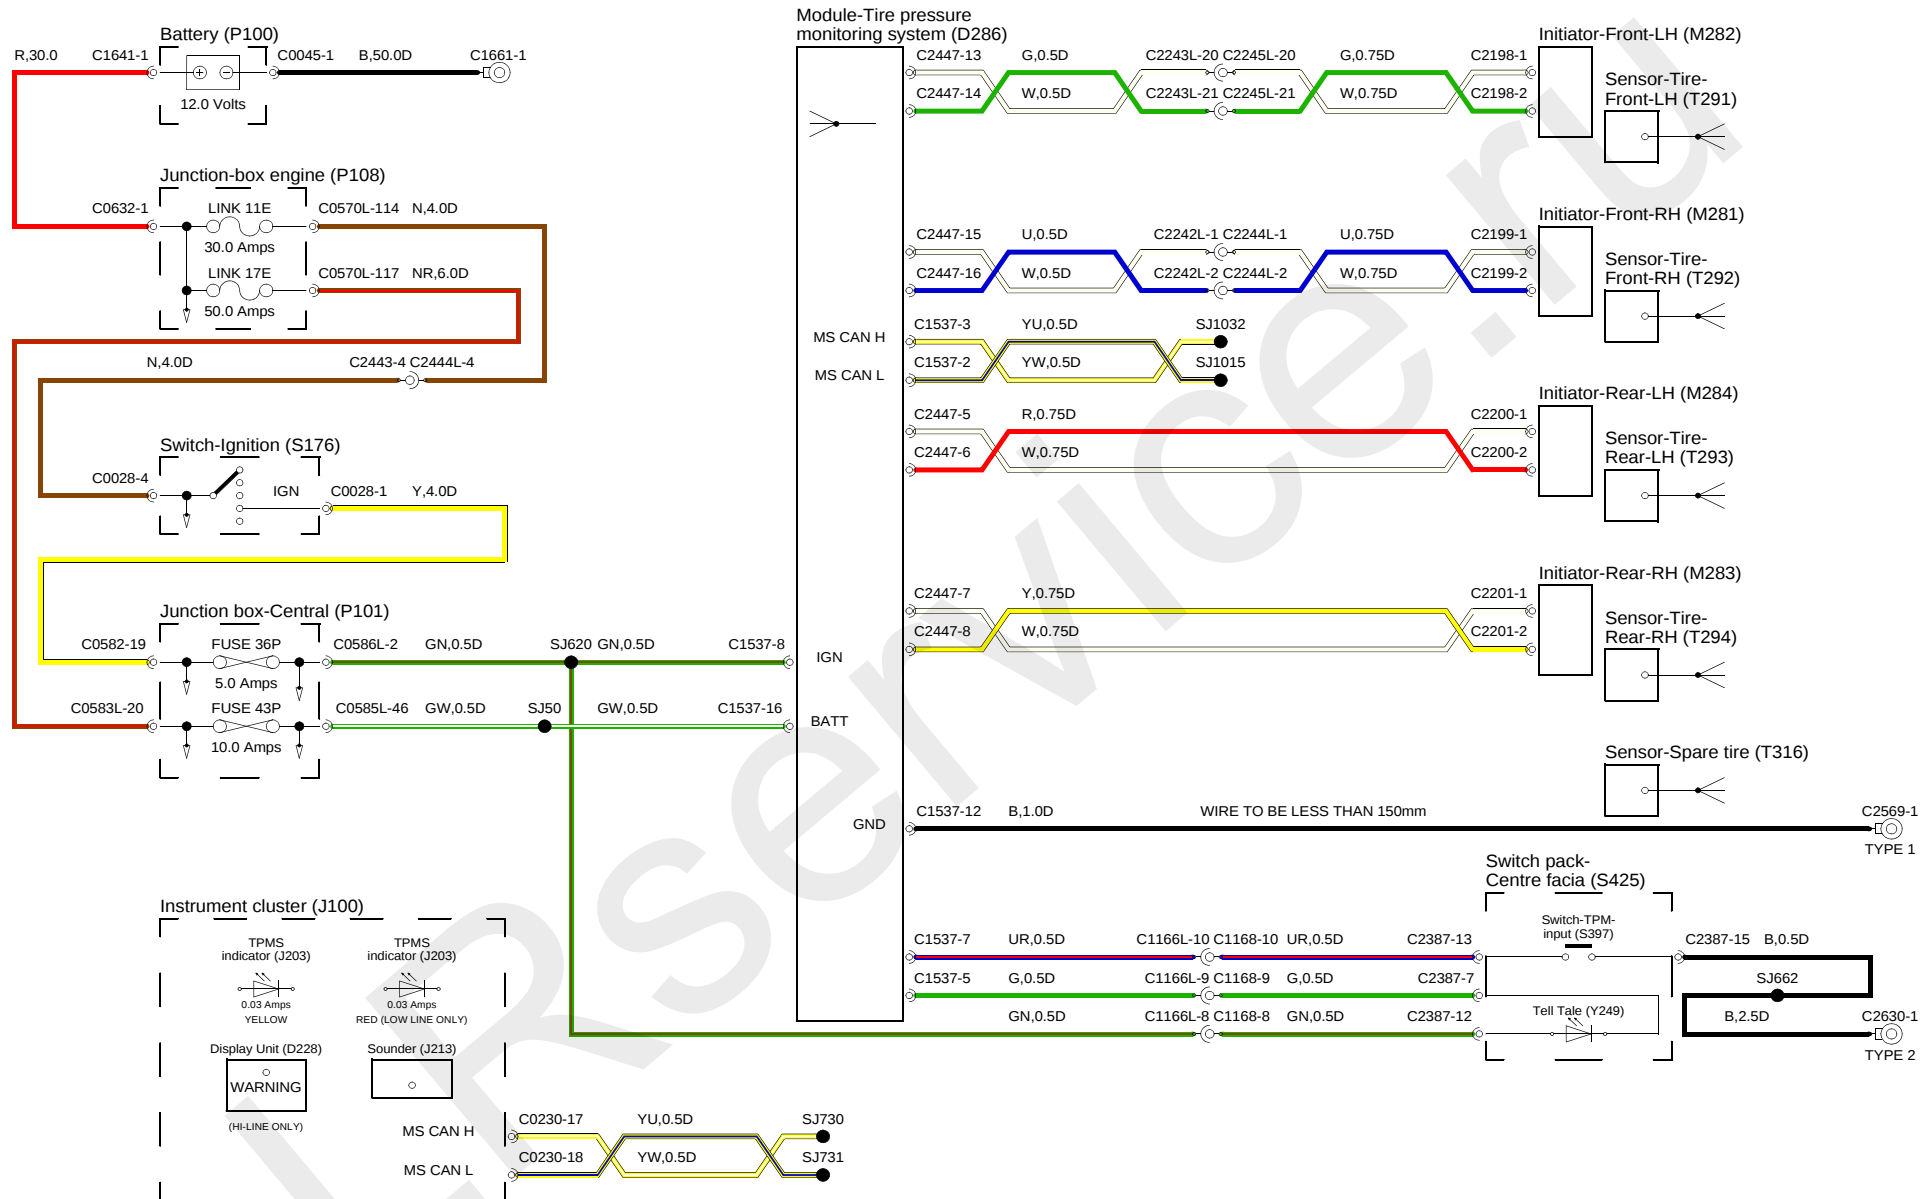


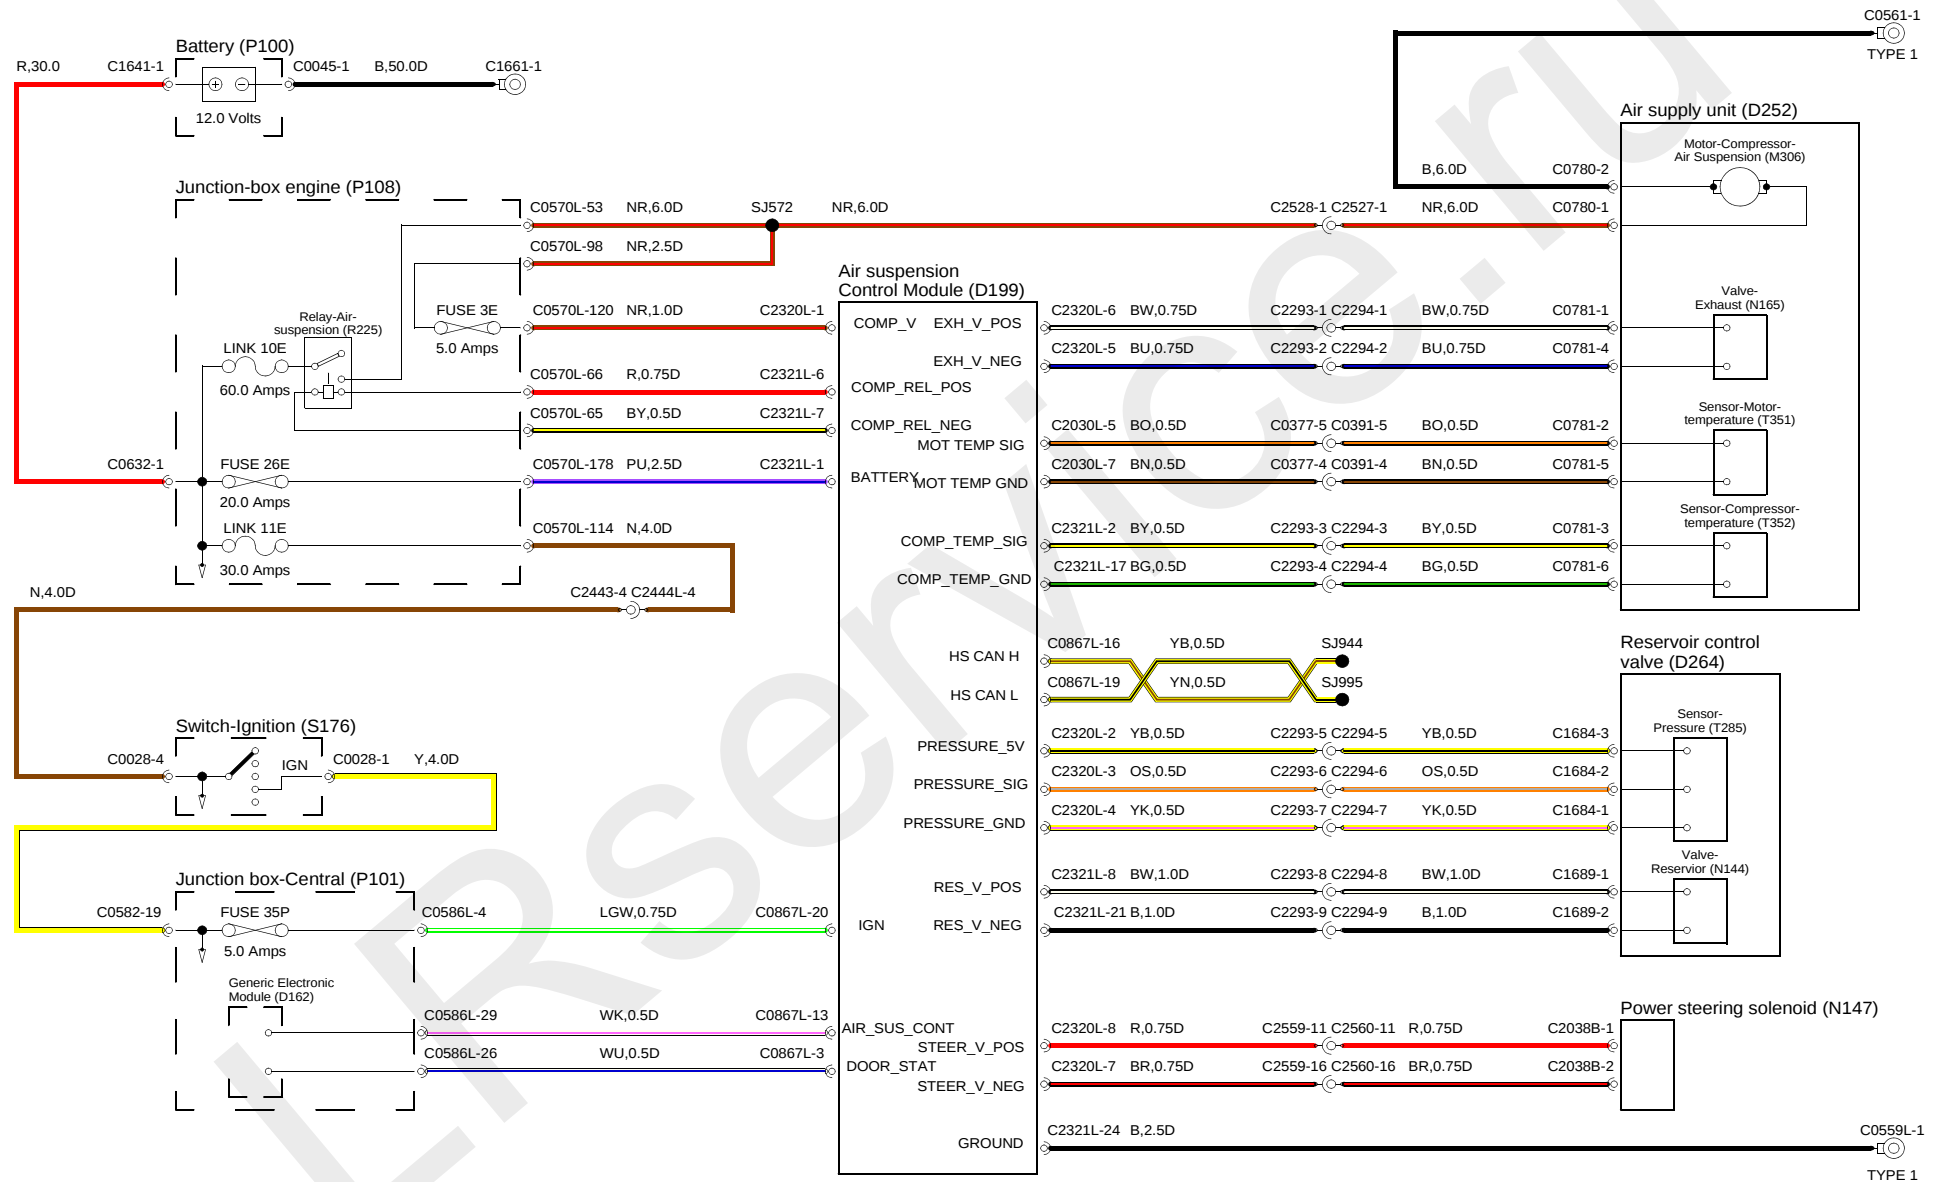


Switch pack-Centre-console (S350)

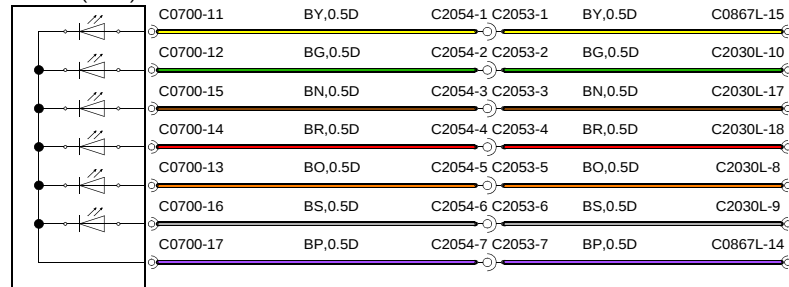



Air suspension Control Module (D199)

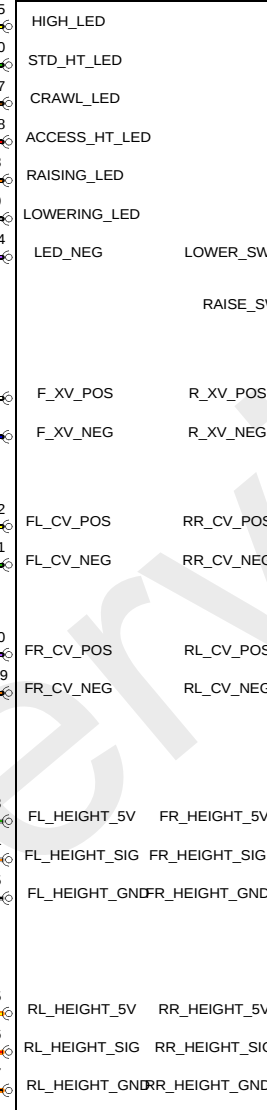


Switch pack-Centre-console (S350)

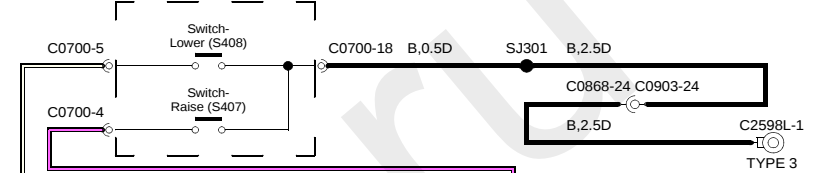



Front control valve (D281)

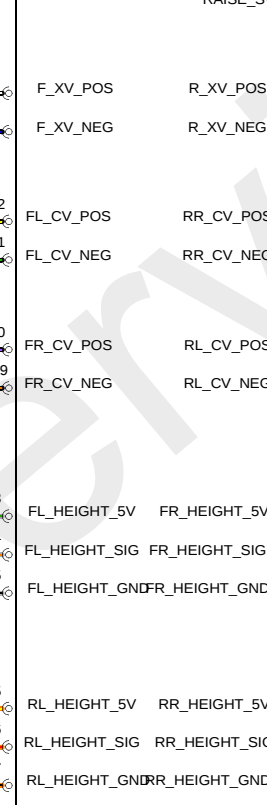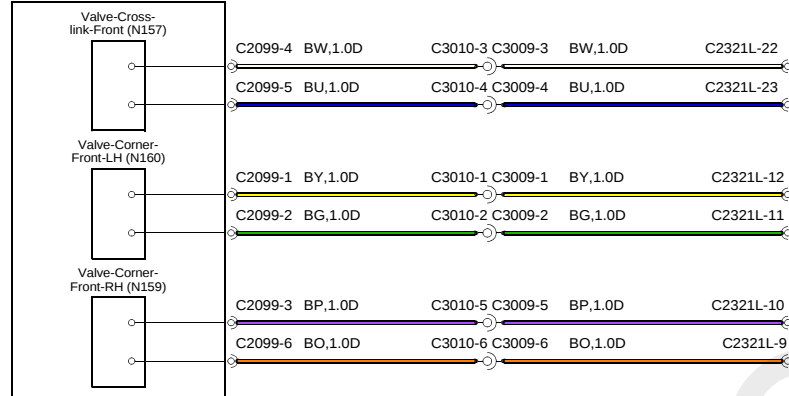


Rear control valve (D280)

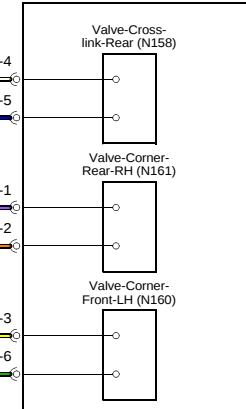




Sensor-Height-Front-LH (T236)

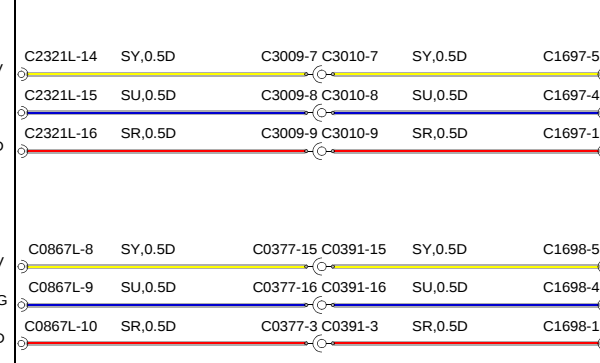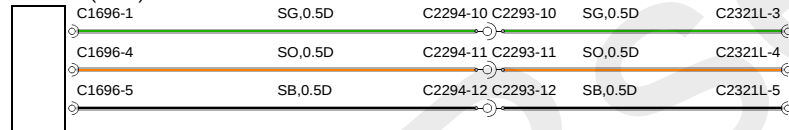


Sensor-Height-Front-RH (T238)

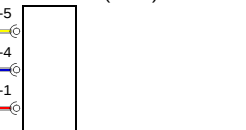



Sensor-Height-Rear-LH (T235)

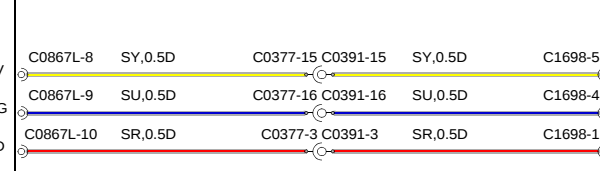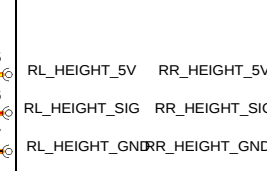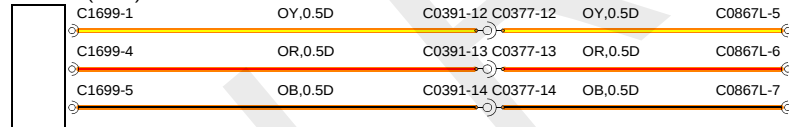


Sensor-Height-Rear-RH (T237)

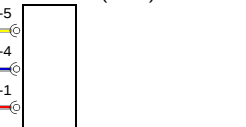

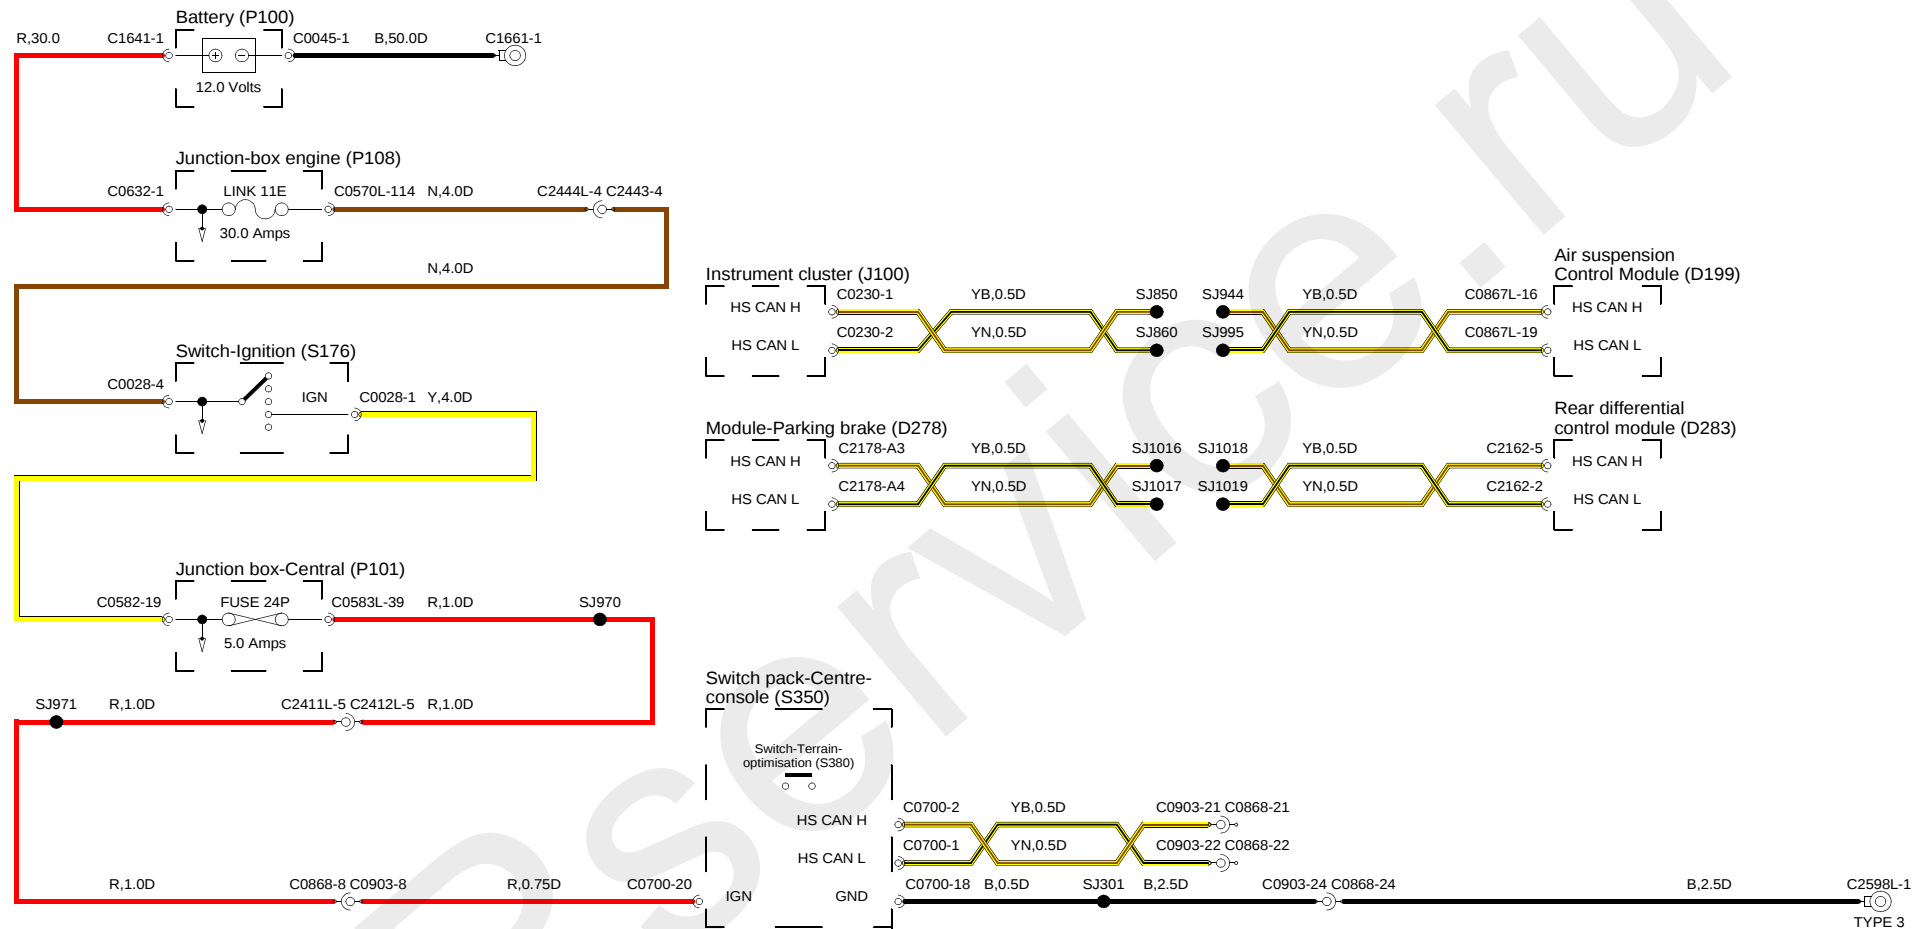


 
Engine control-
module (ECM) (D131)Engine control-
module (ECM) (D131)Transfer box control
module (D204)

 
TCM and Control Valve Body (D306)




ABS module (D277)

 


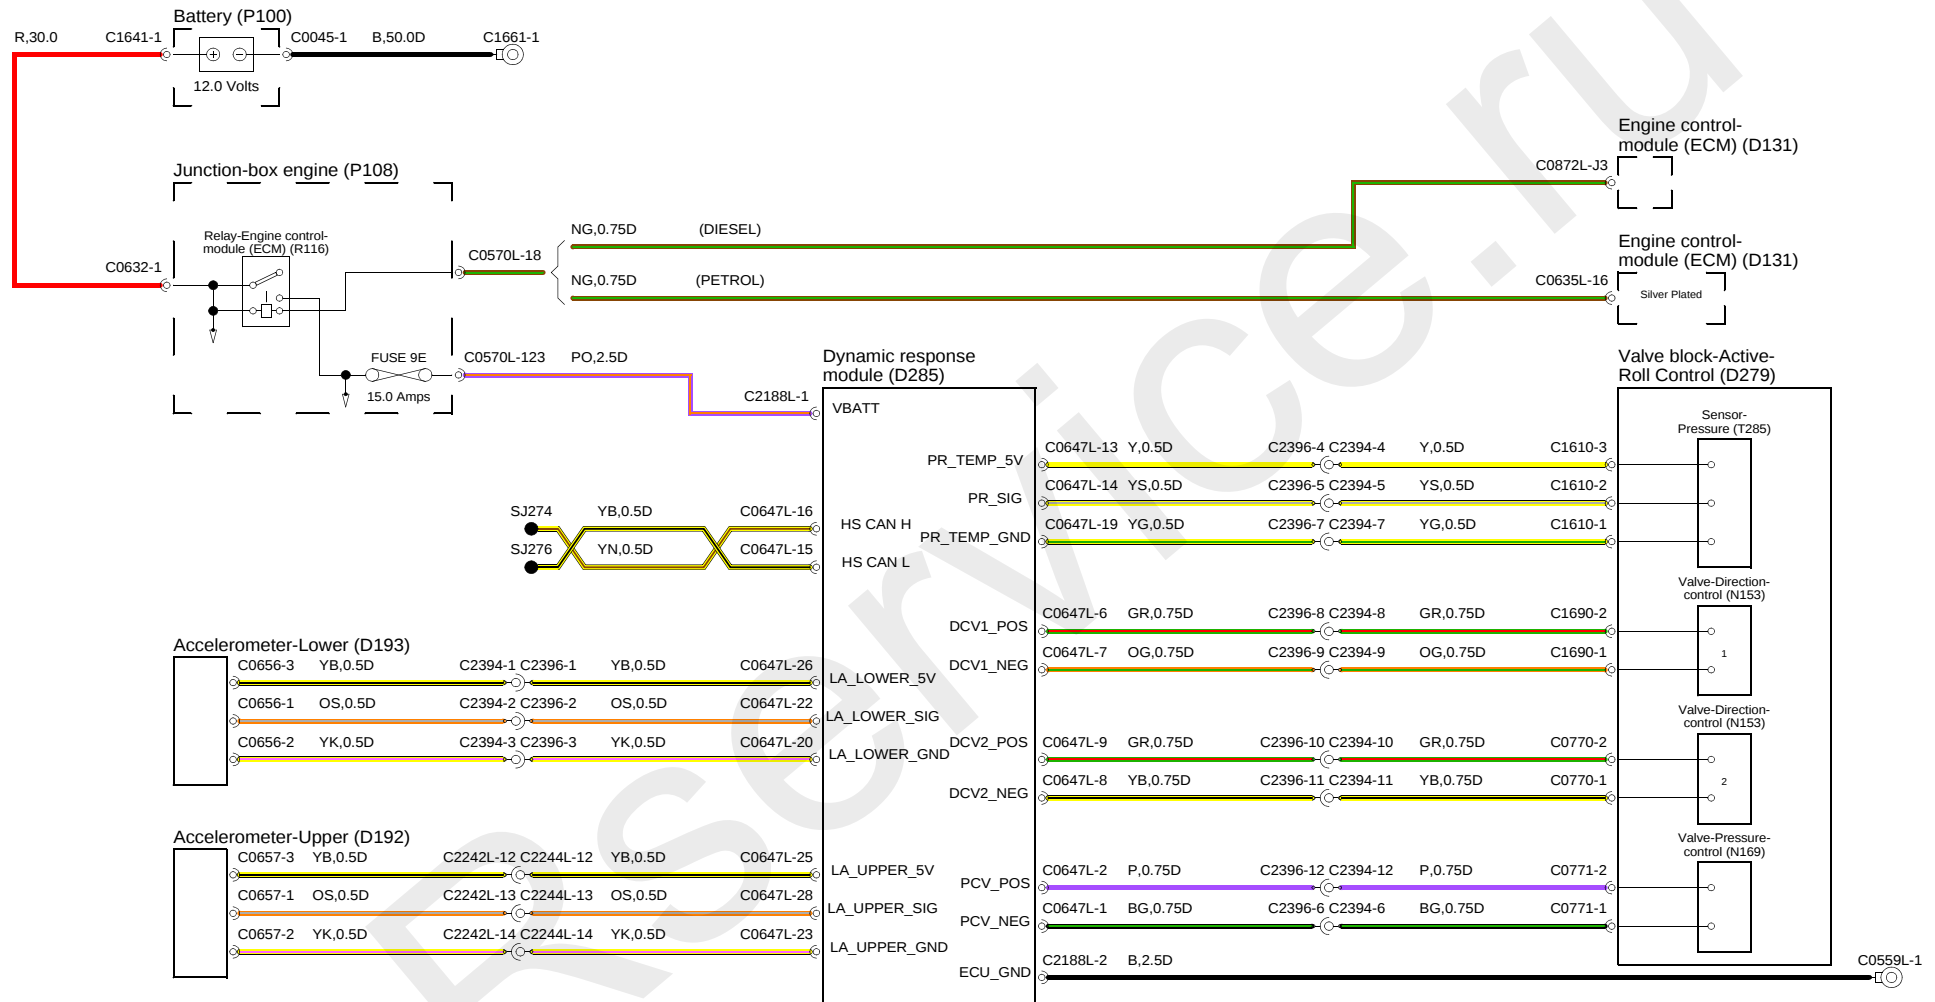

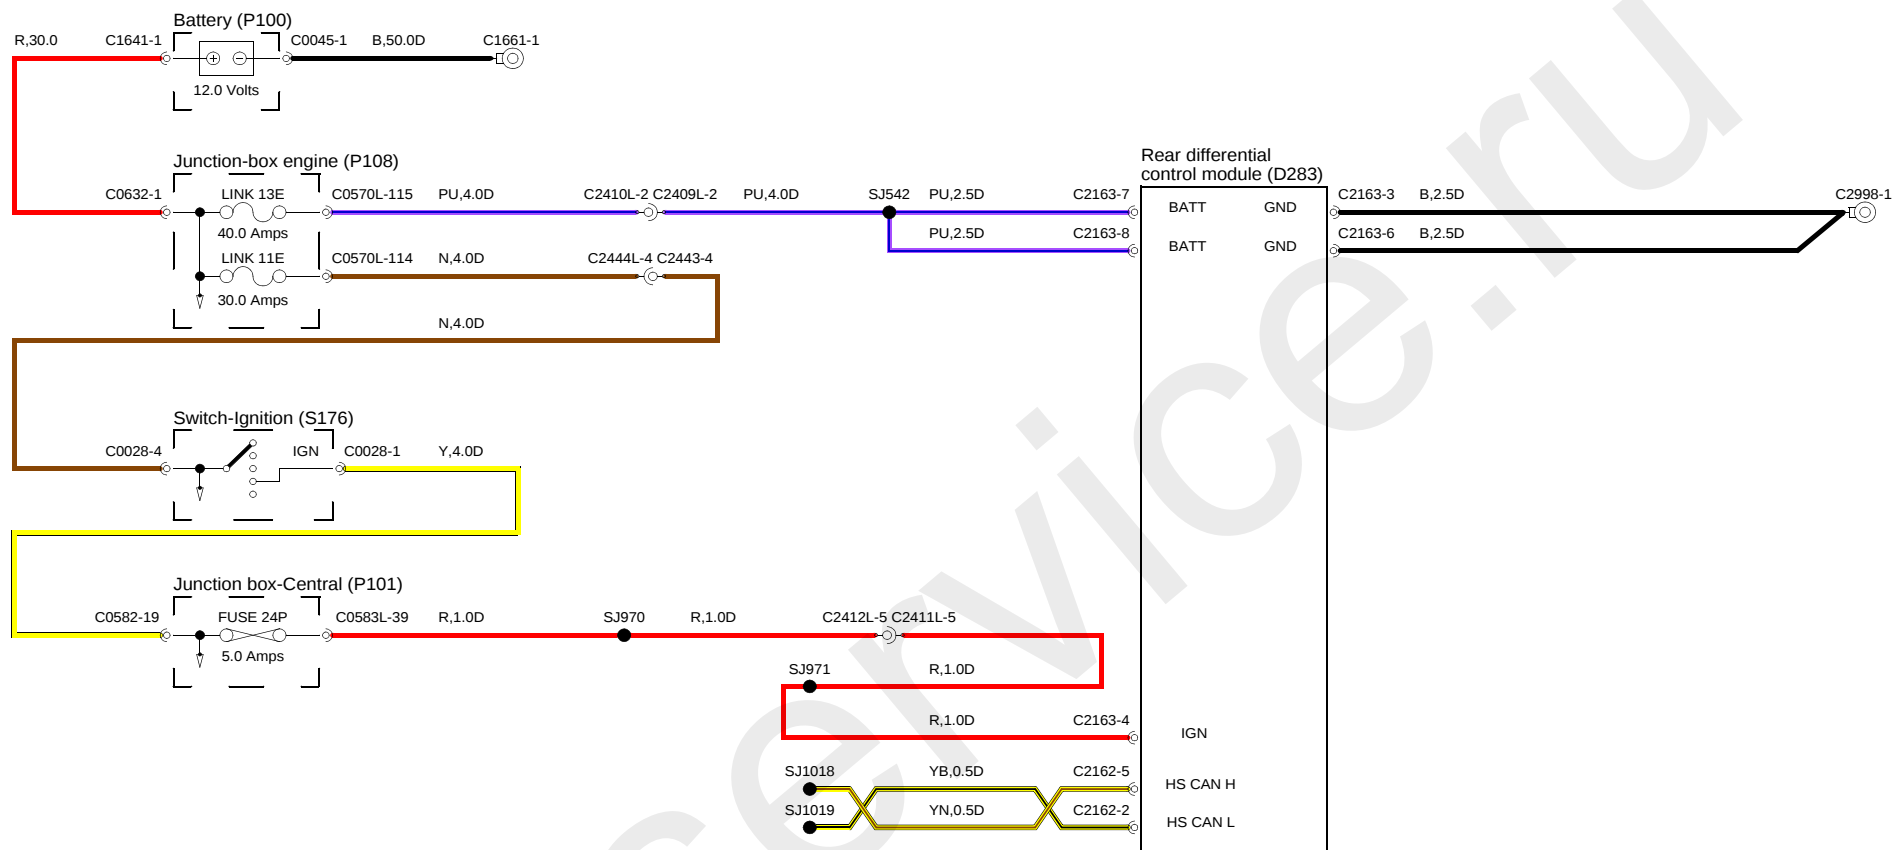



205-02 - REAR DRIVE AXLE AND DIFFERENTIAL

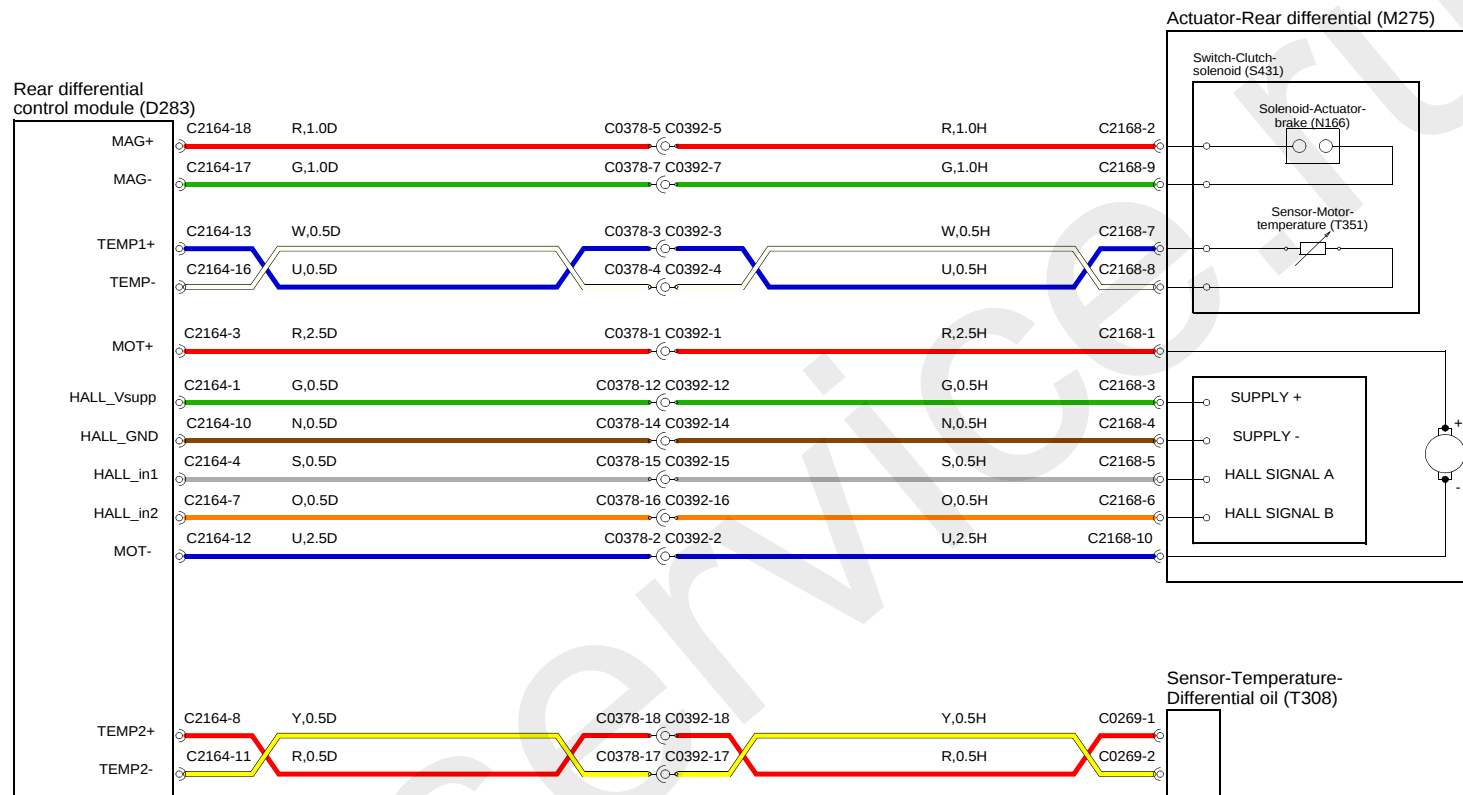


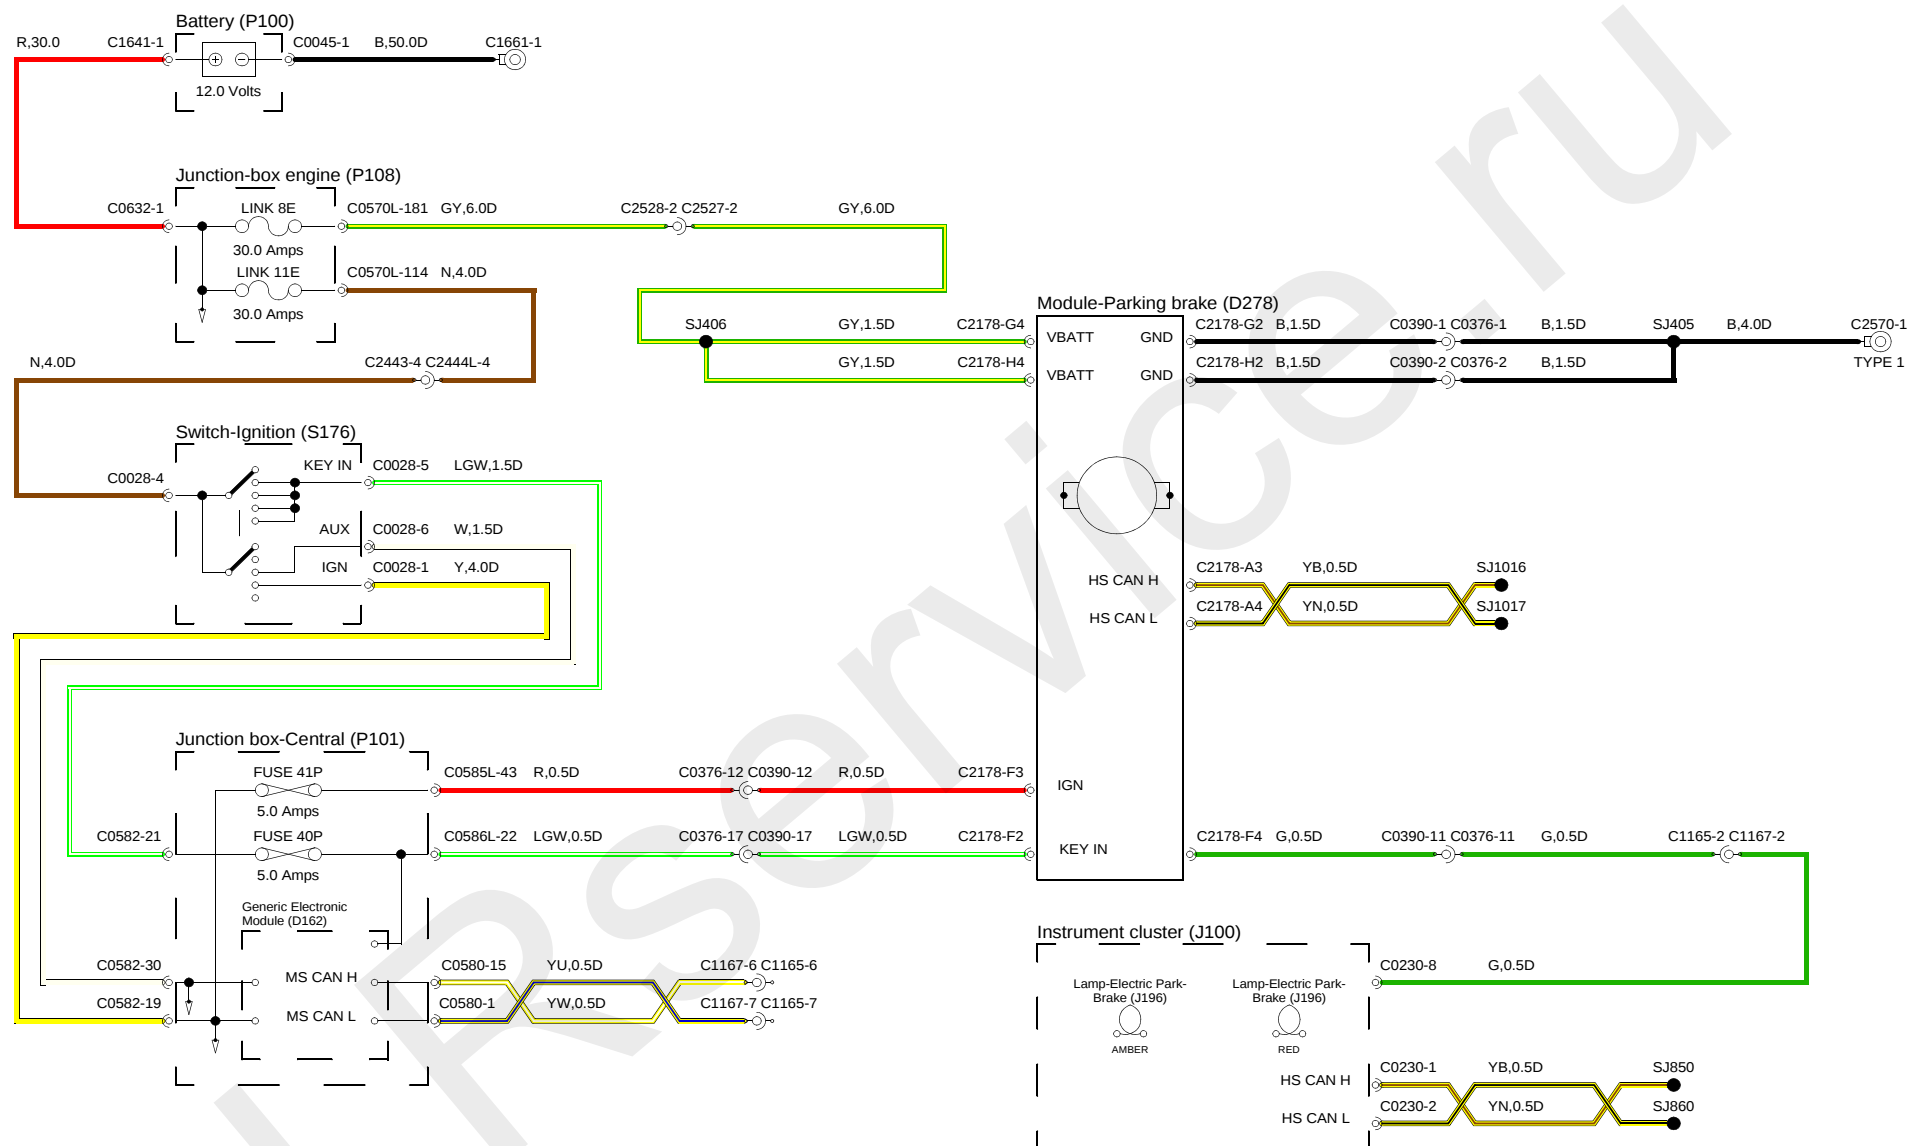



206-05 - PARKING BRAKE AND ACTUATION

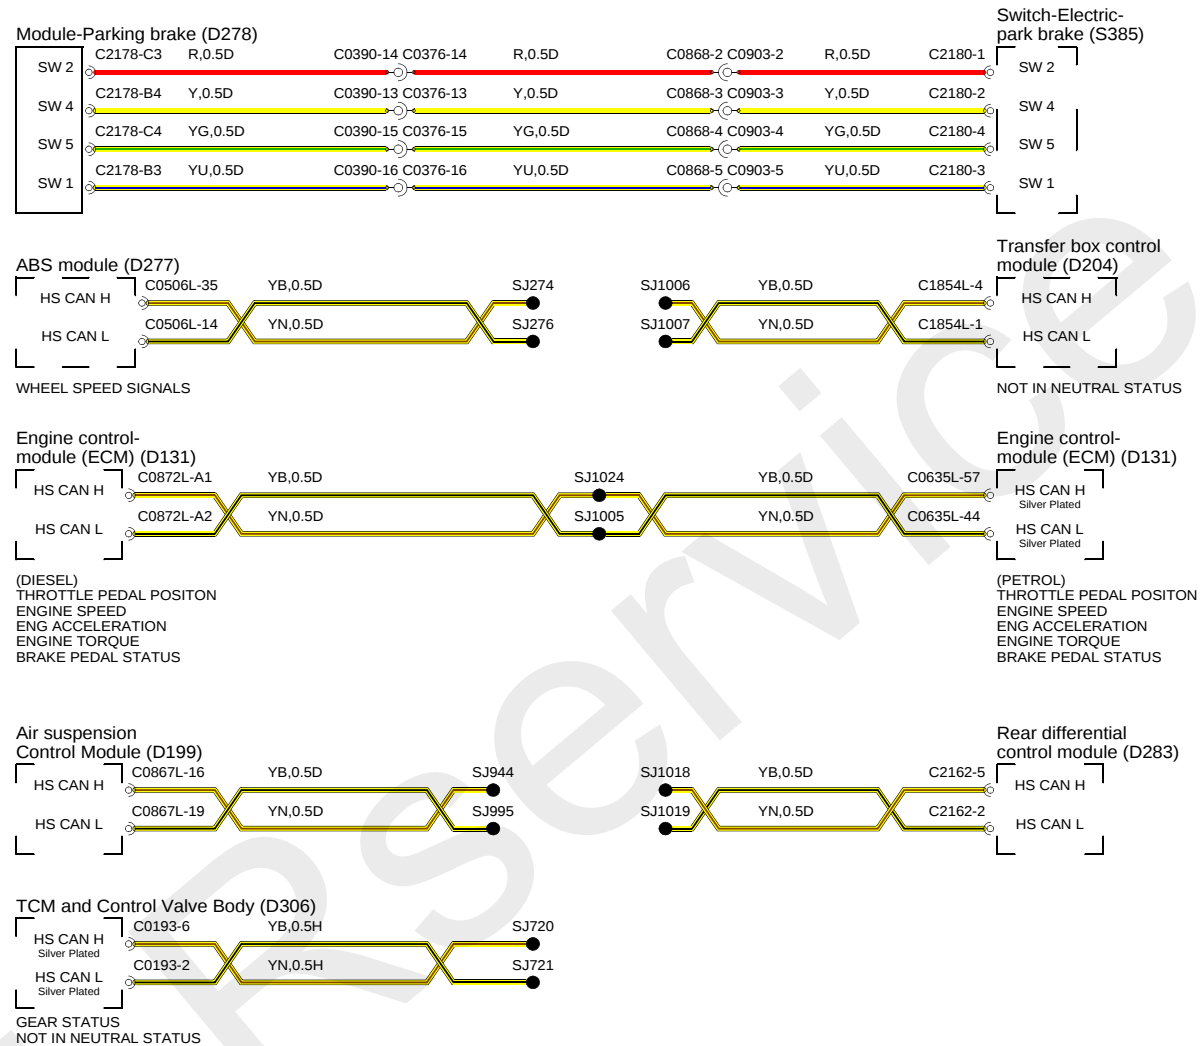


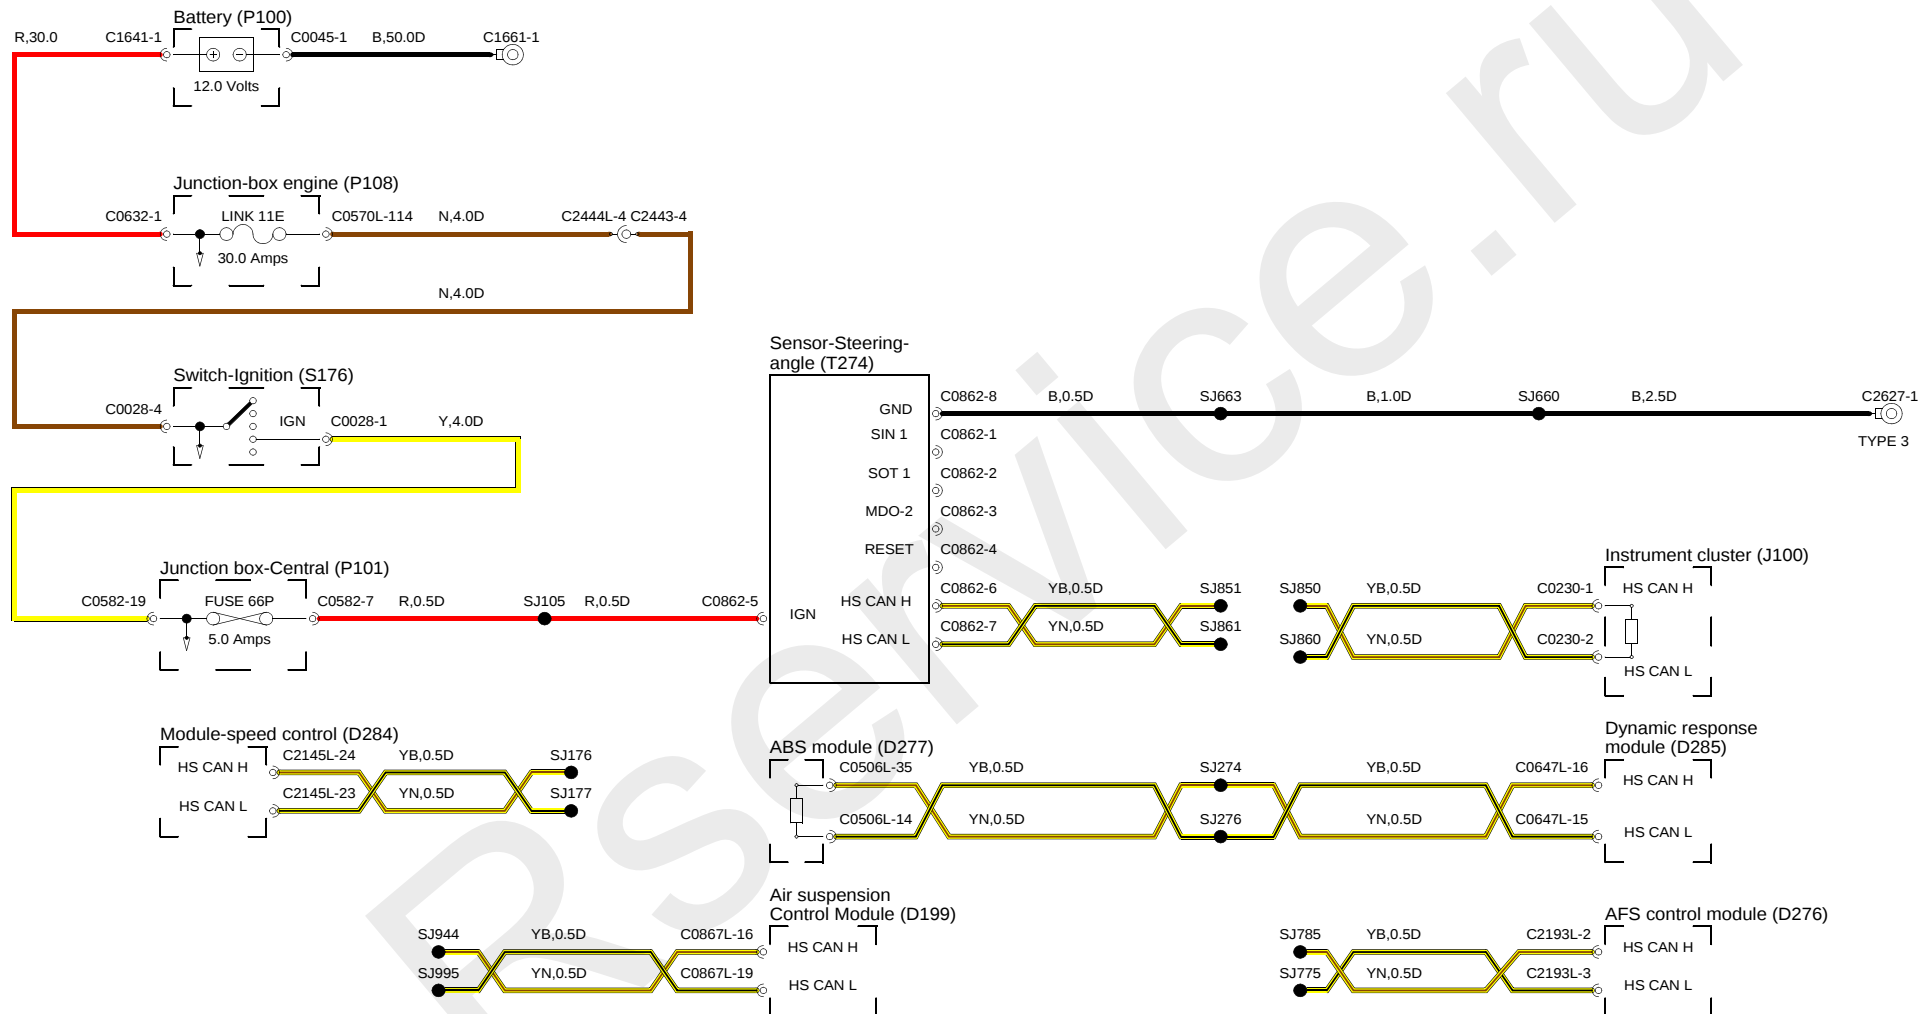


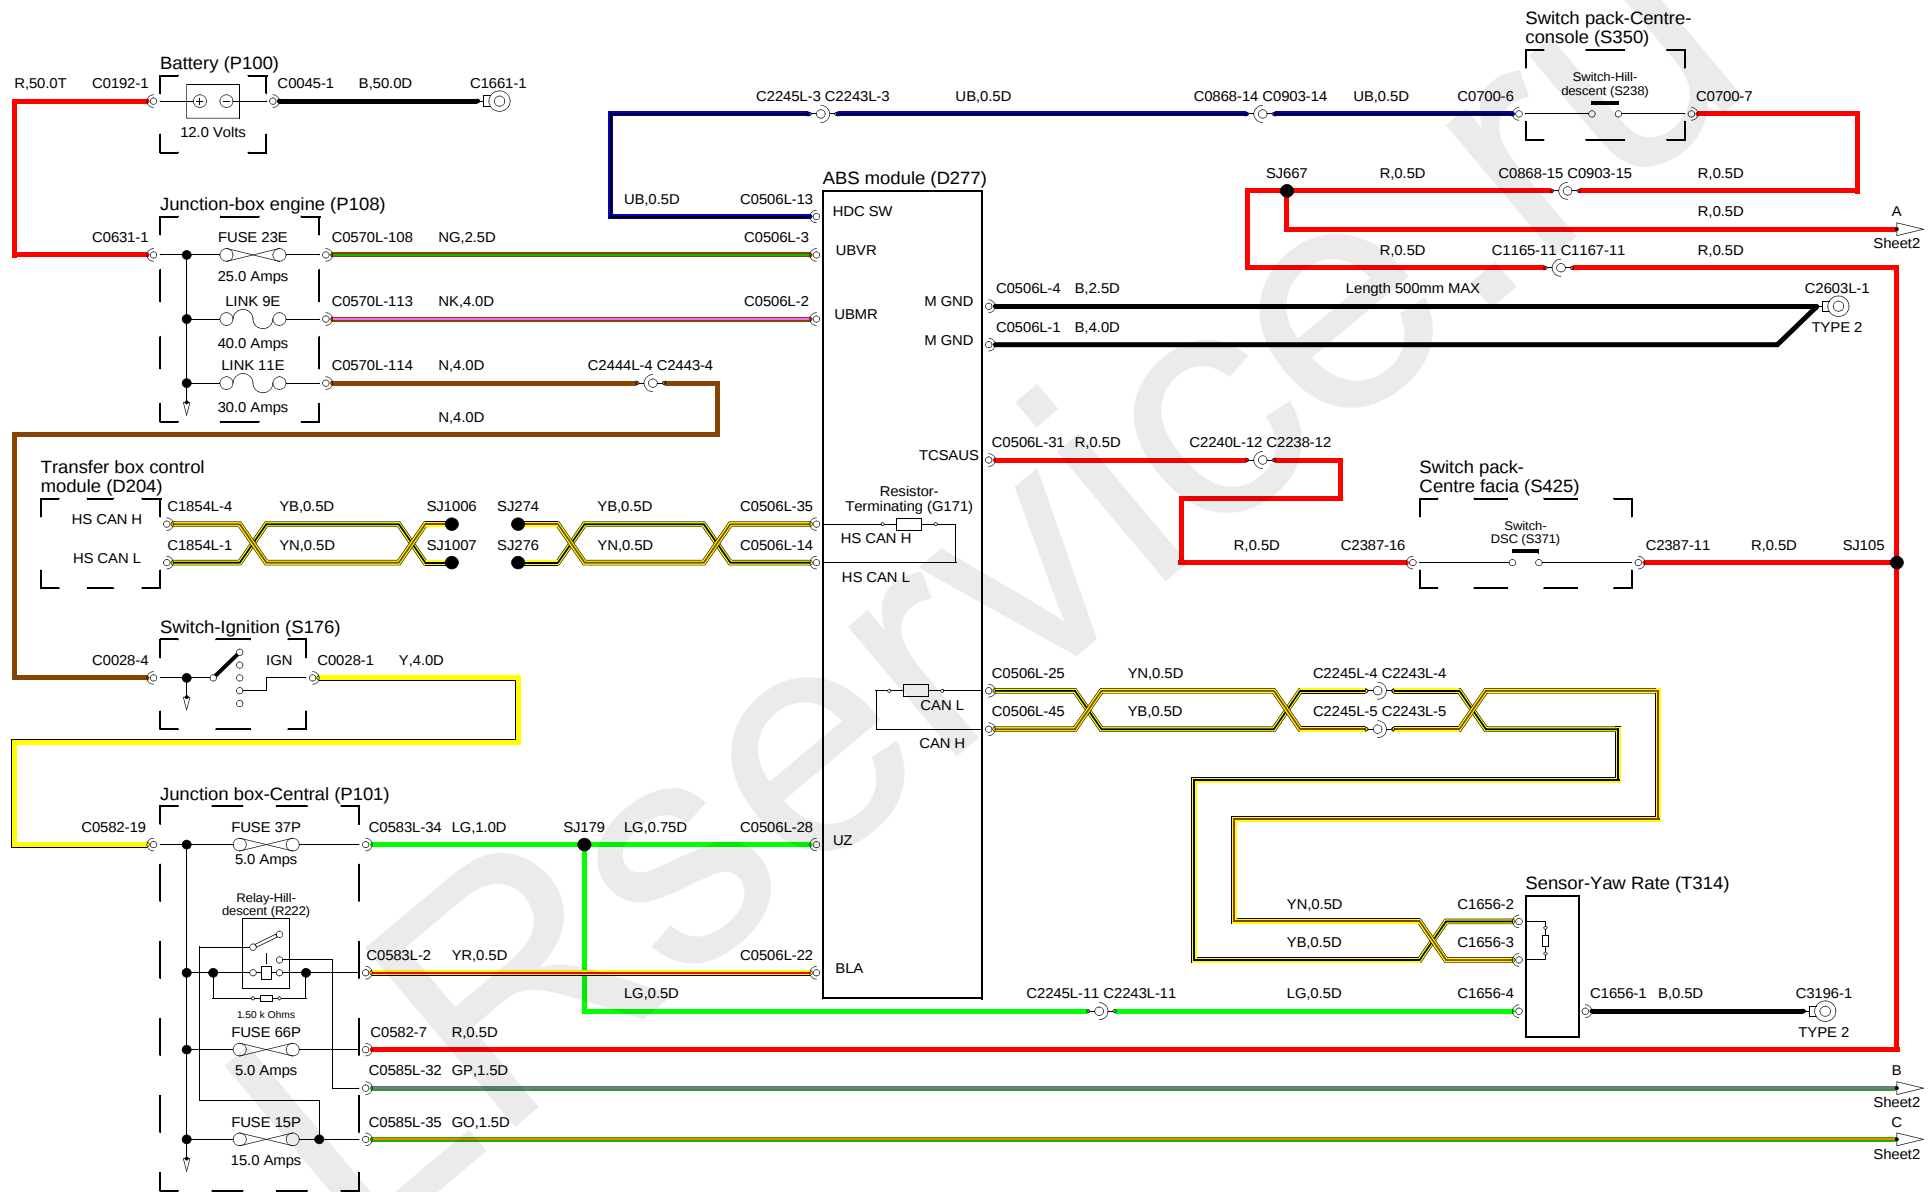


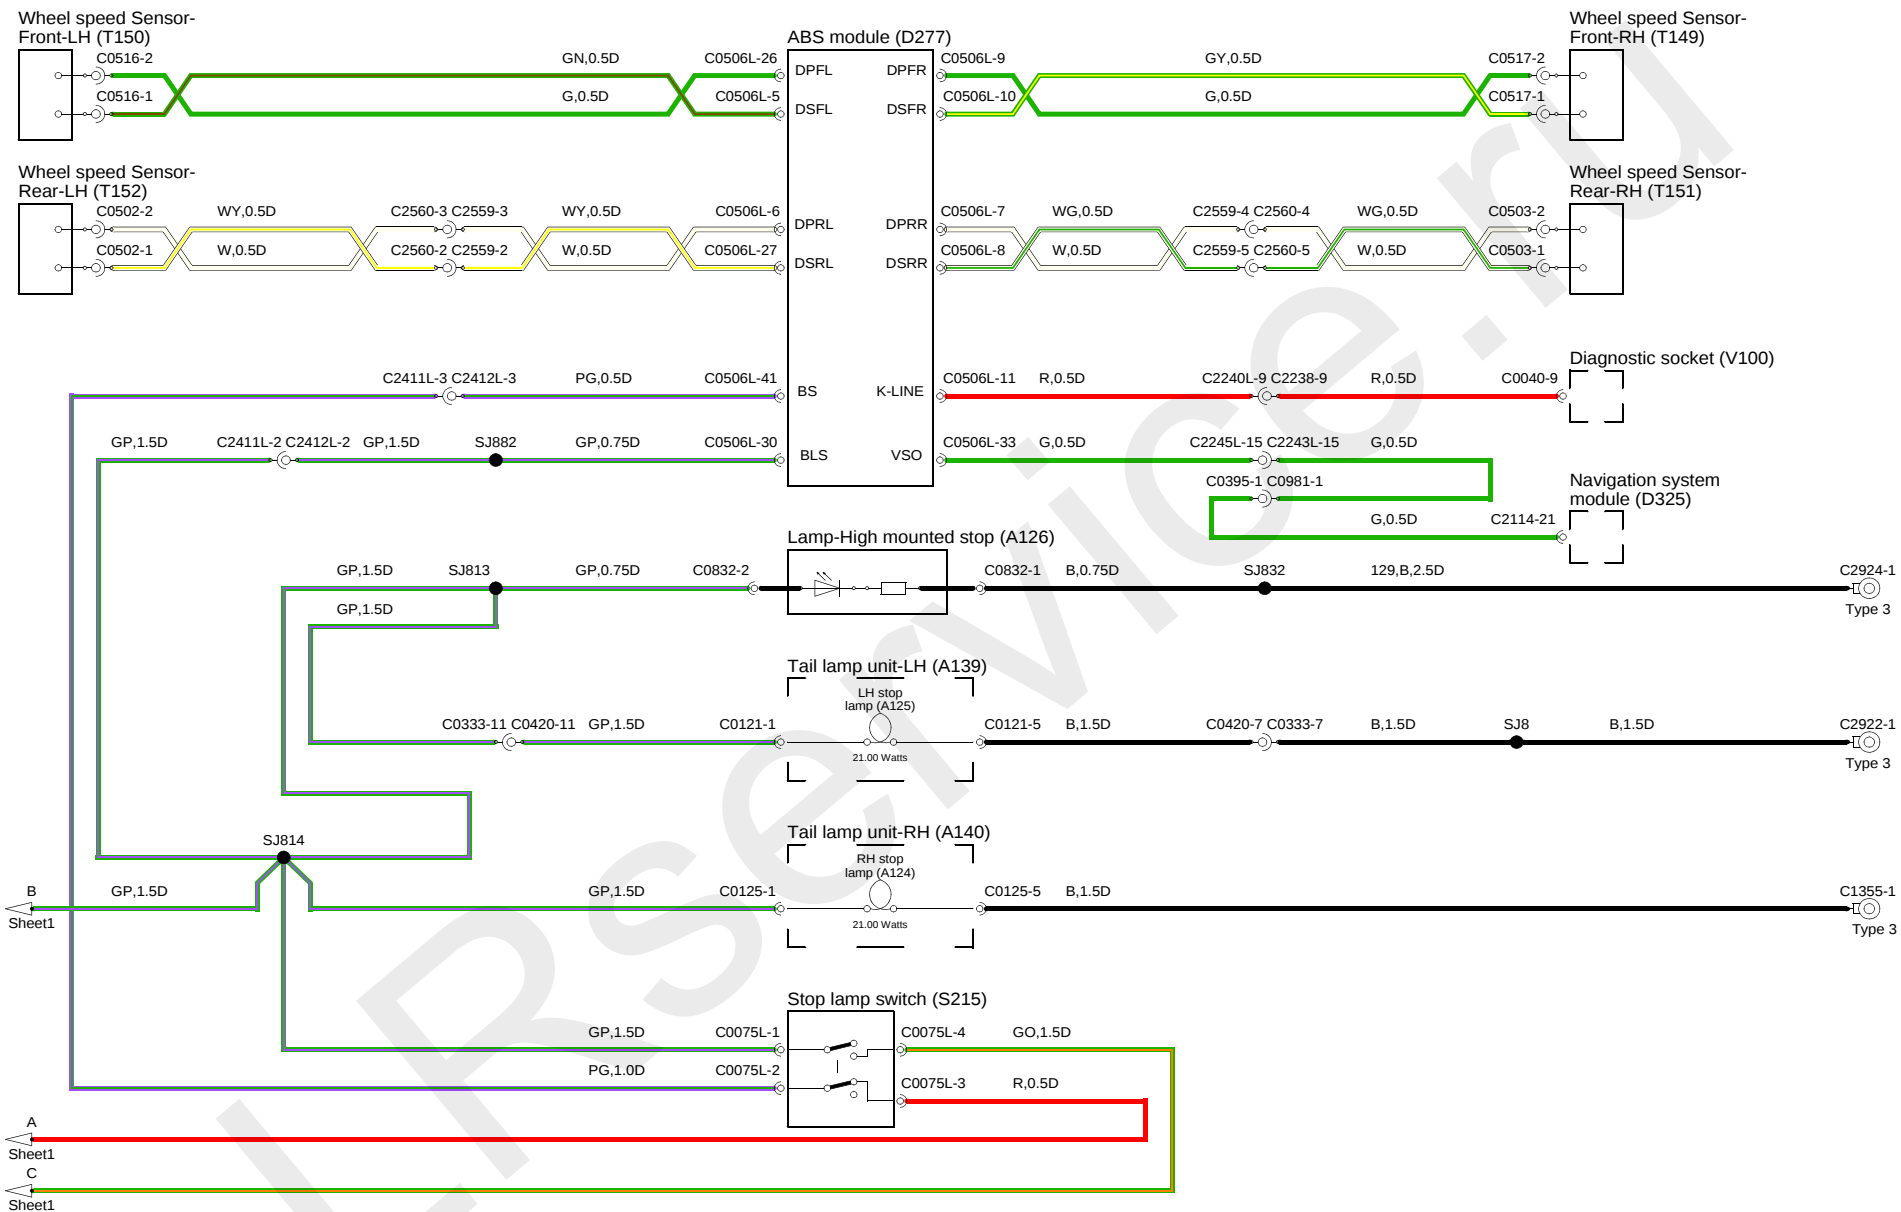


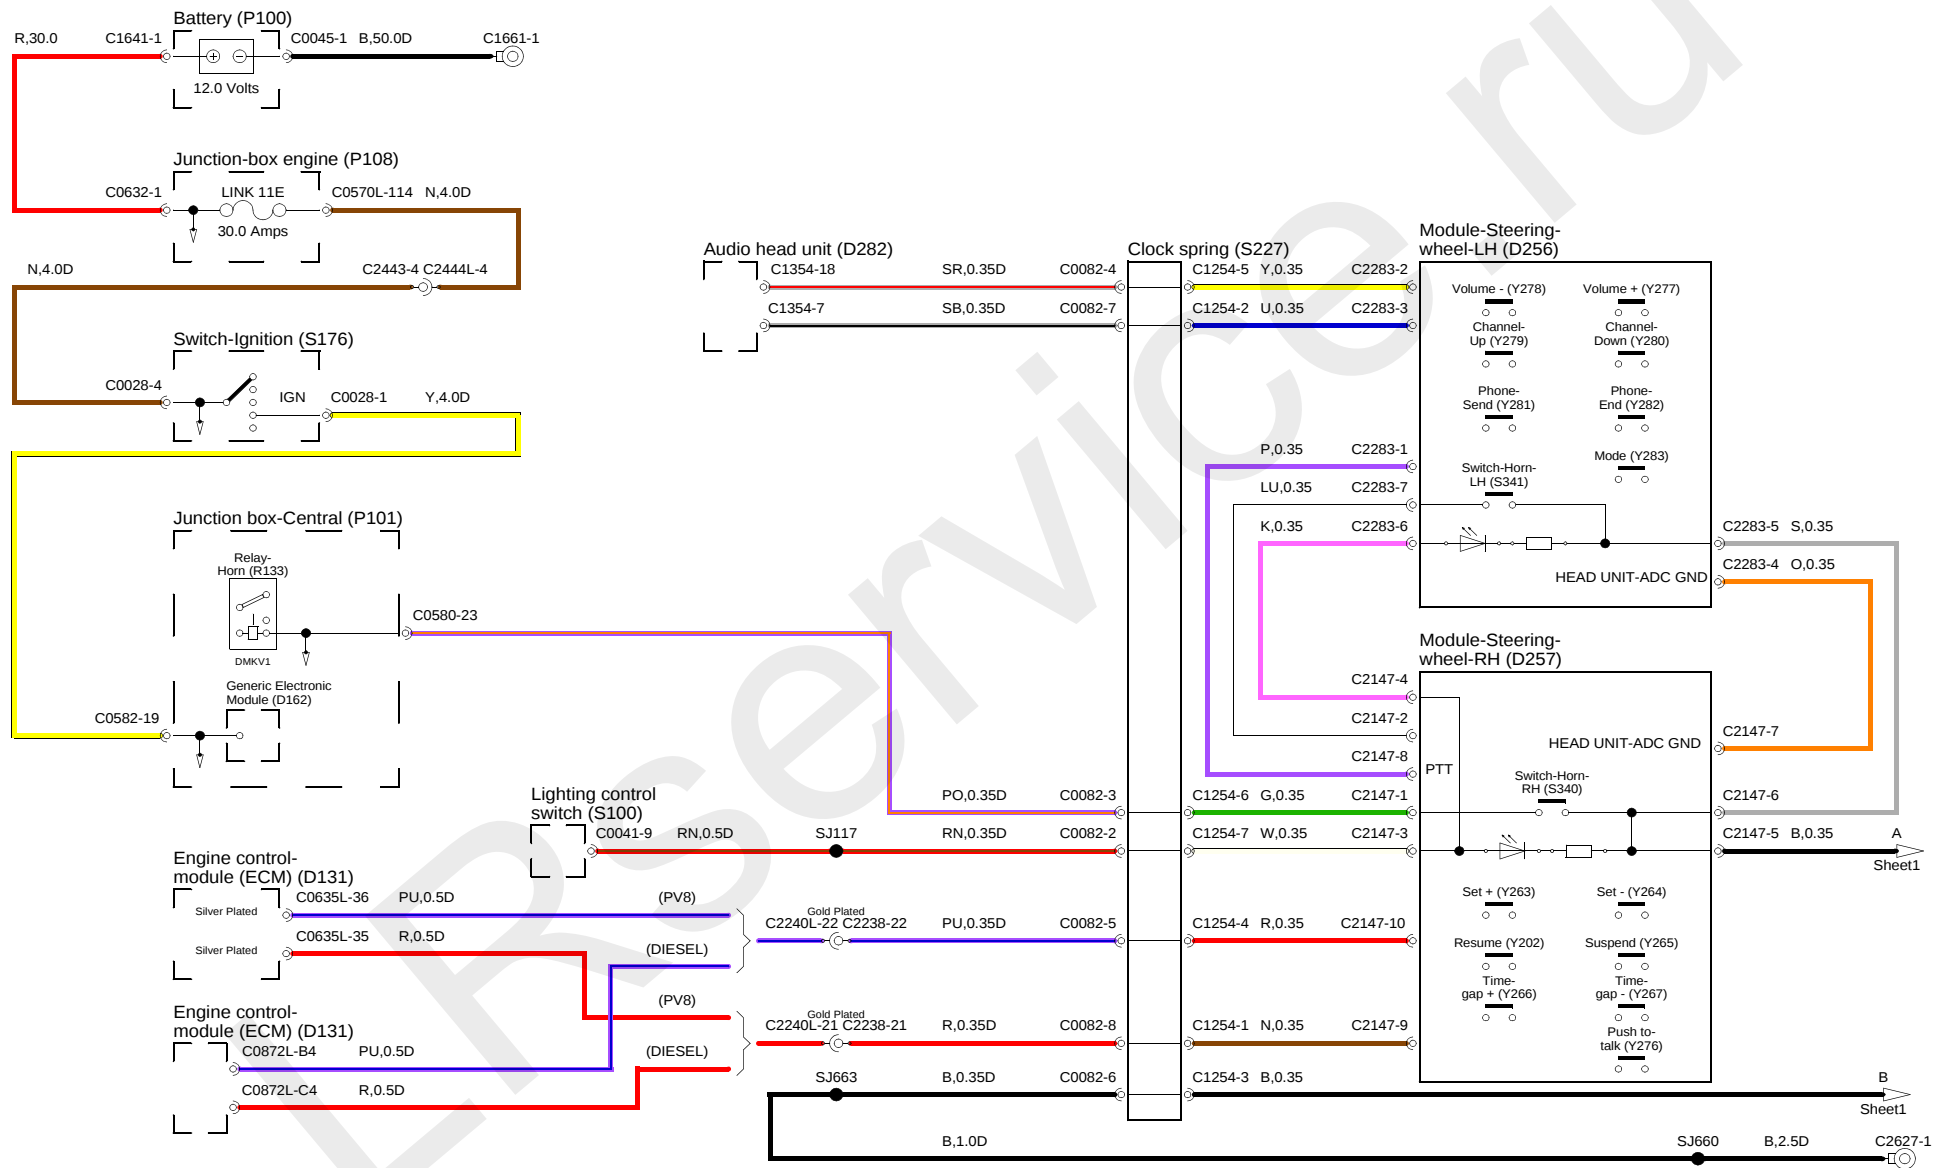


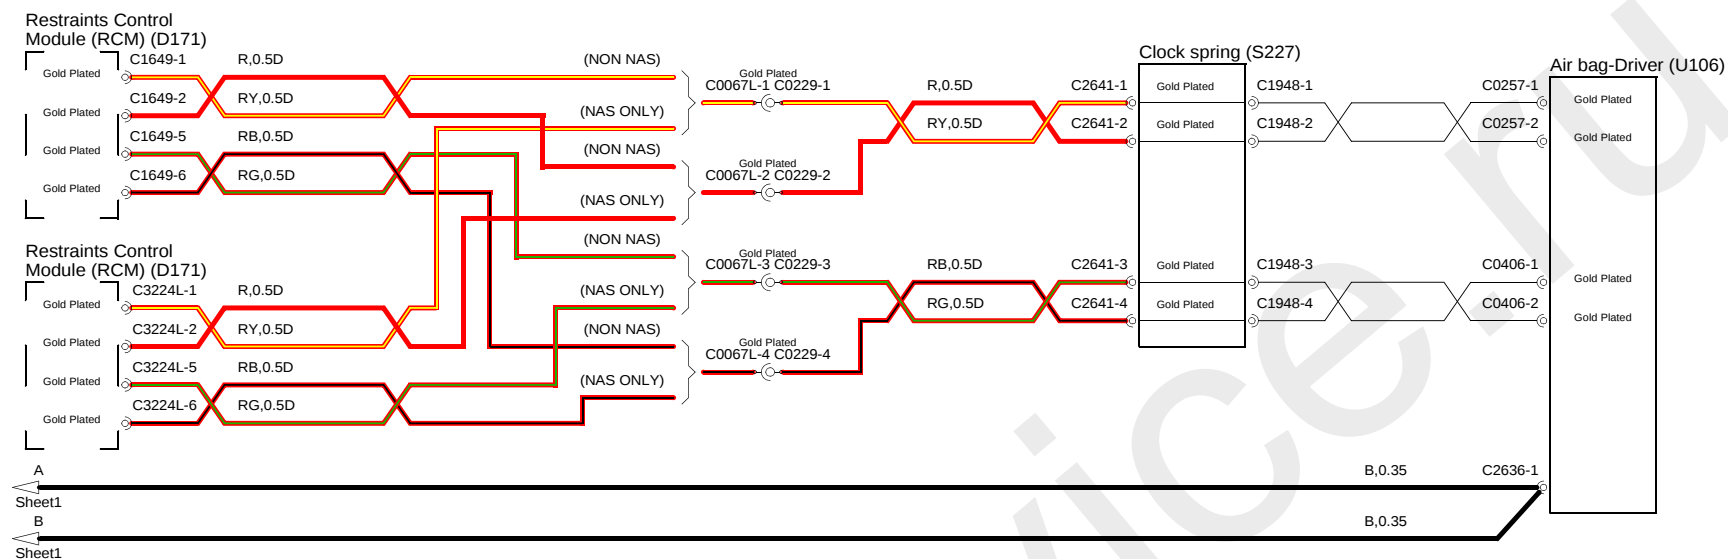


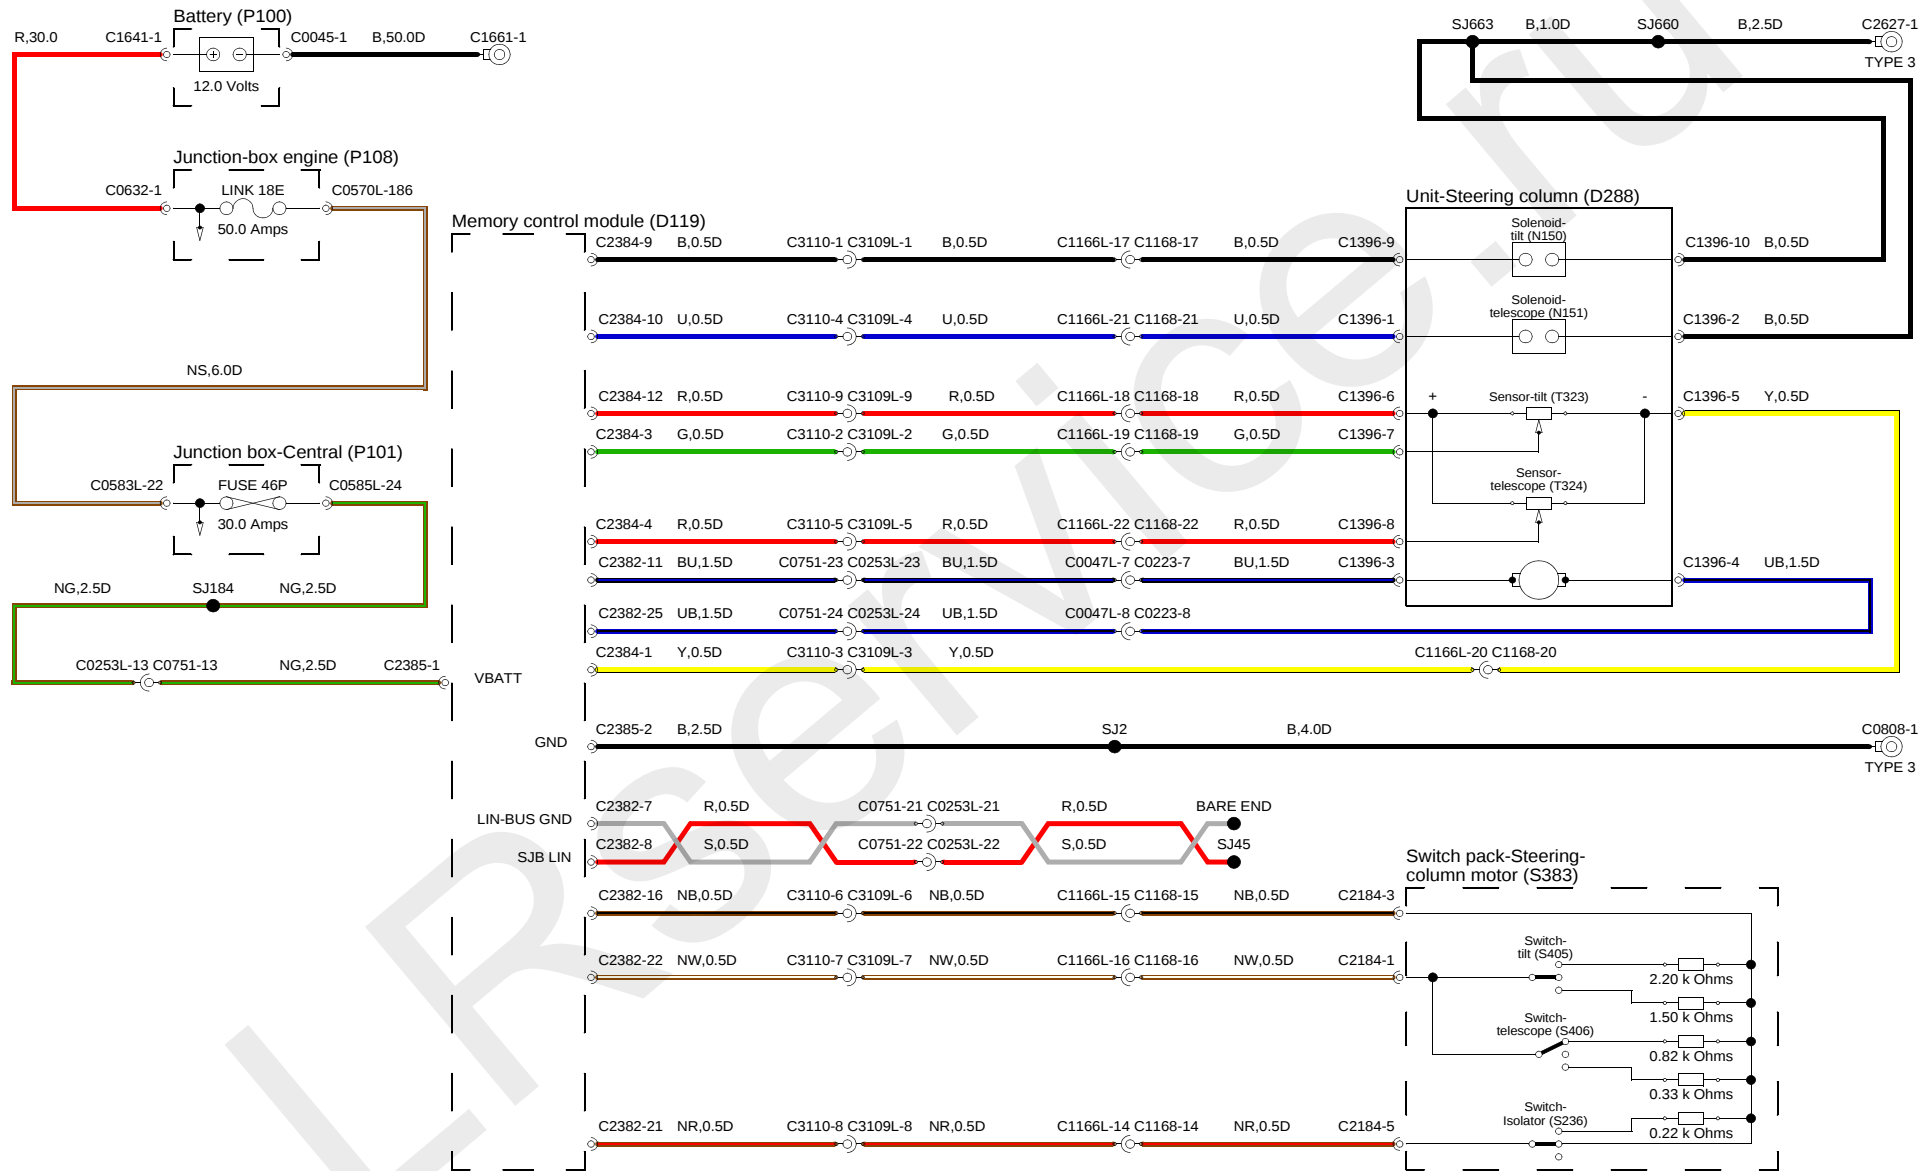


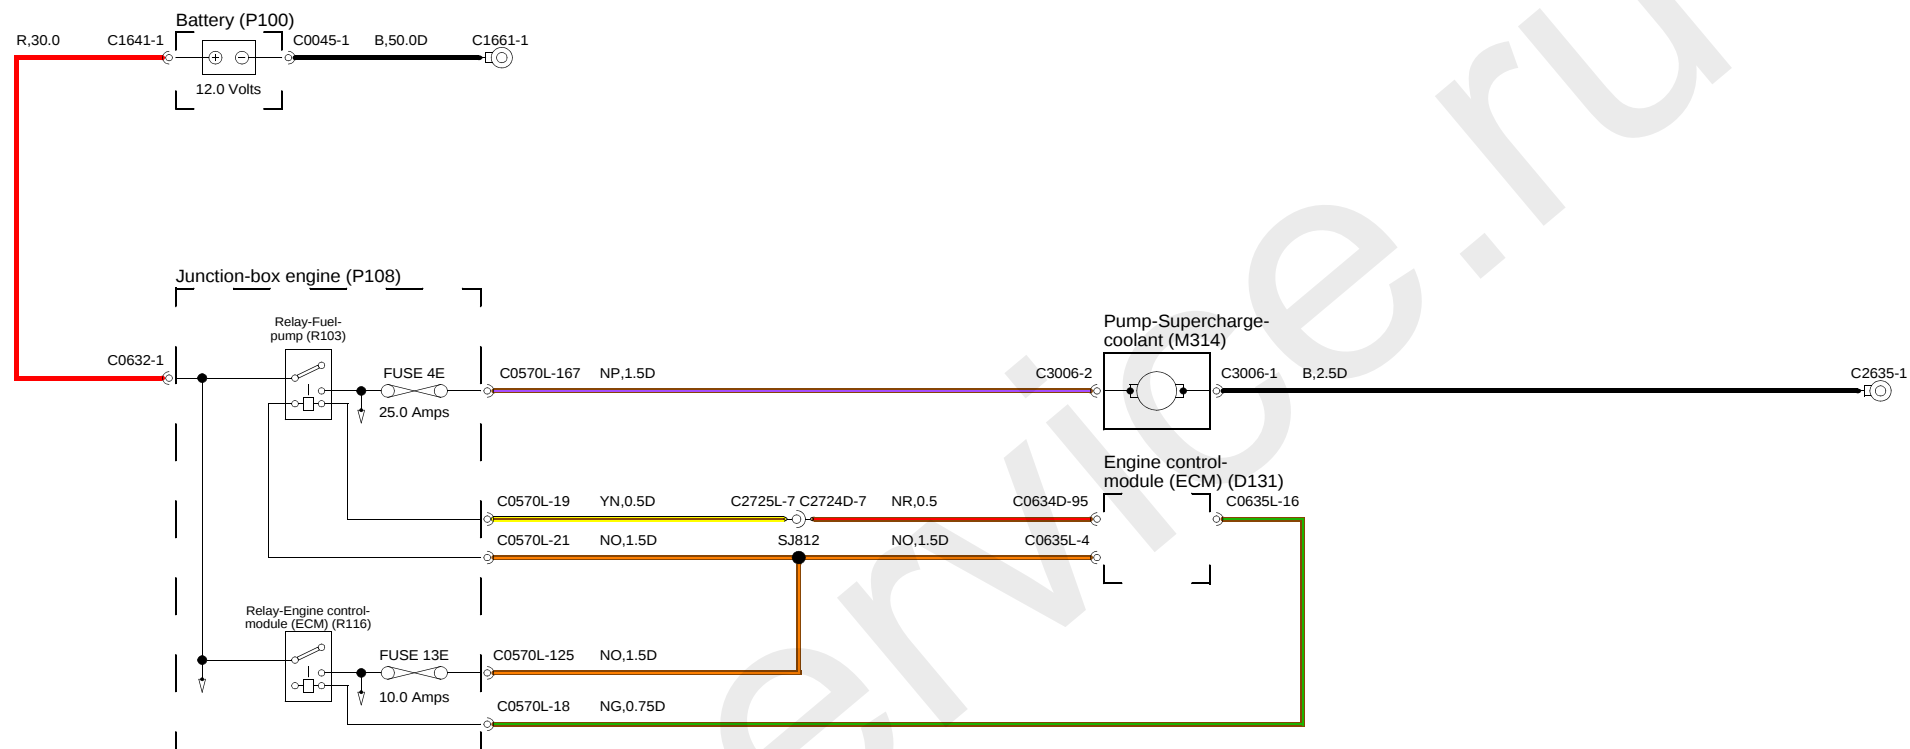


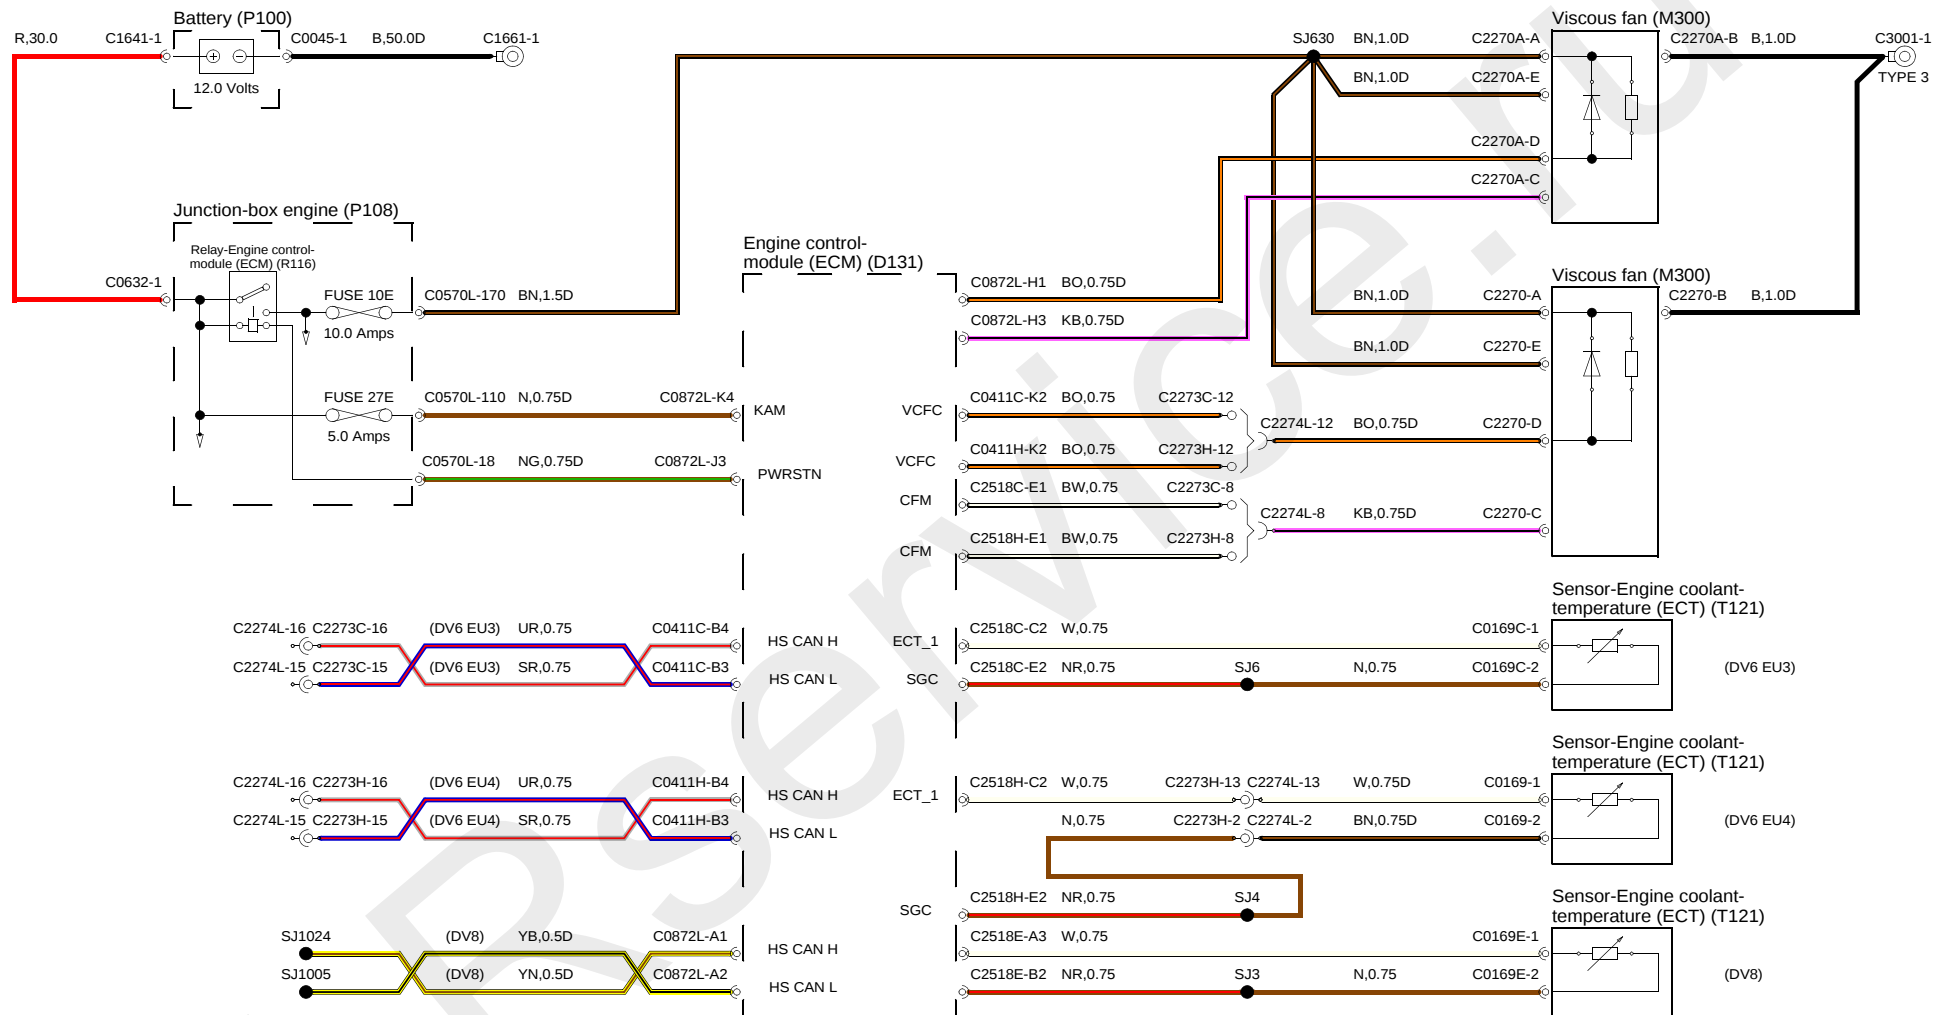


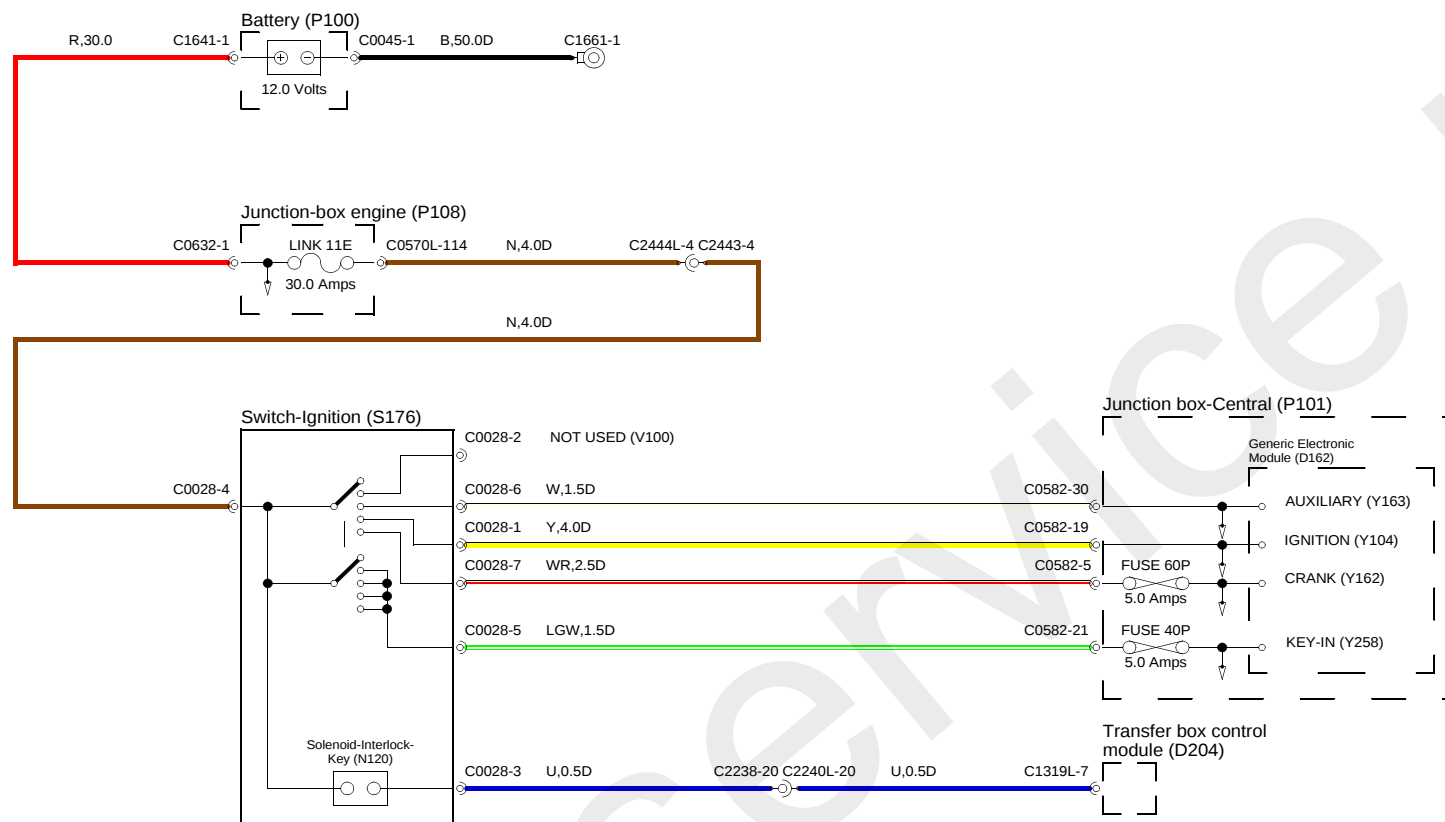


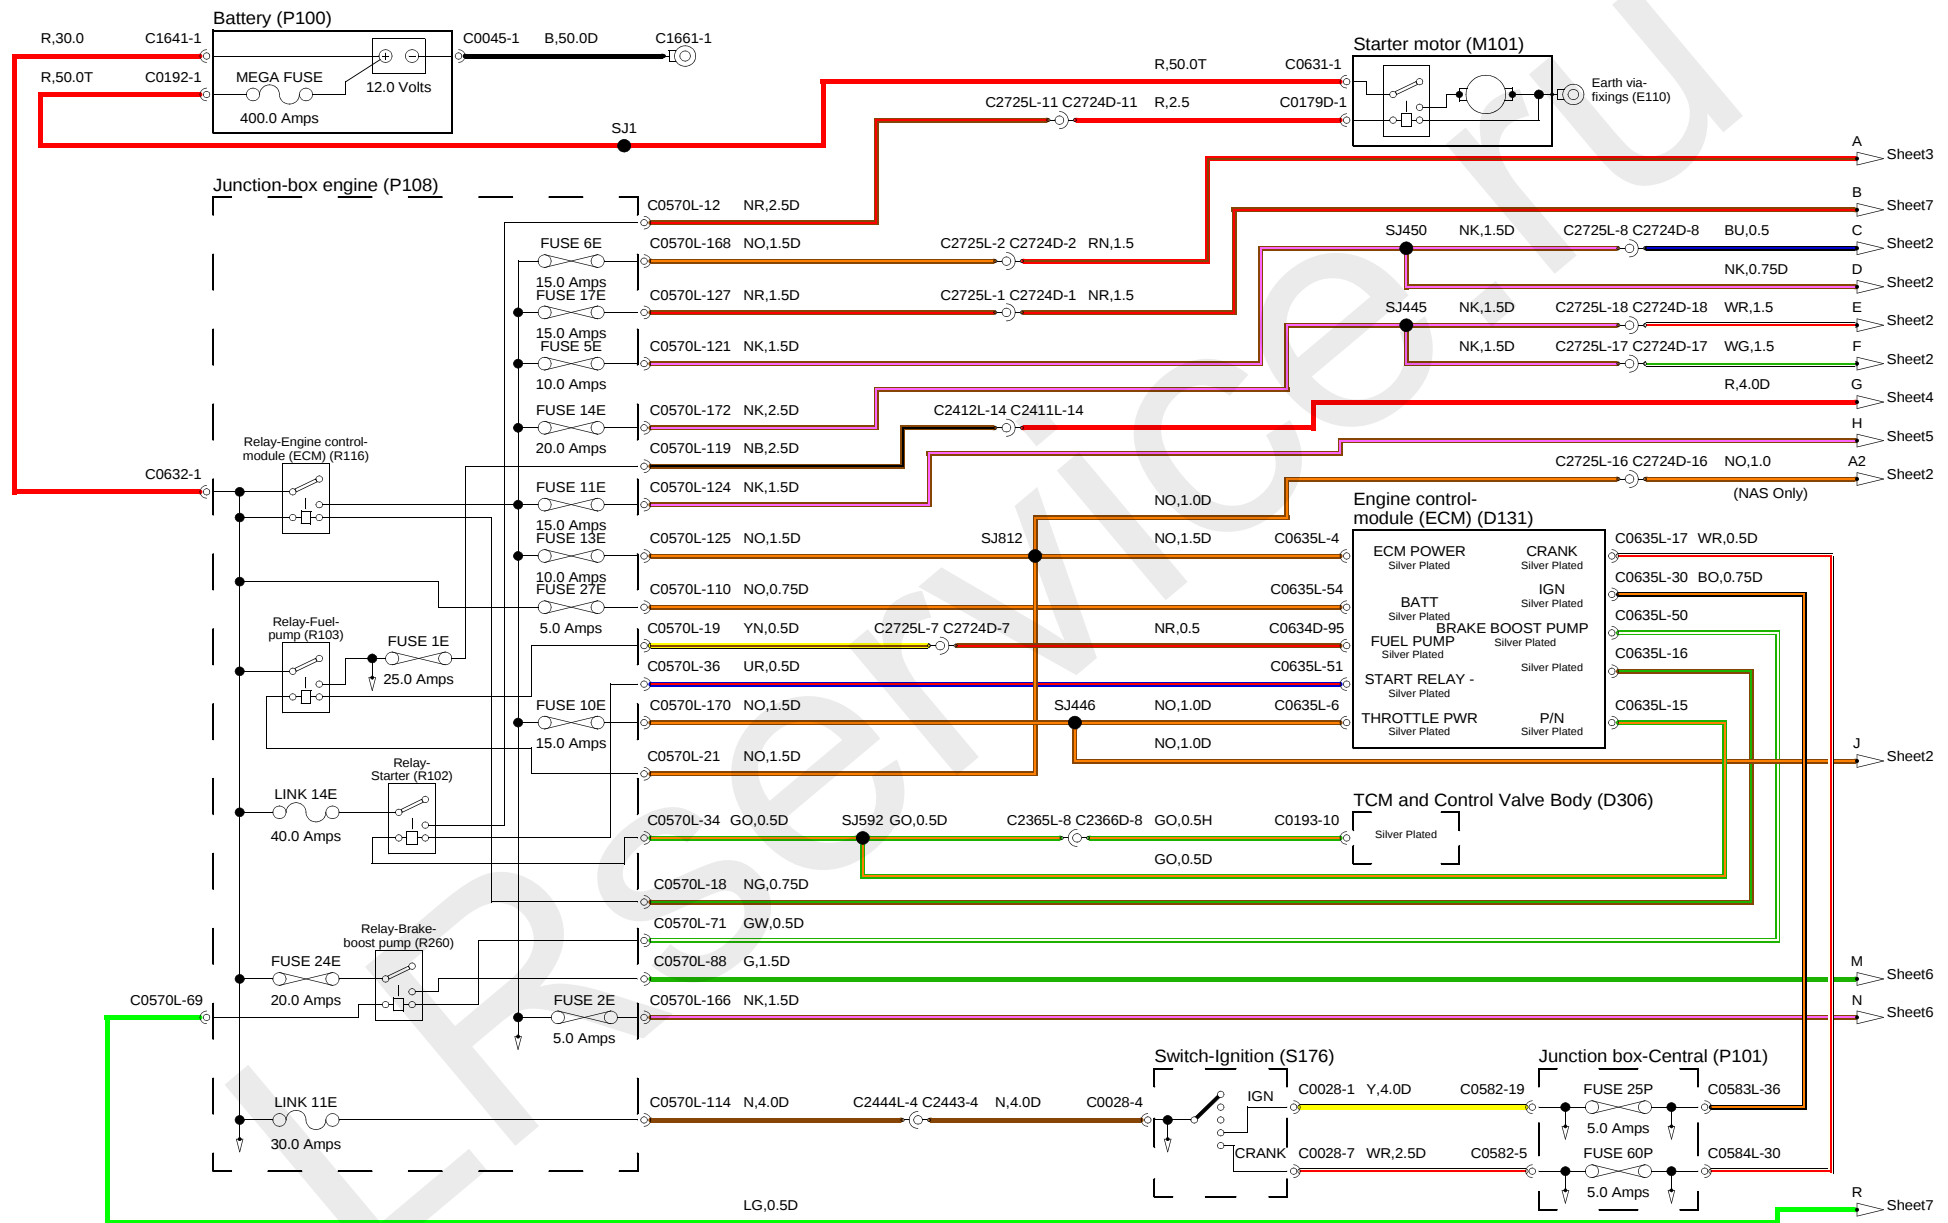


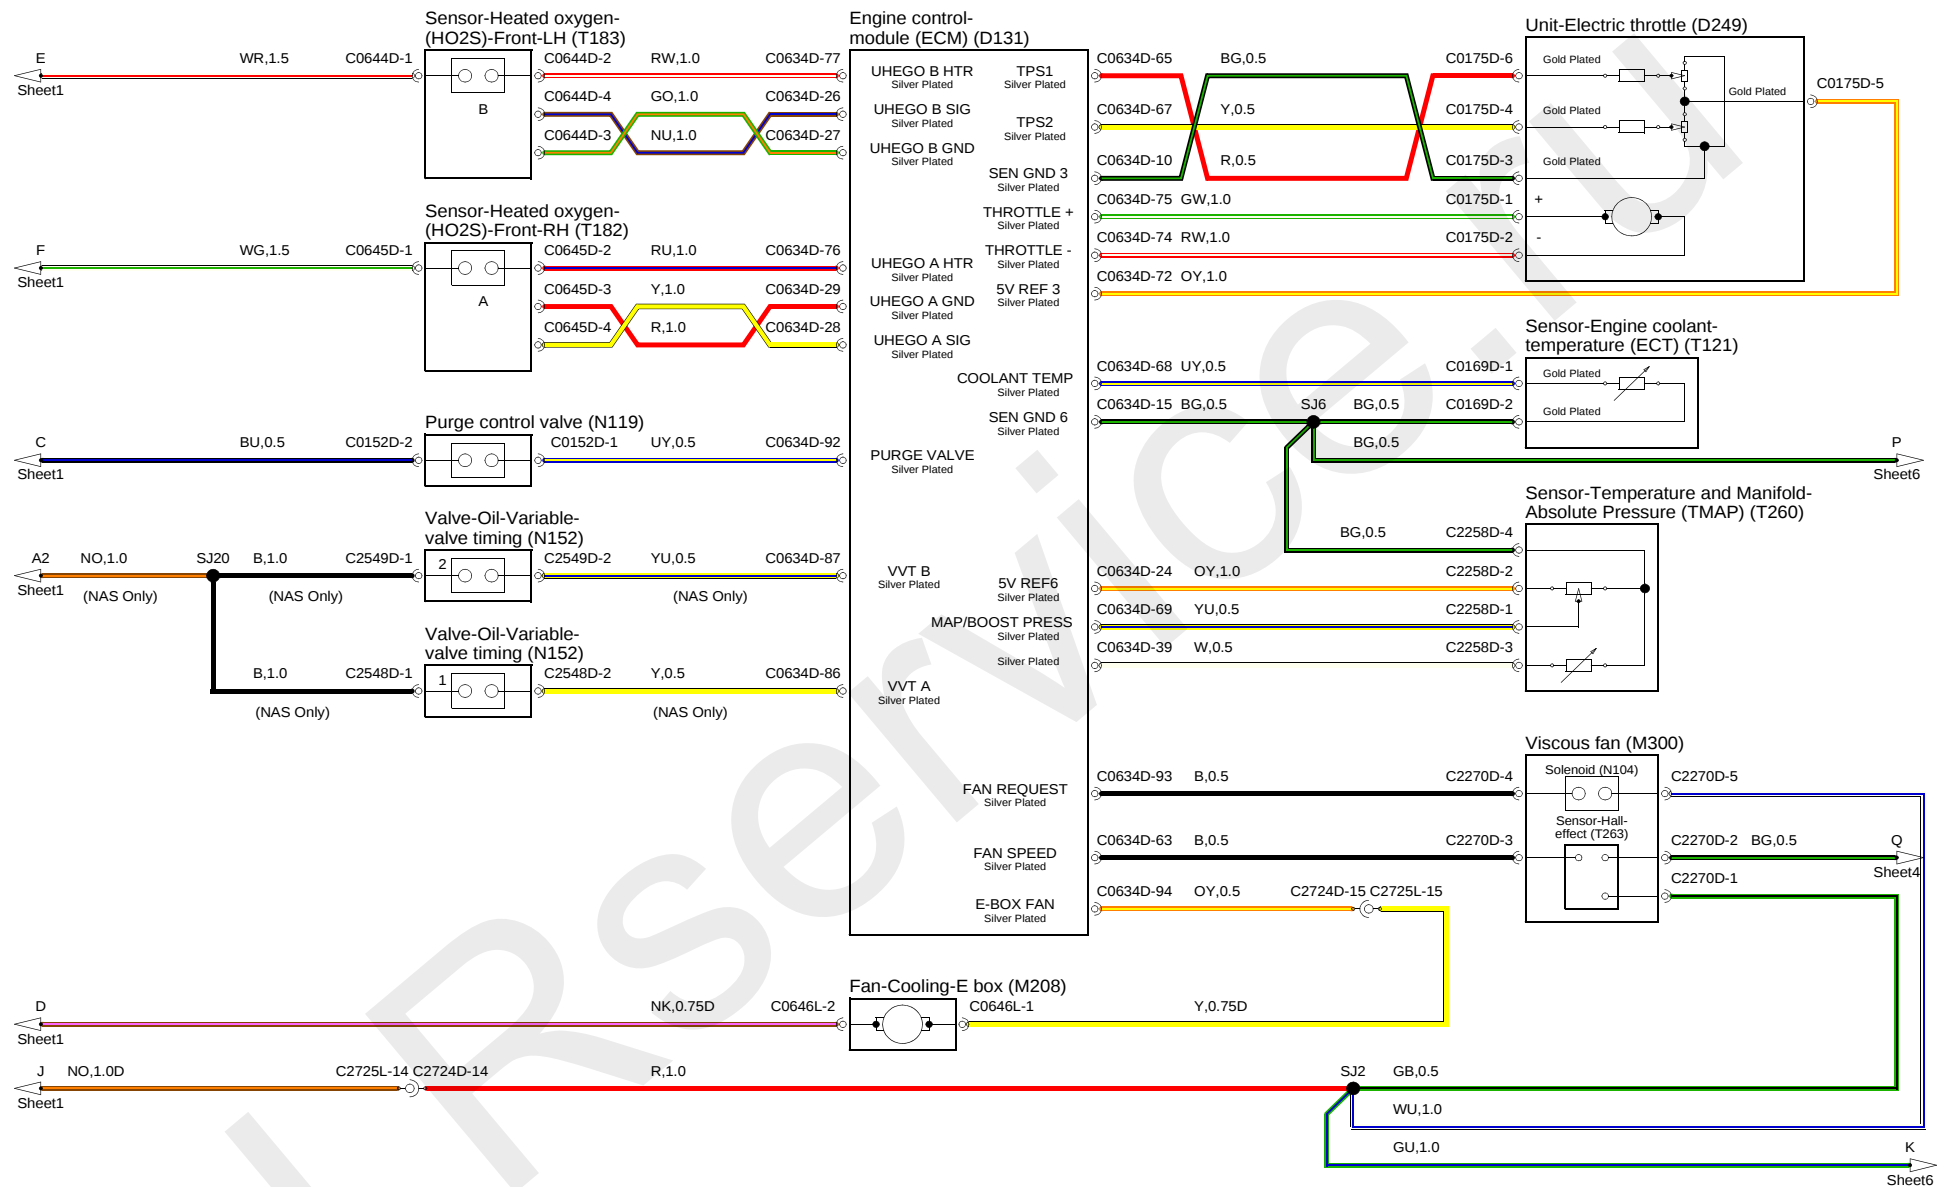


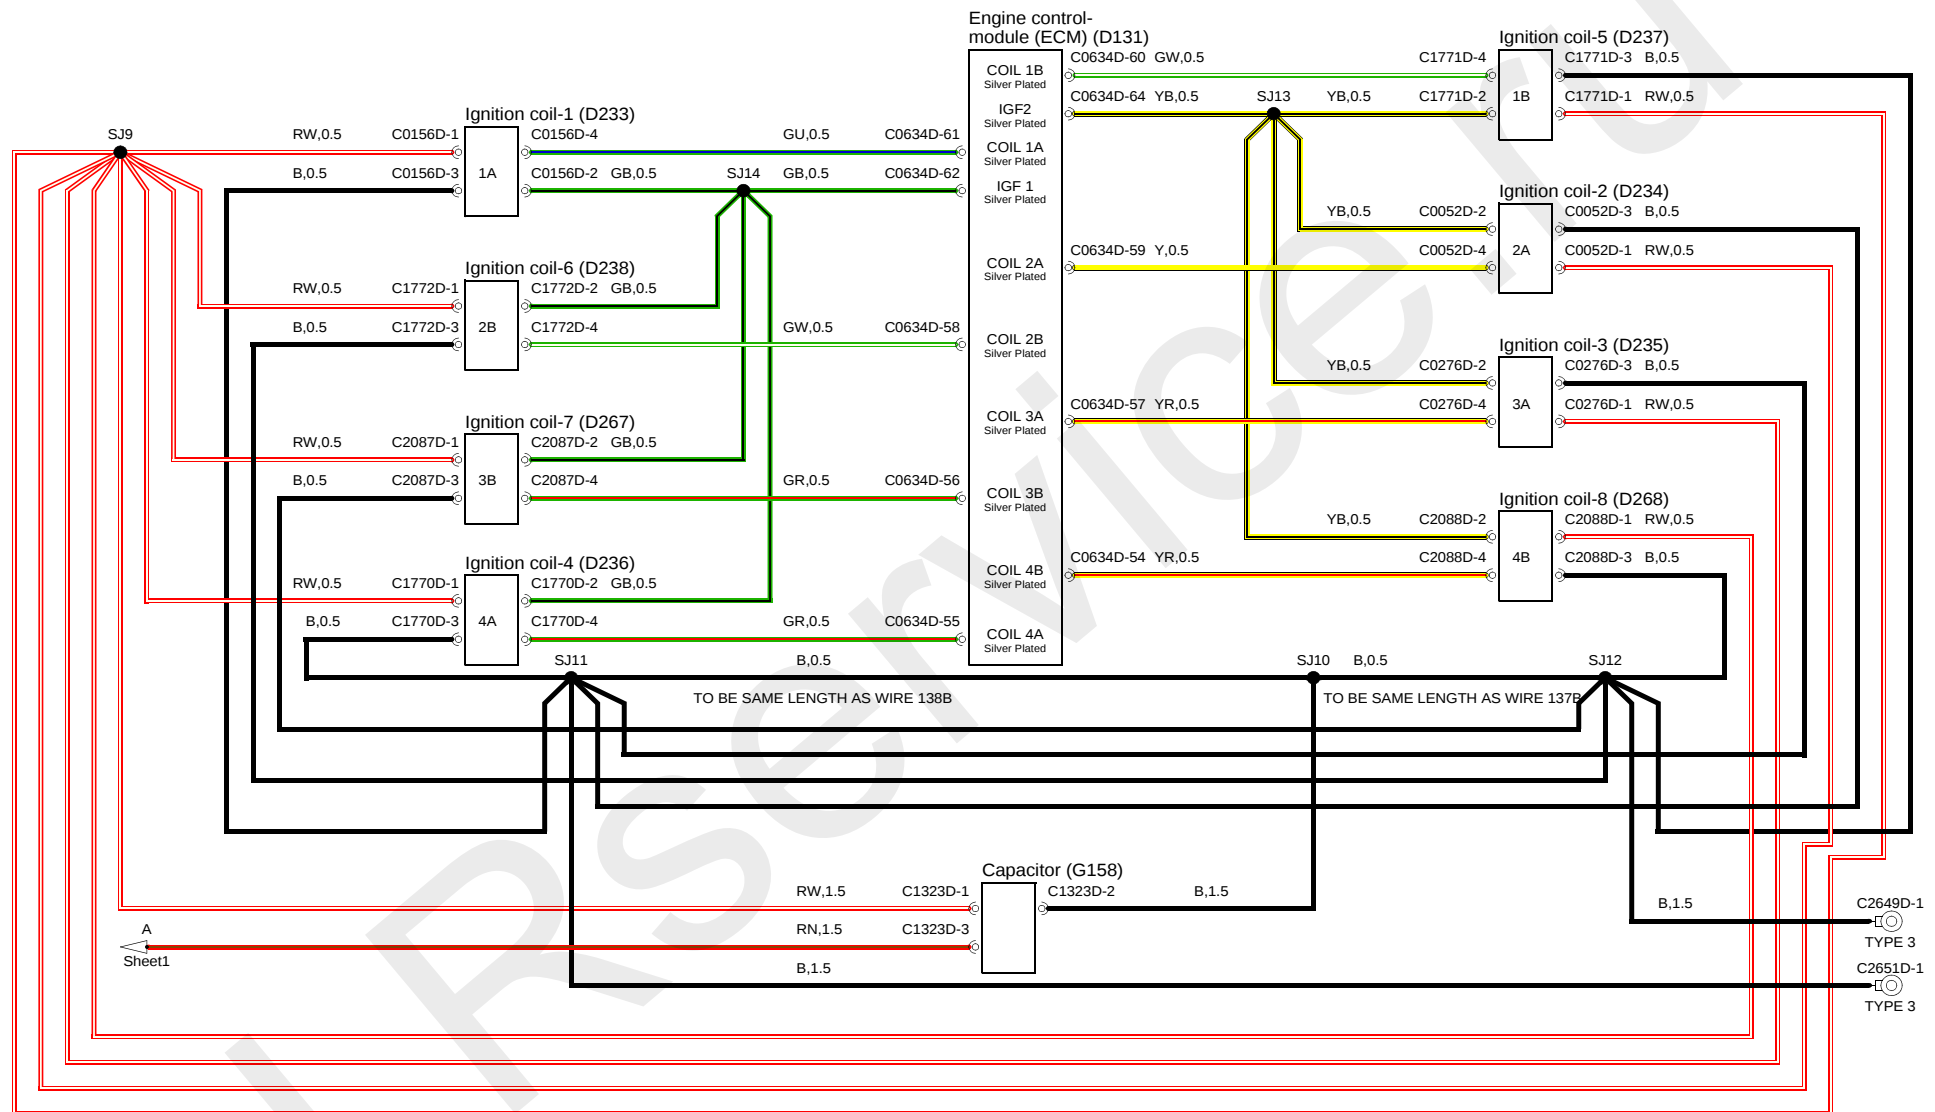


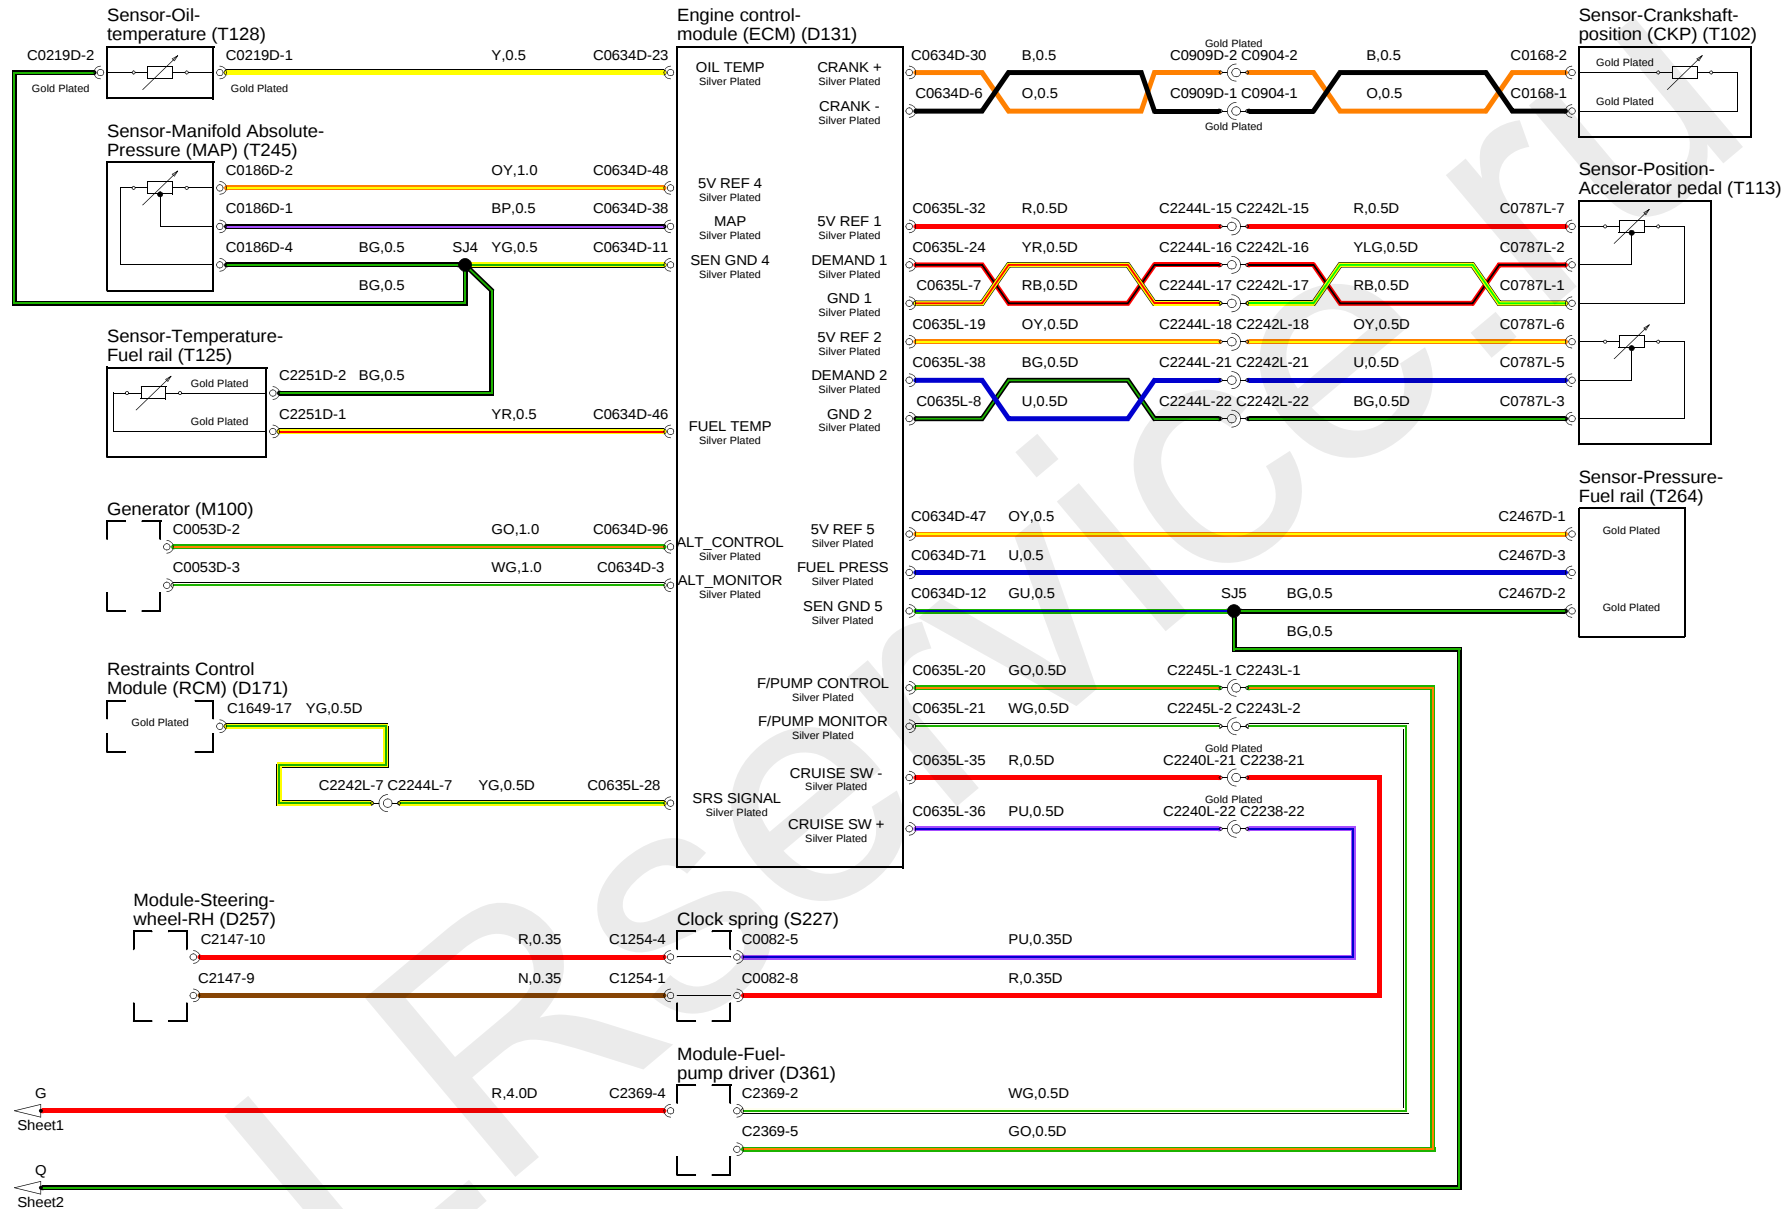


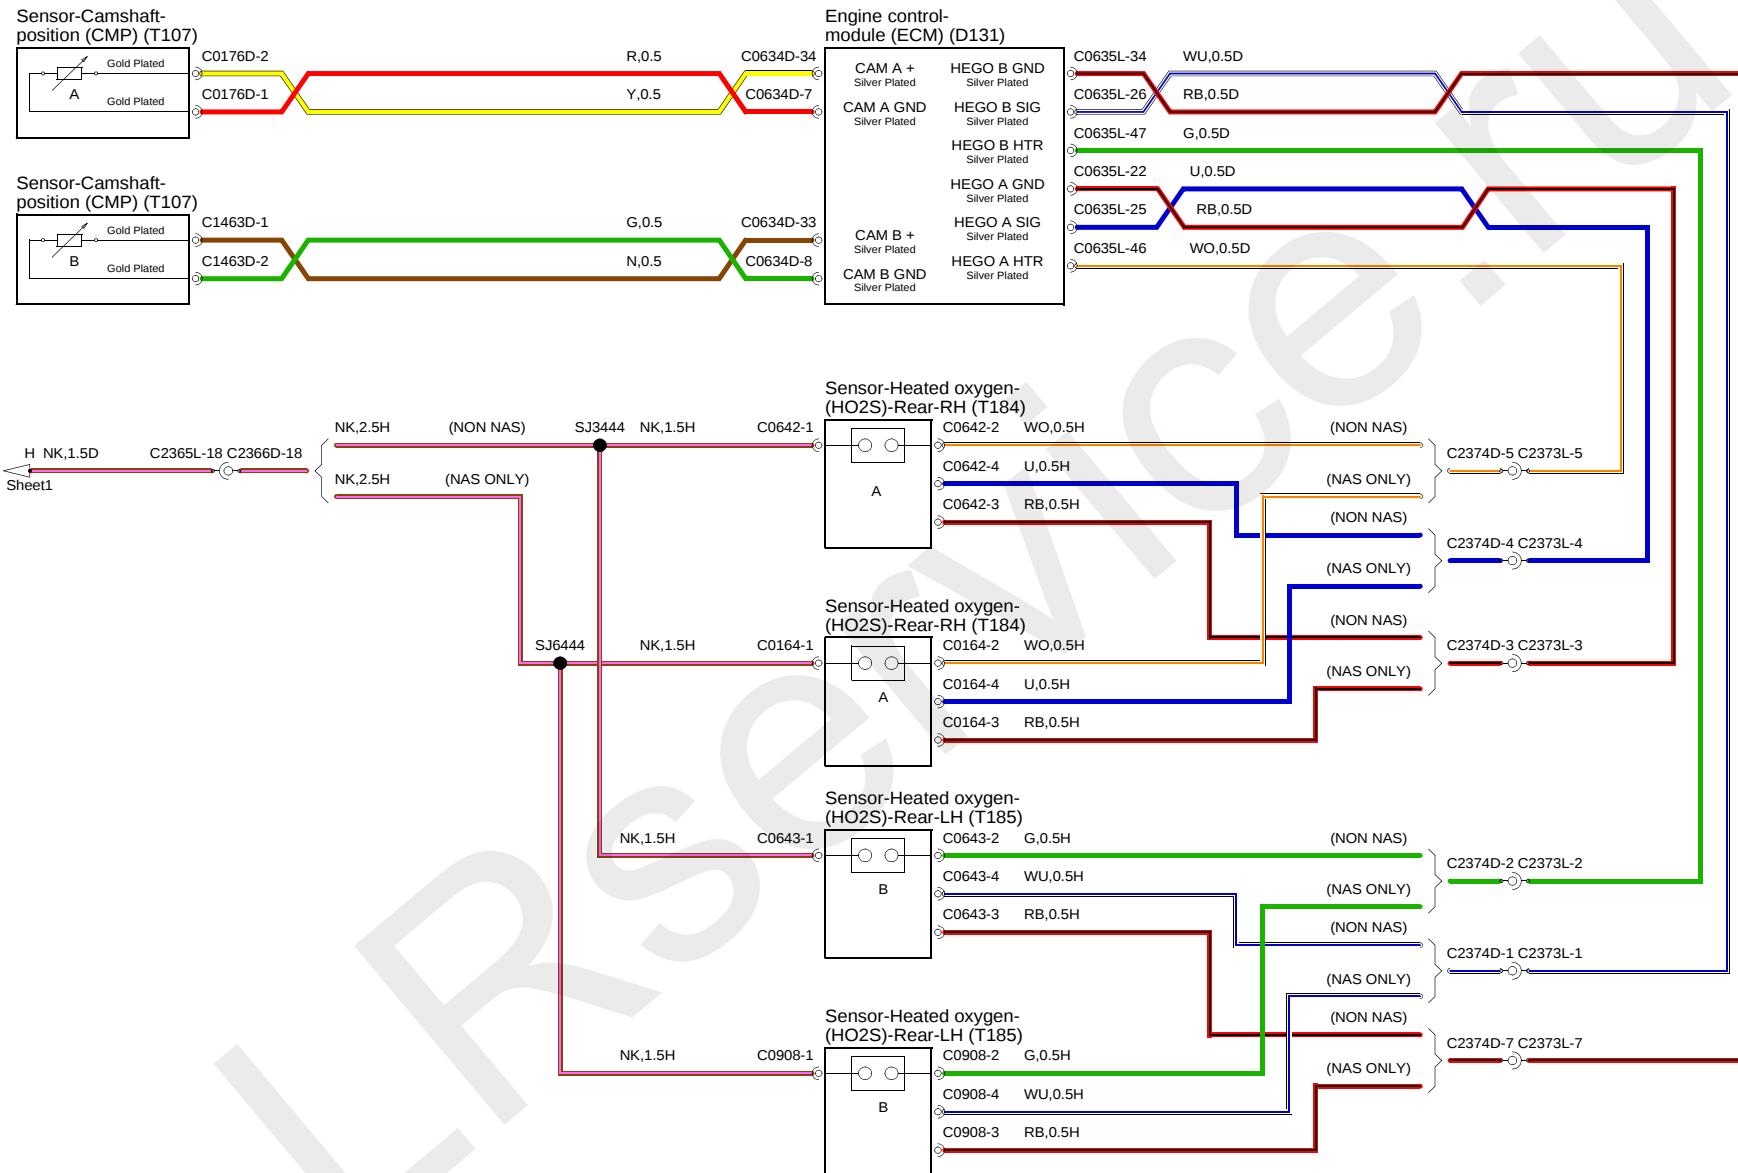


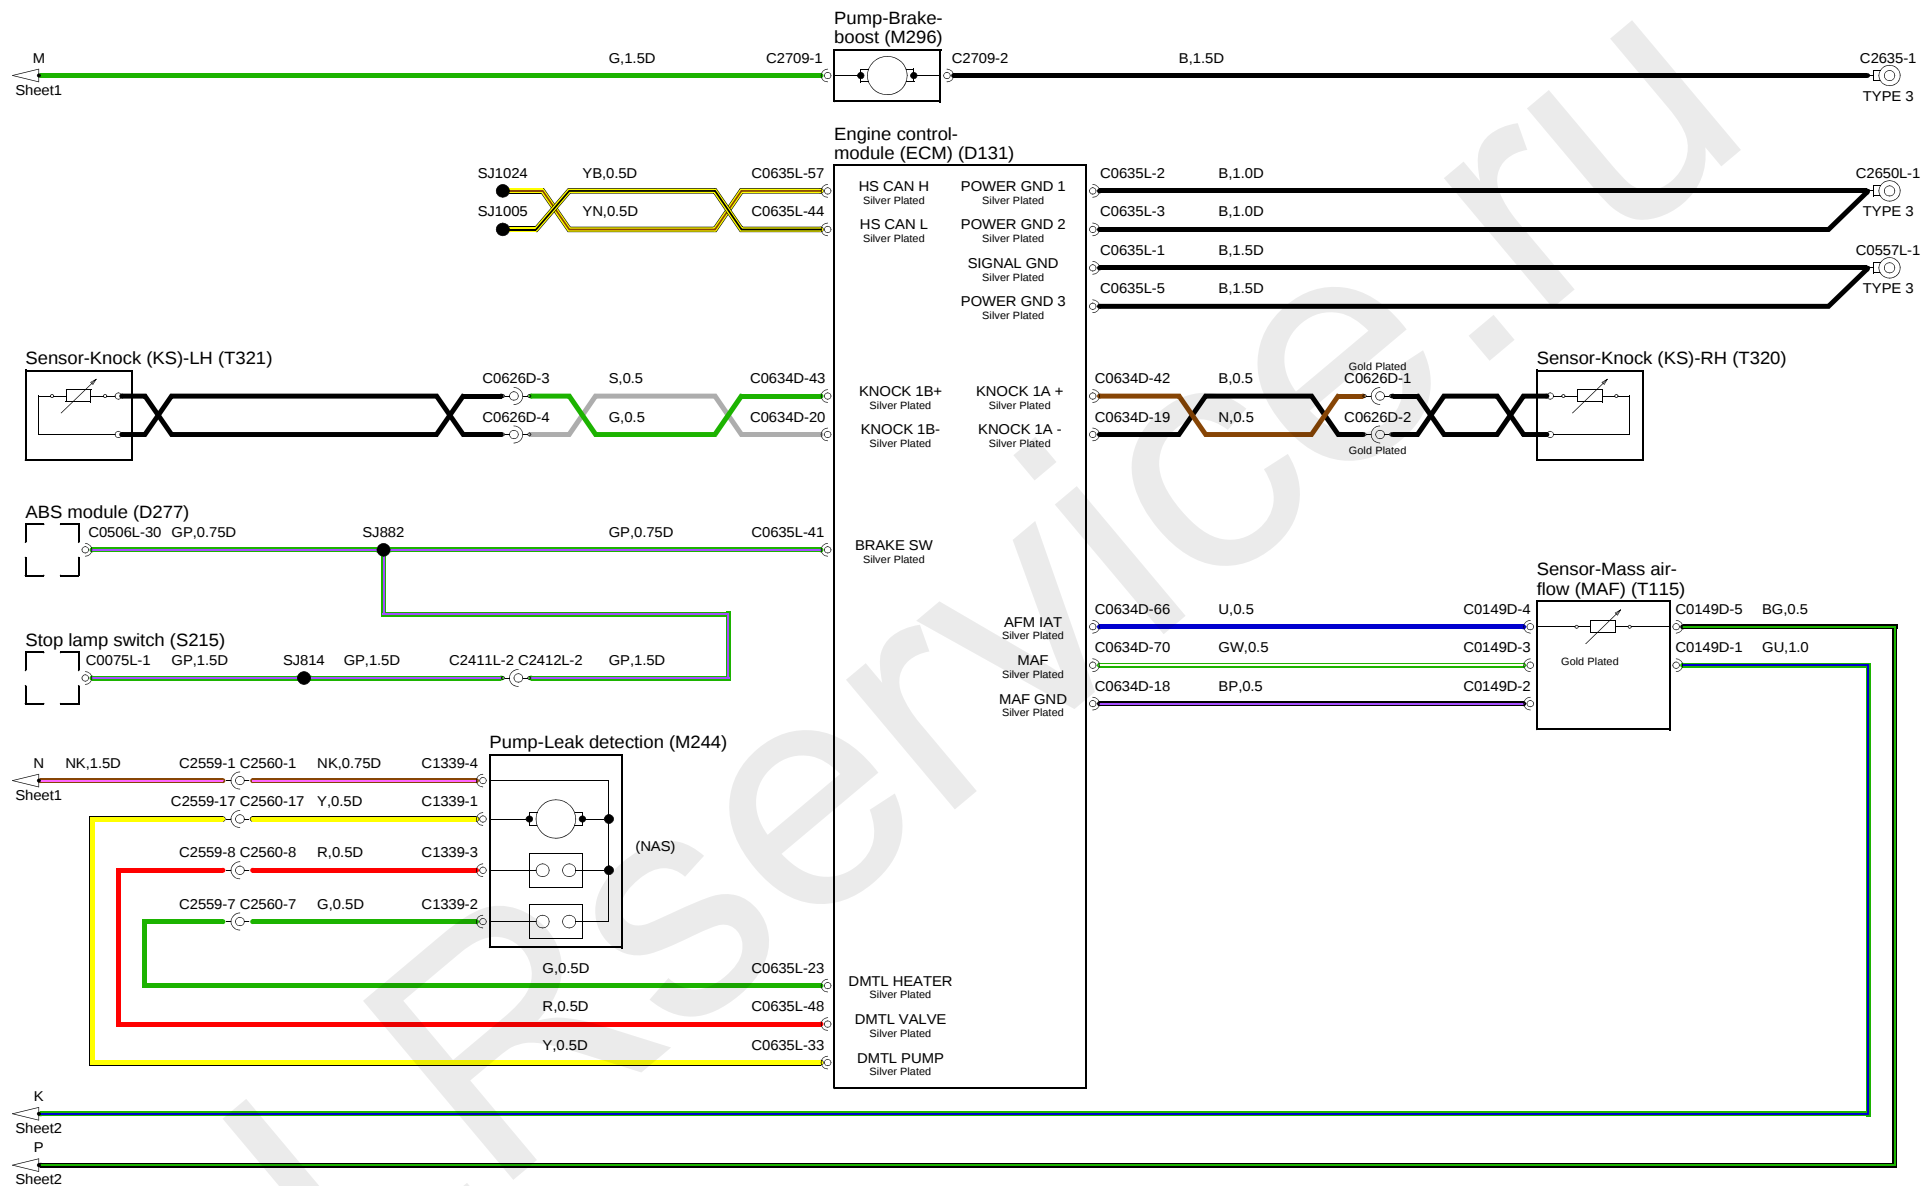


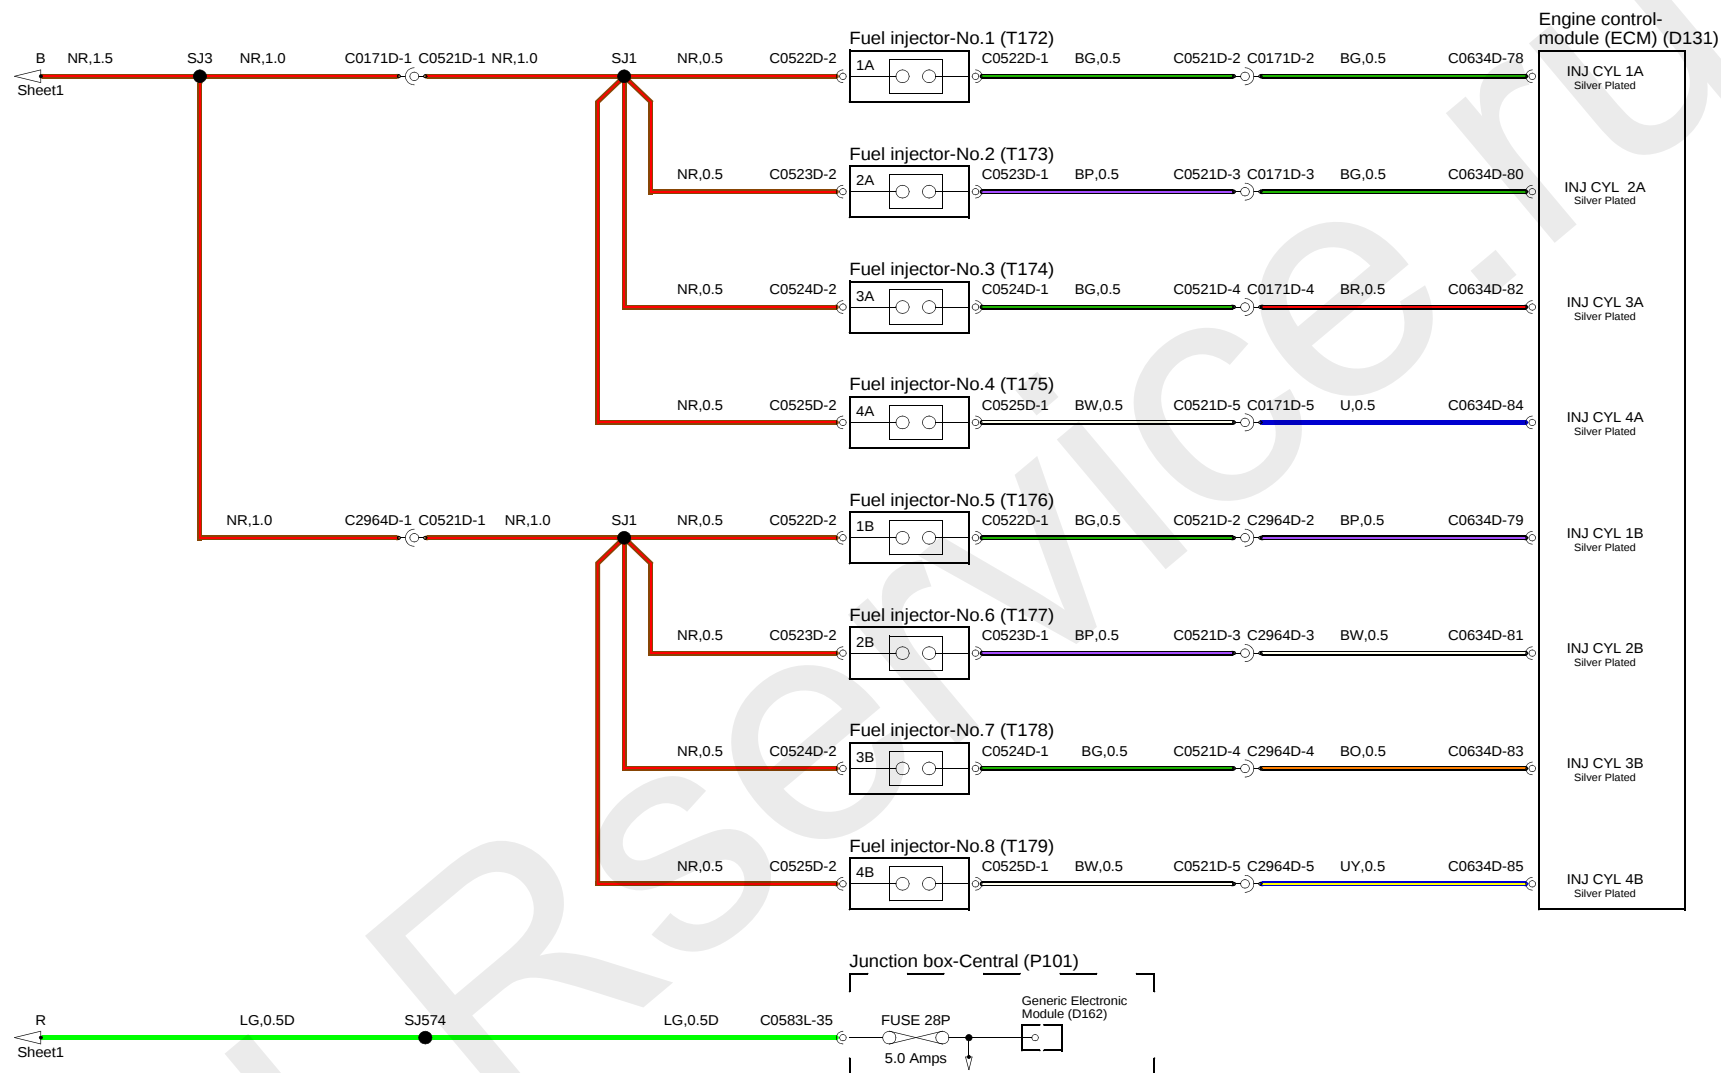


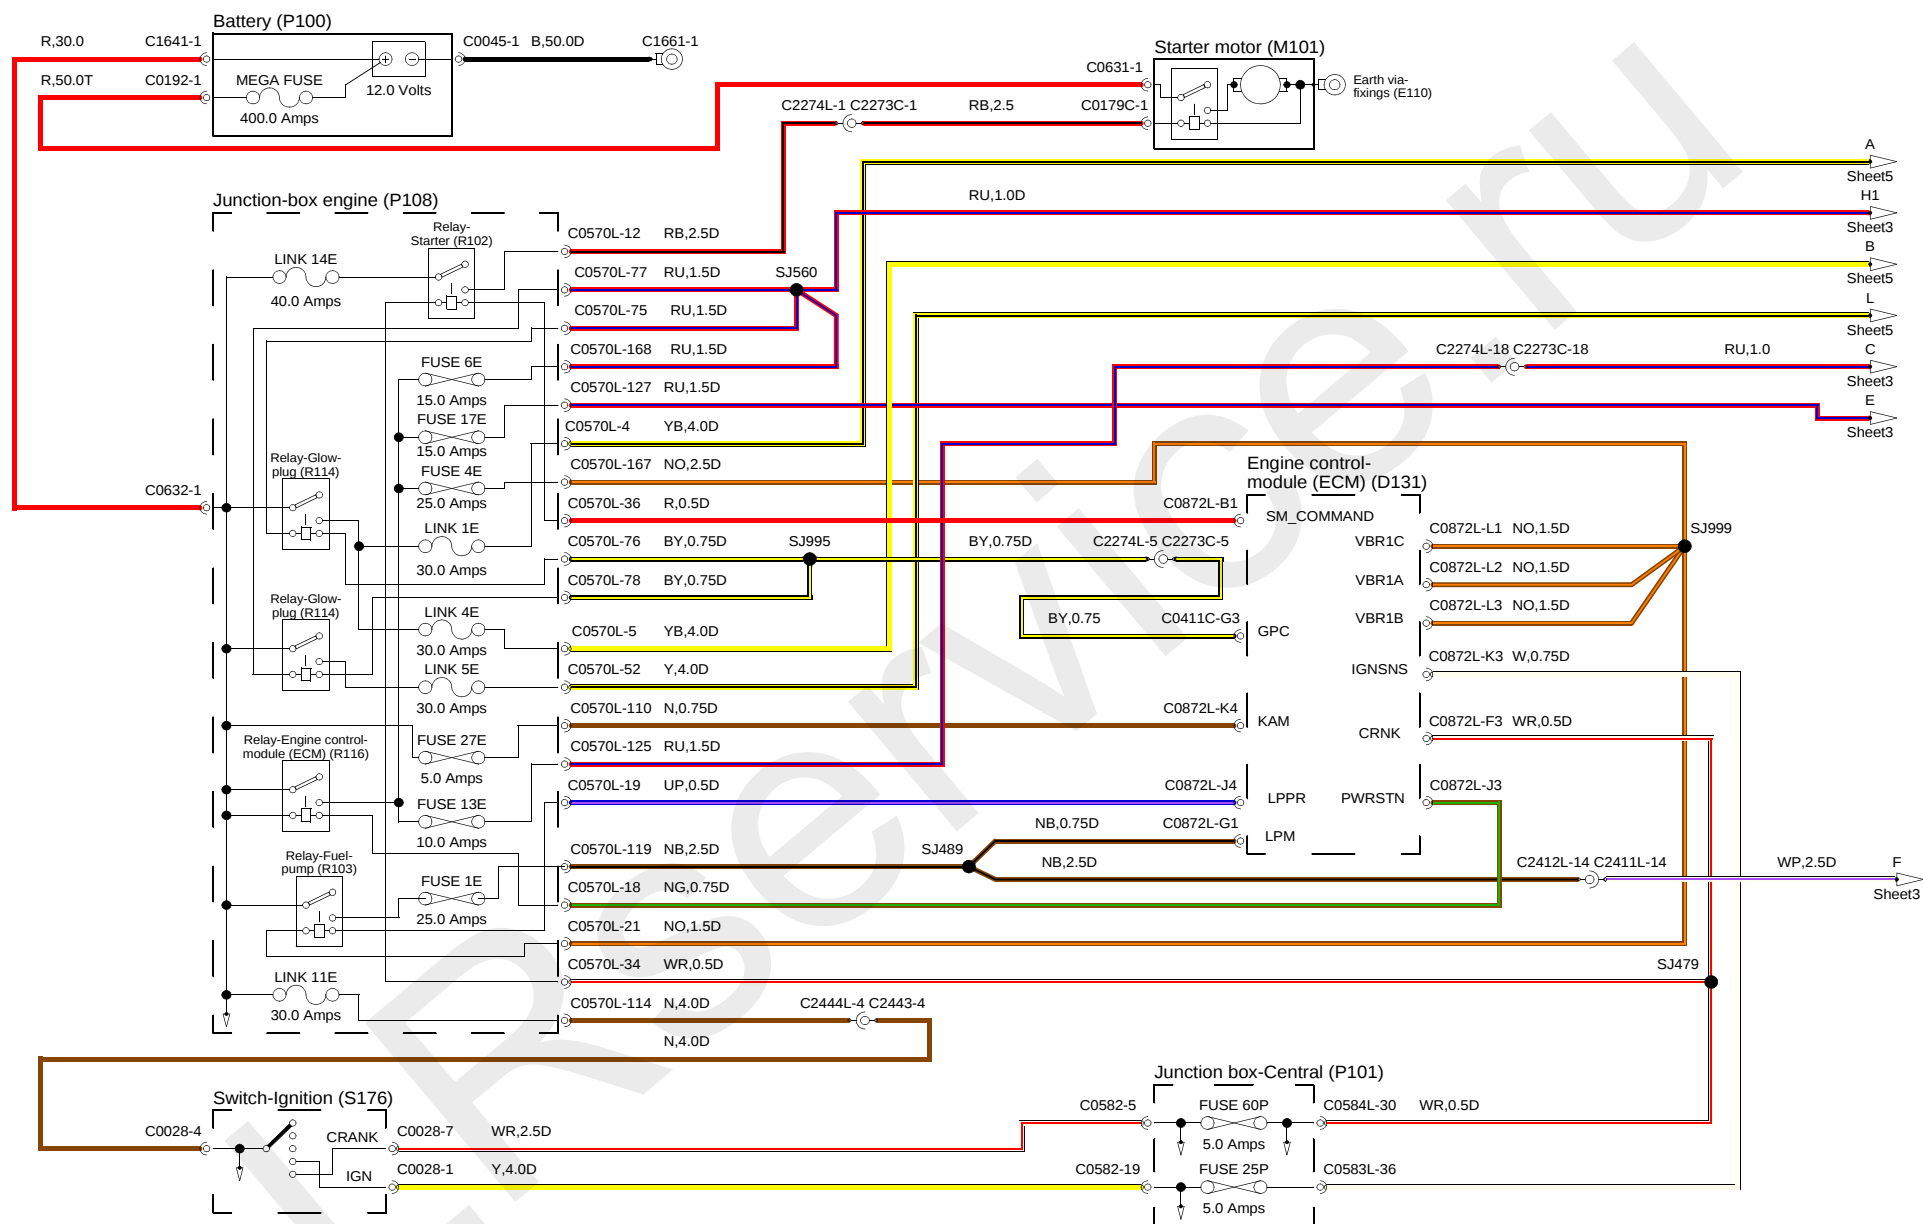


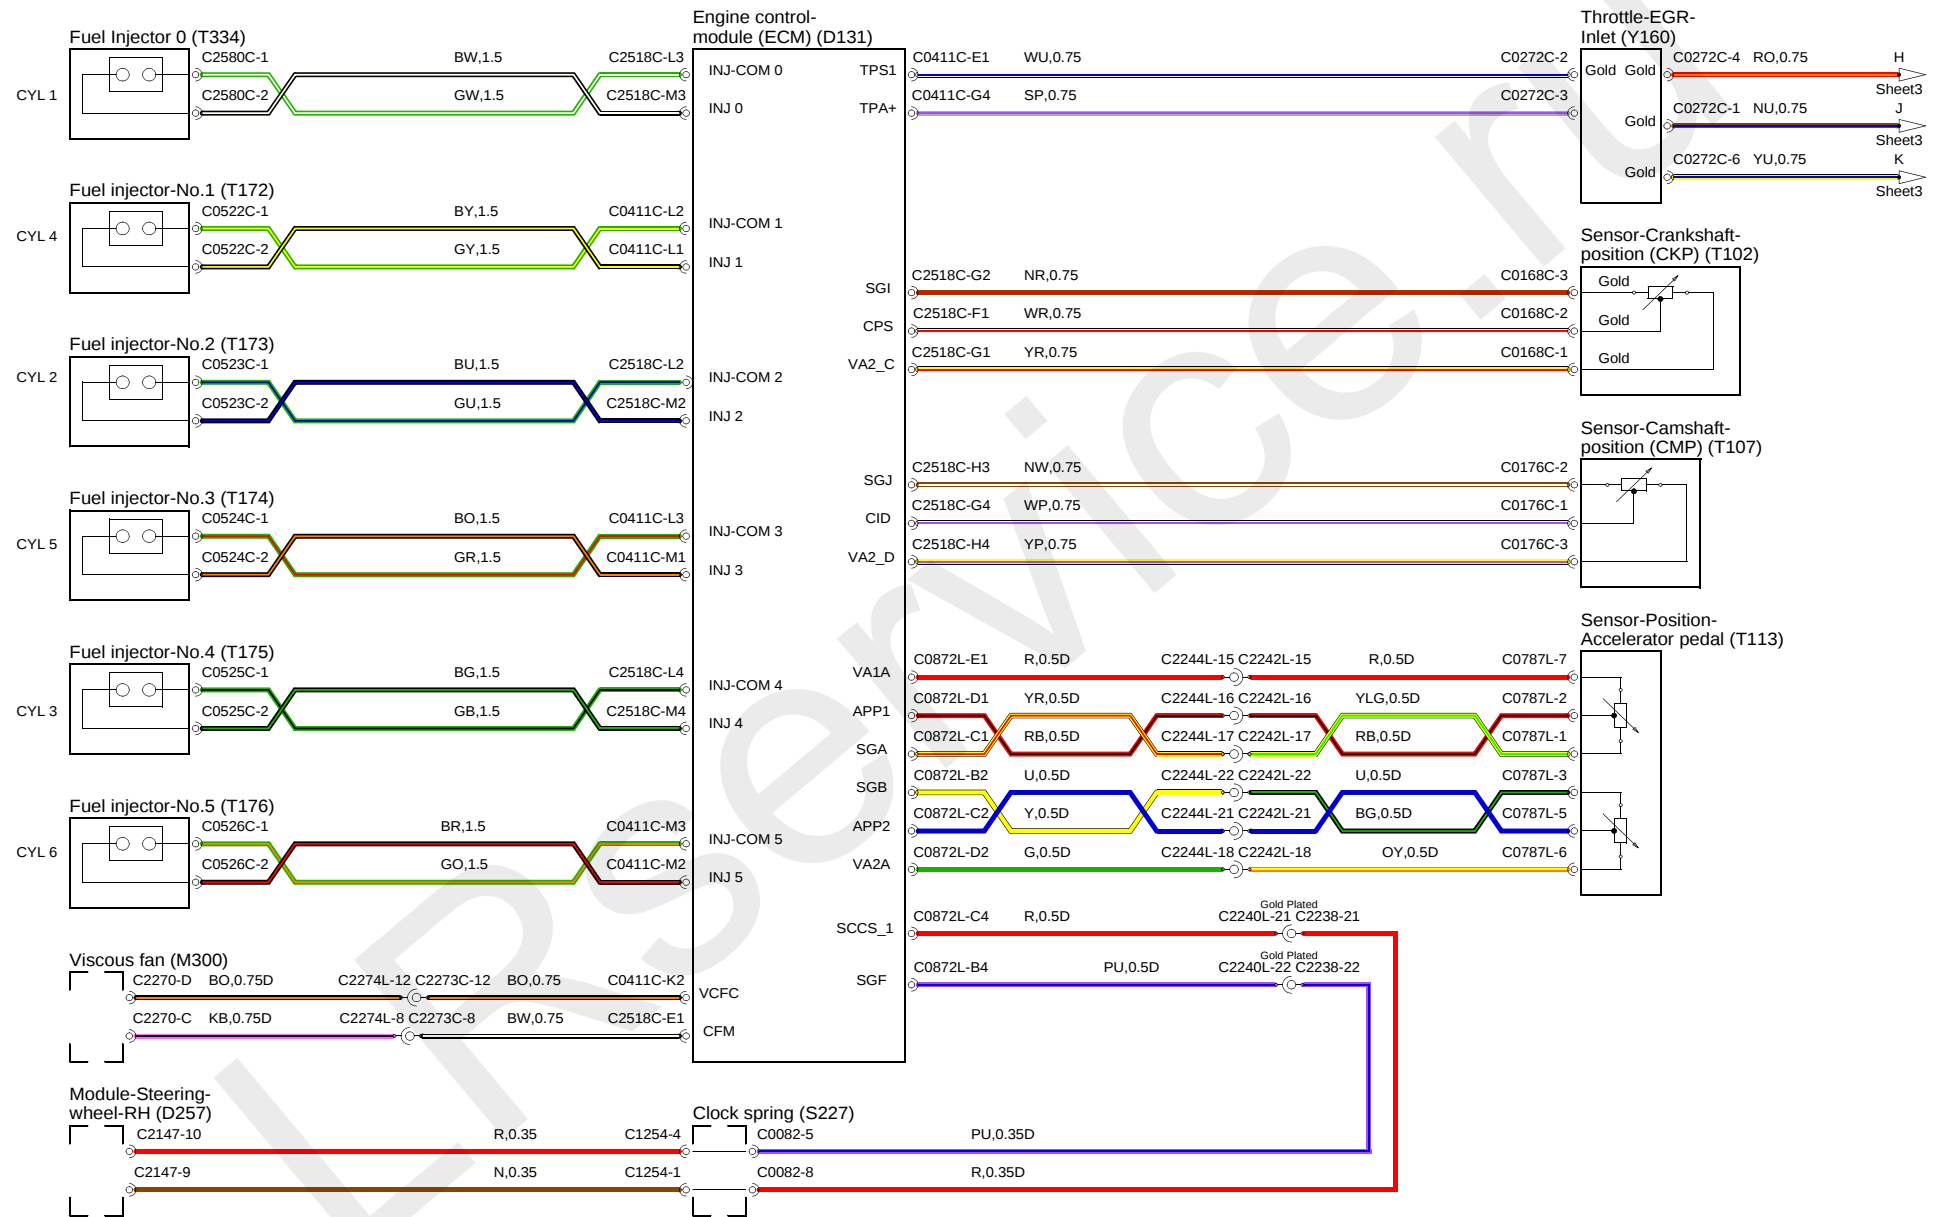


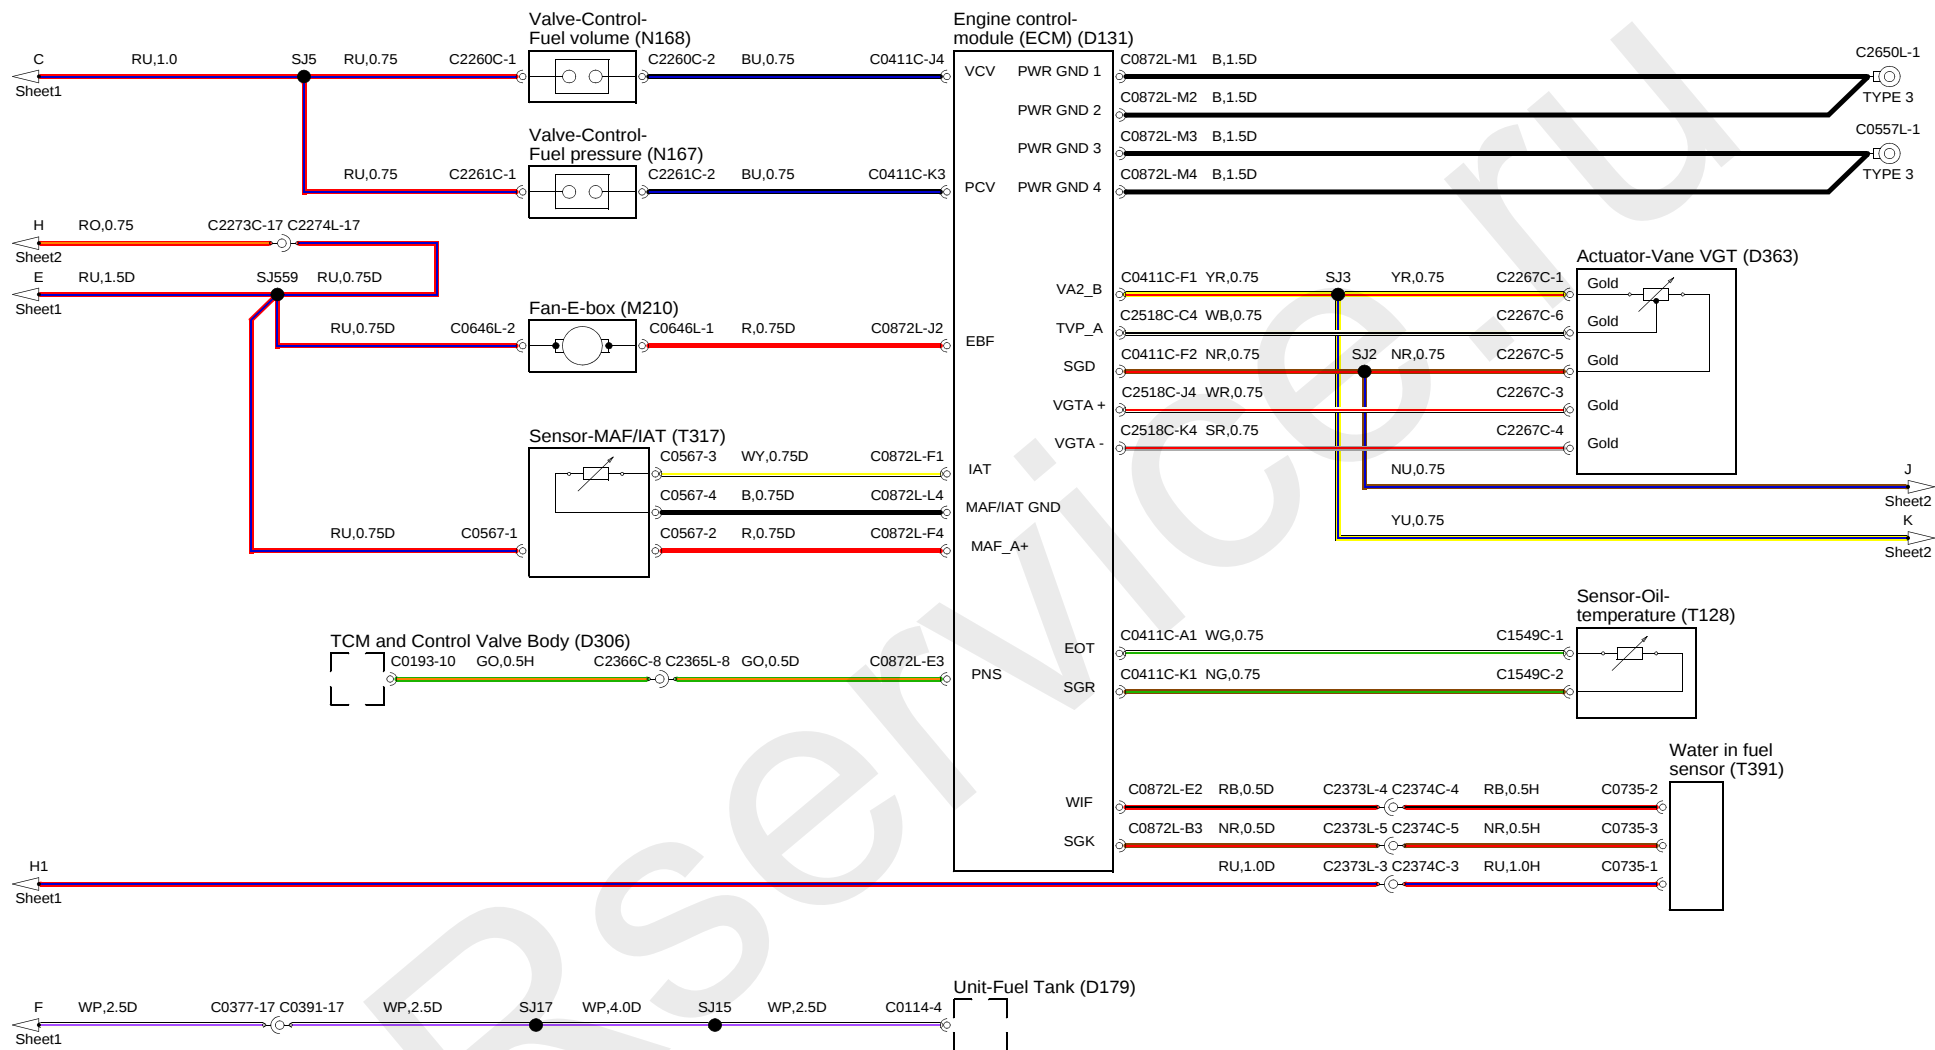


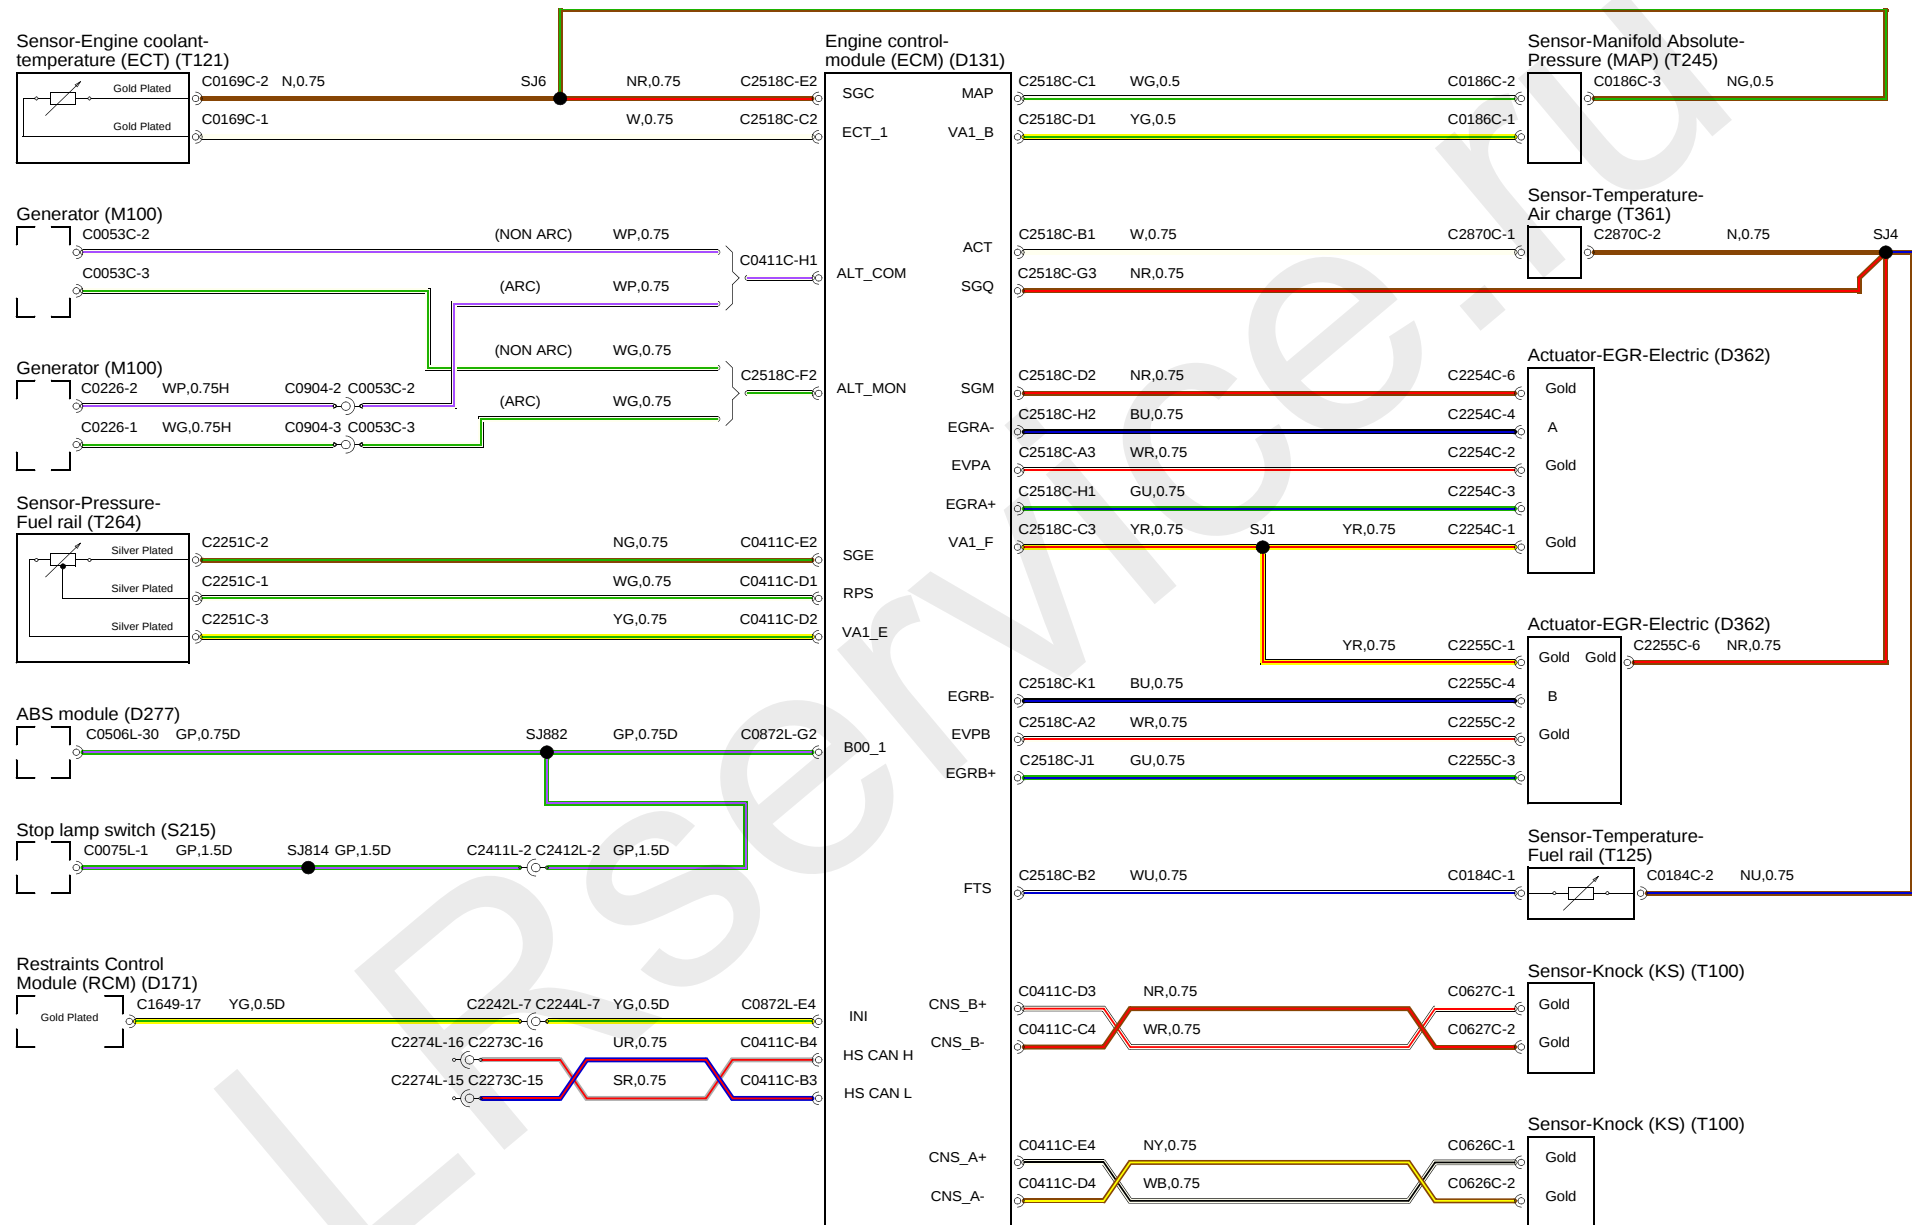


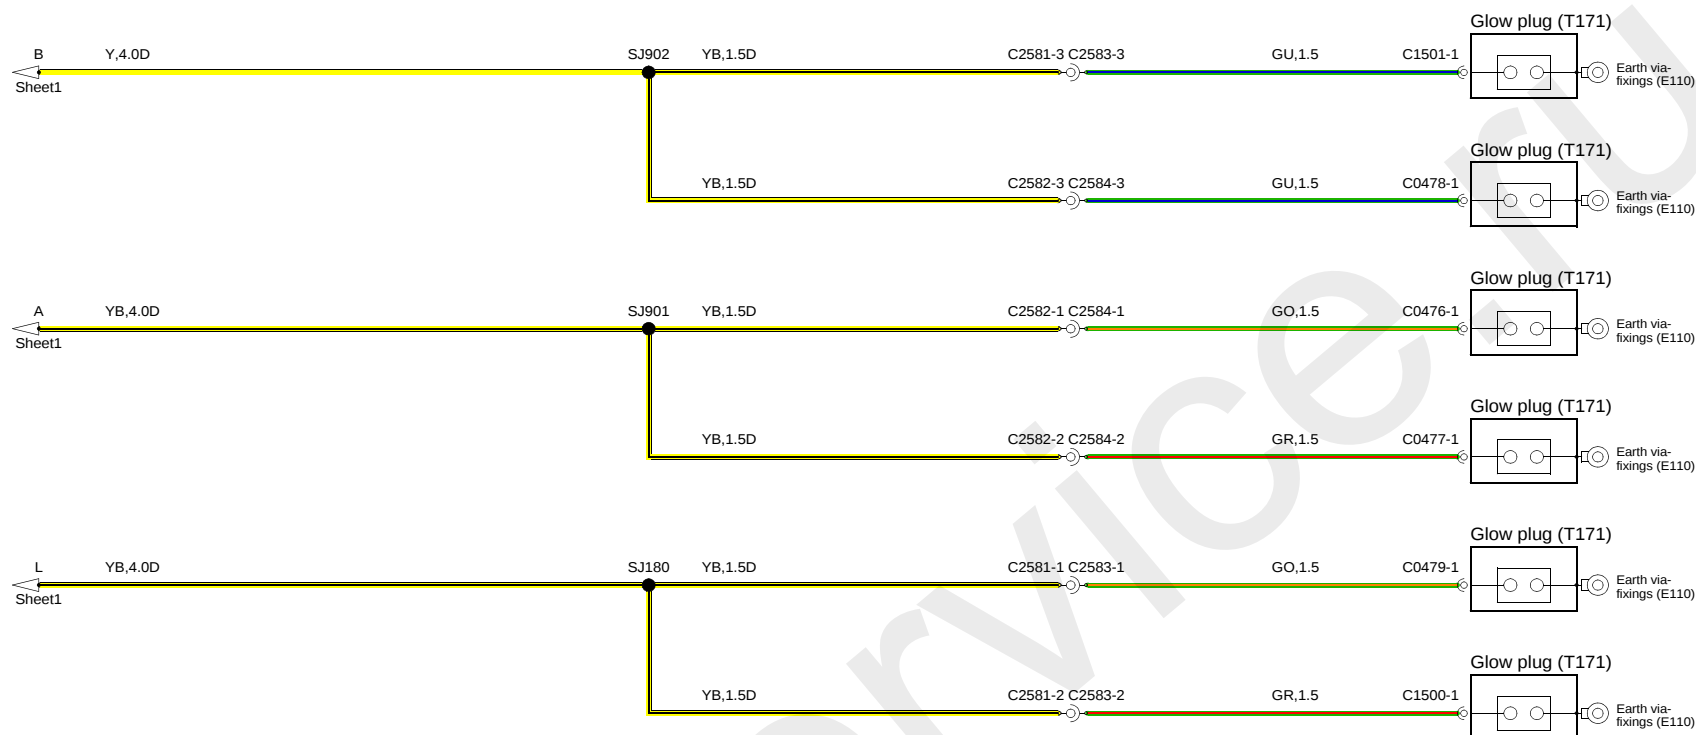


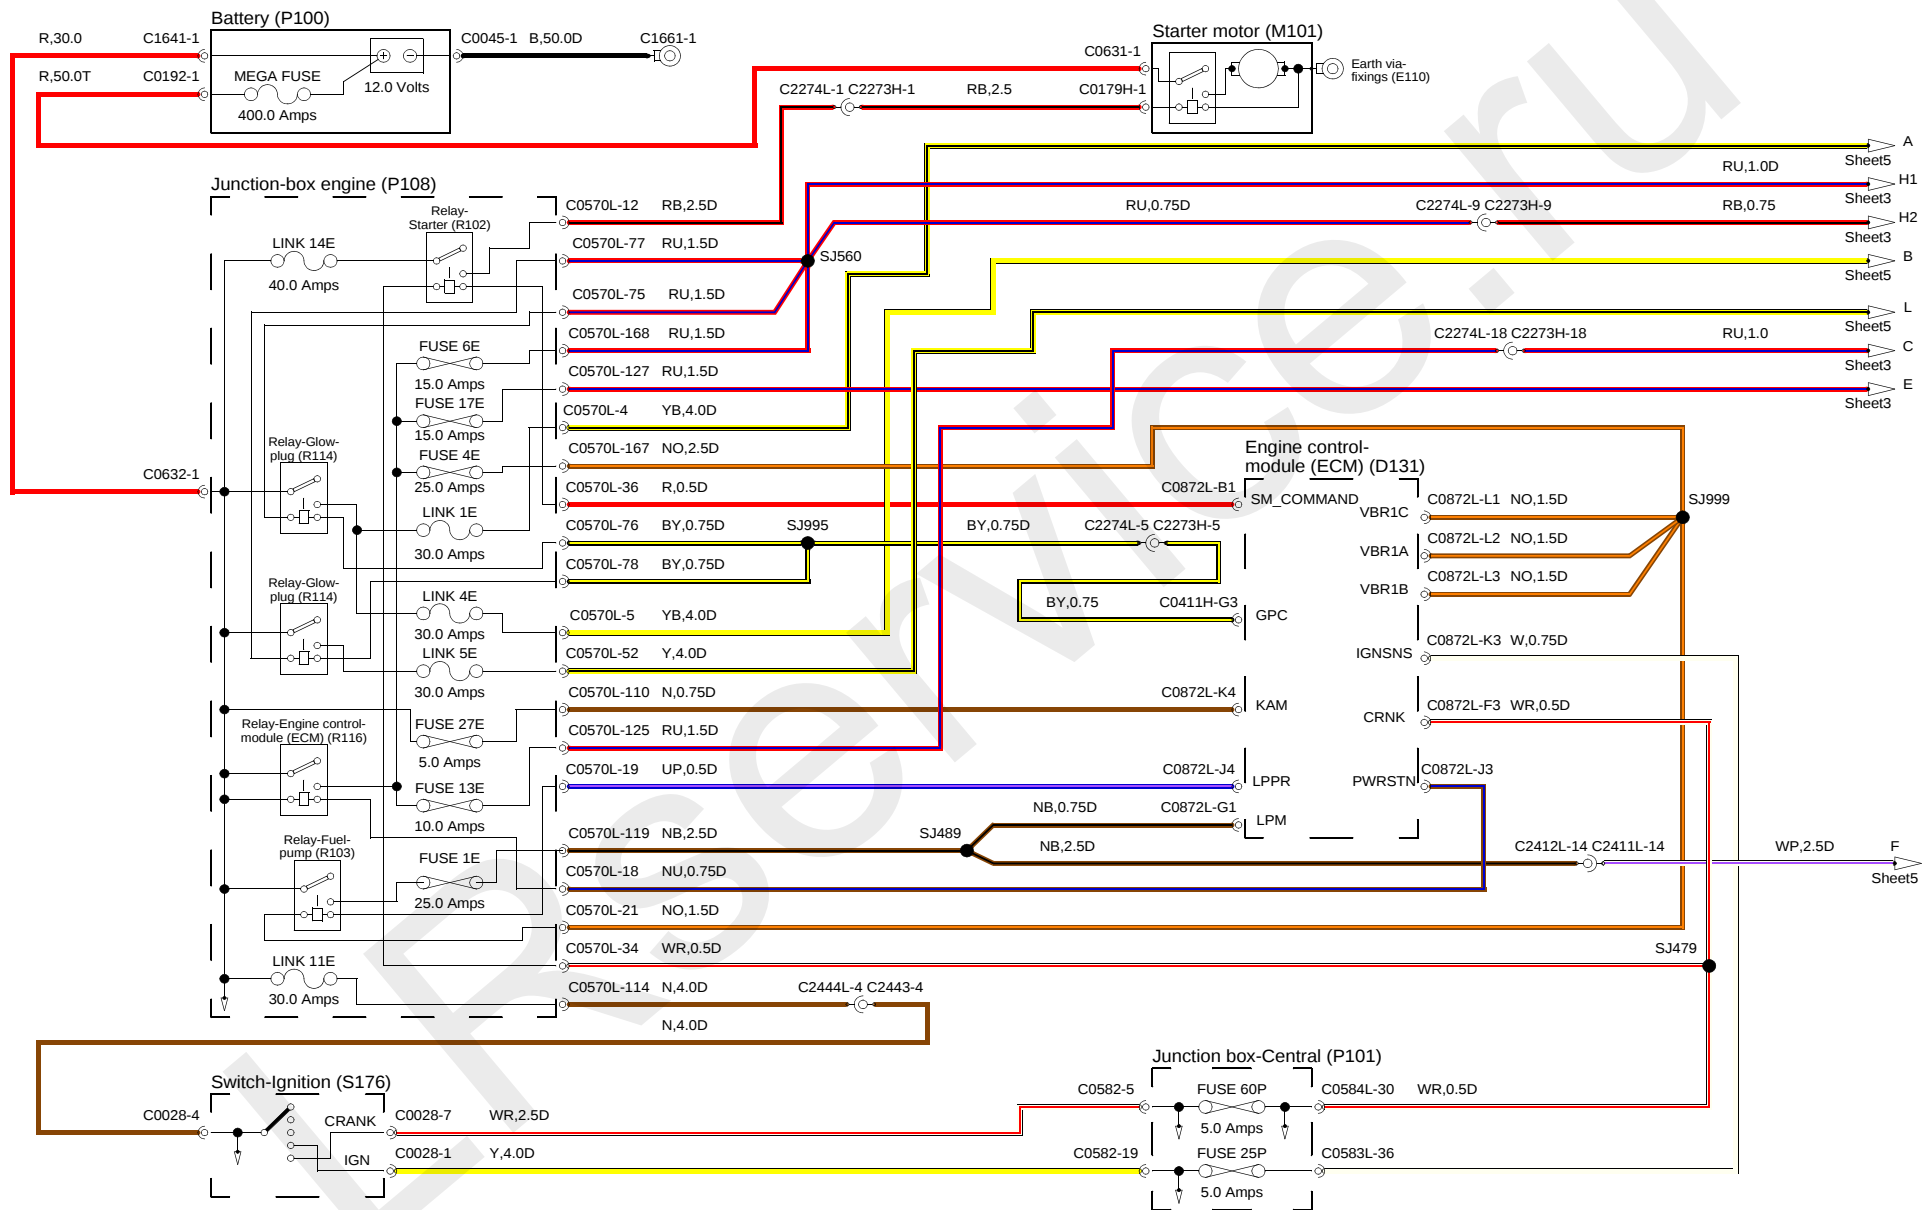


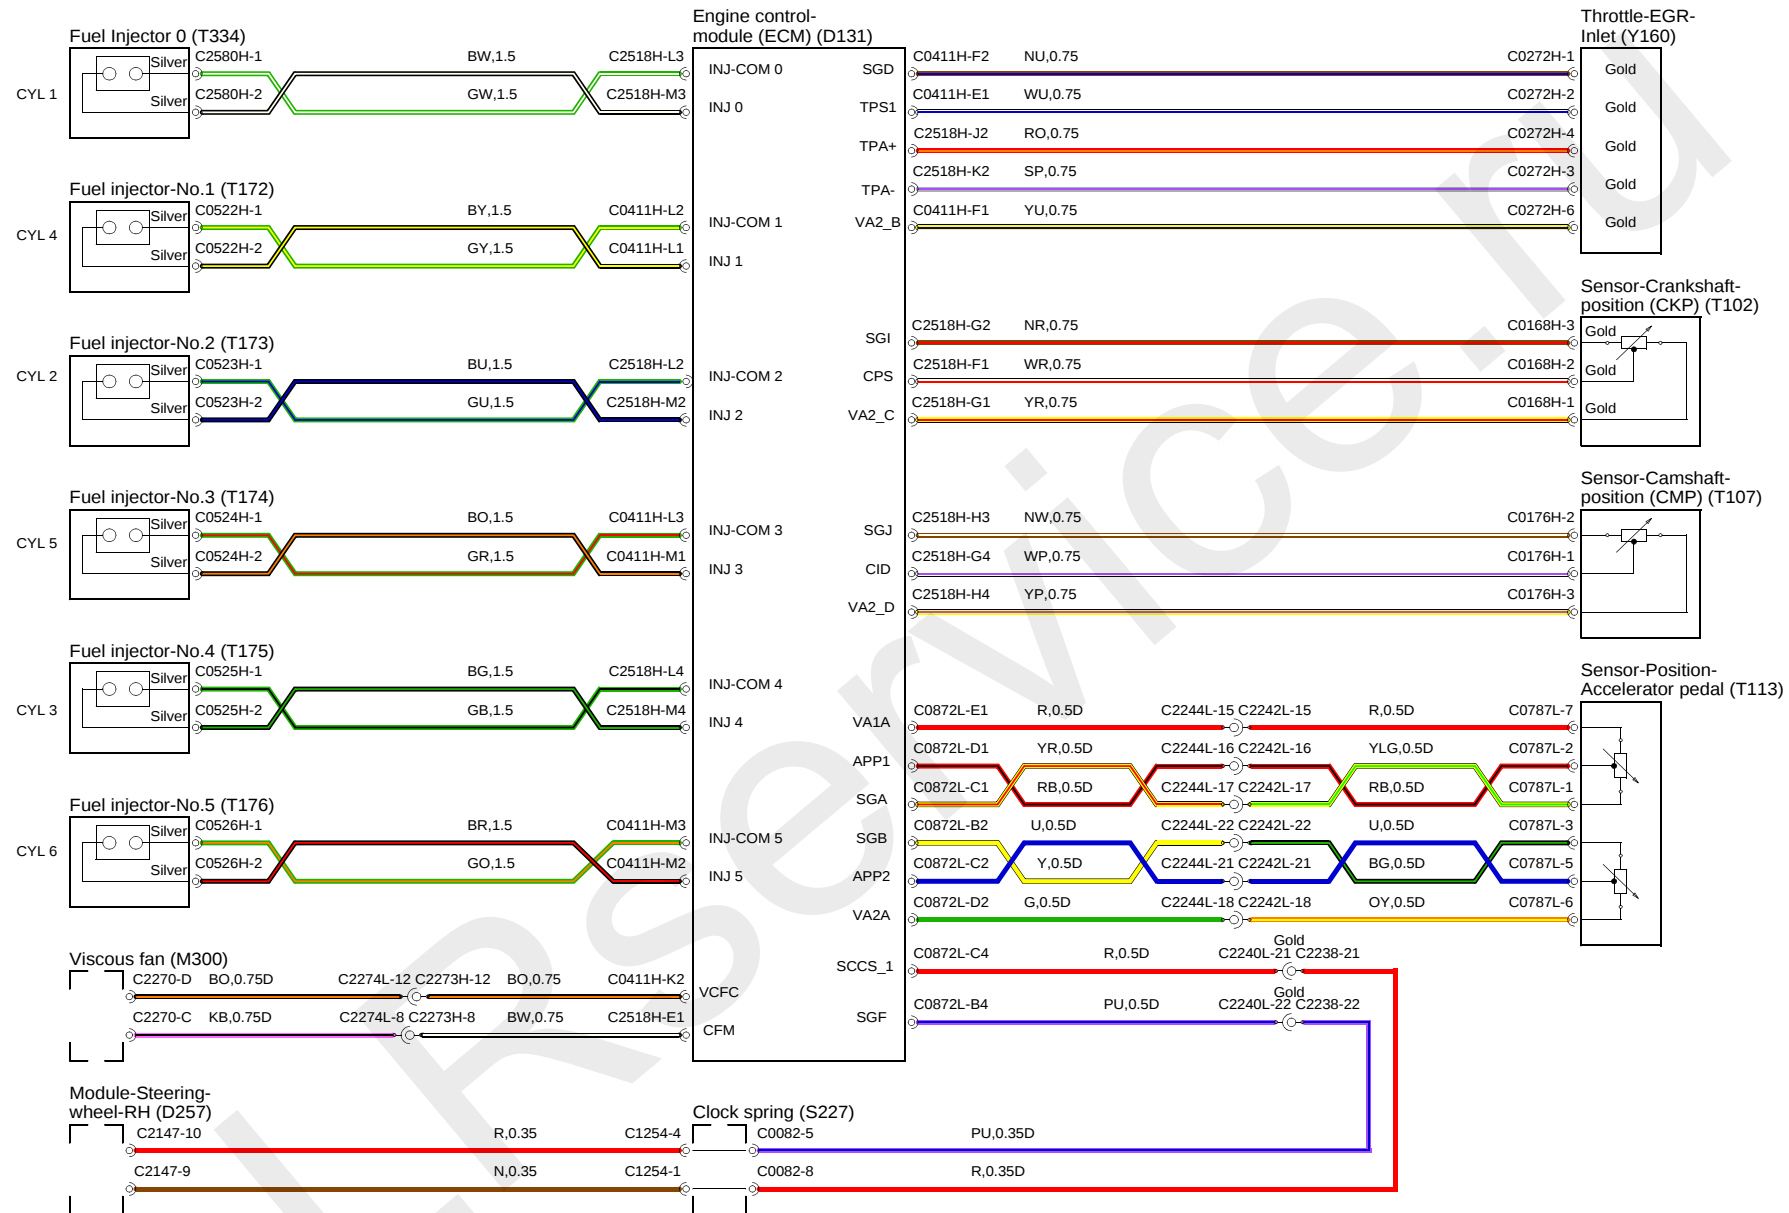


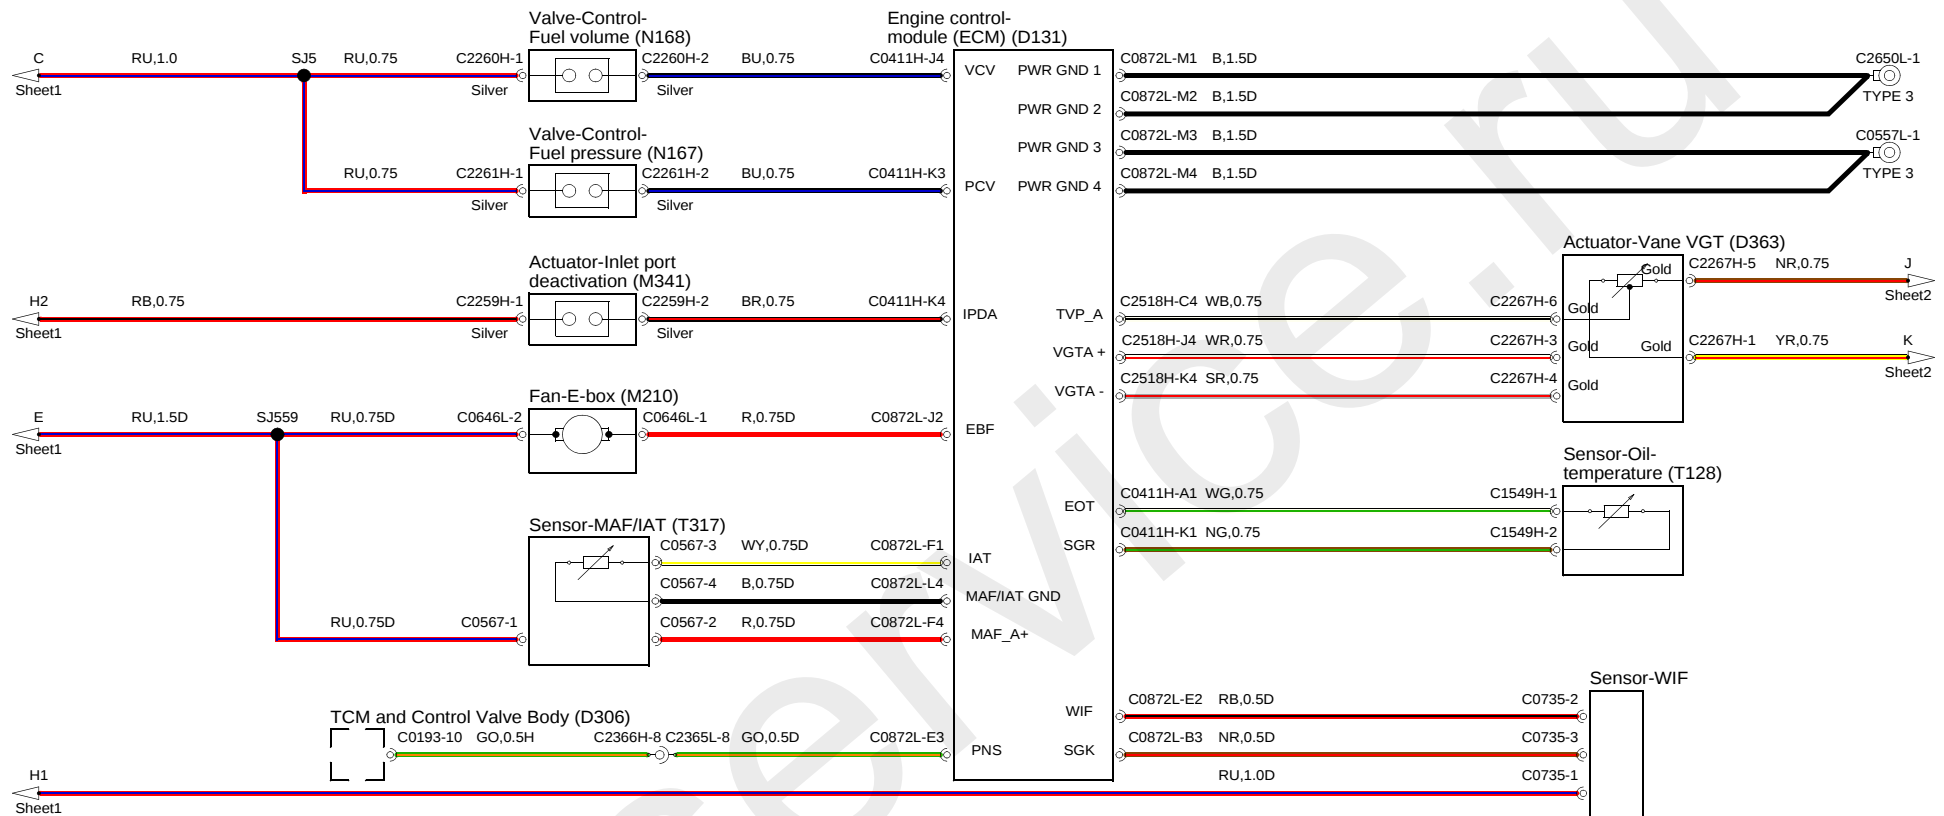


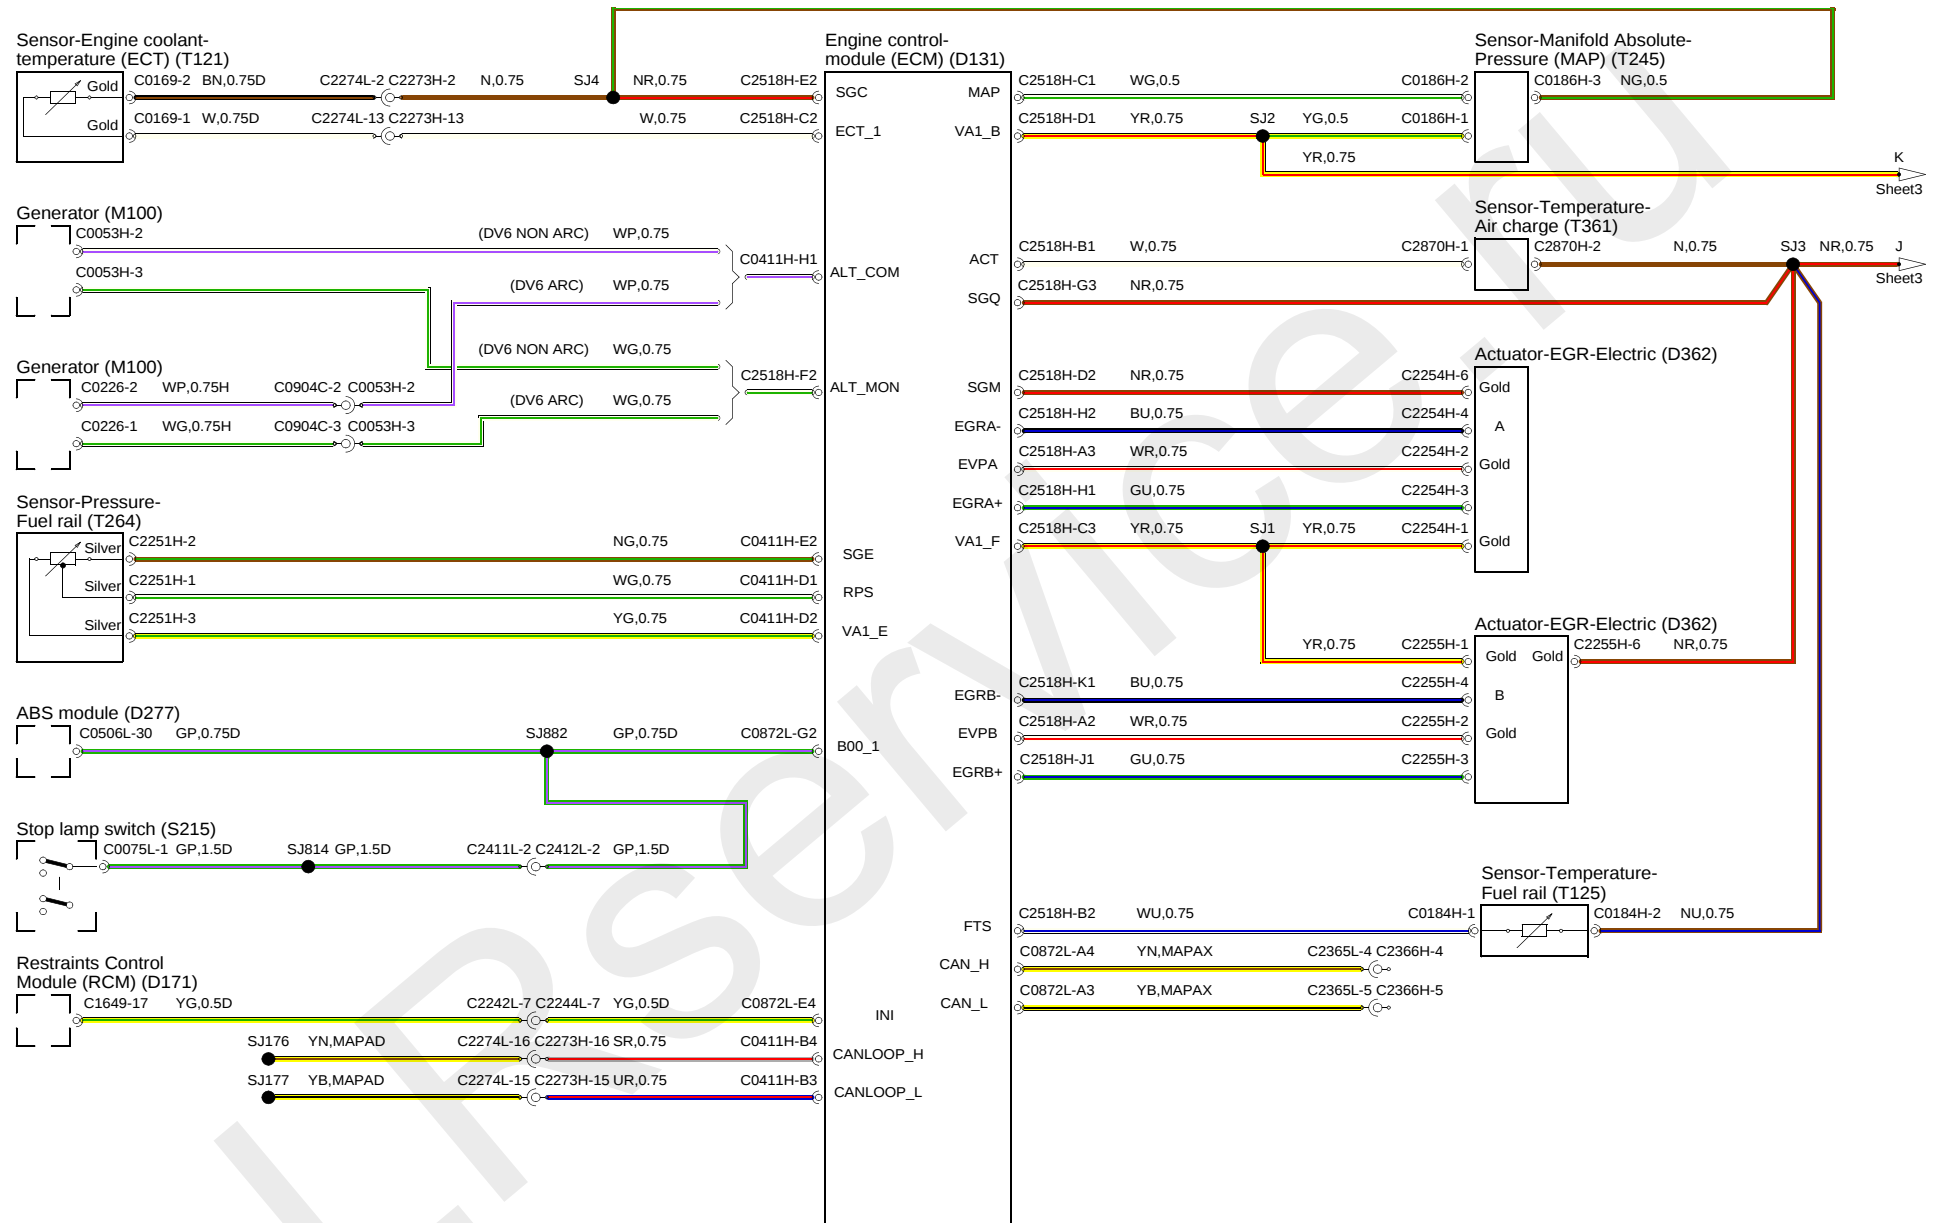


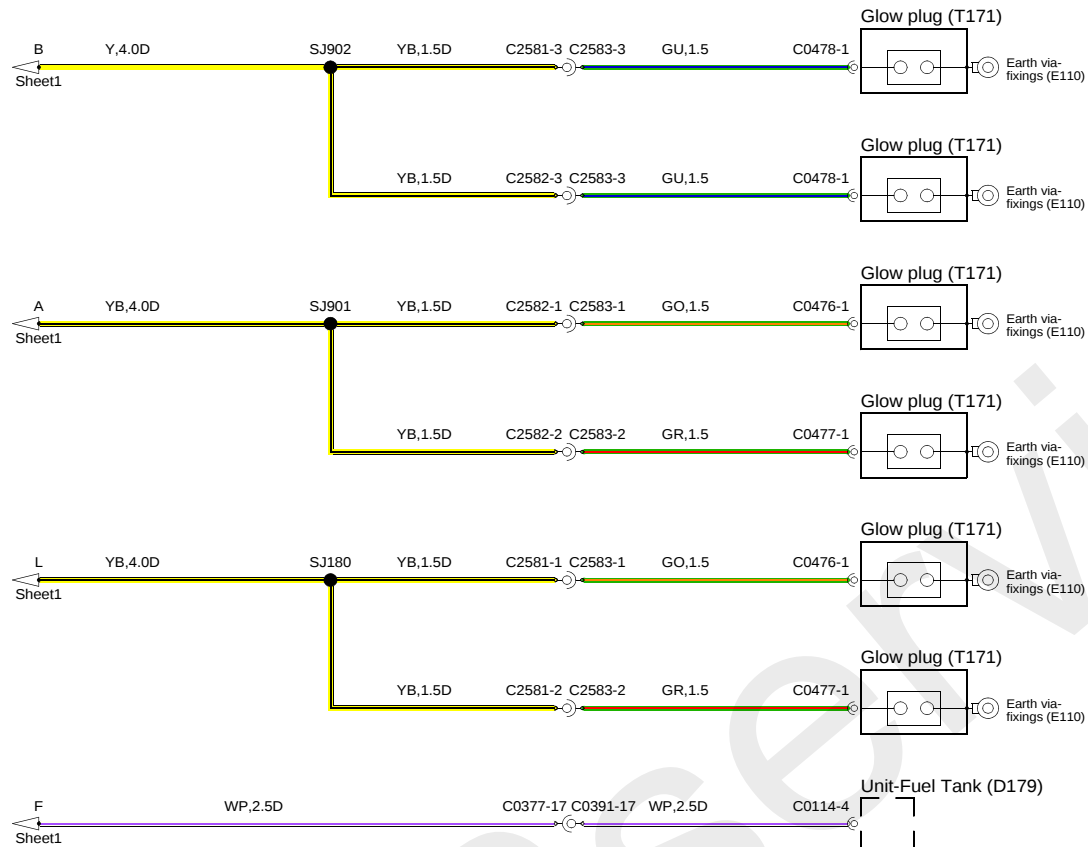


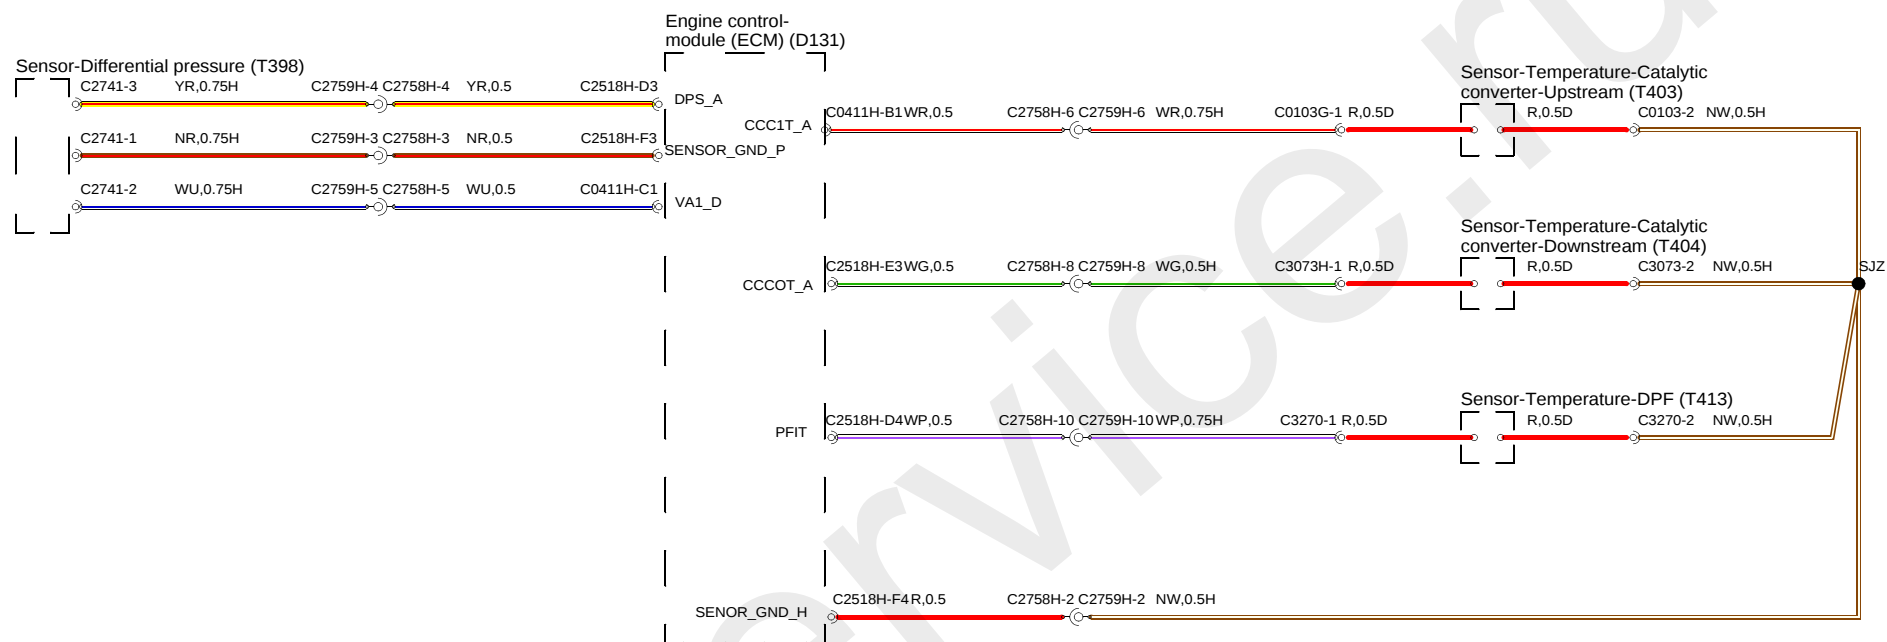


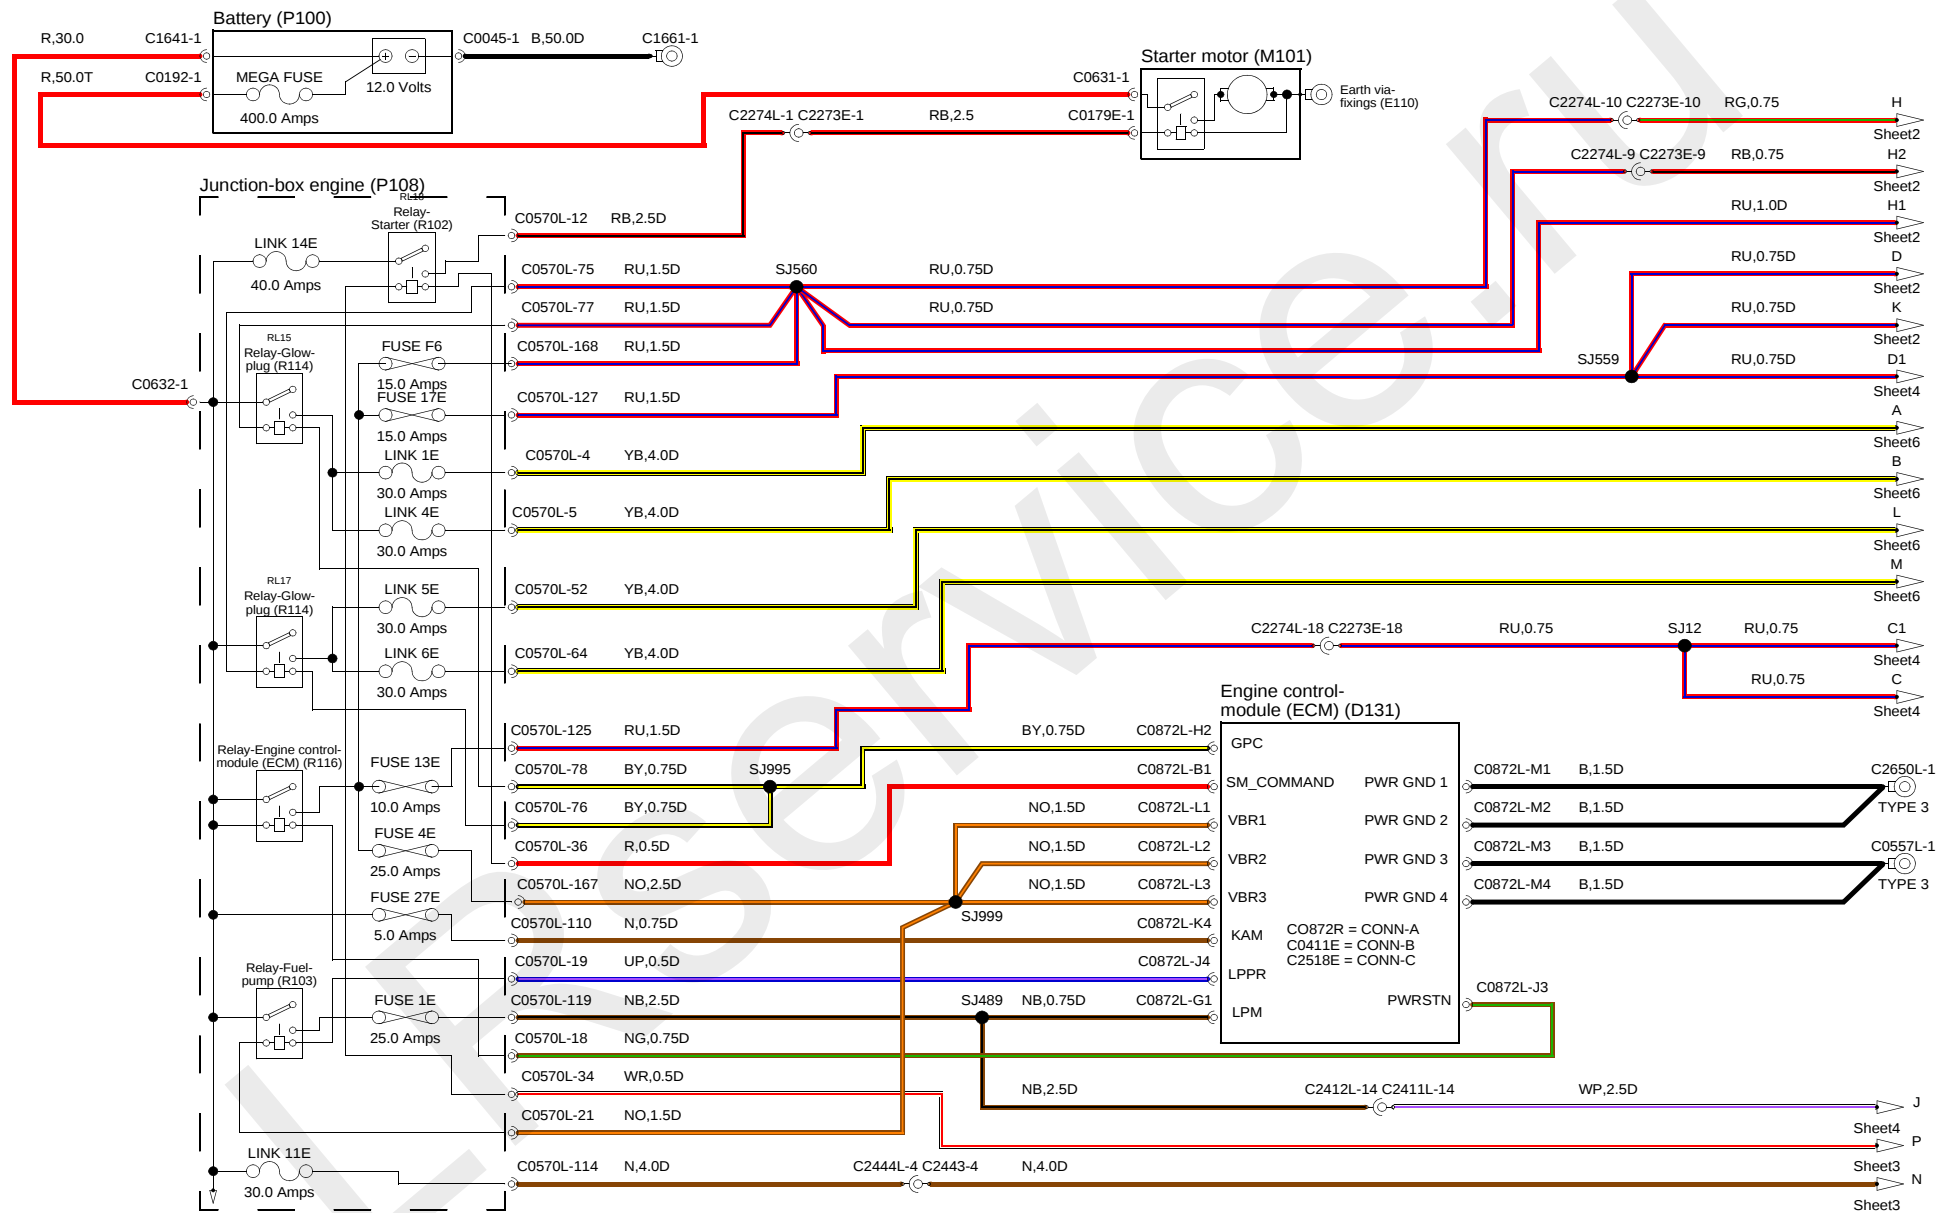


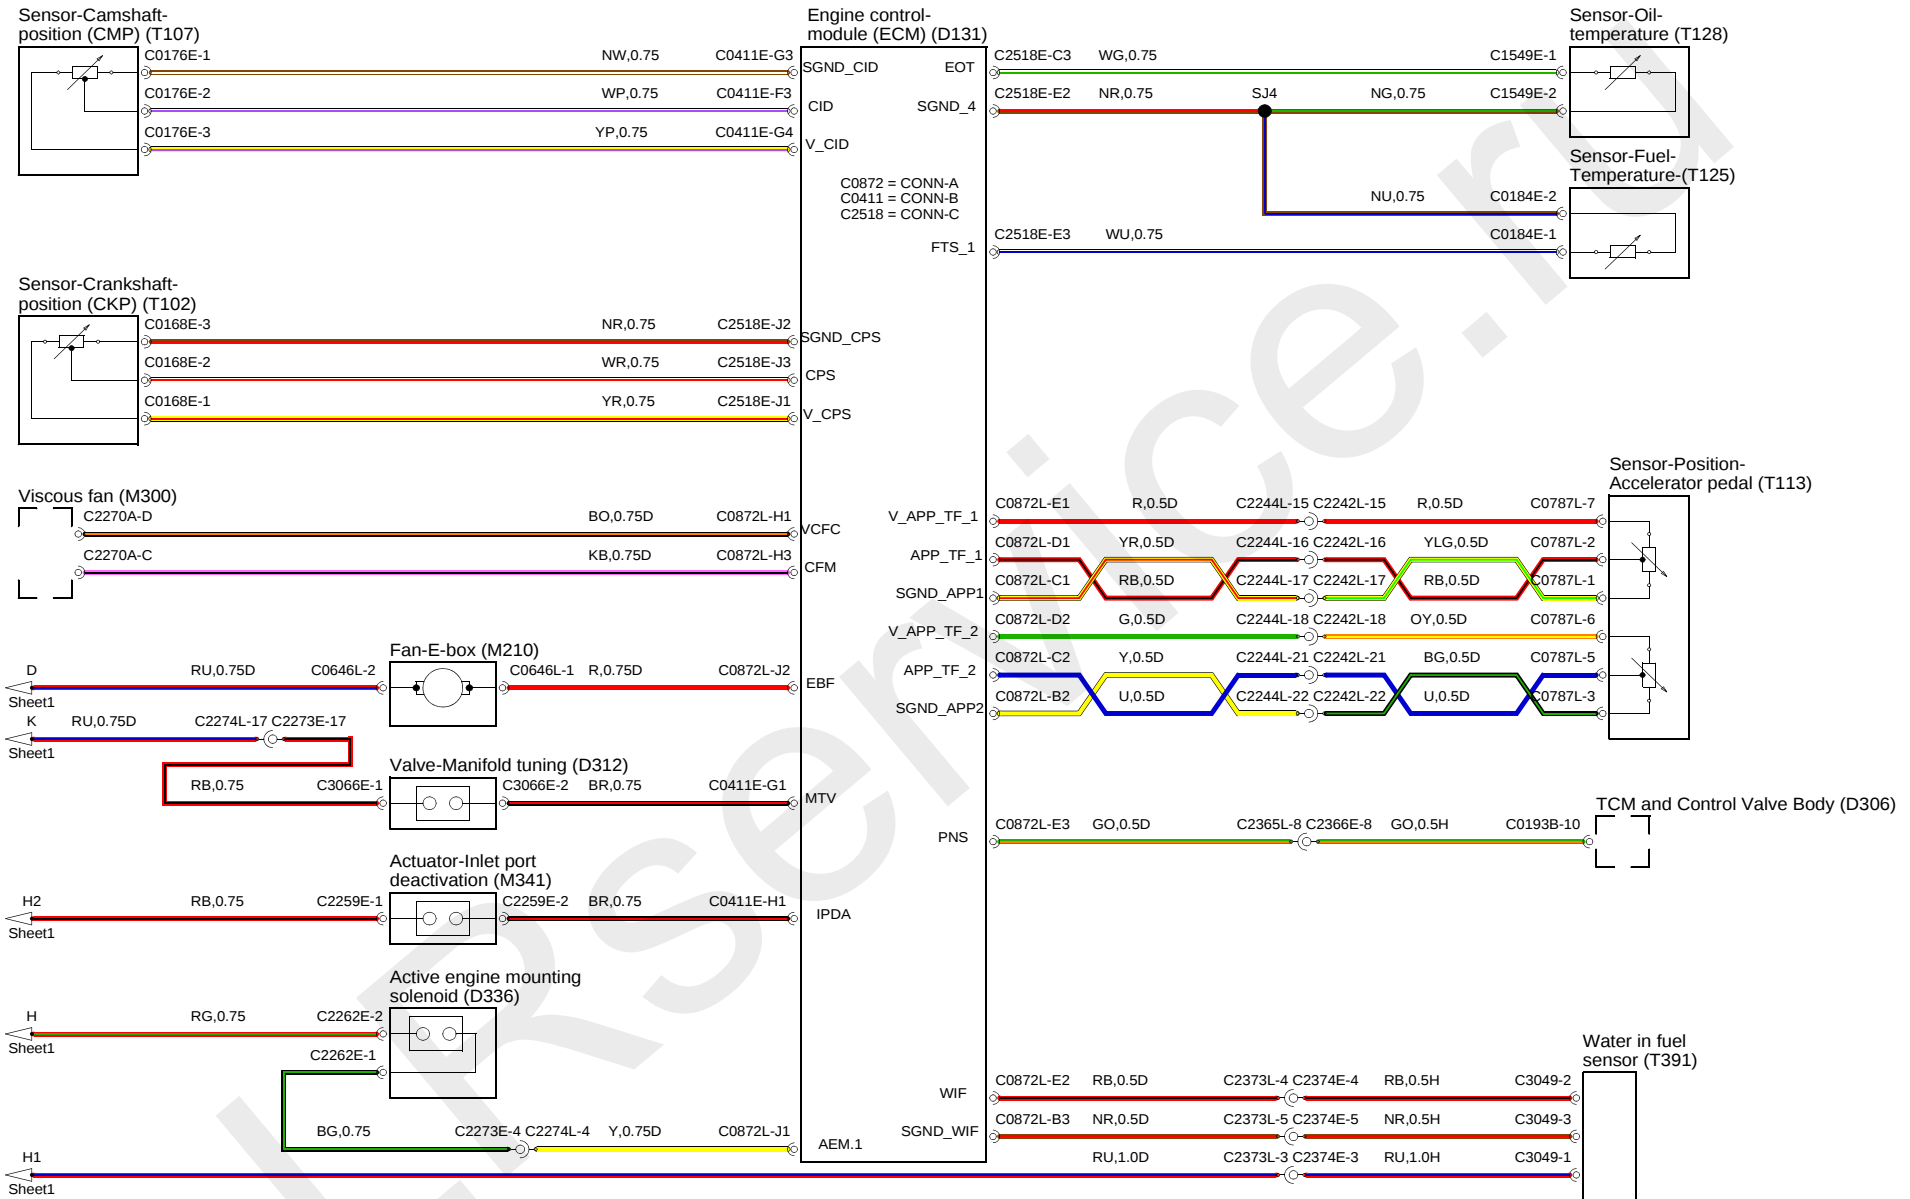


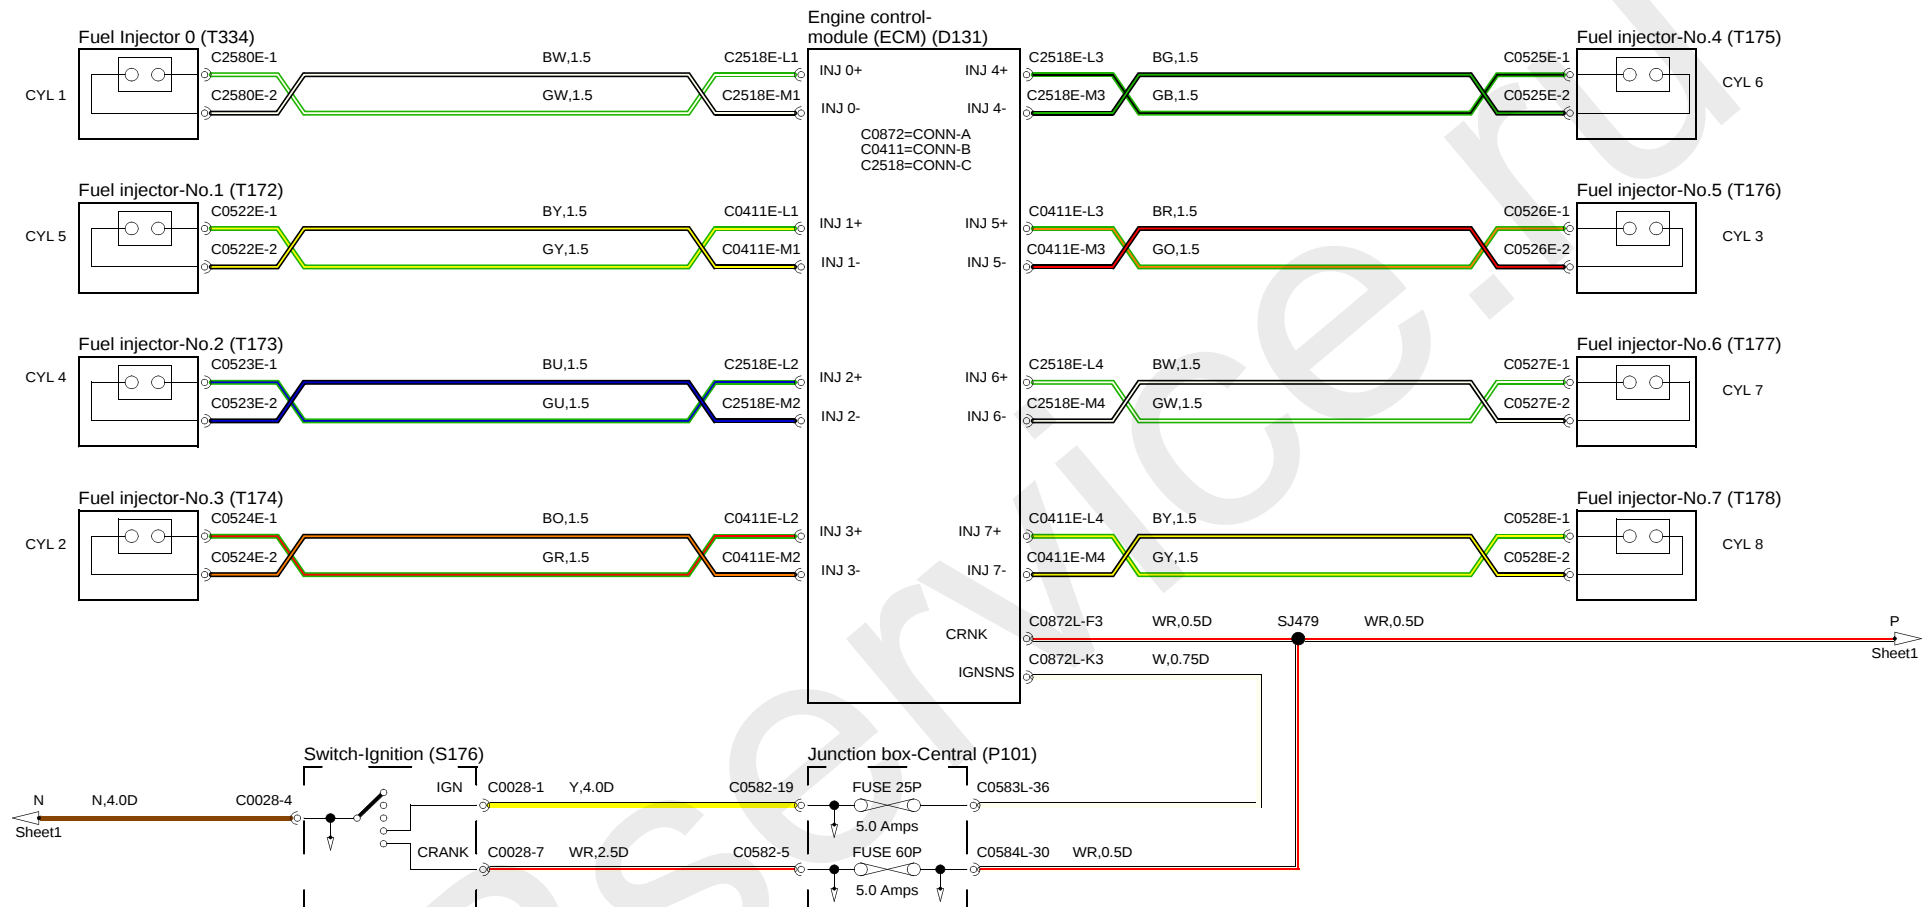


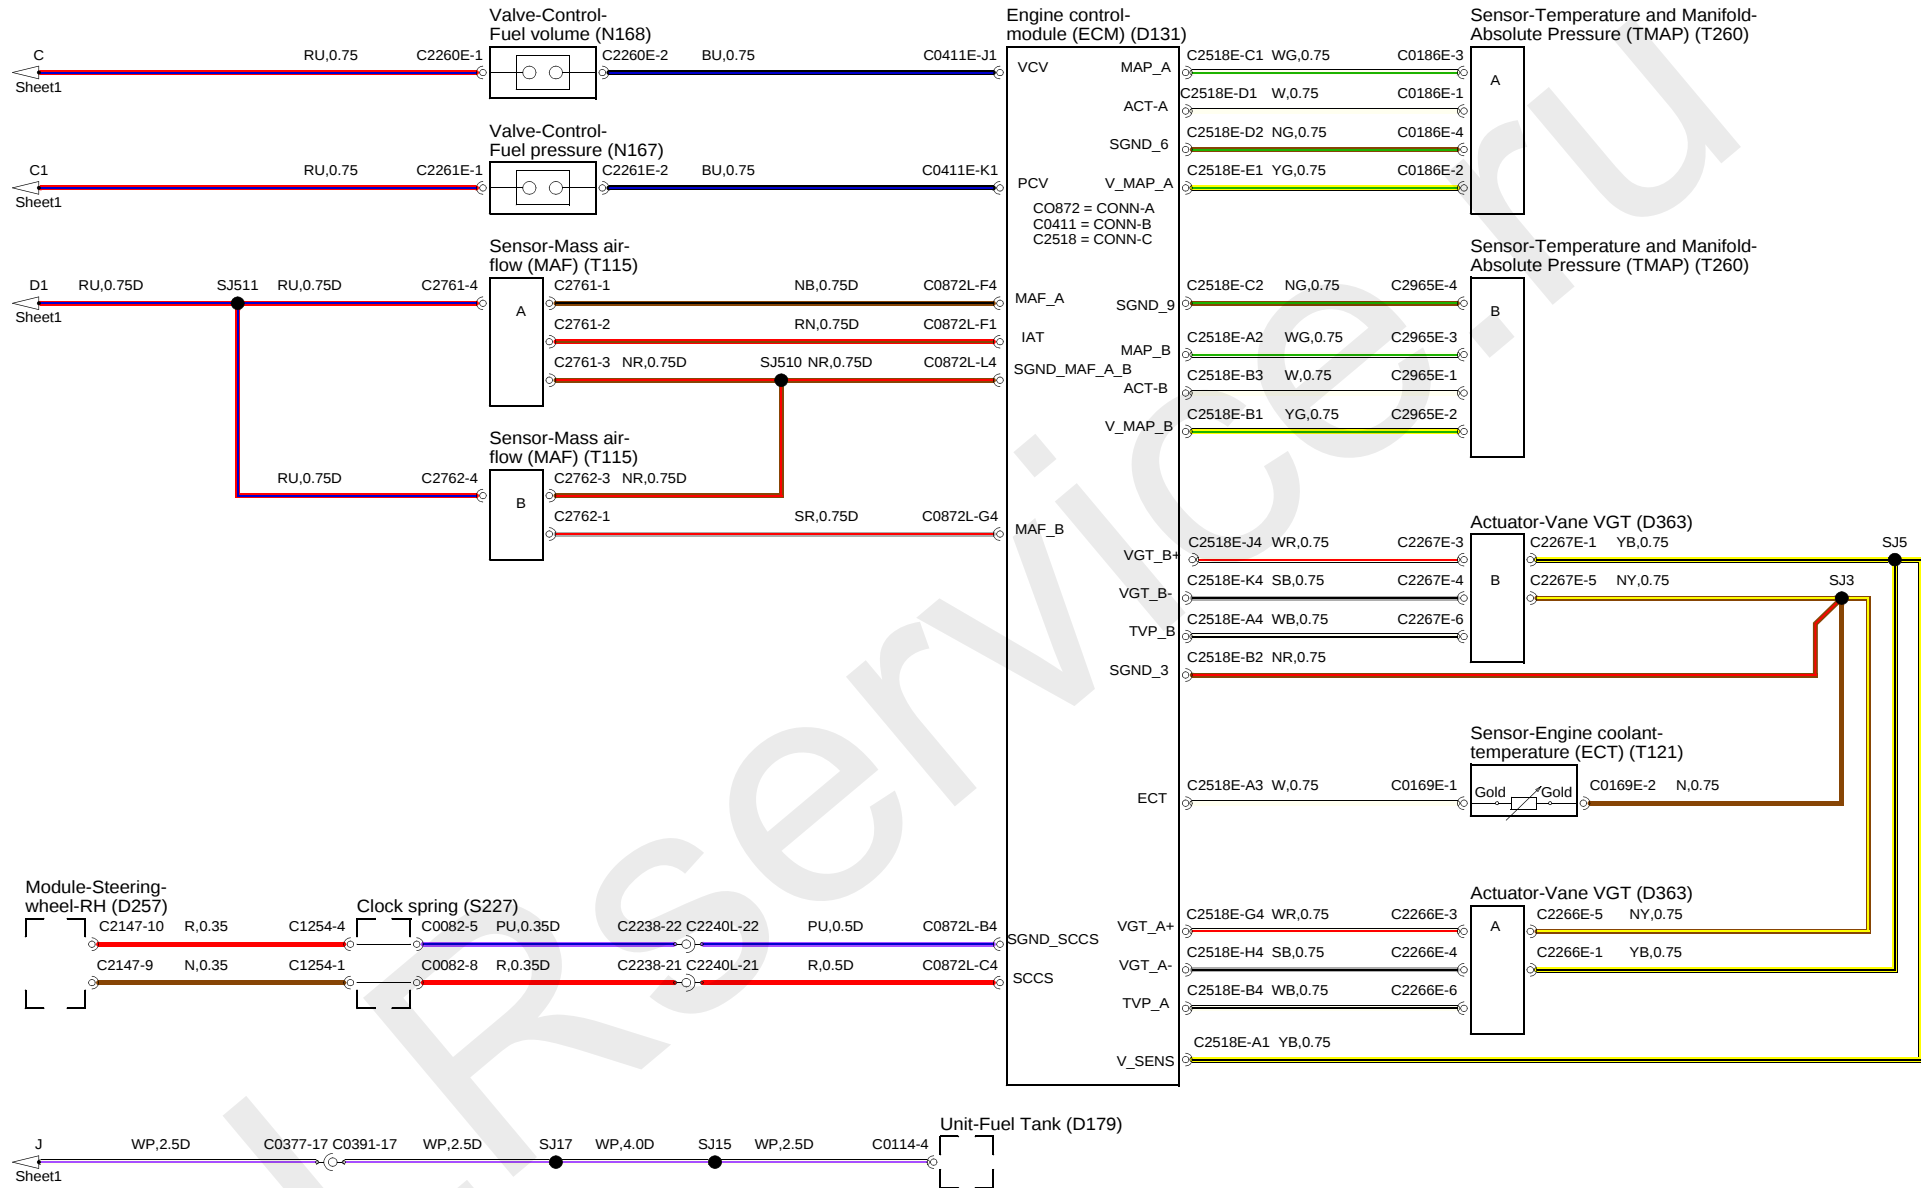


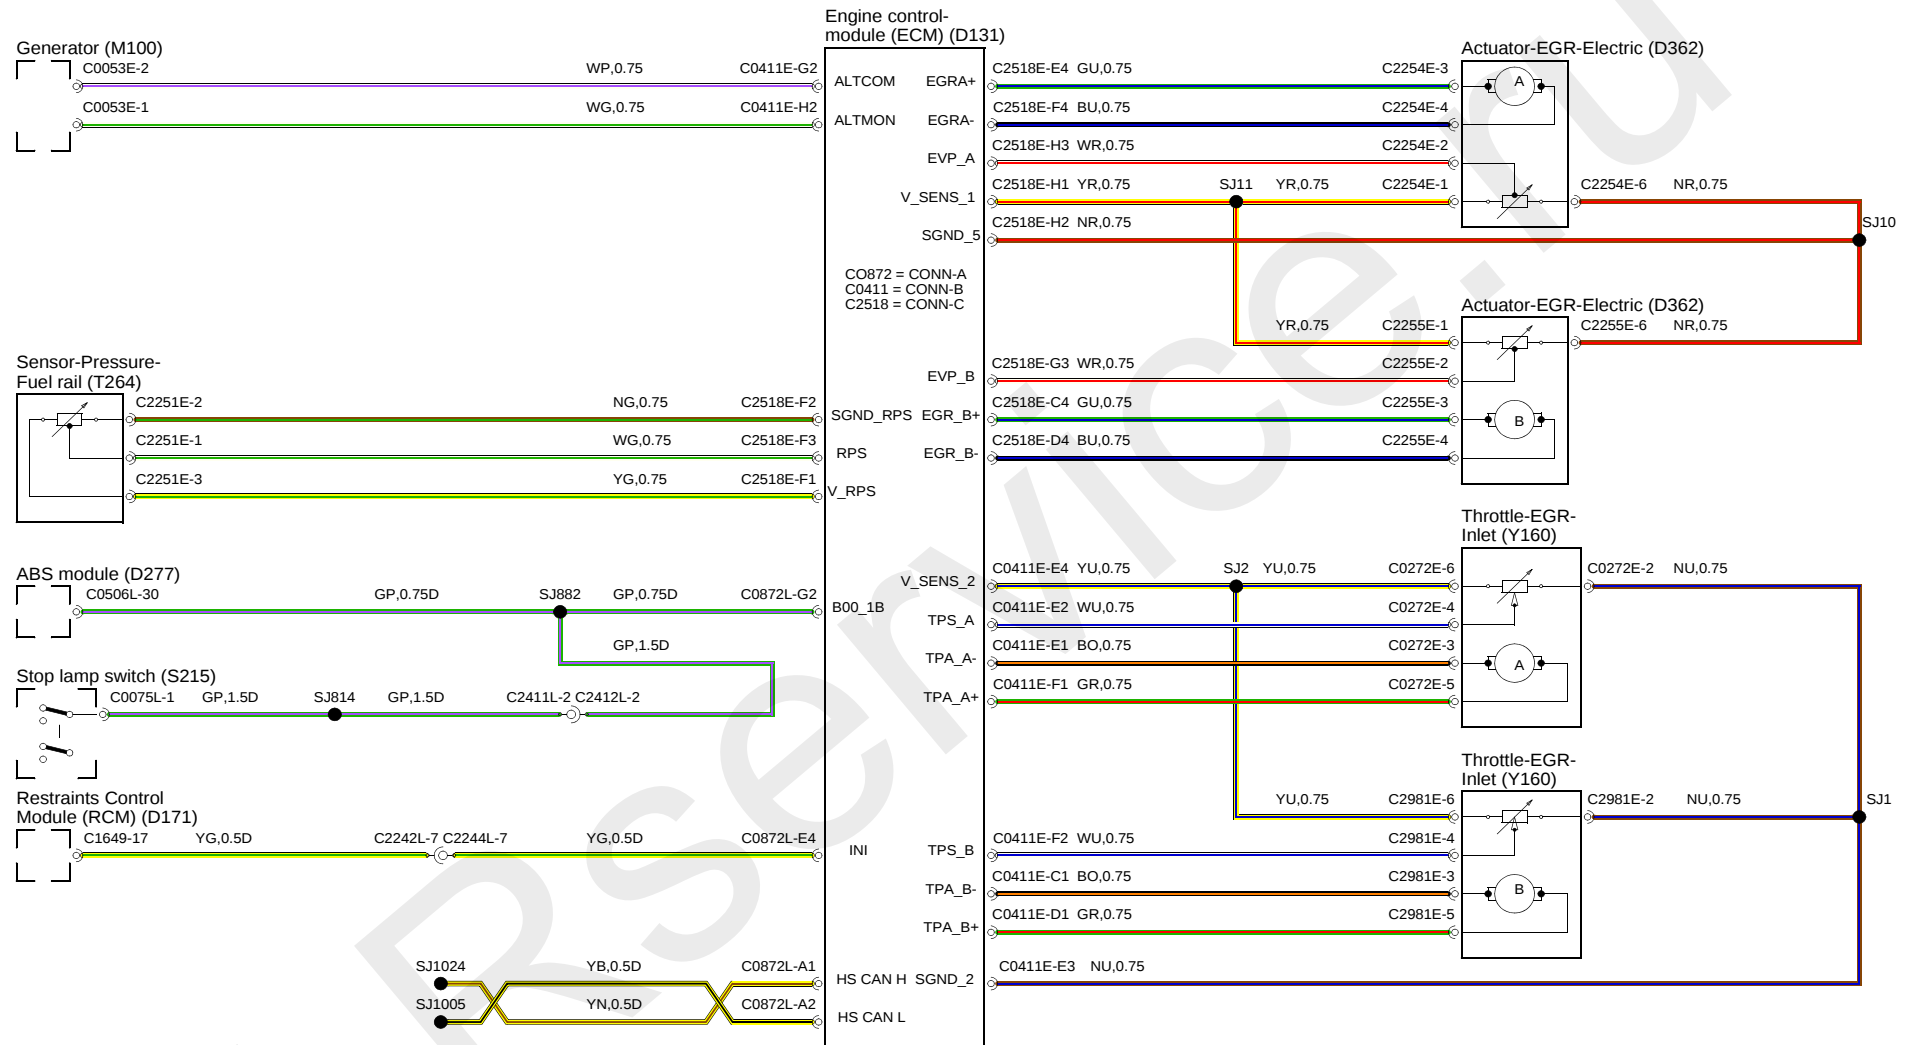


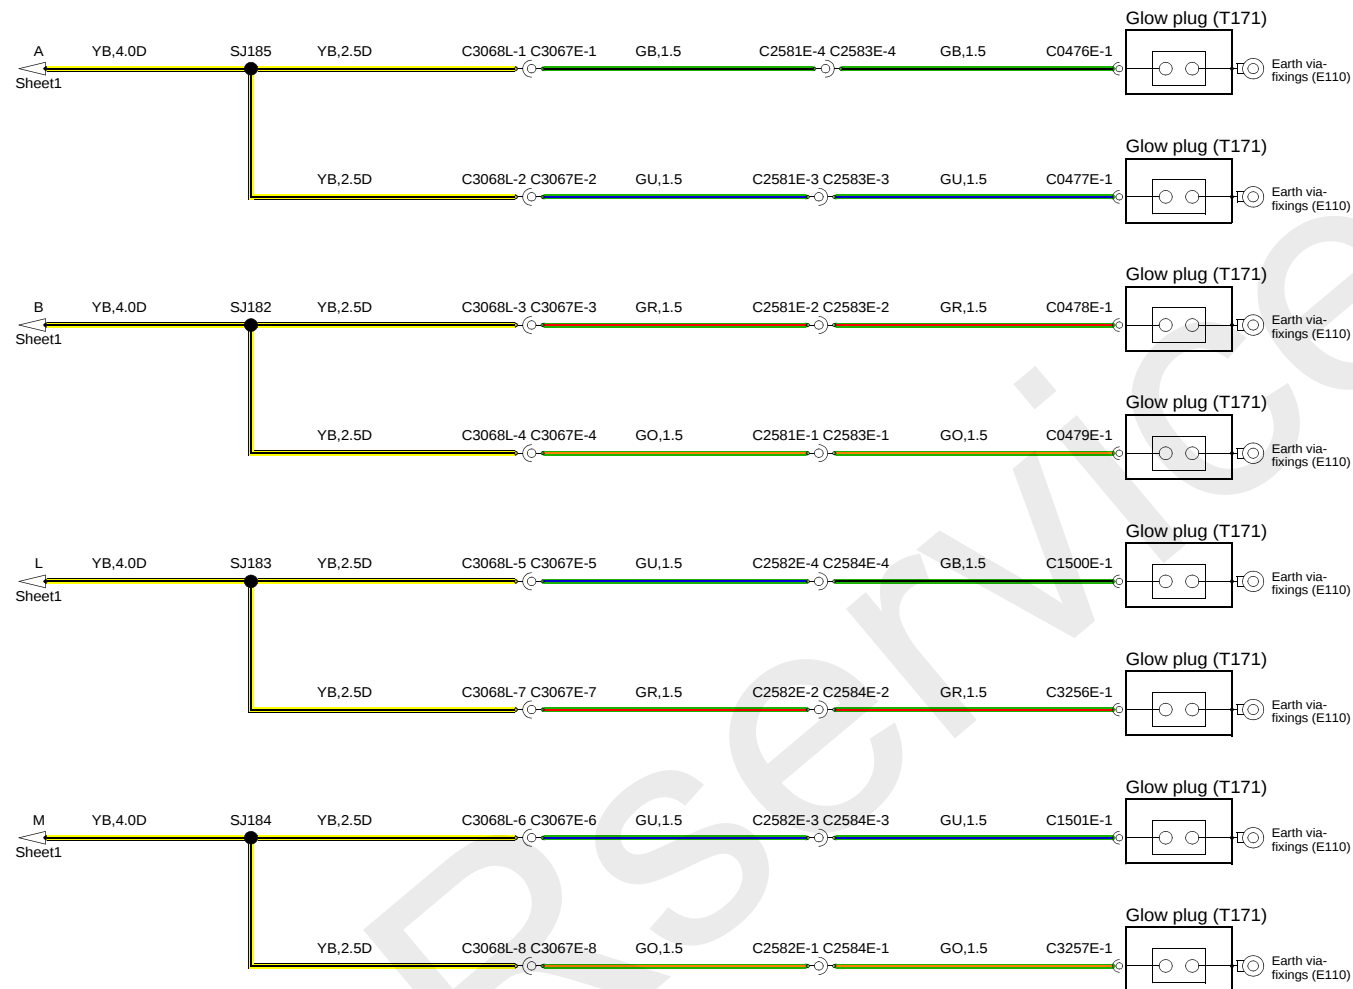


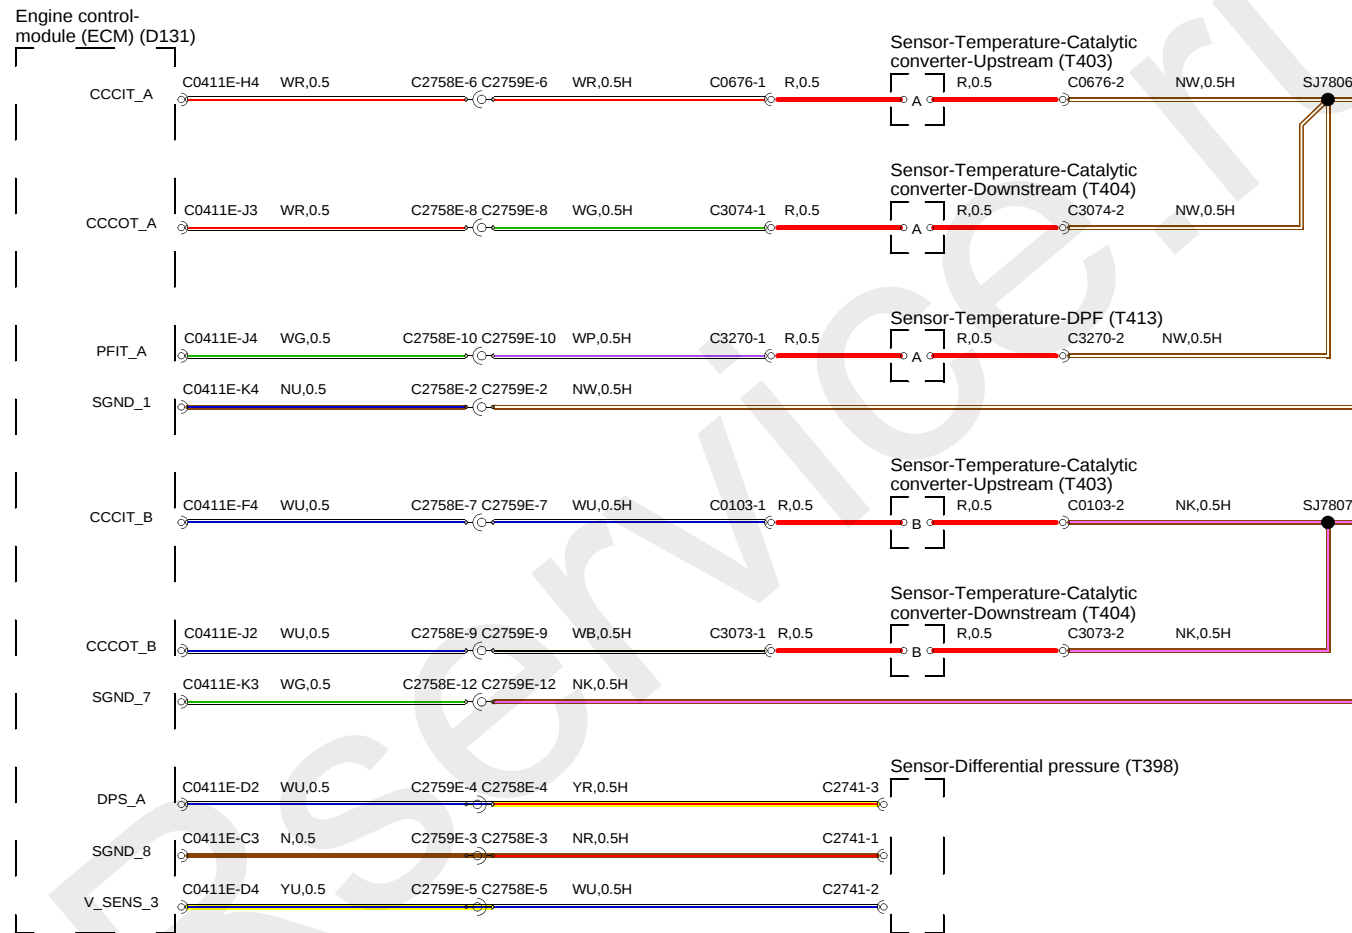


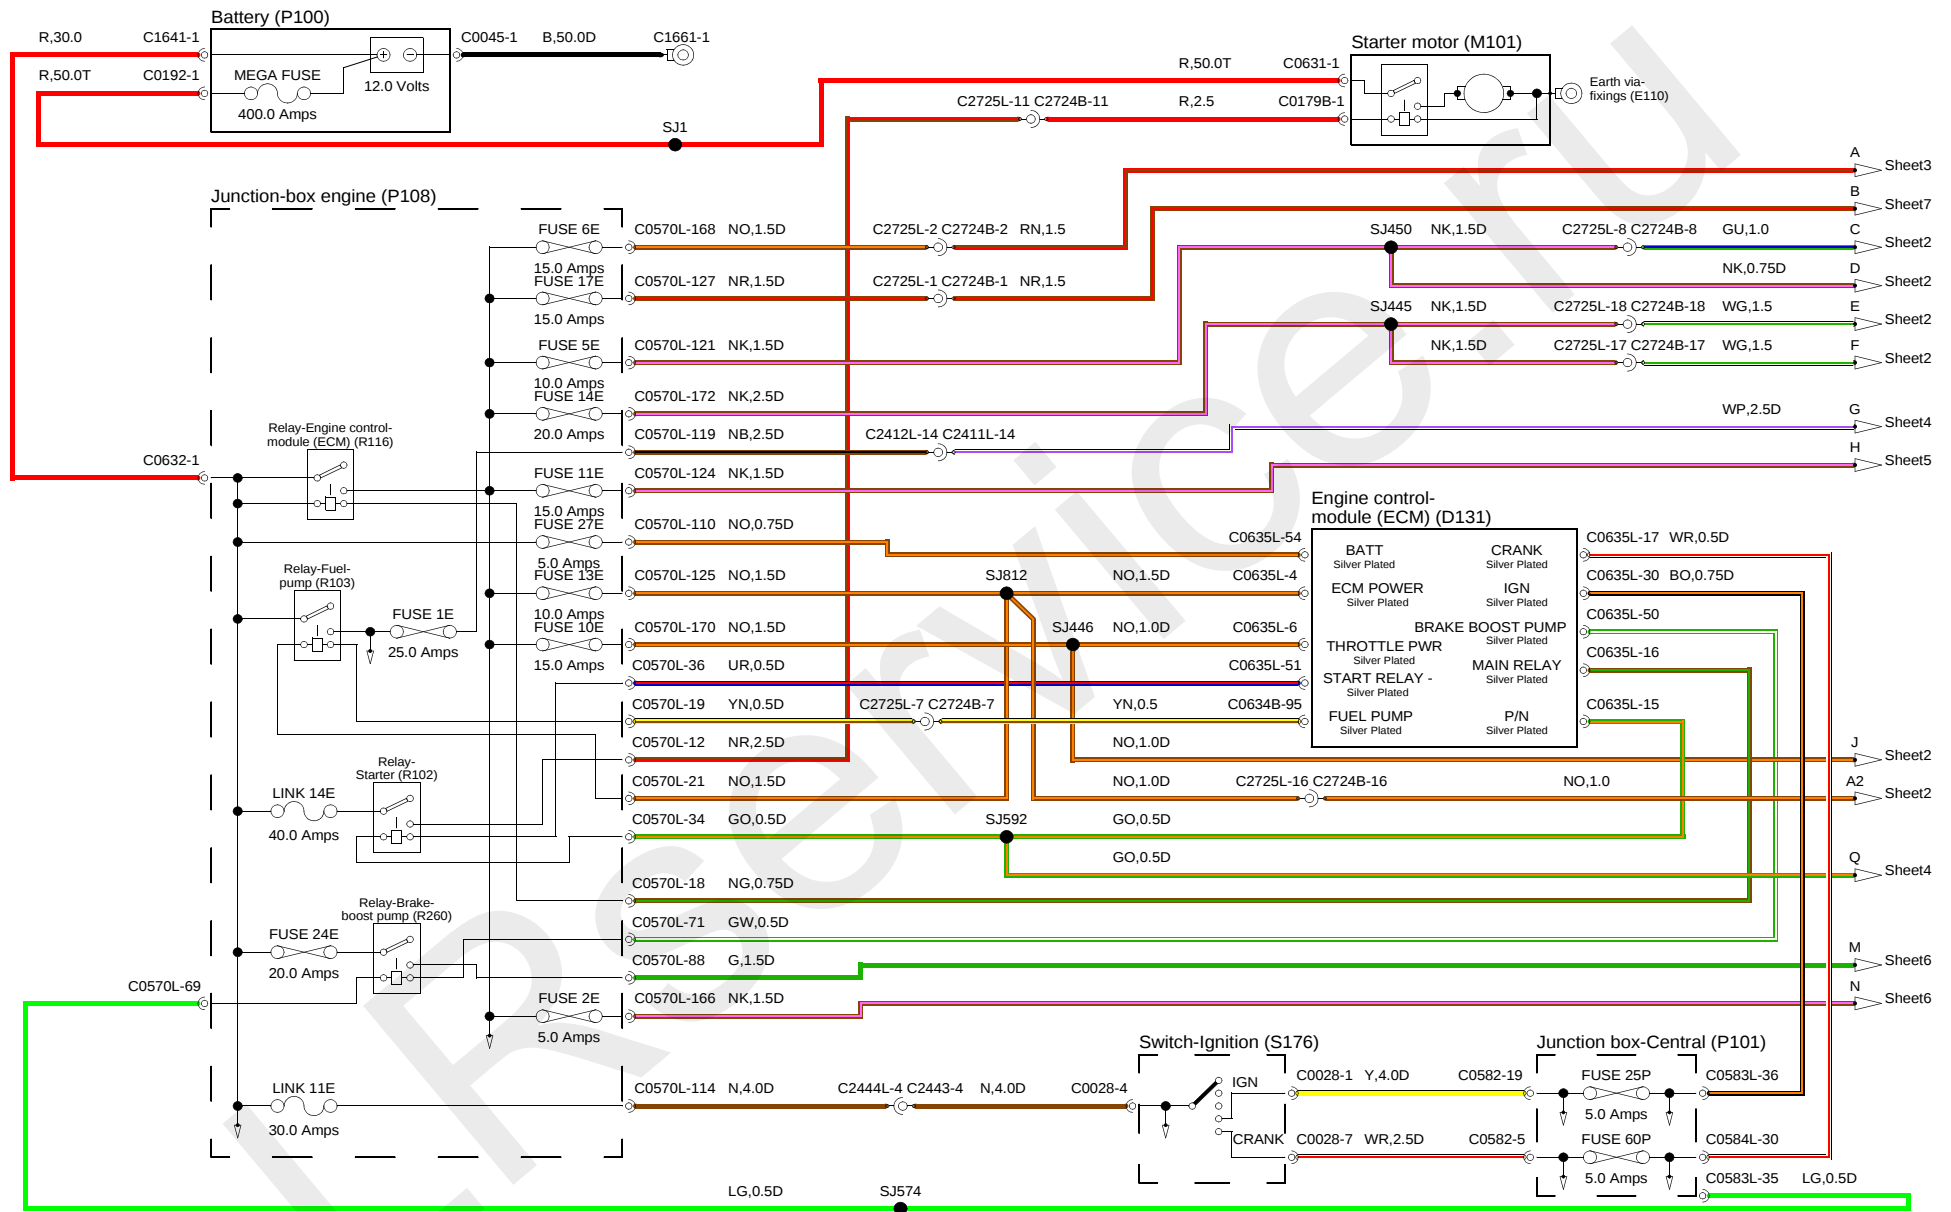


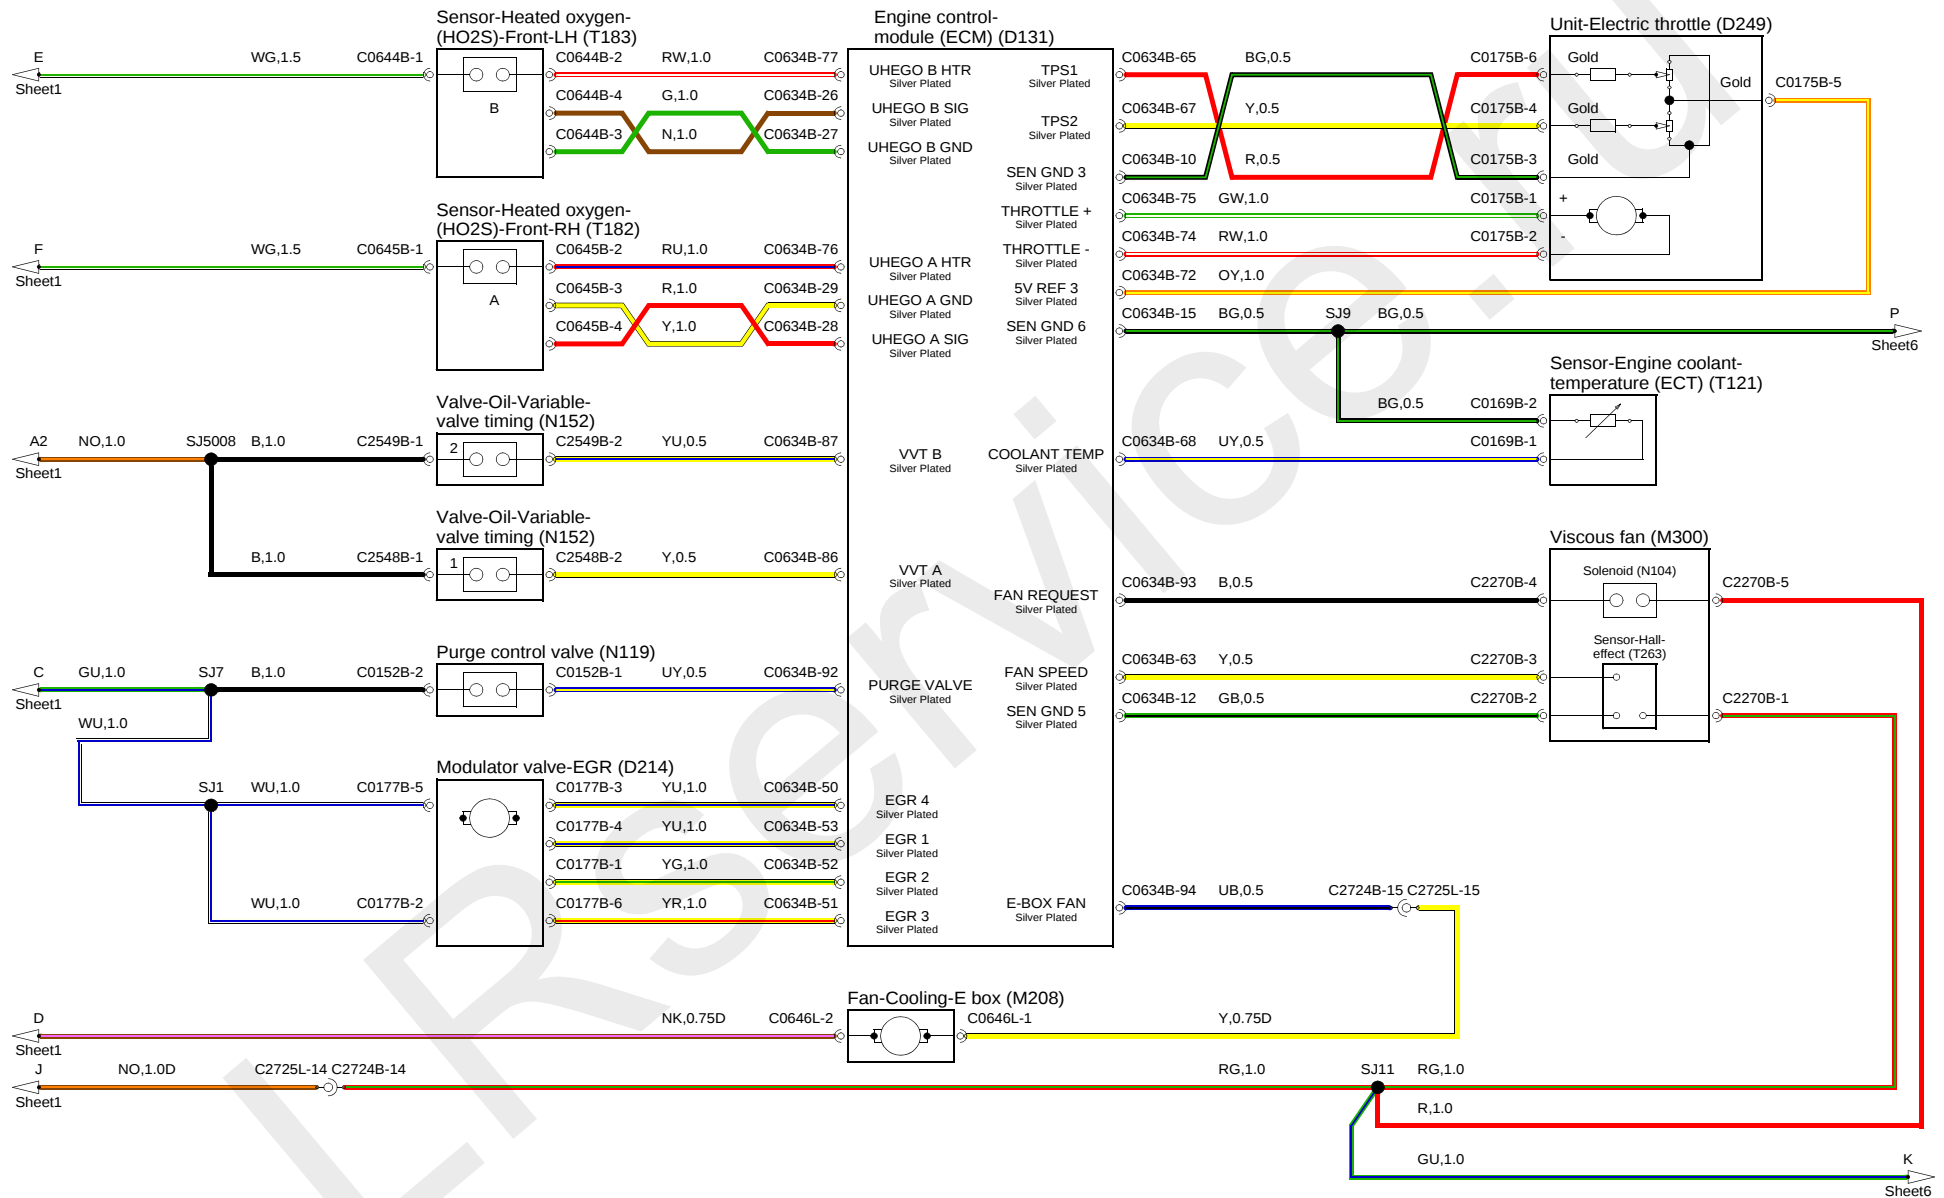


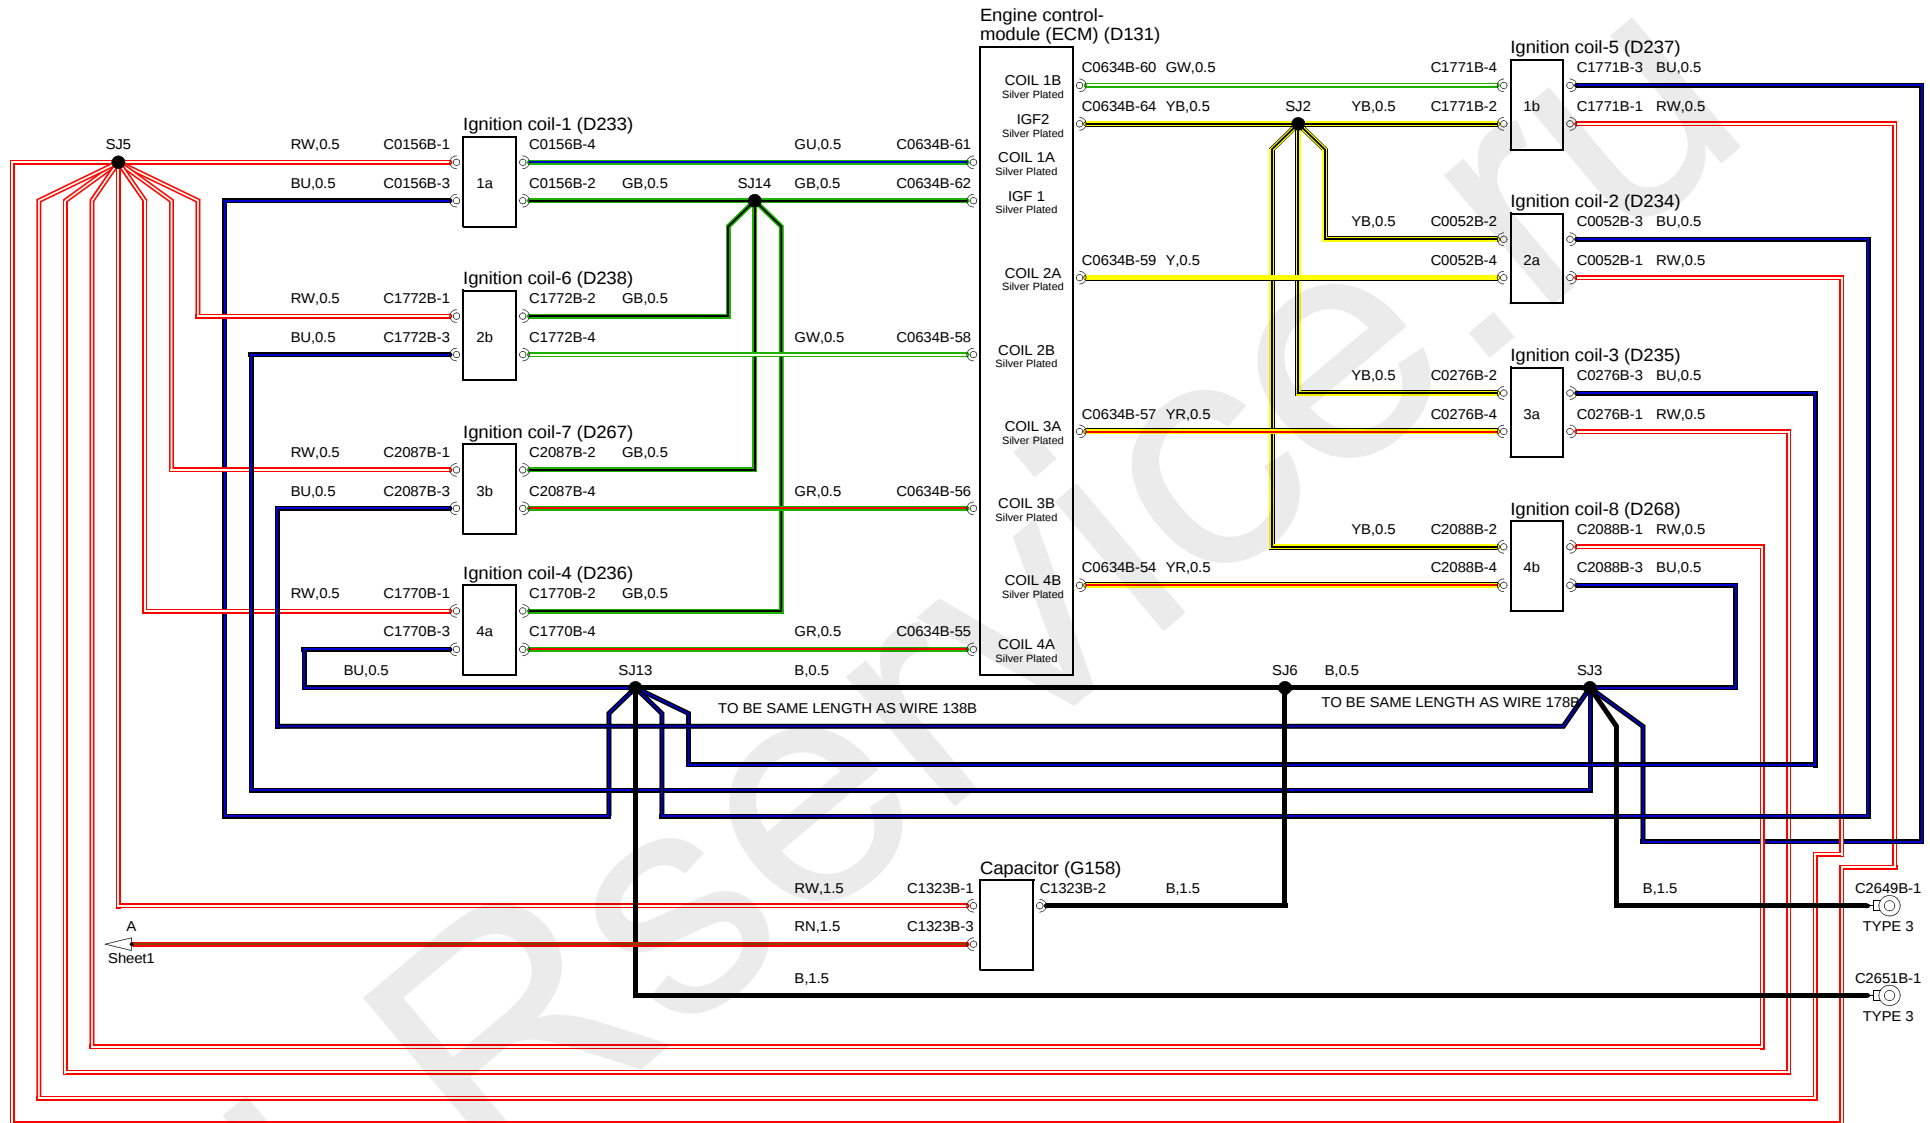


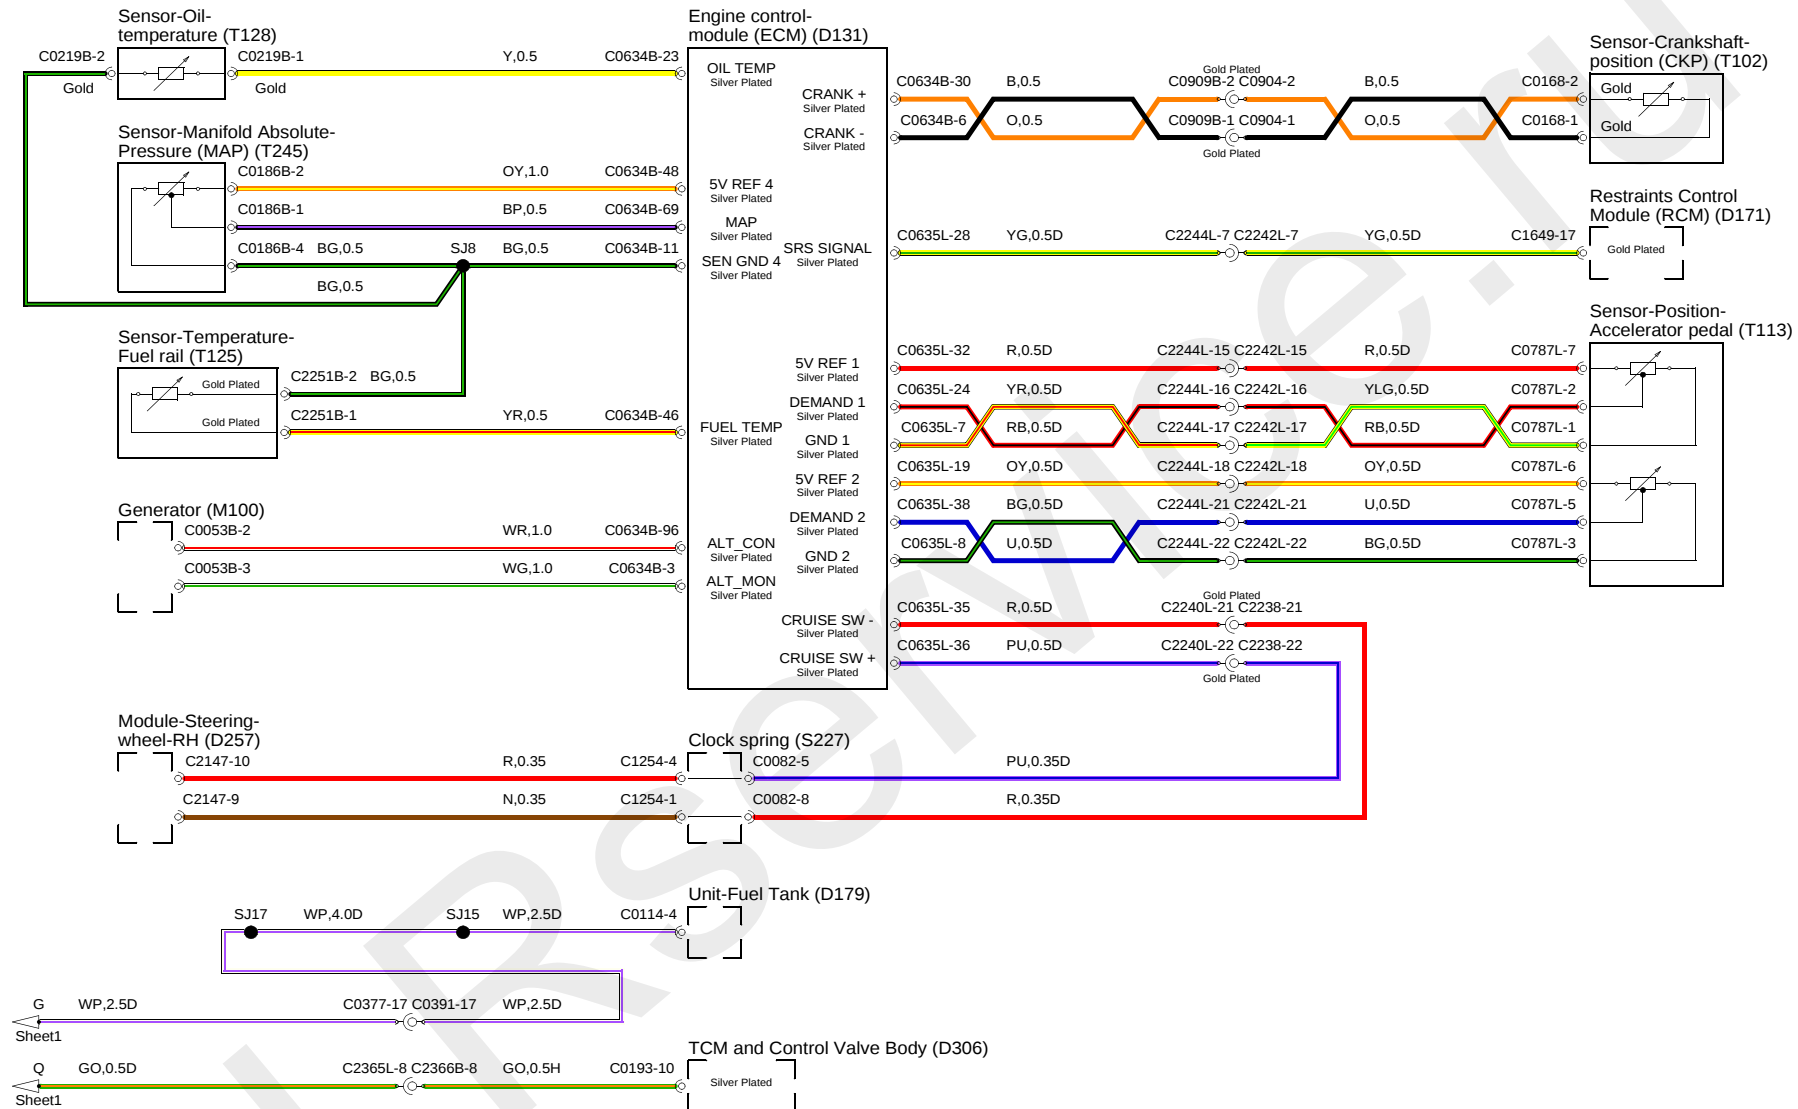


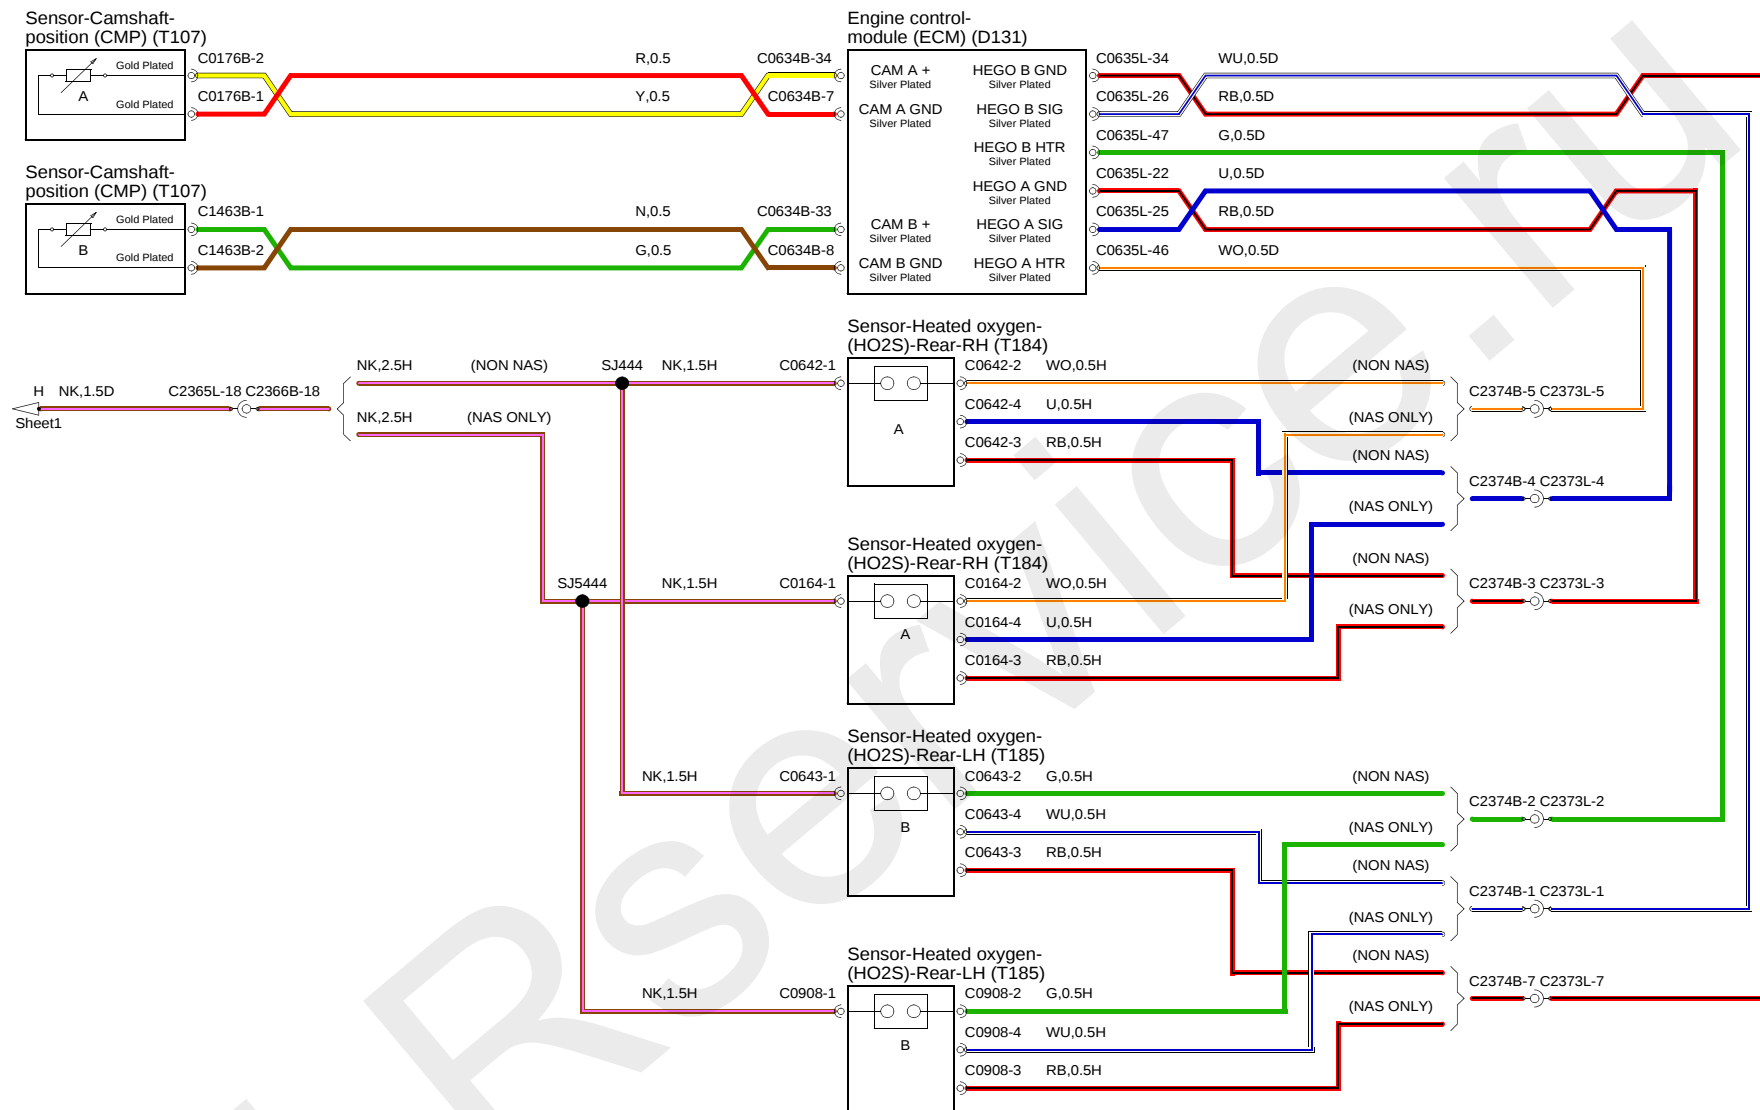


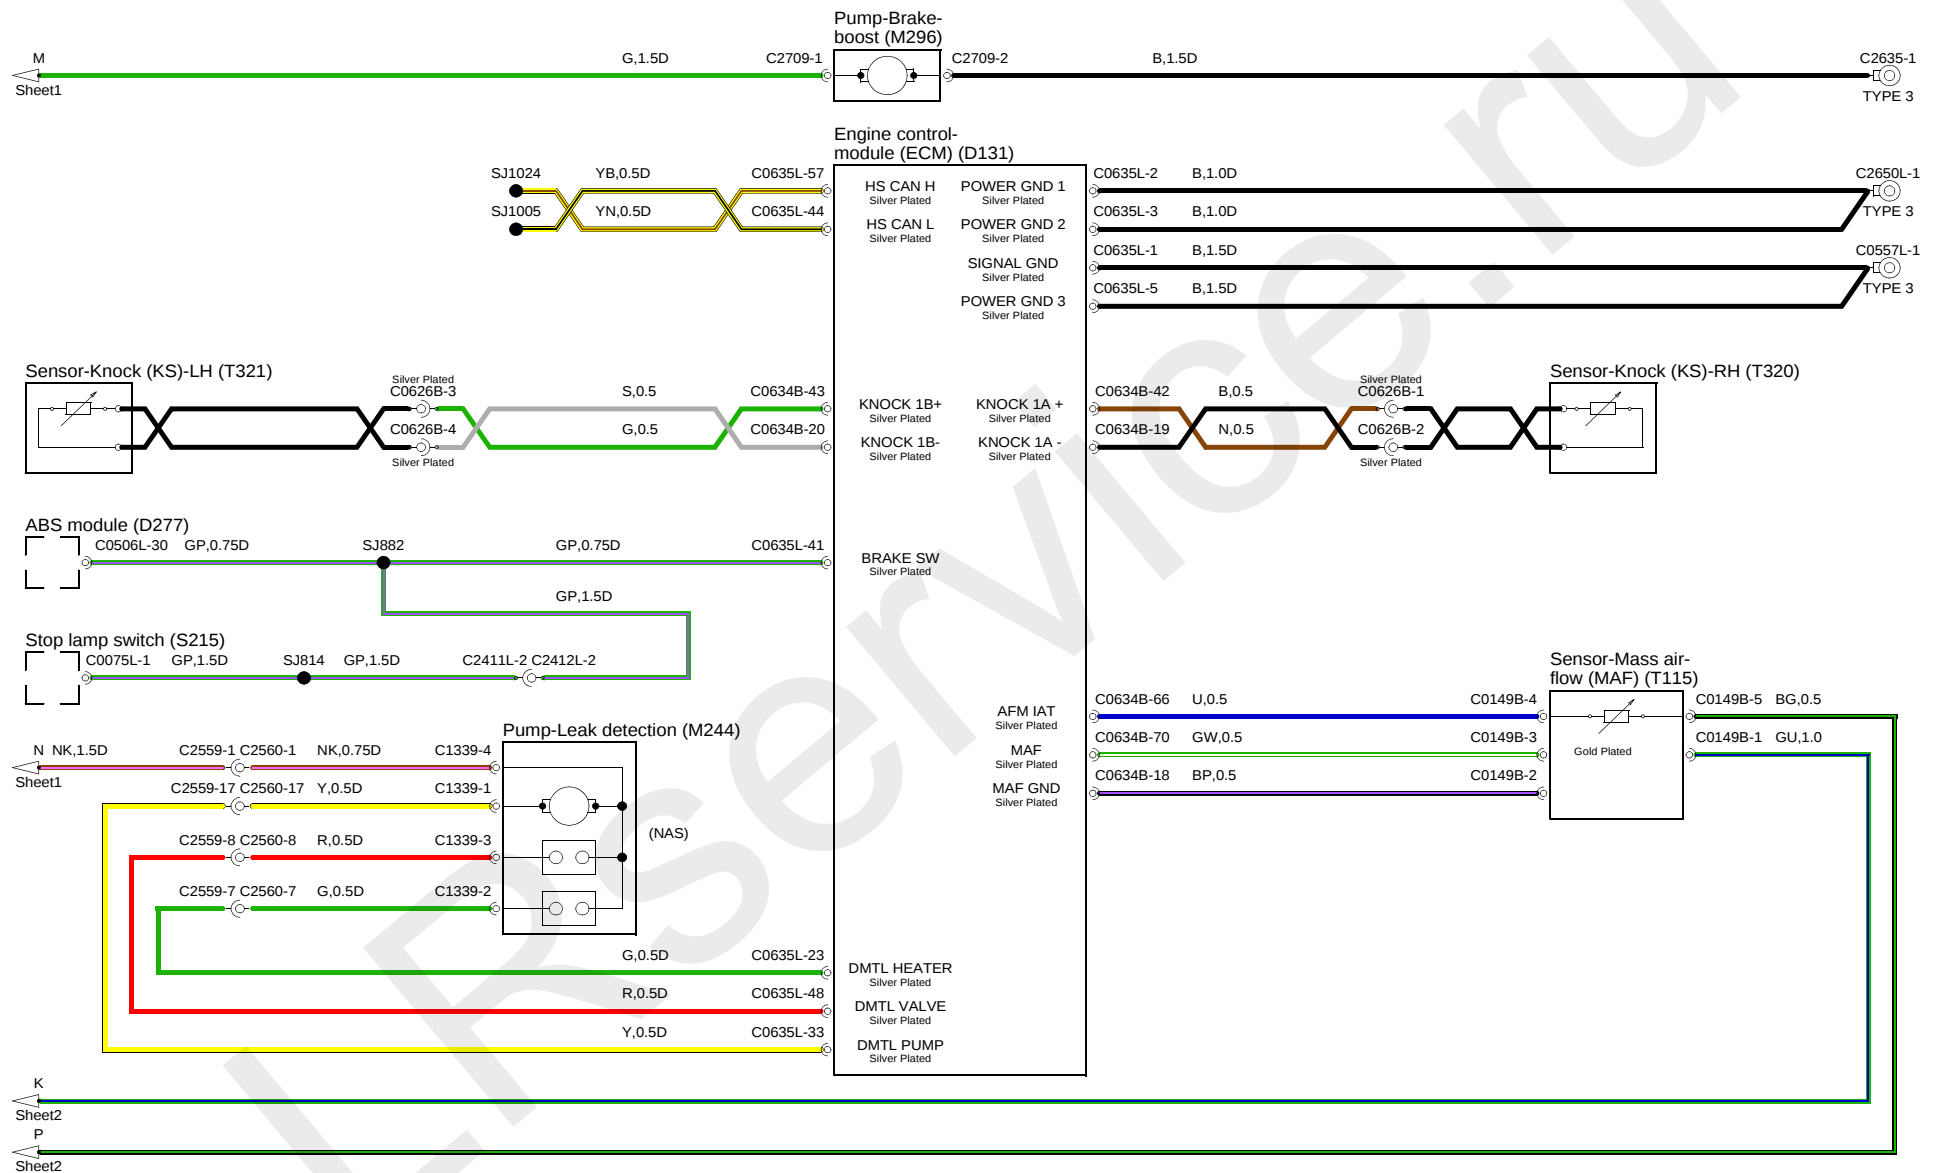


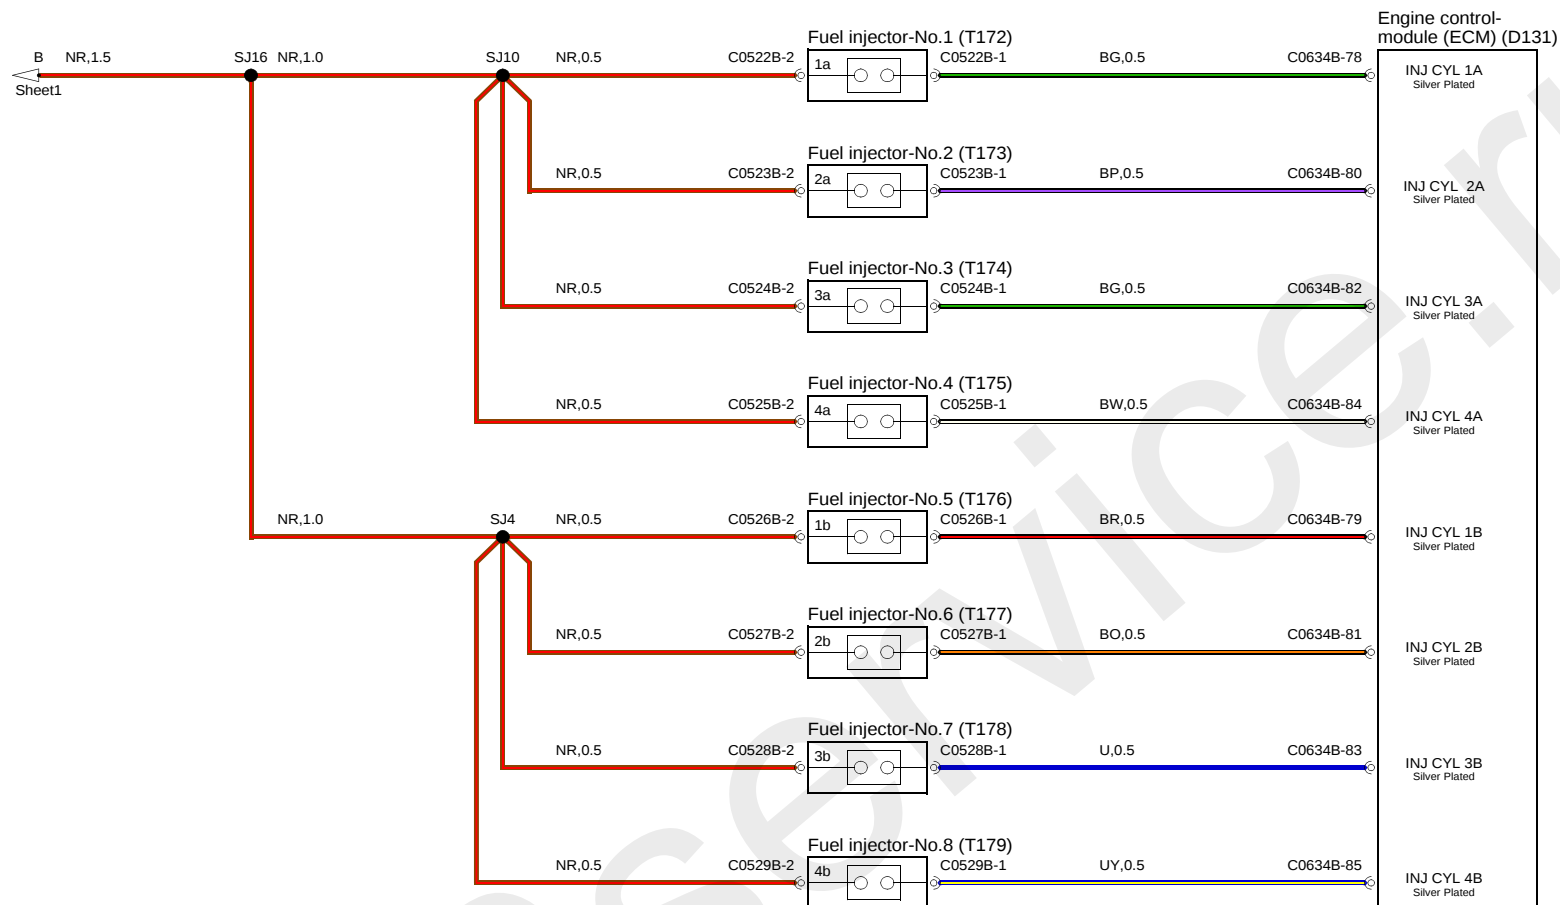


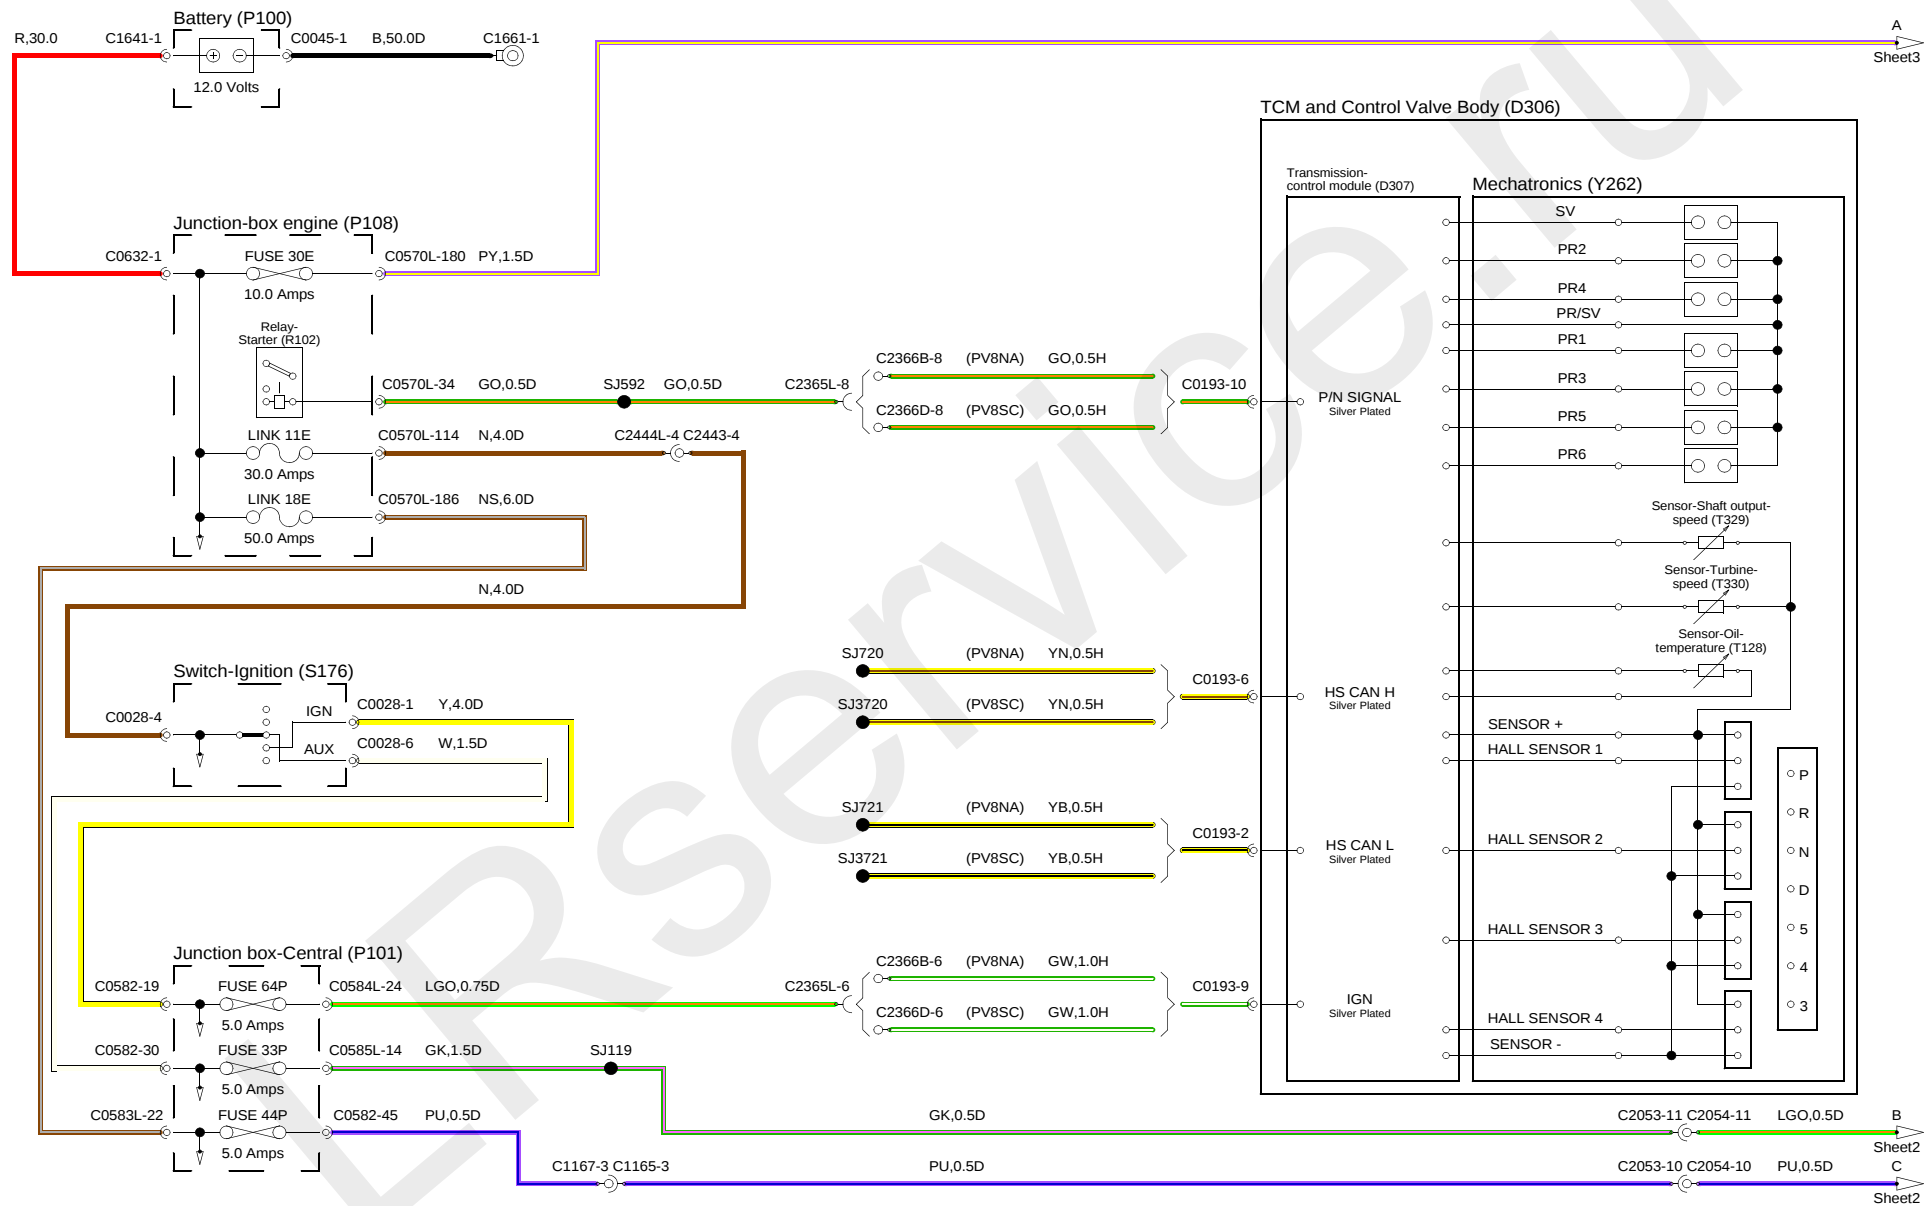


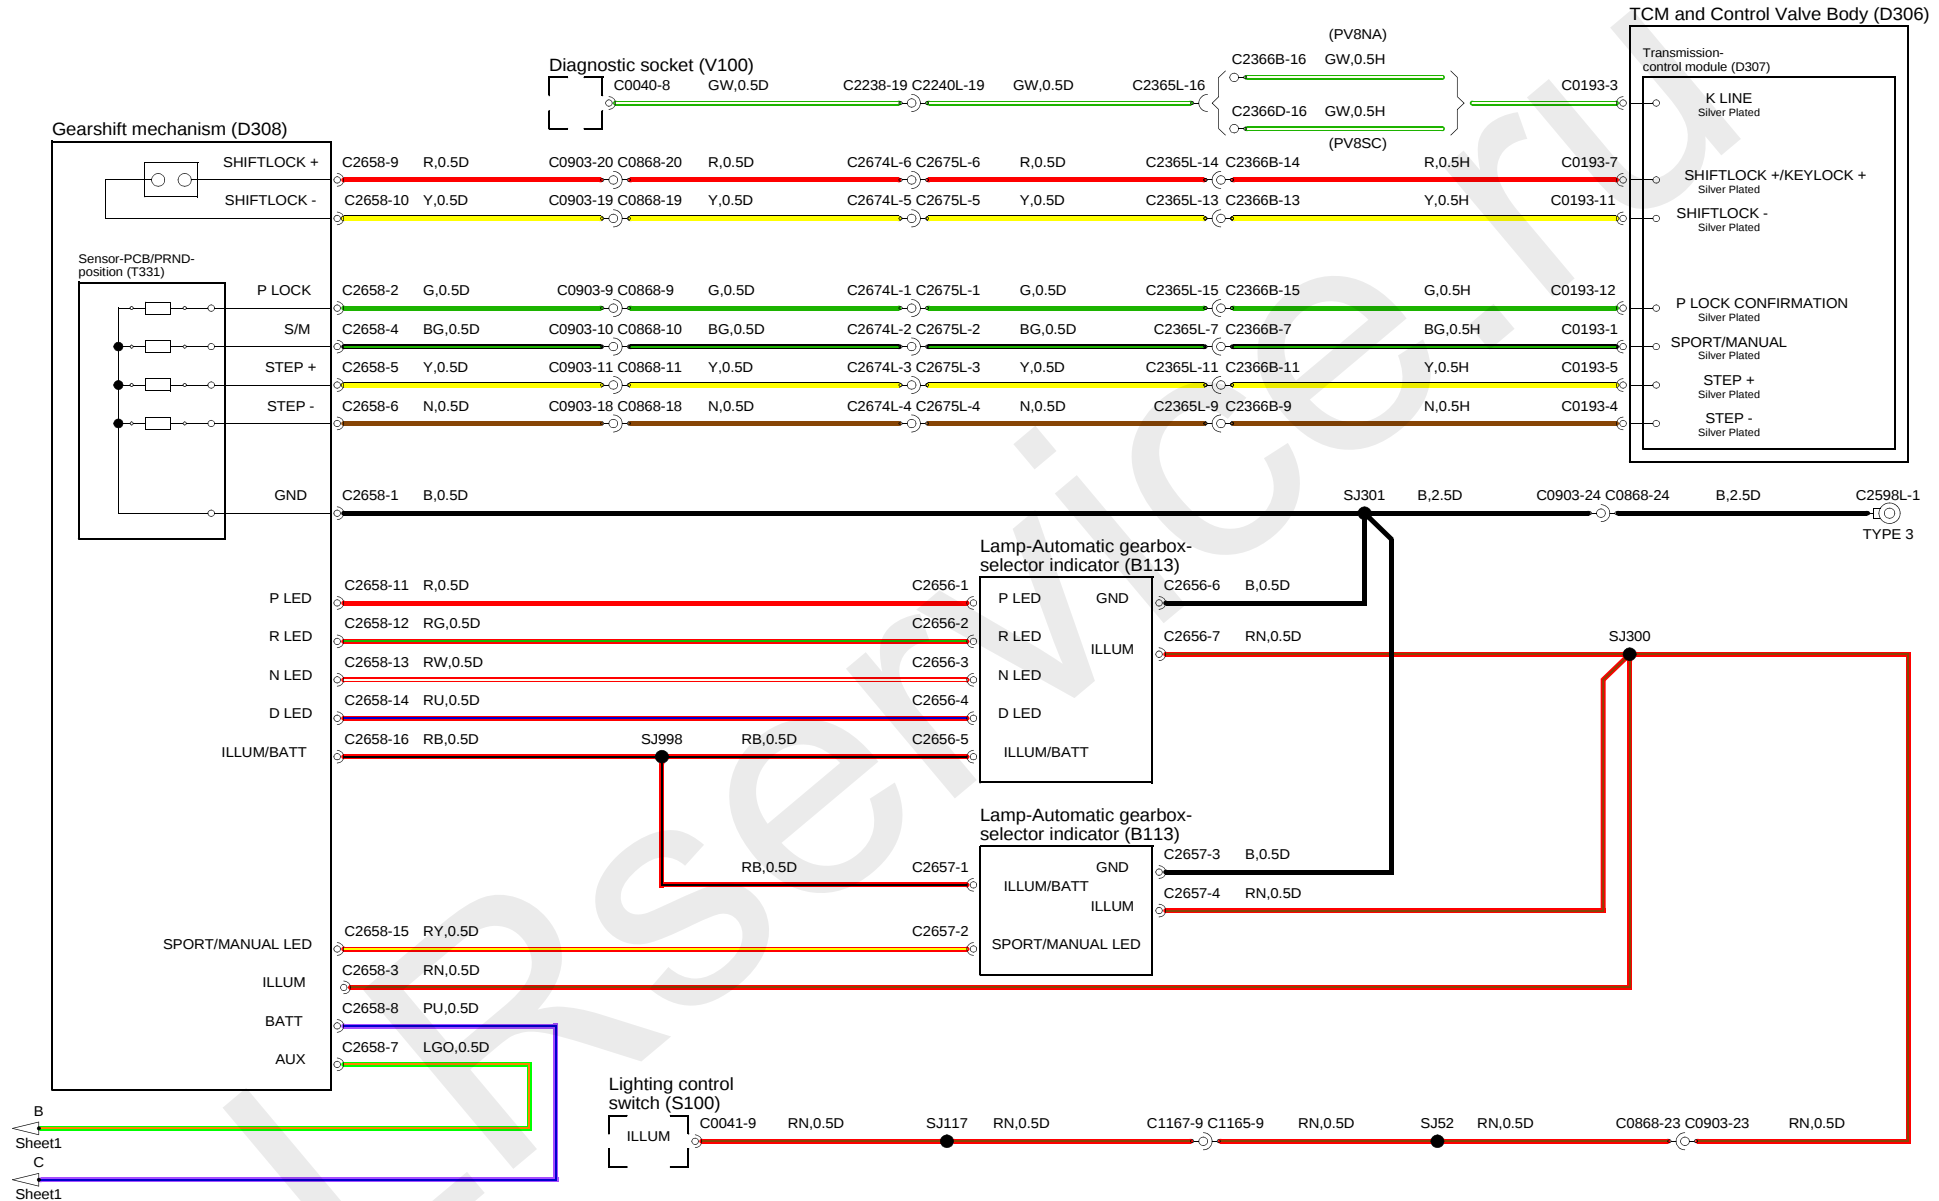


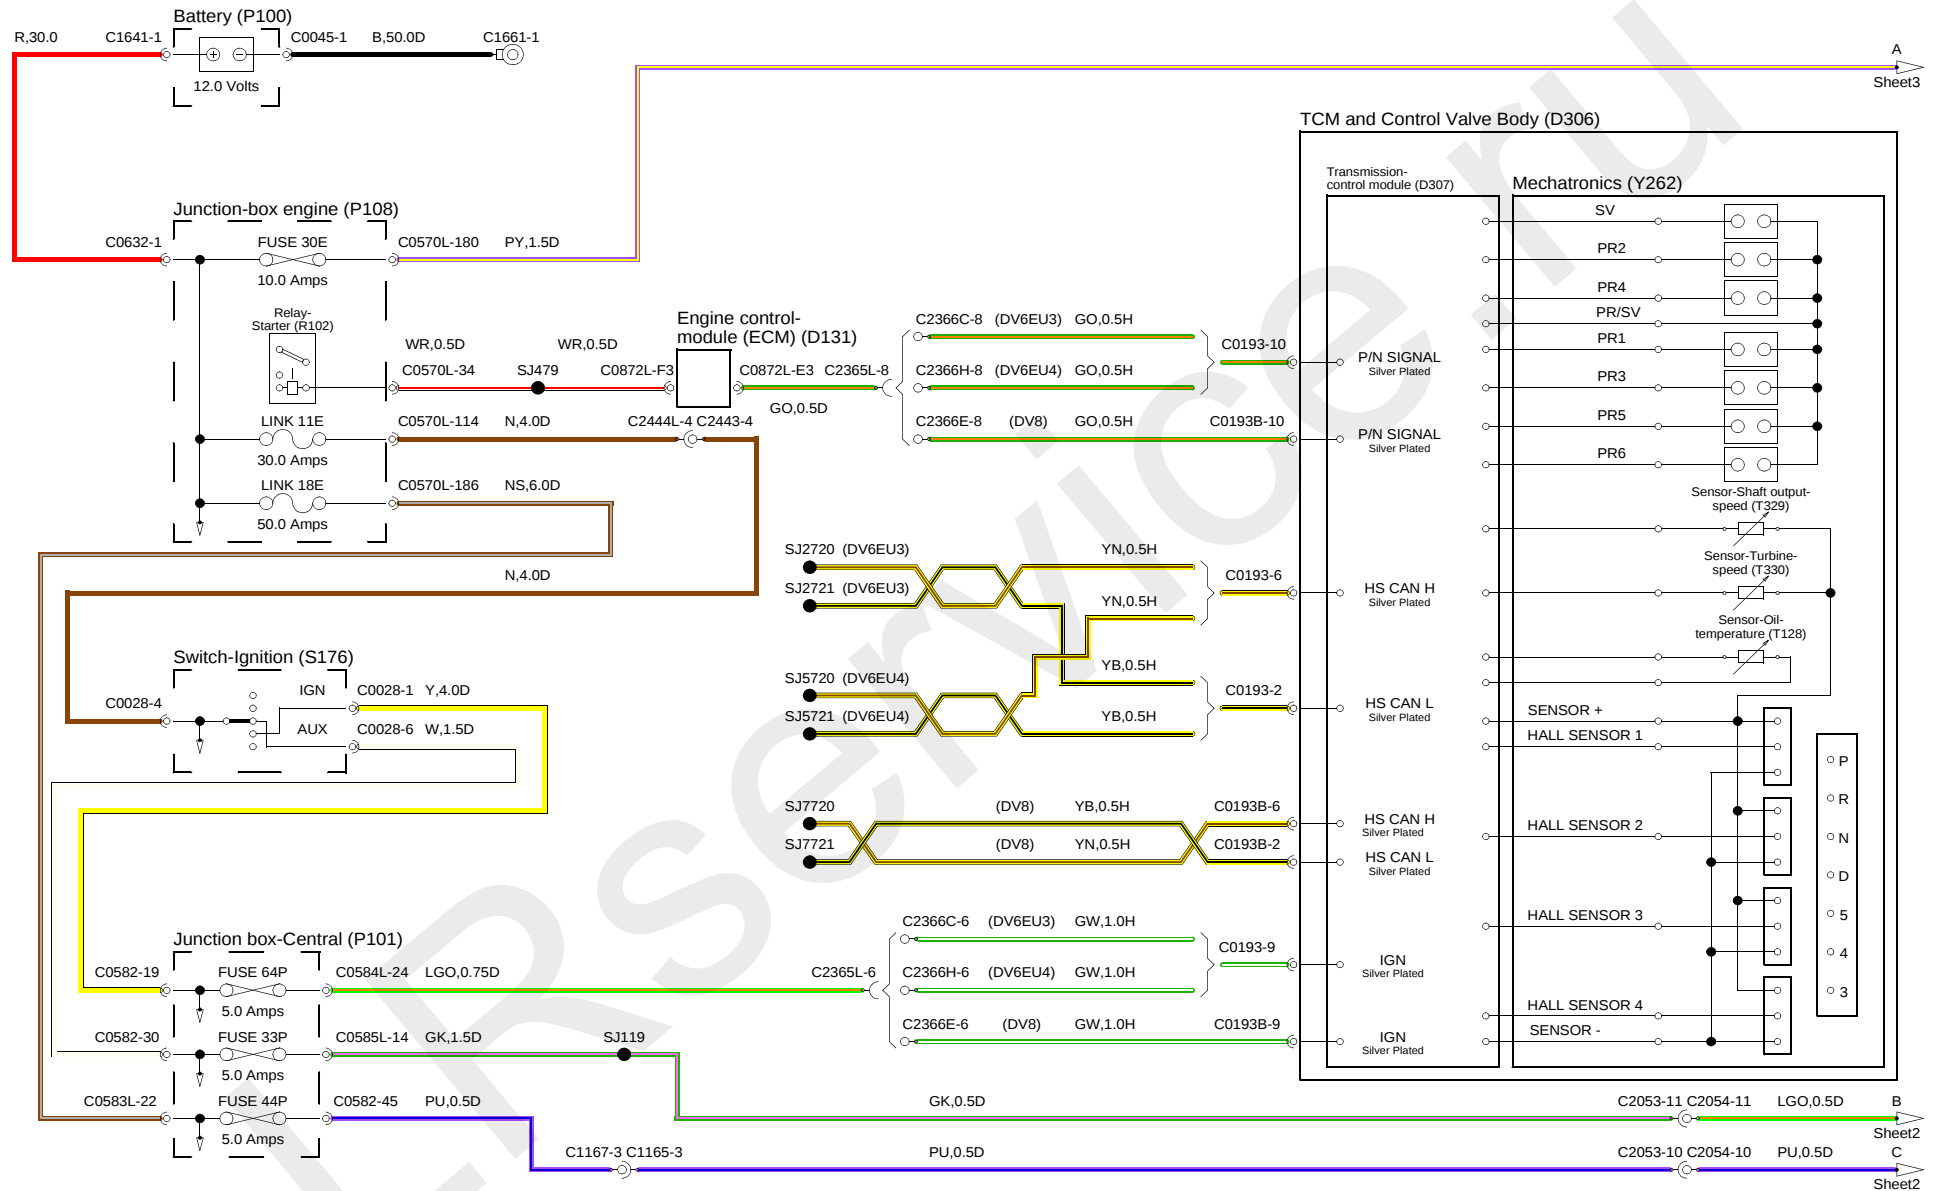


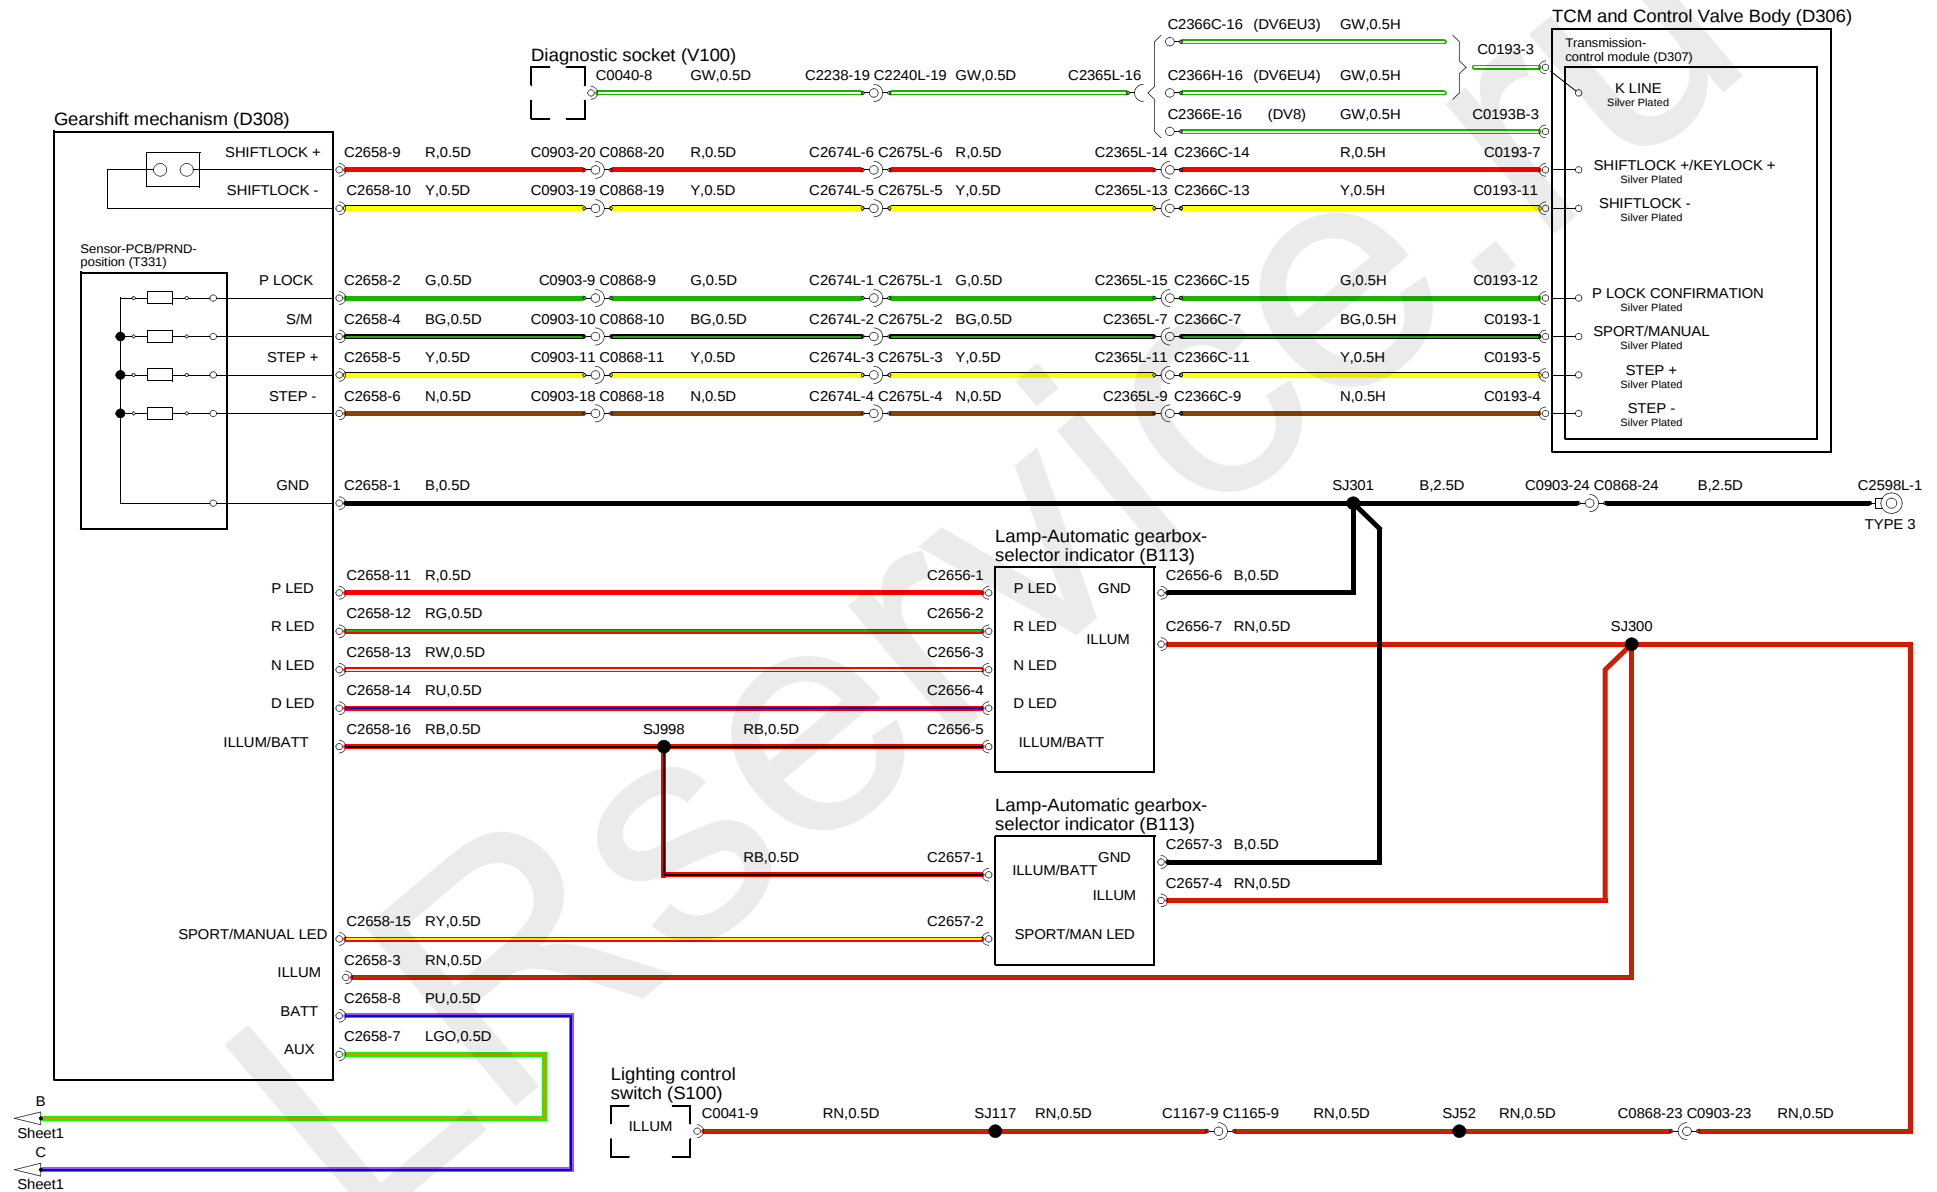


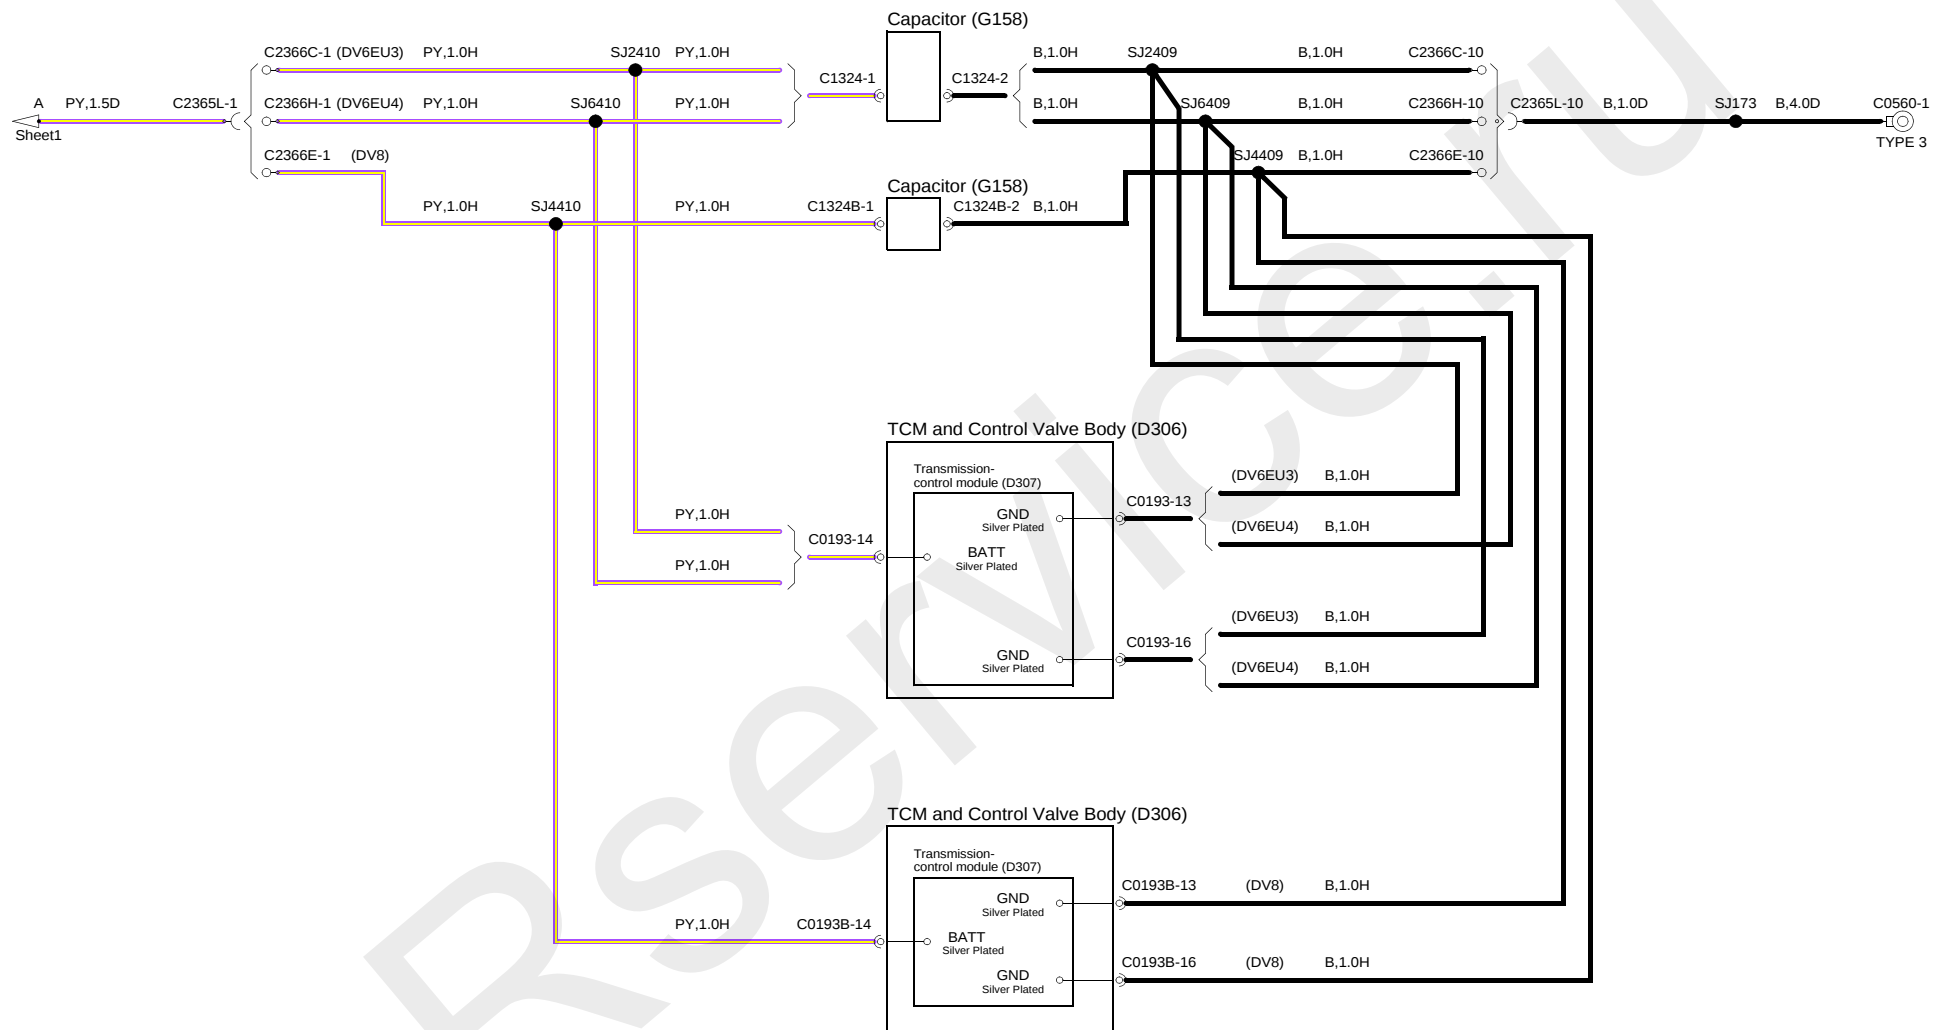

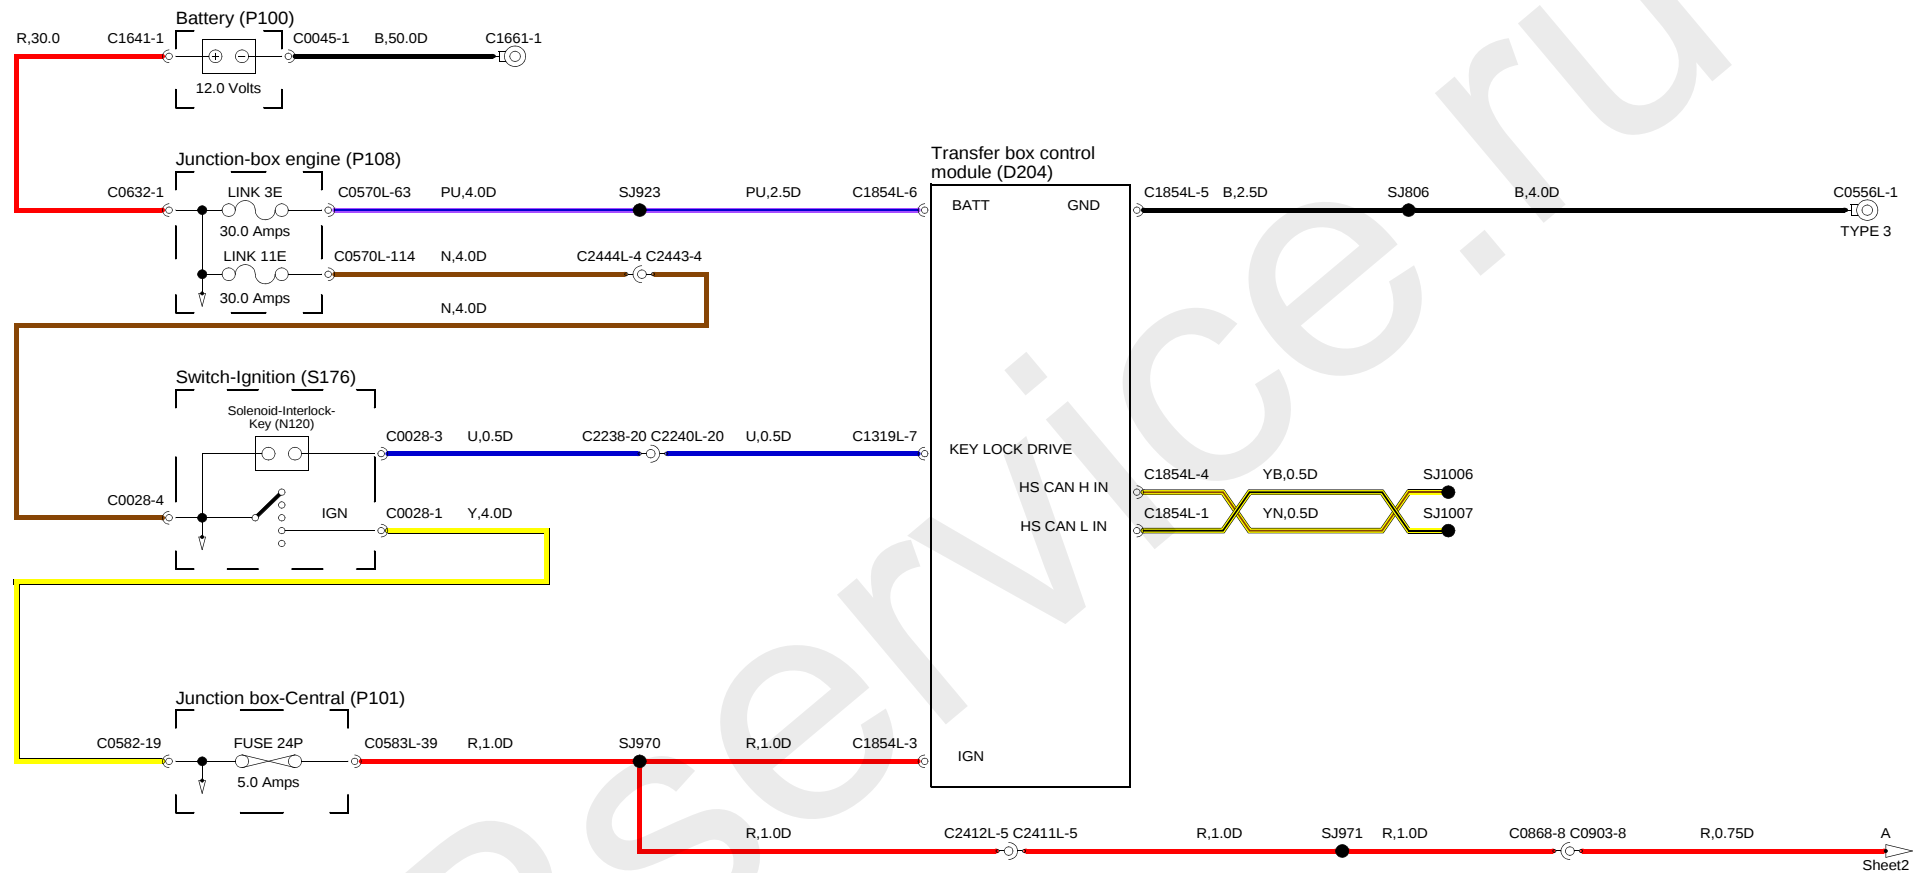


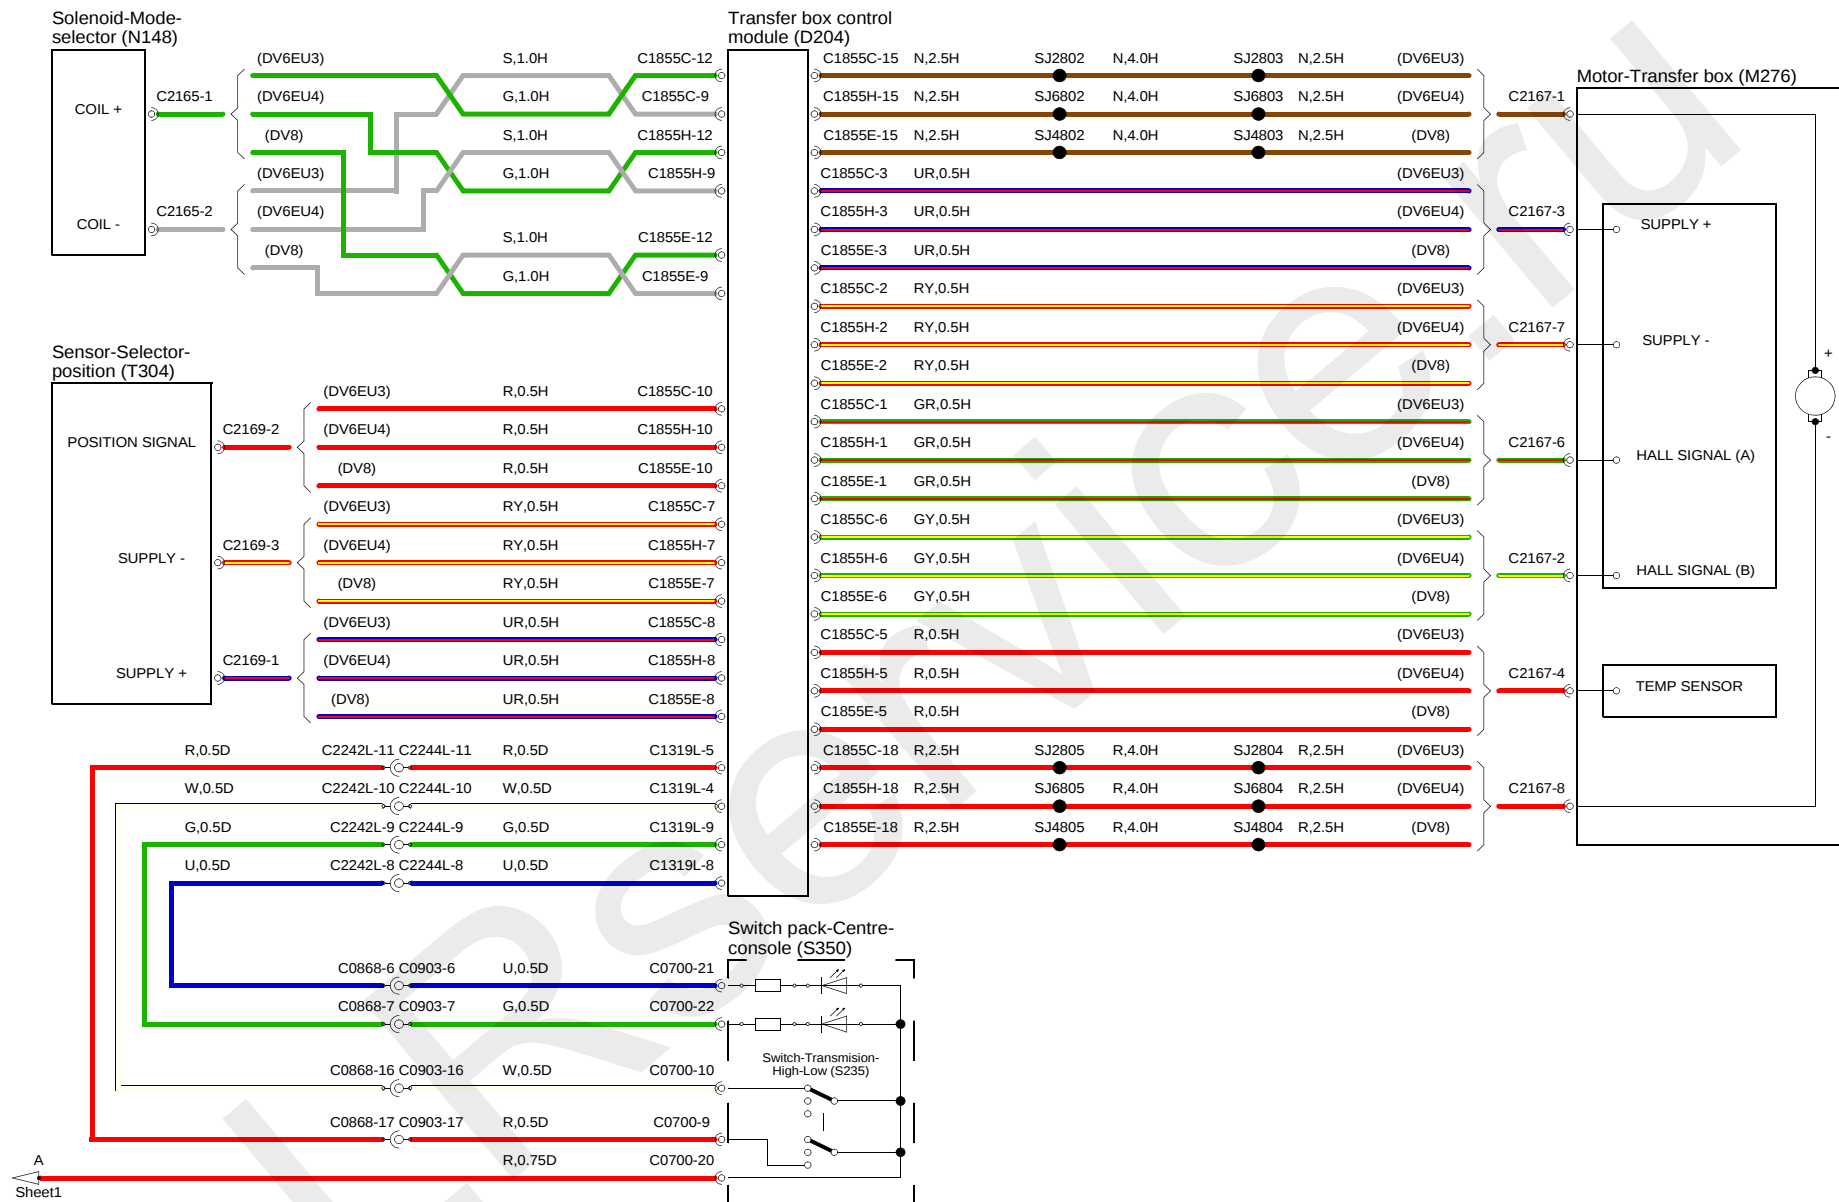


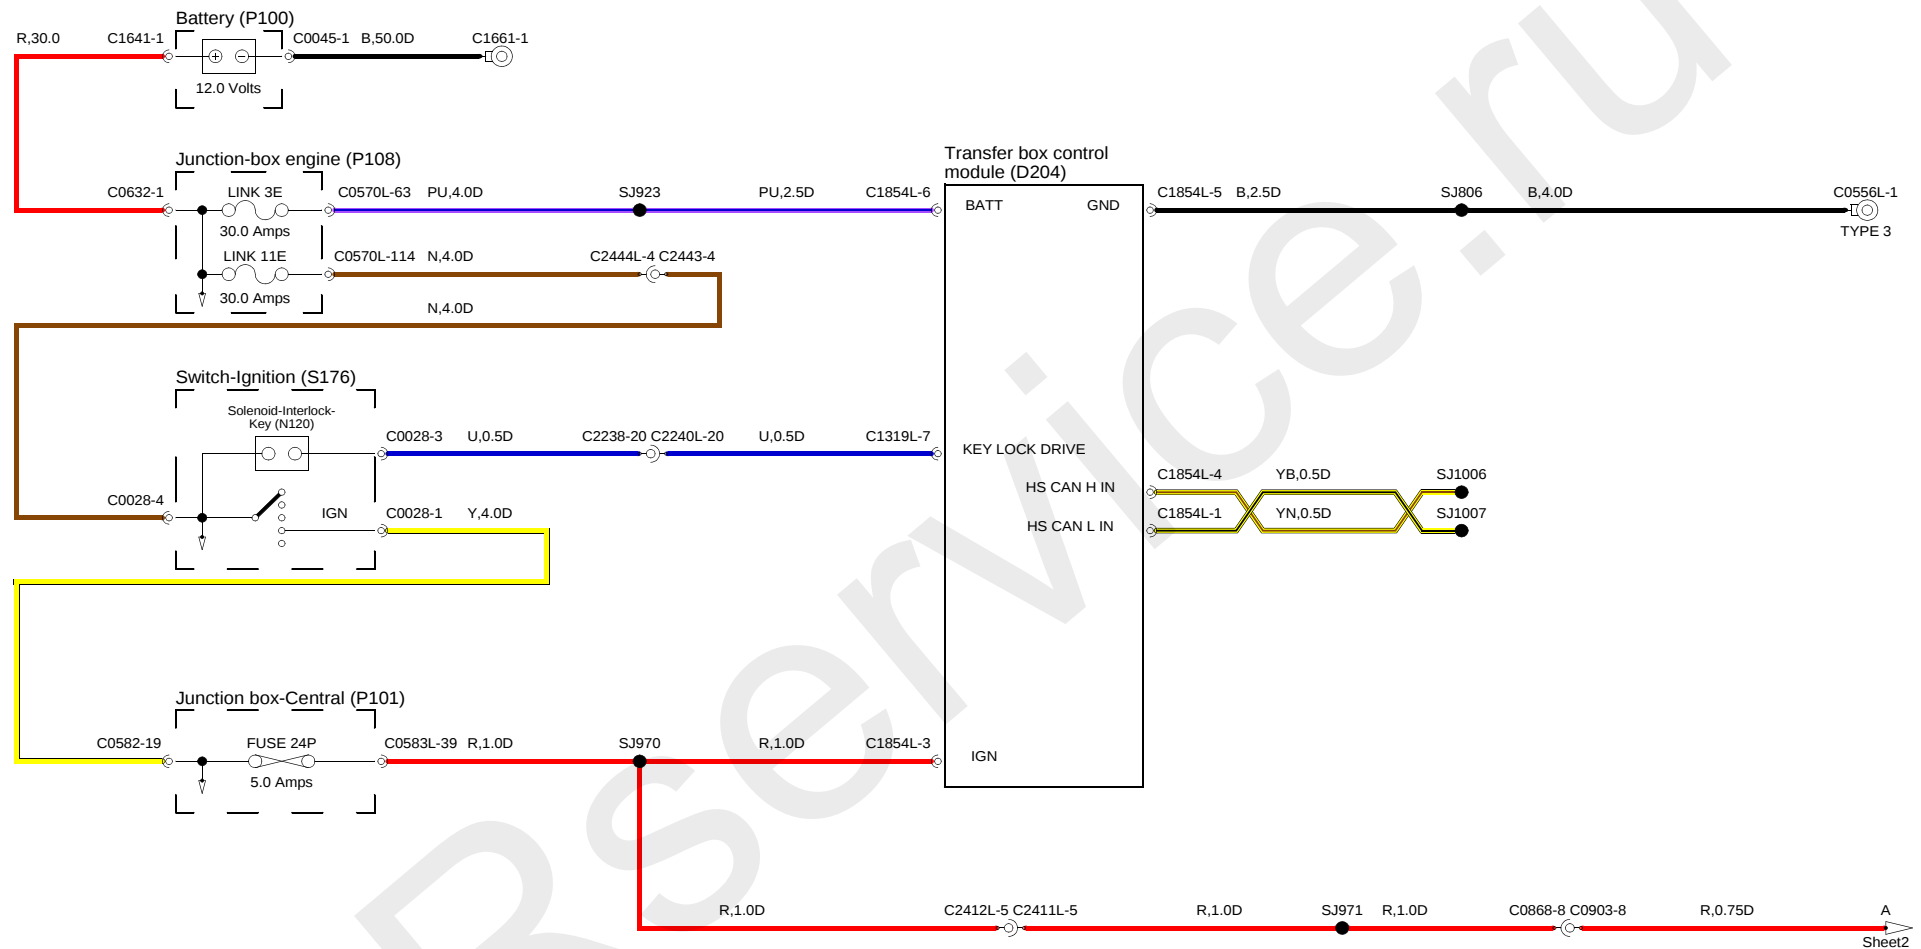

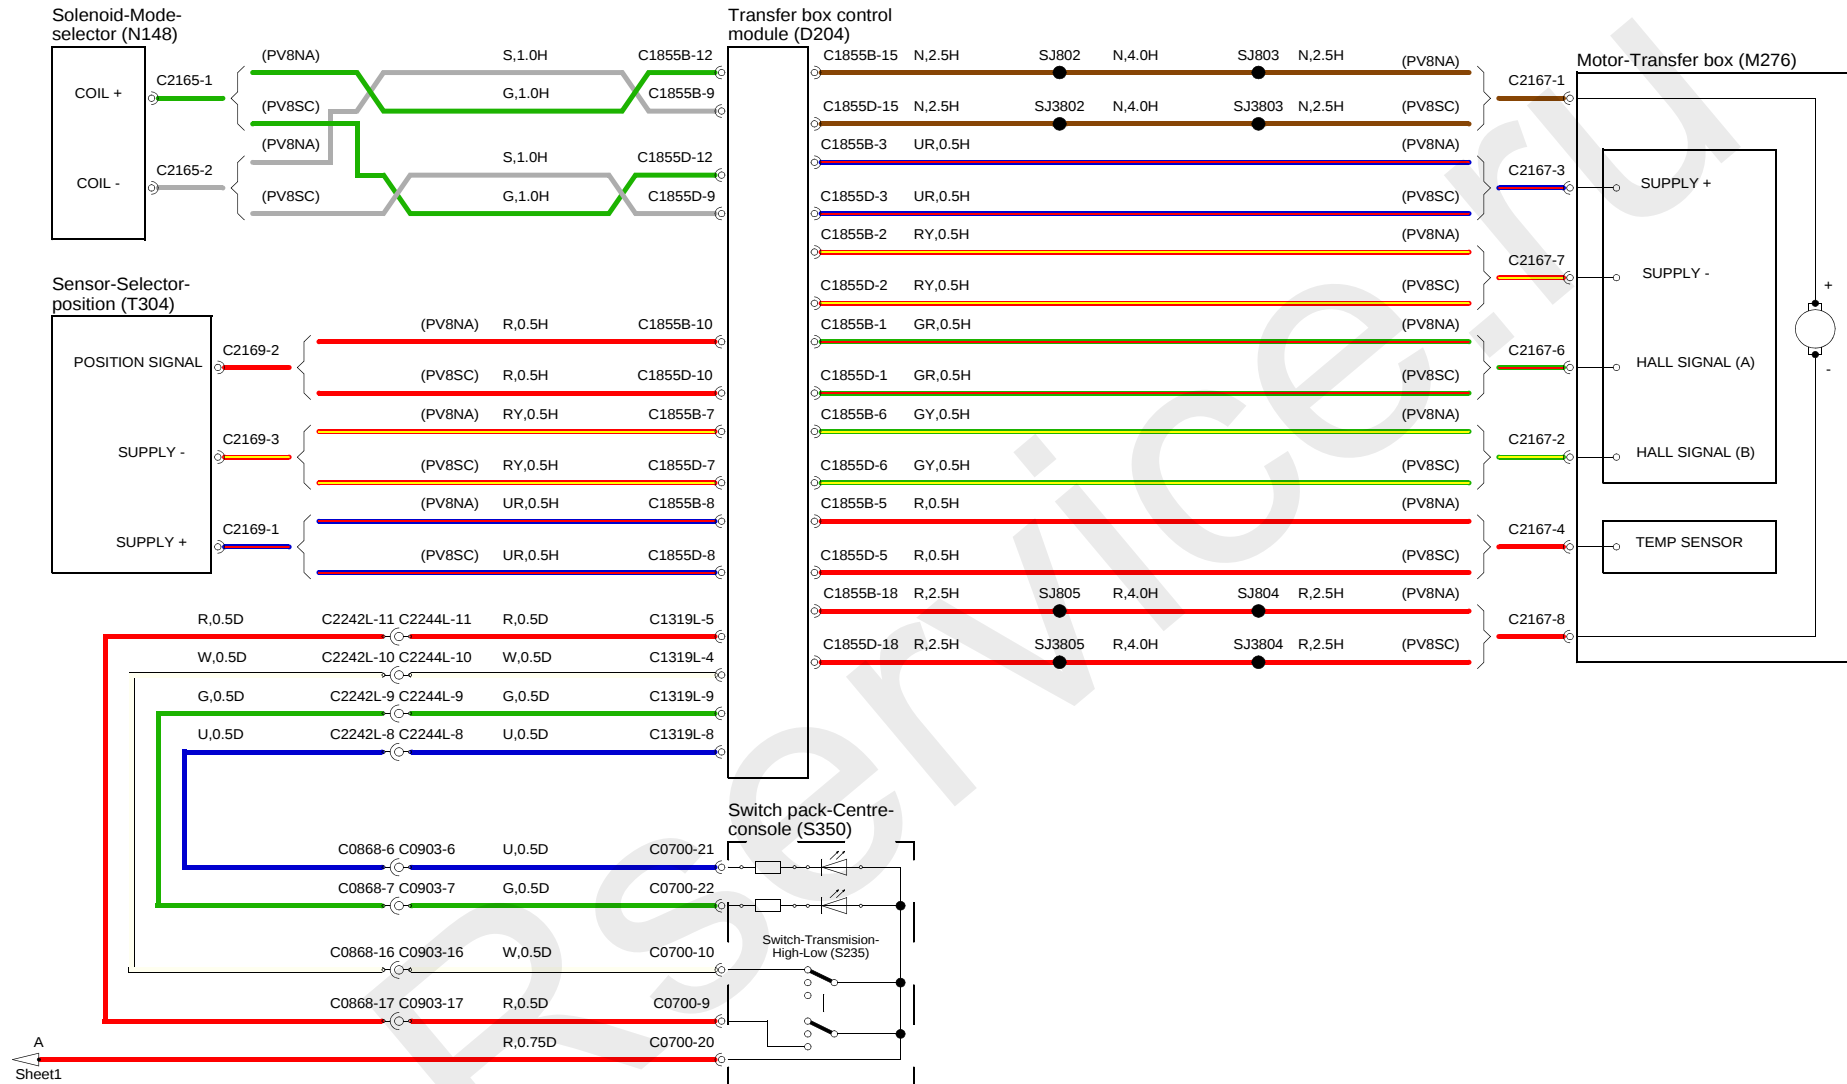



310-01 - FUEL TANK AND FUEL LINES

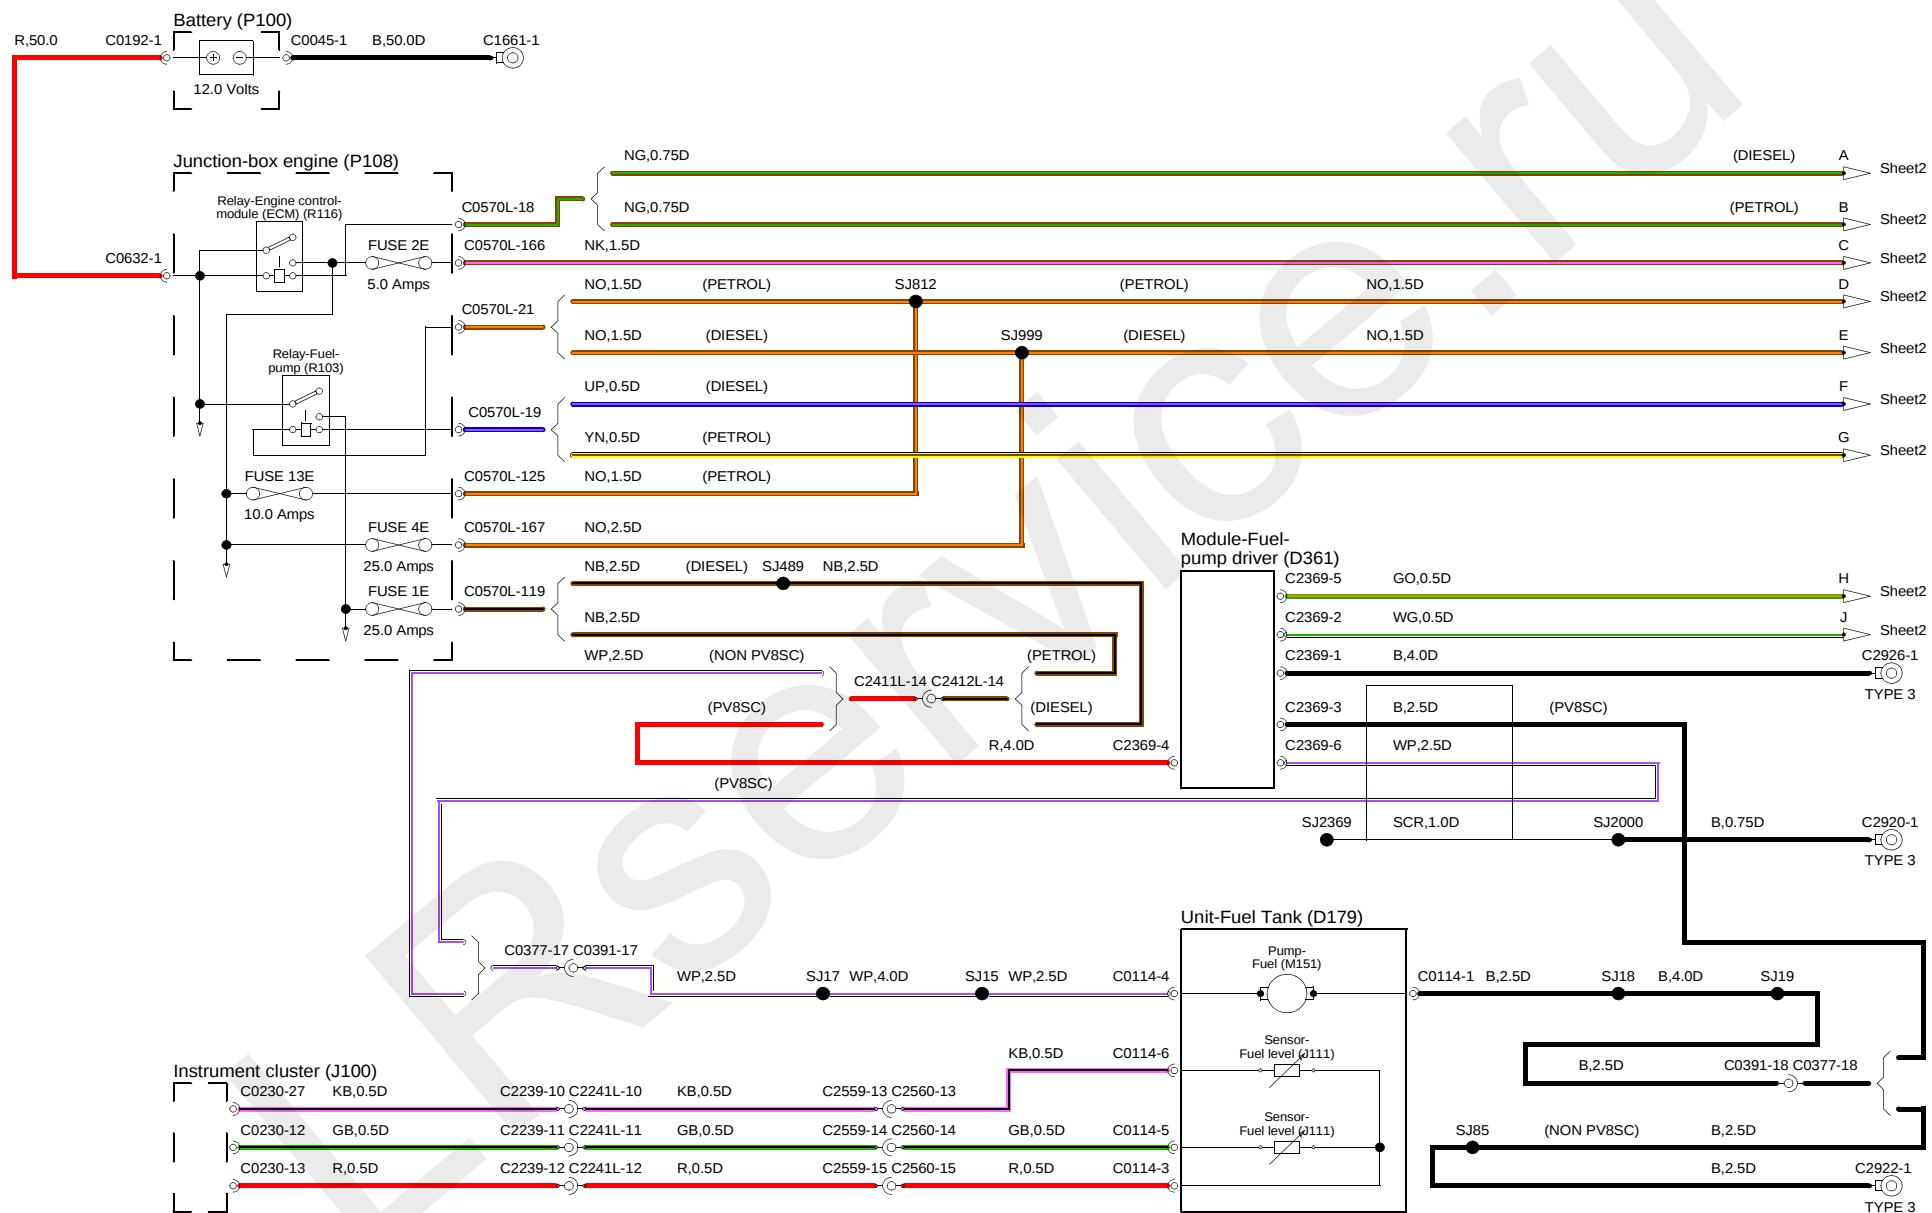


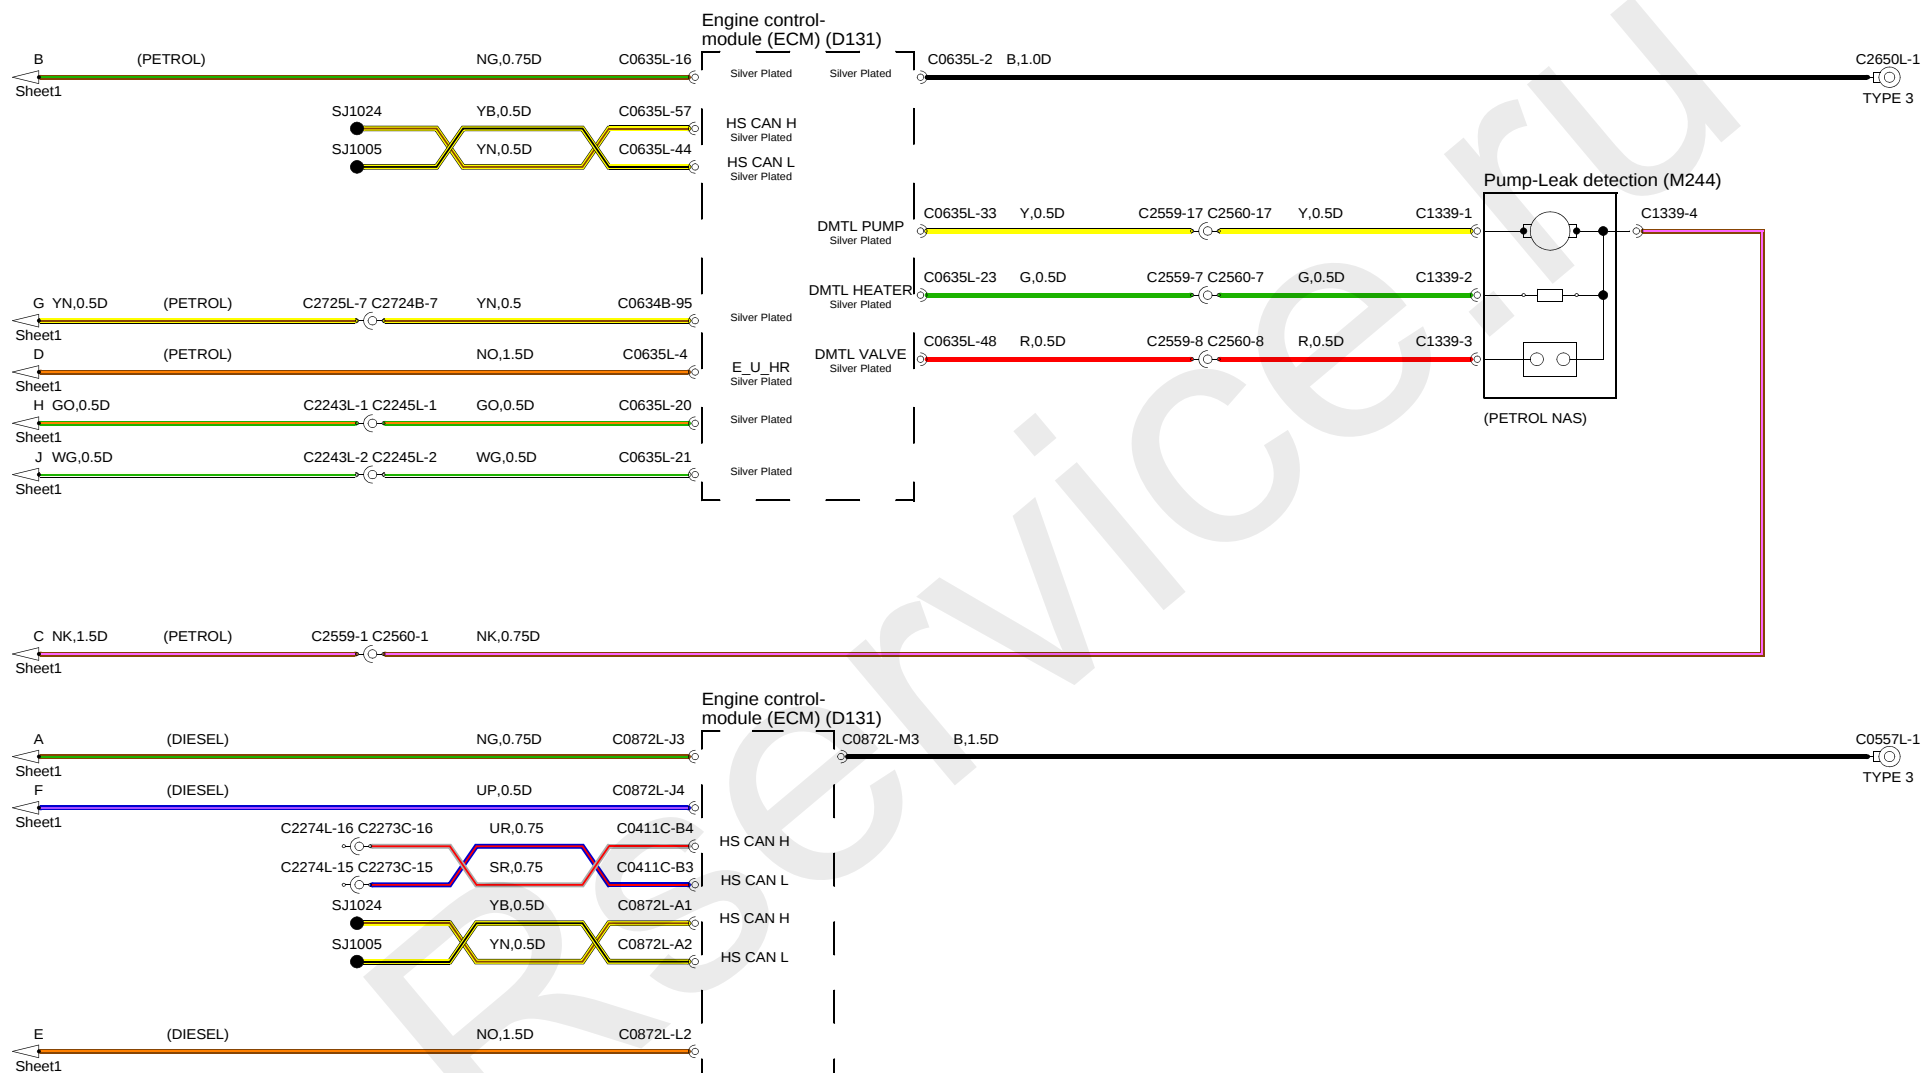



310-03 - SPEED CONTROL

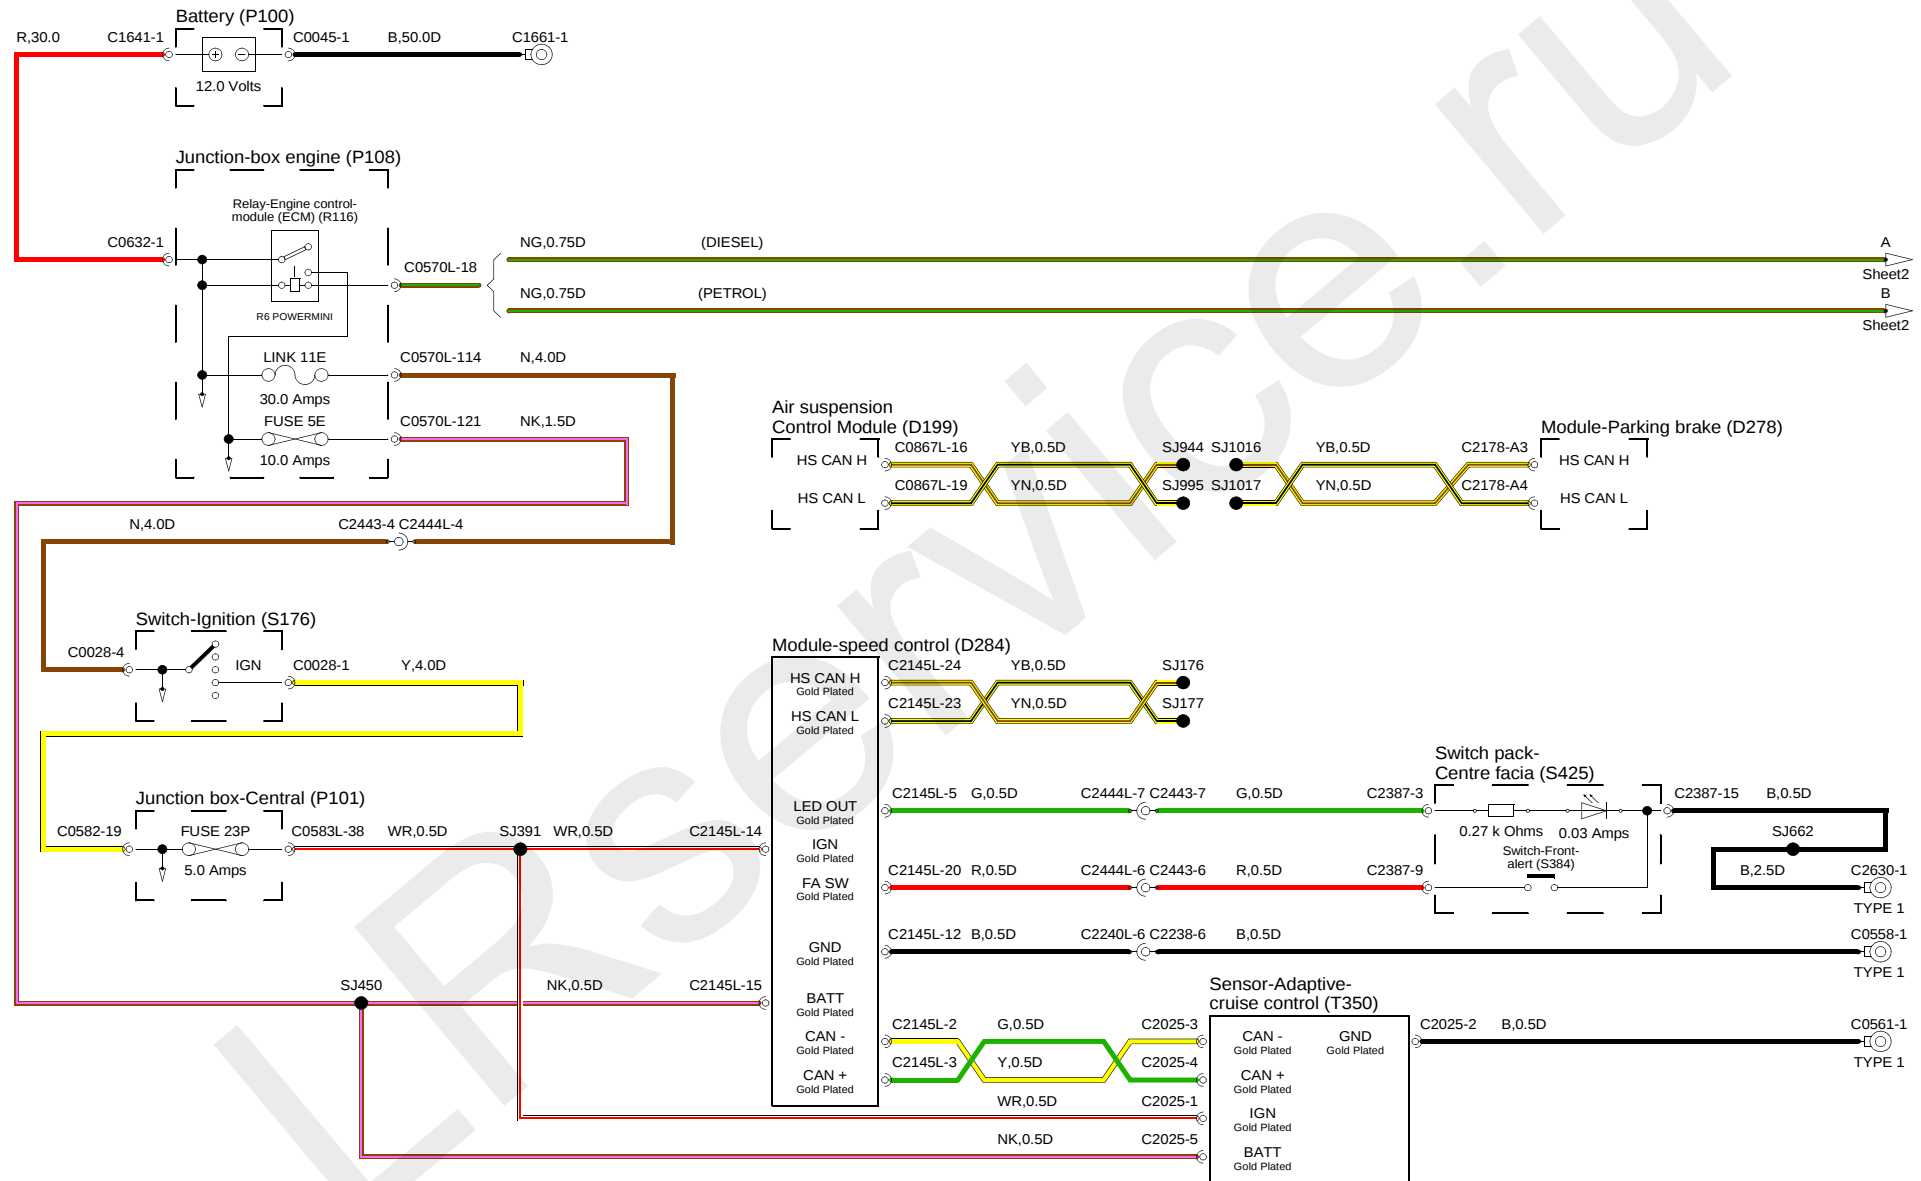


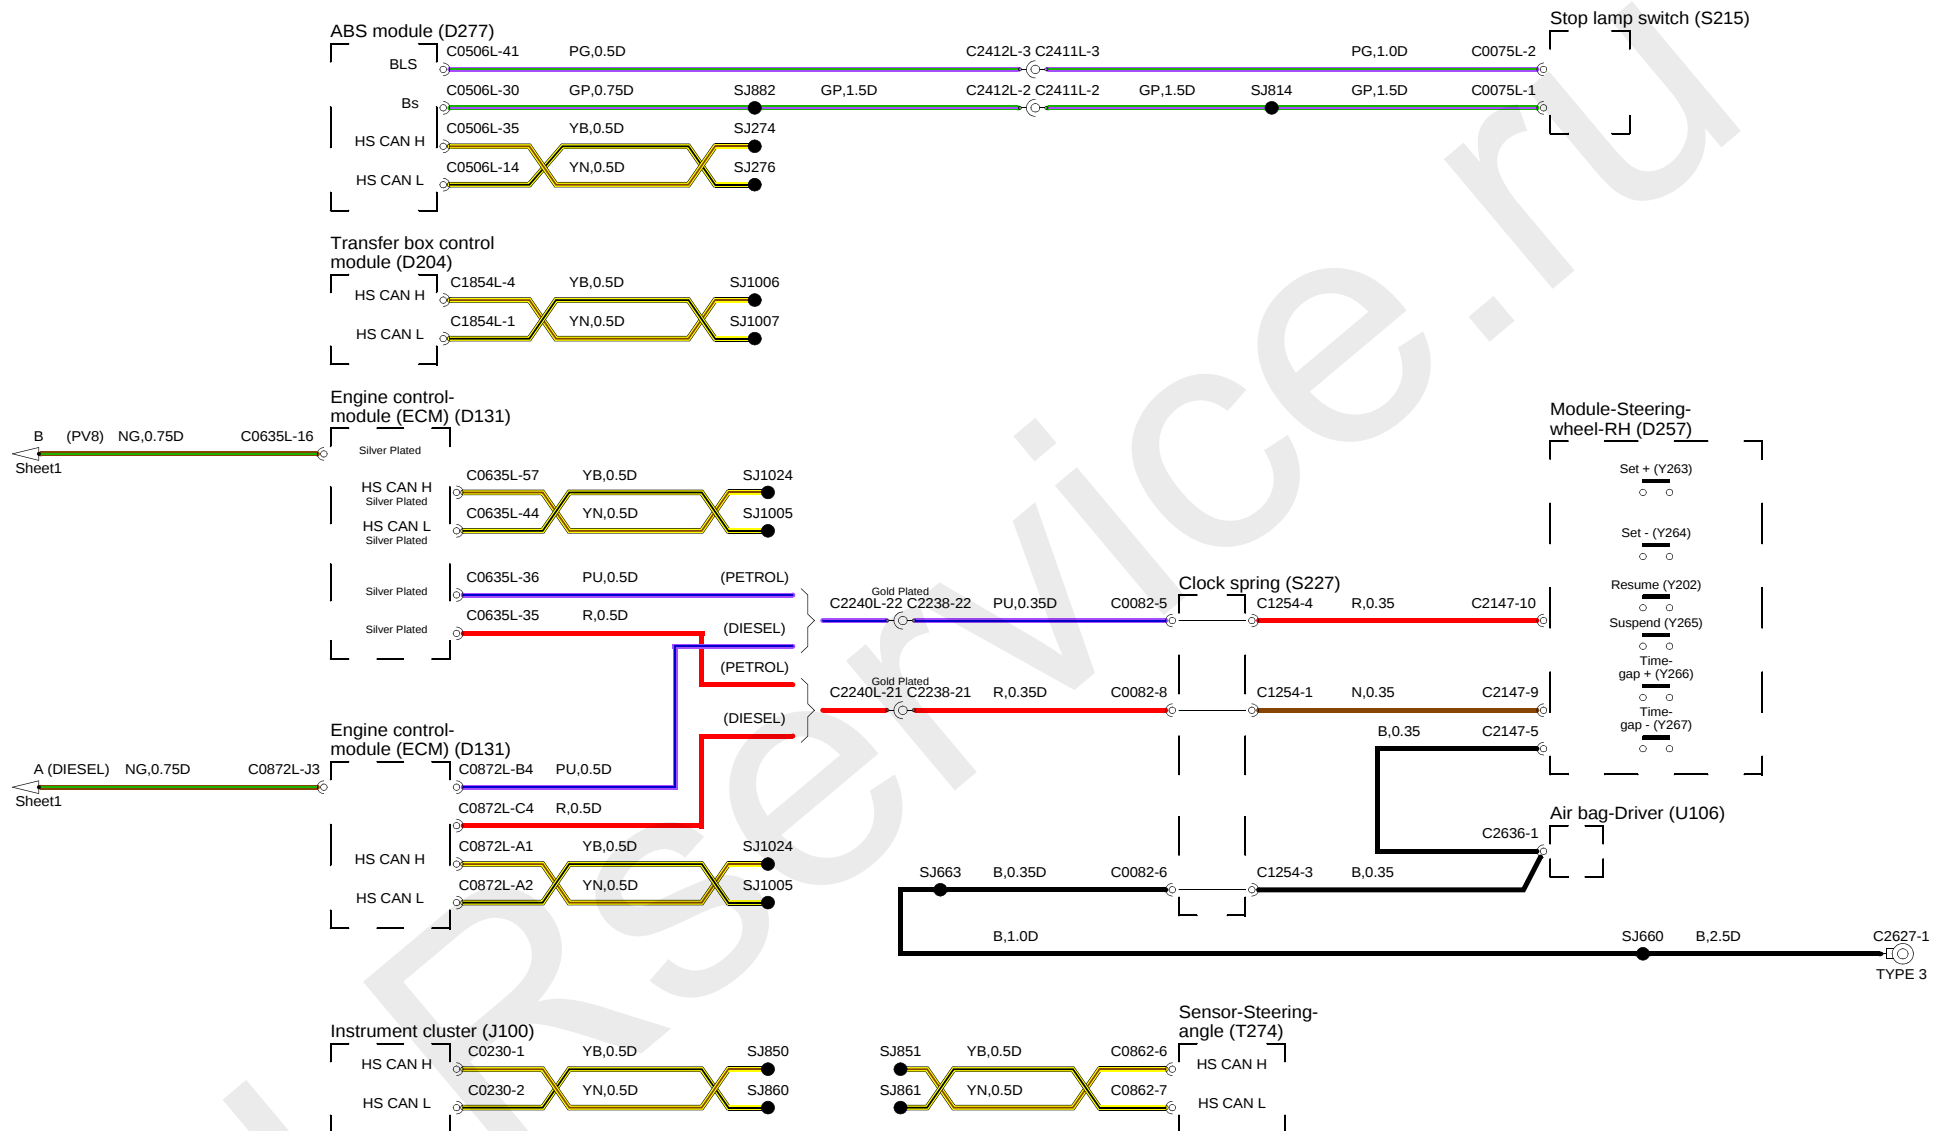


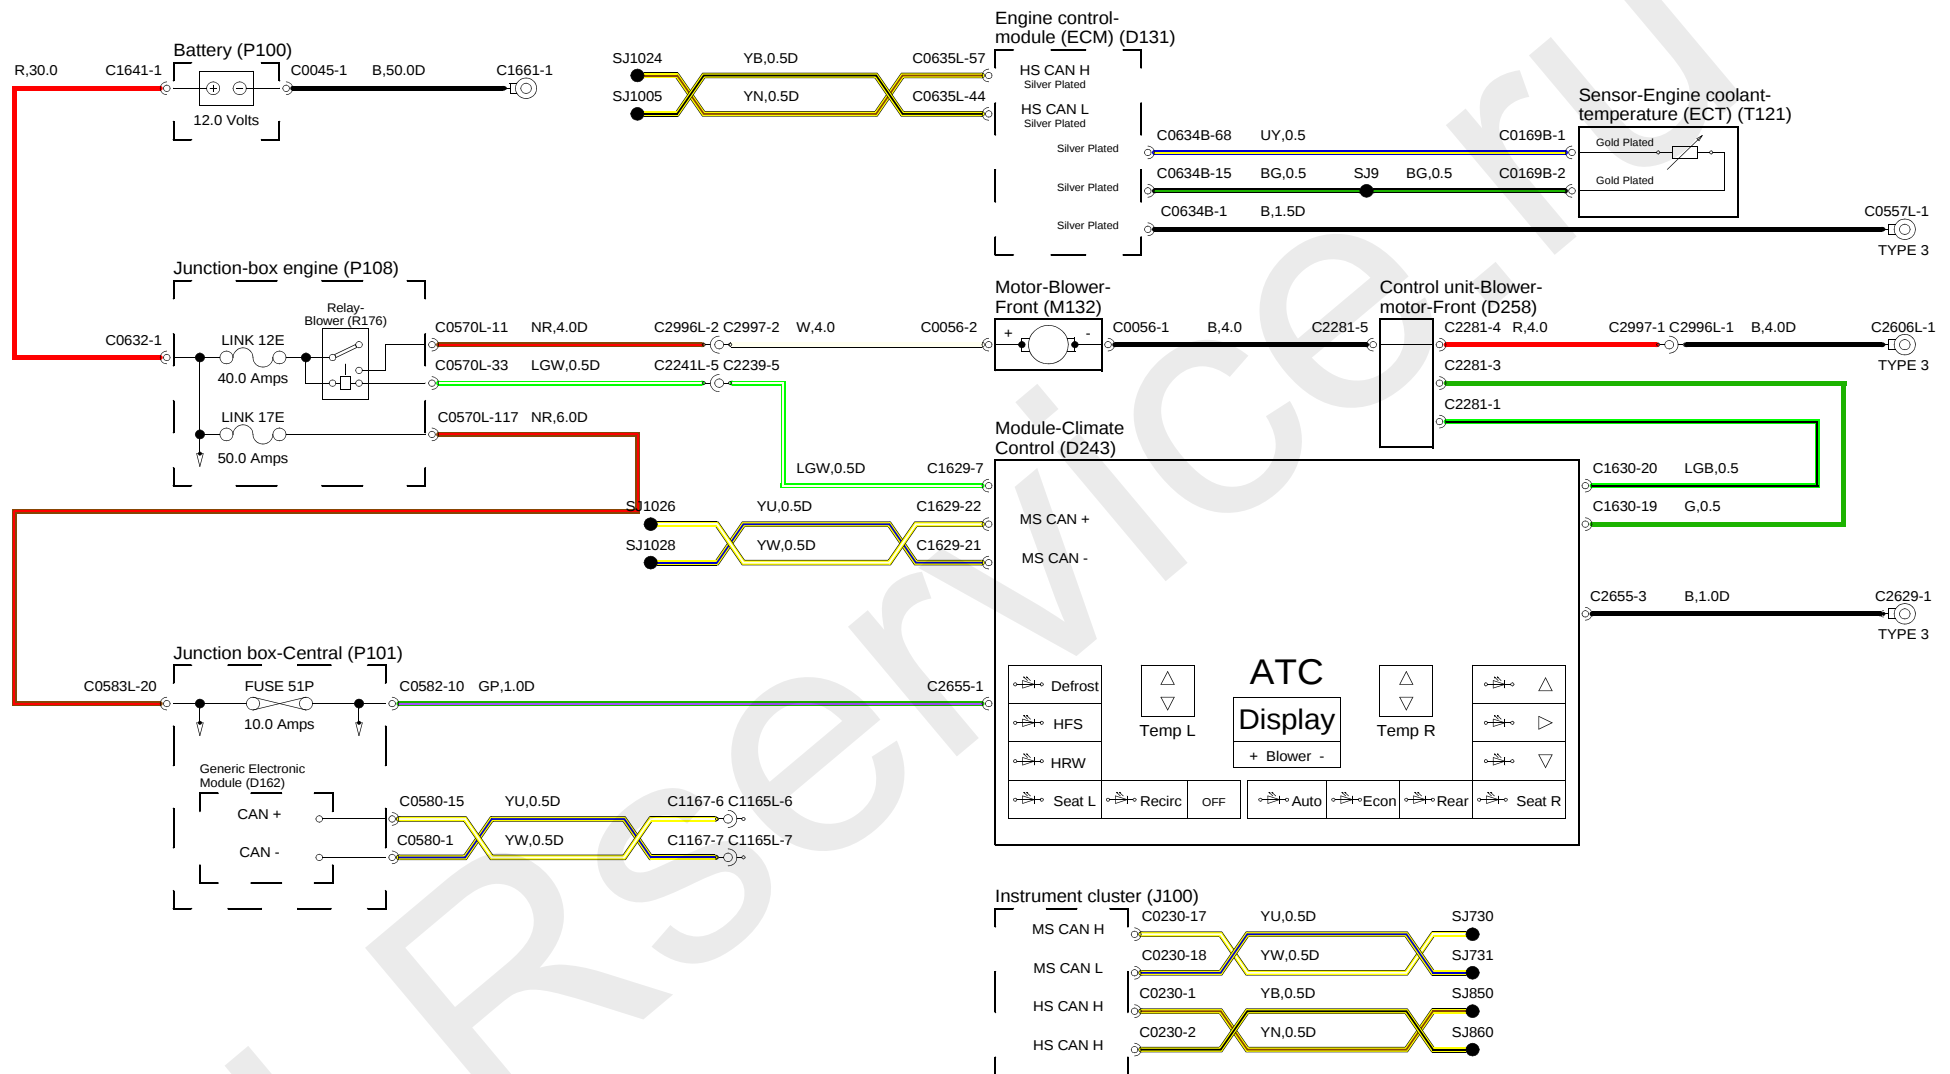


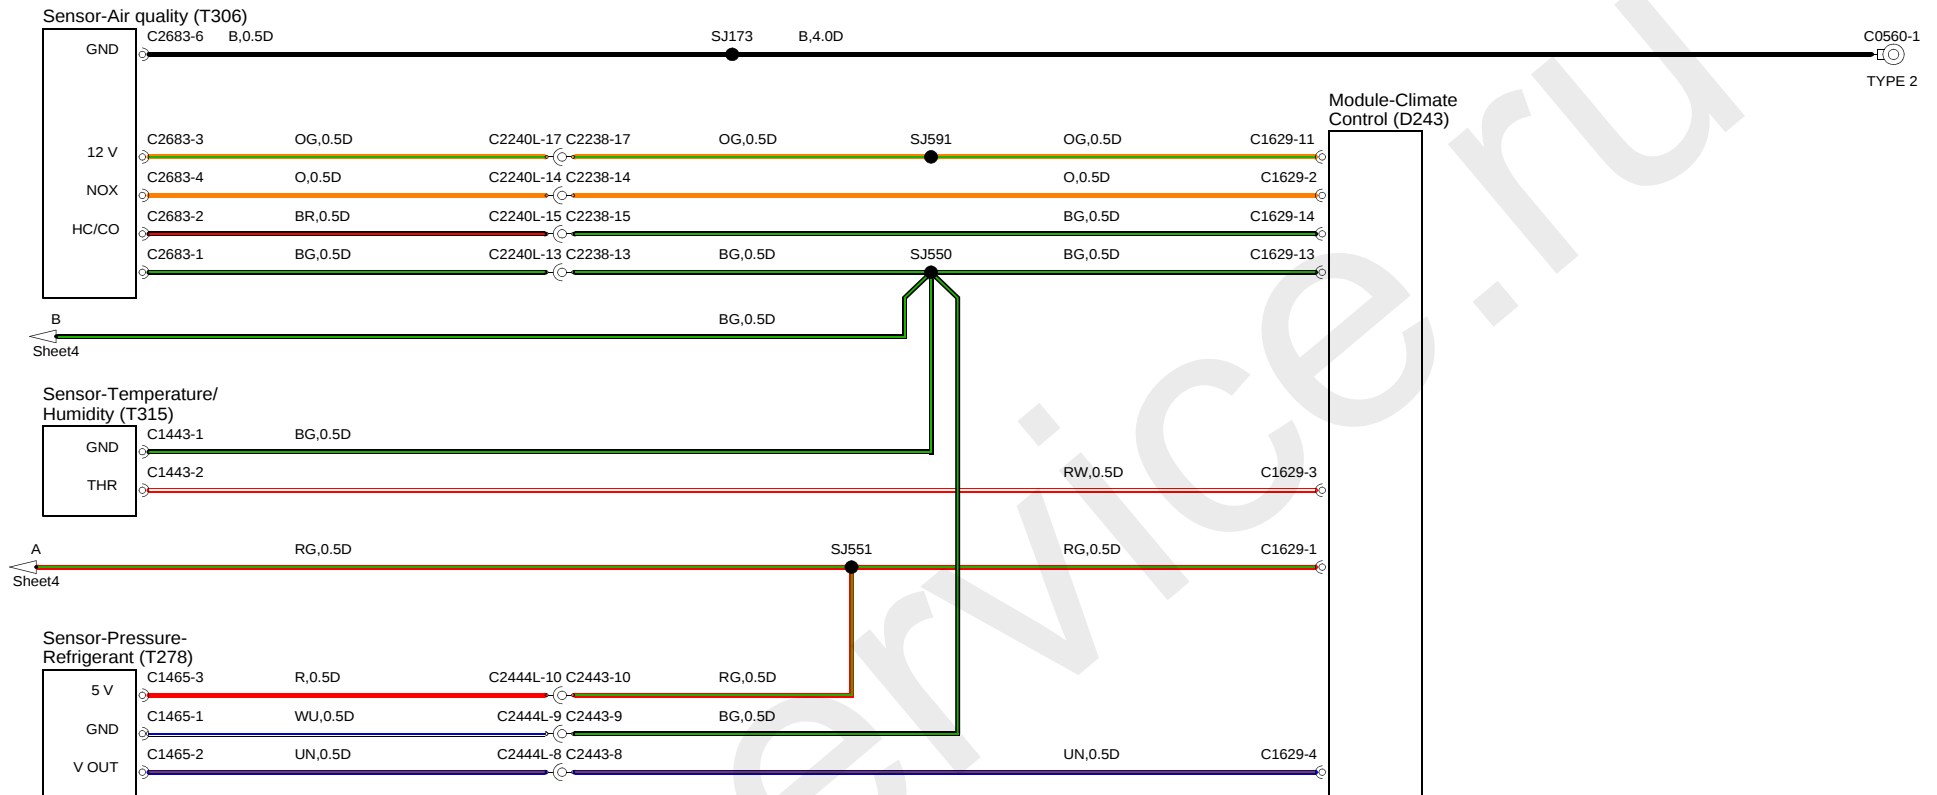


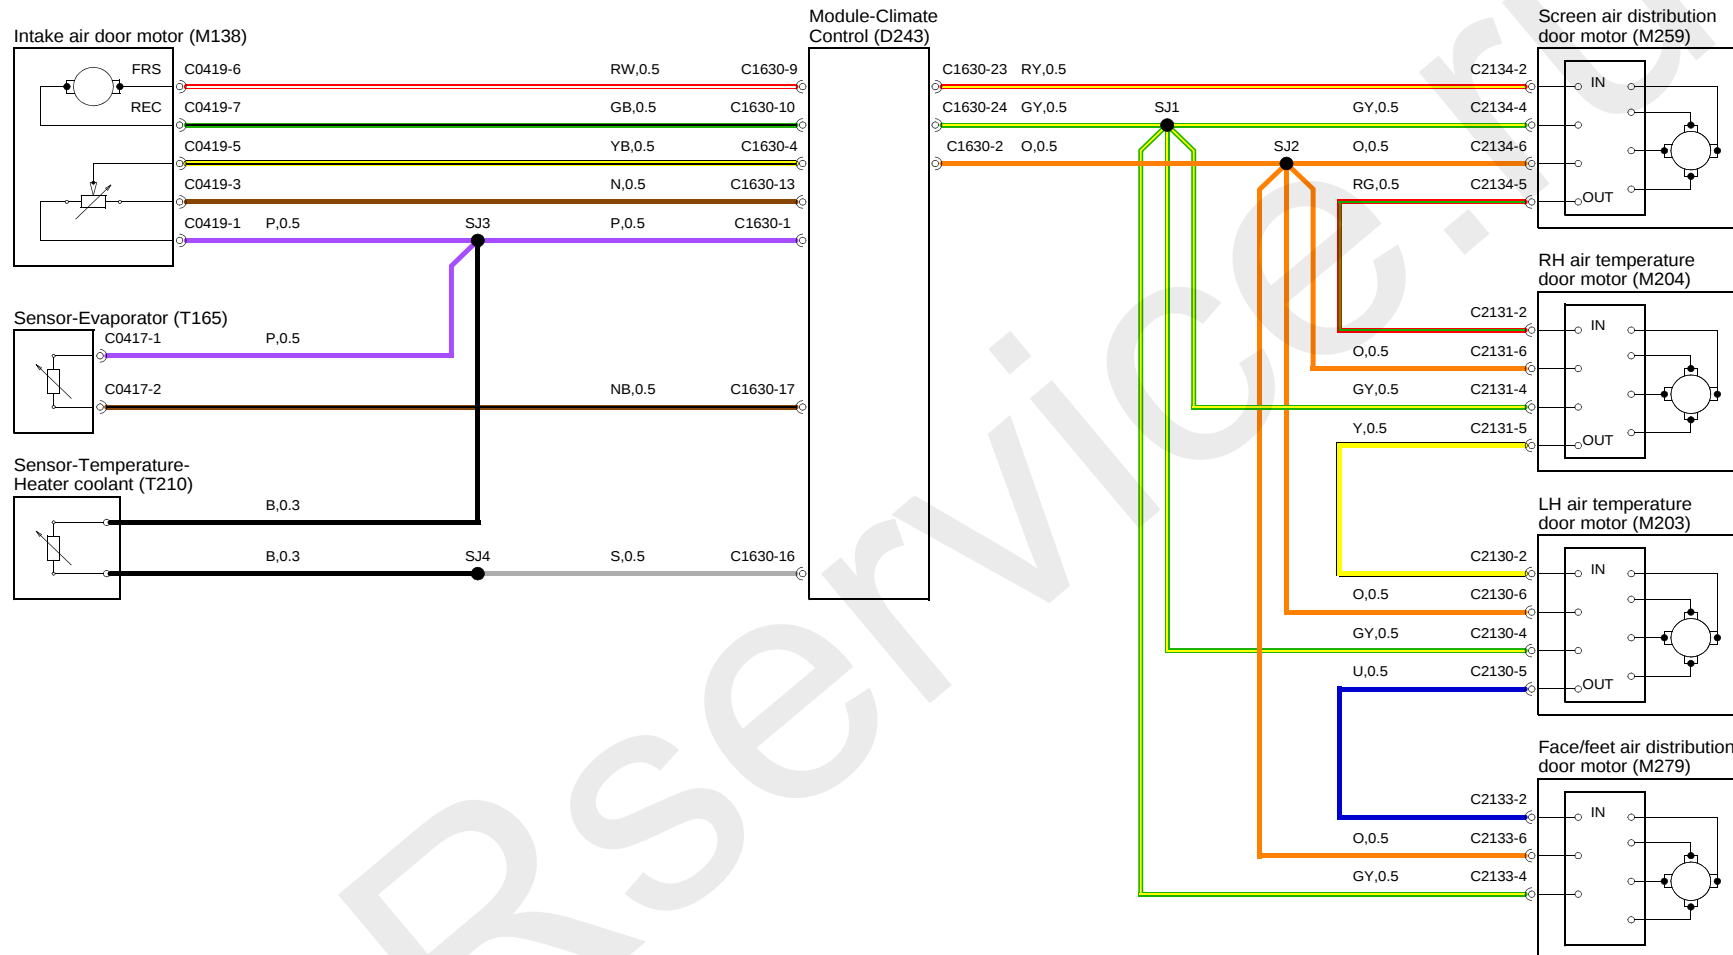


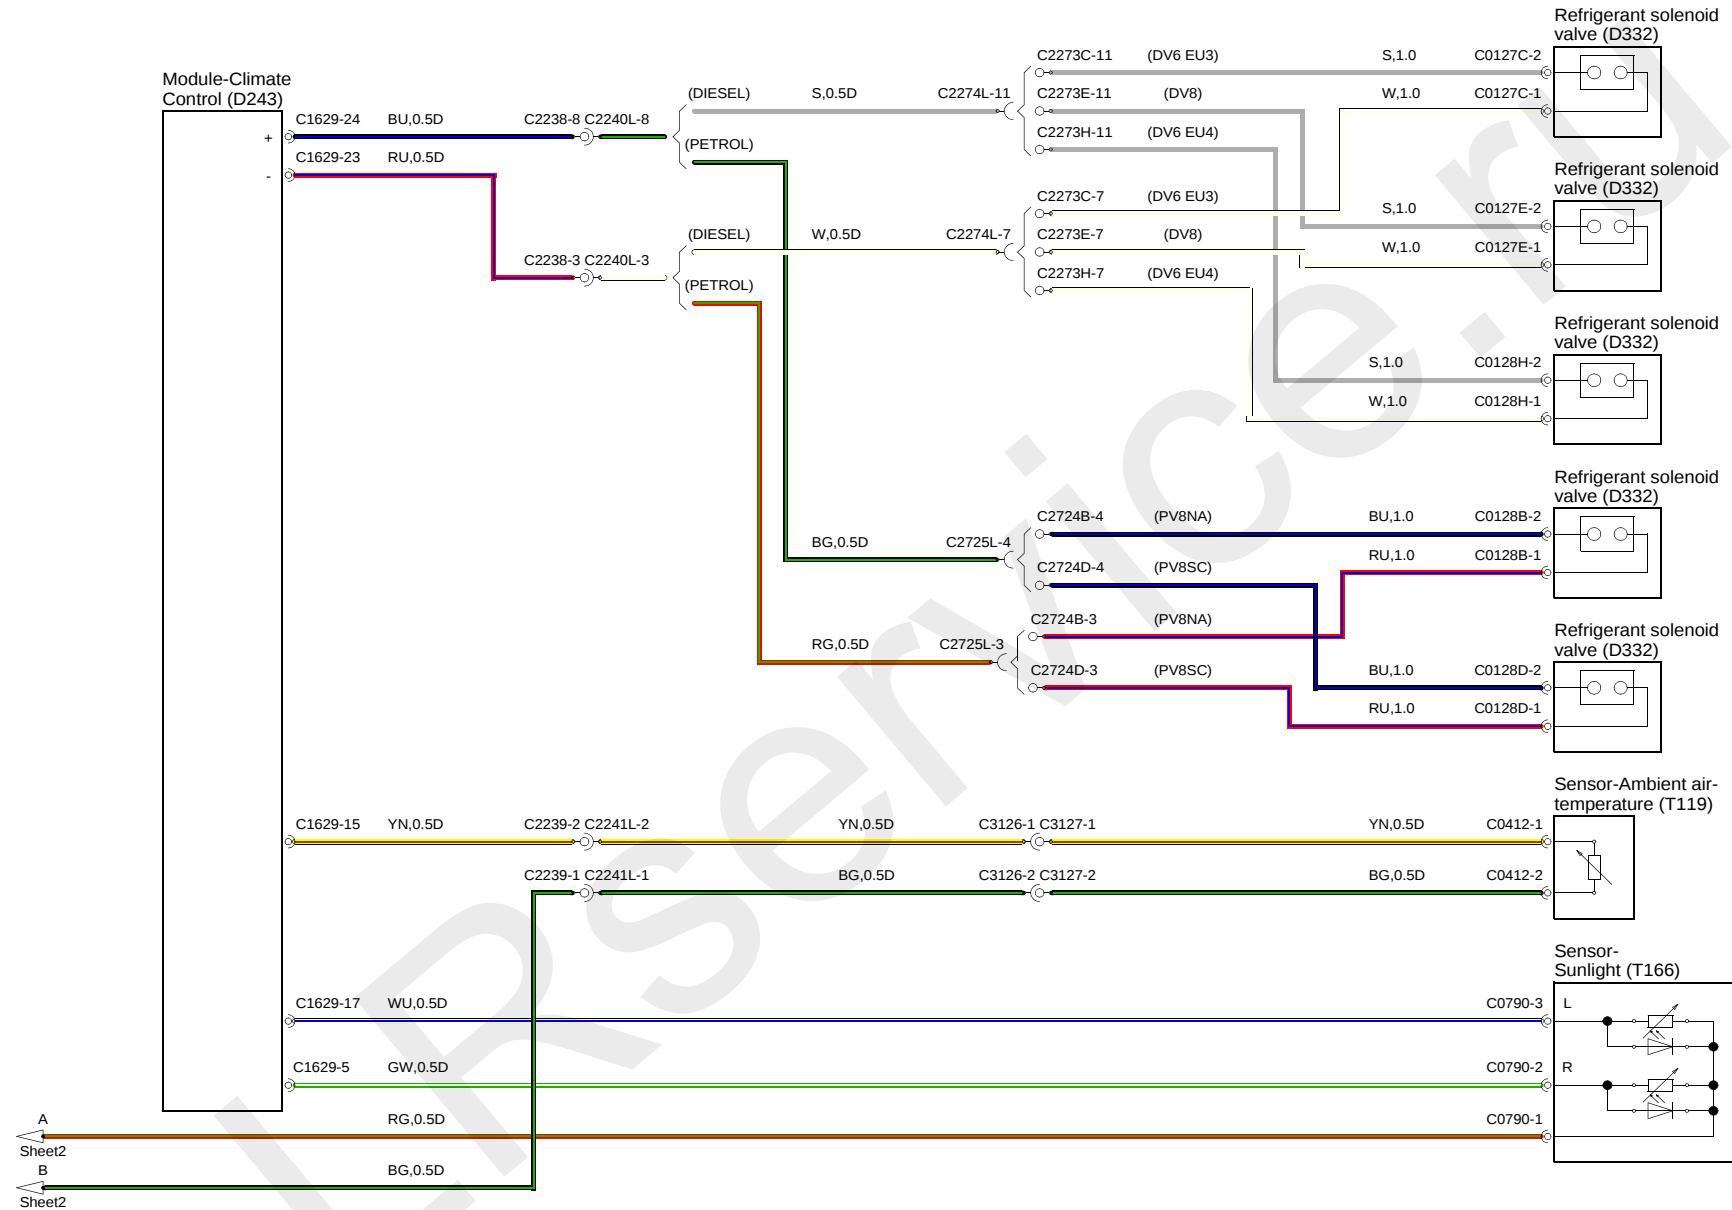

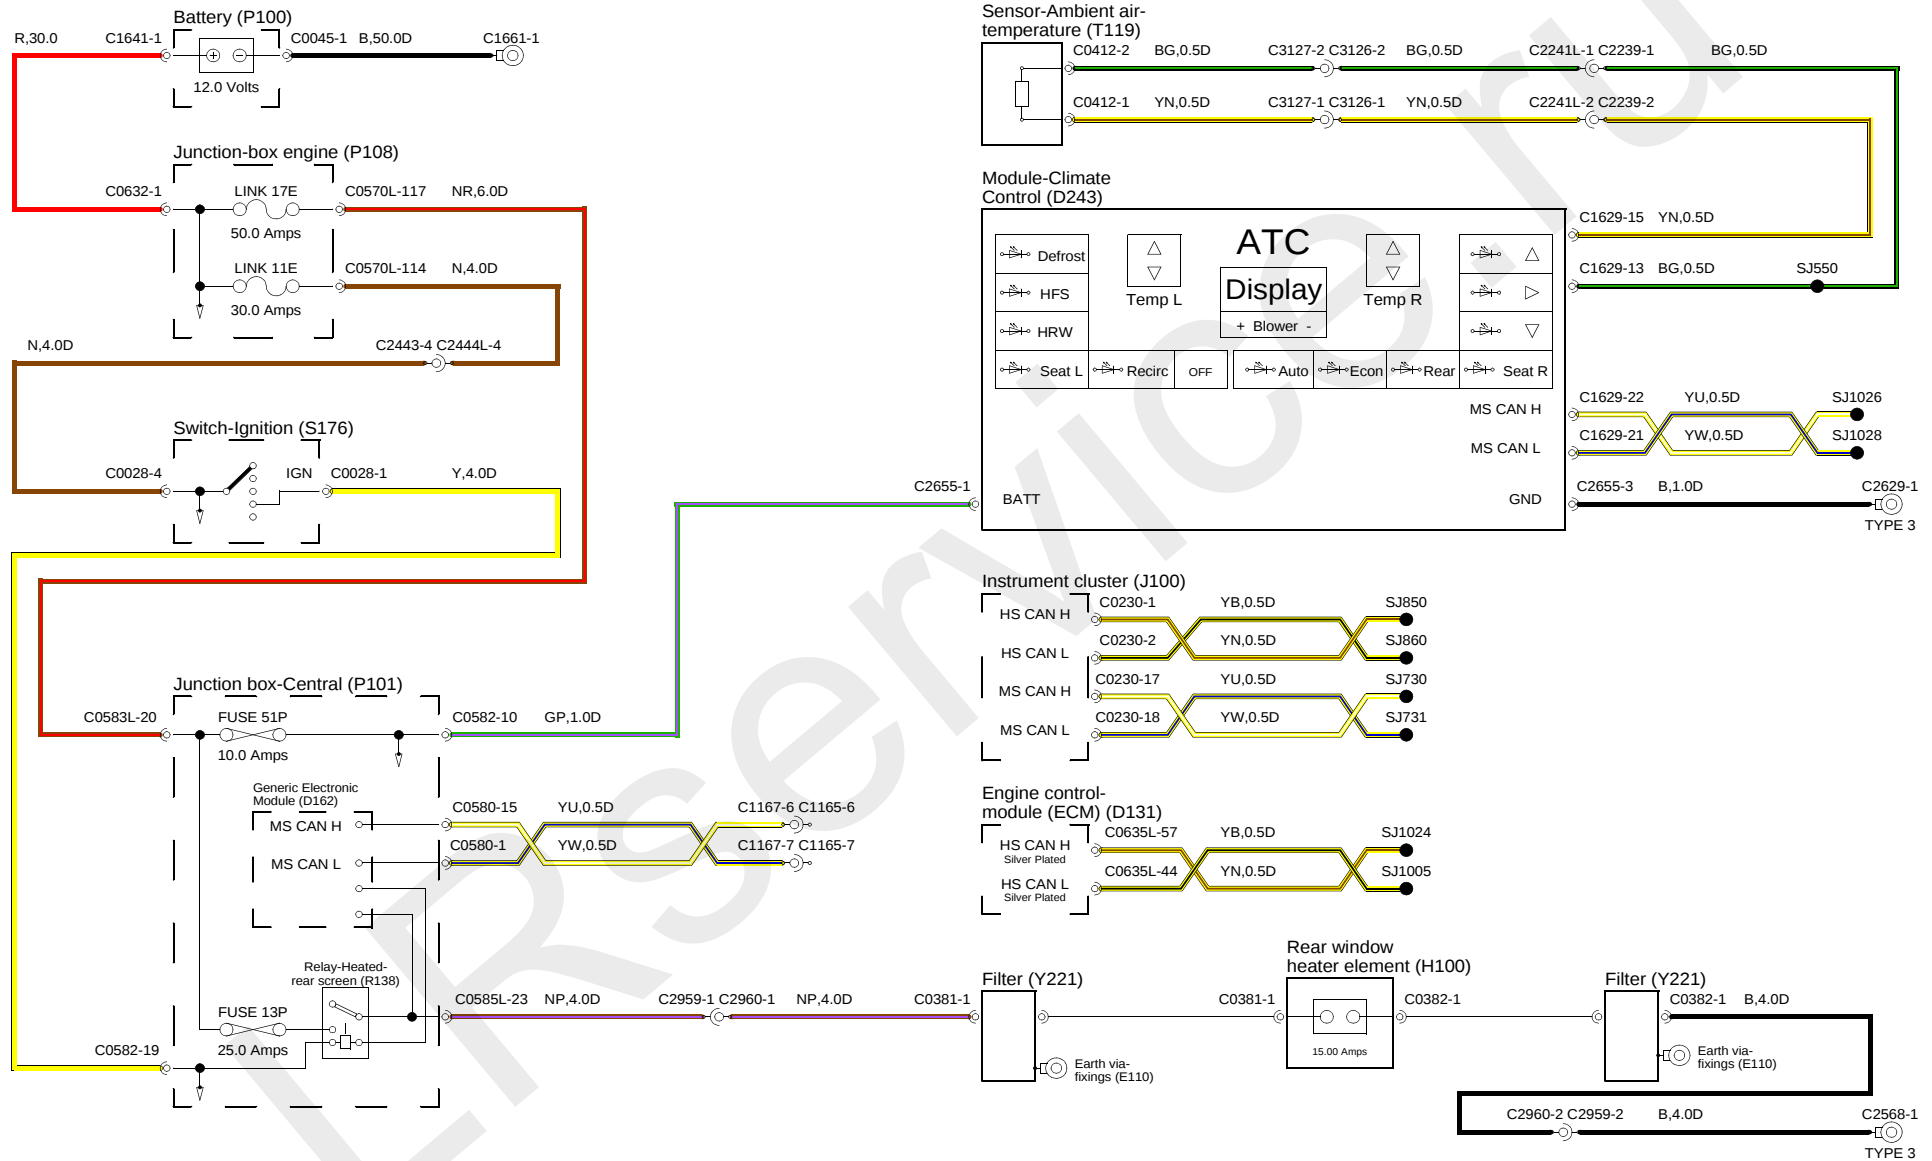


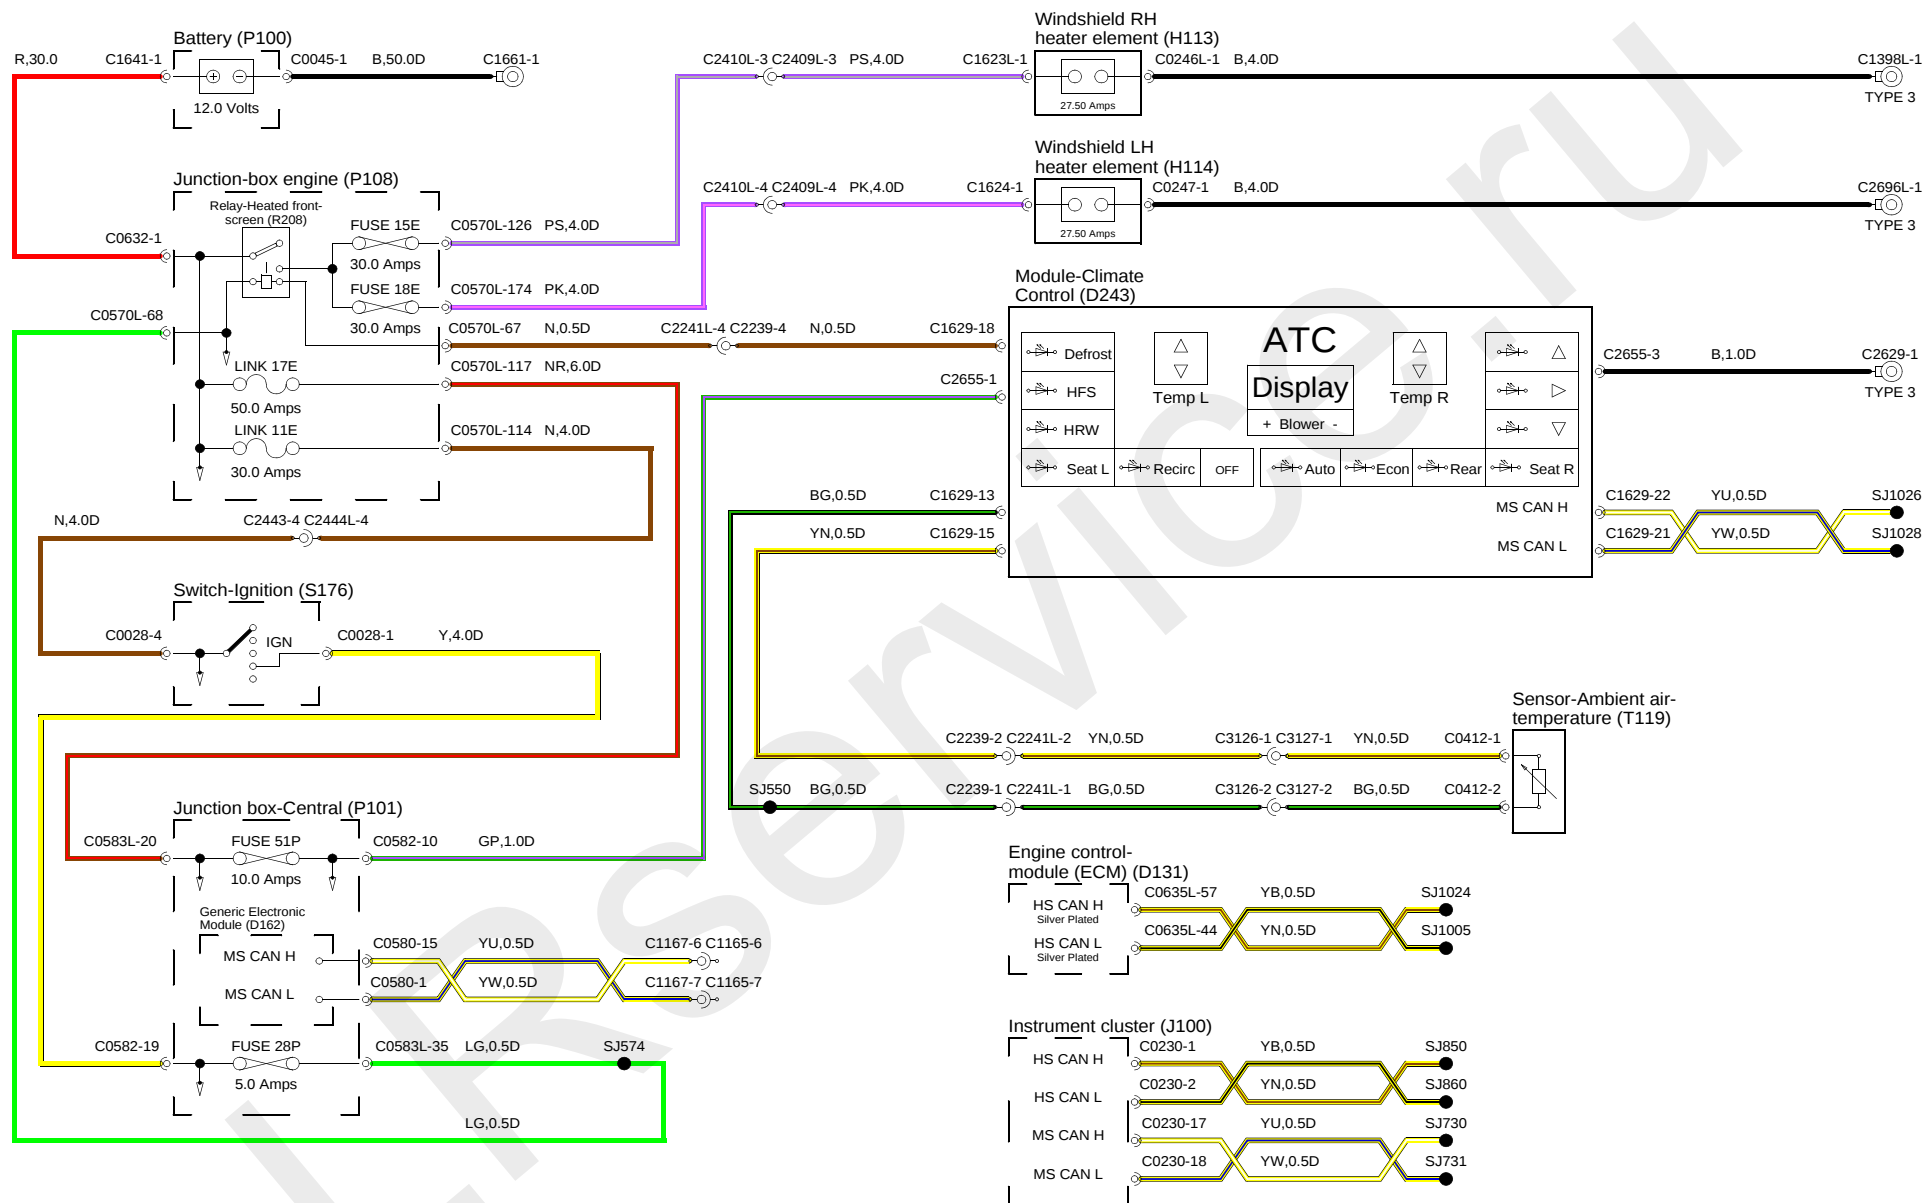

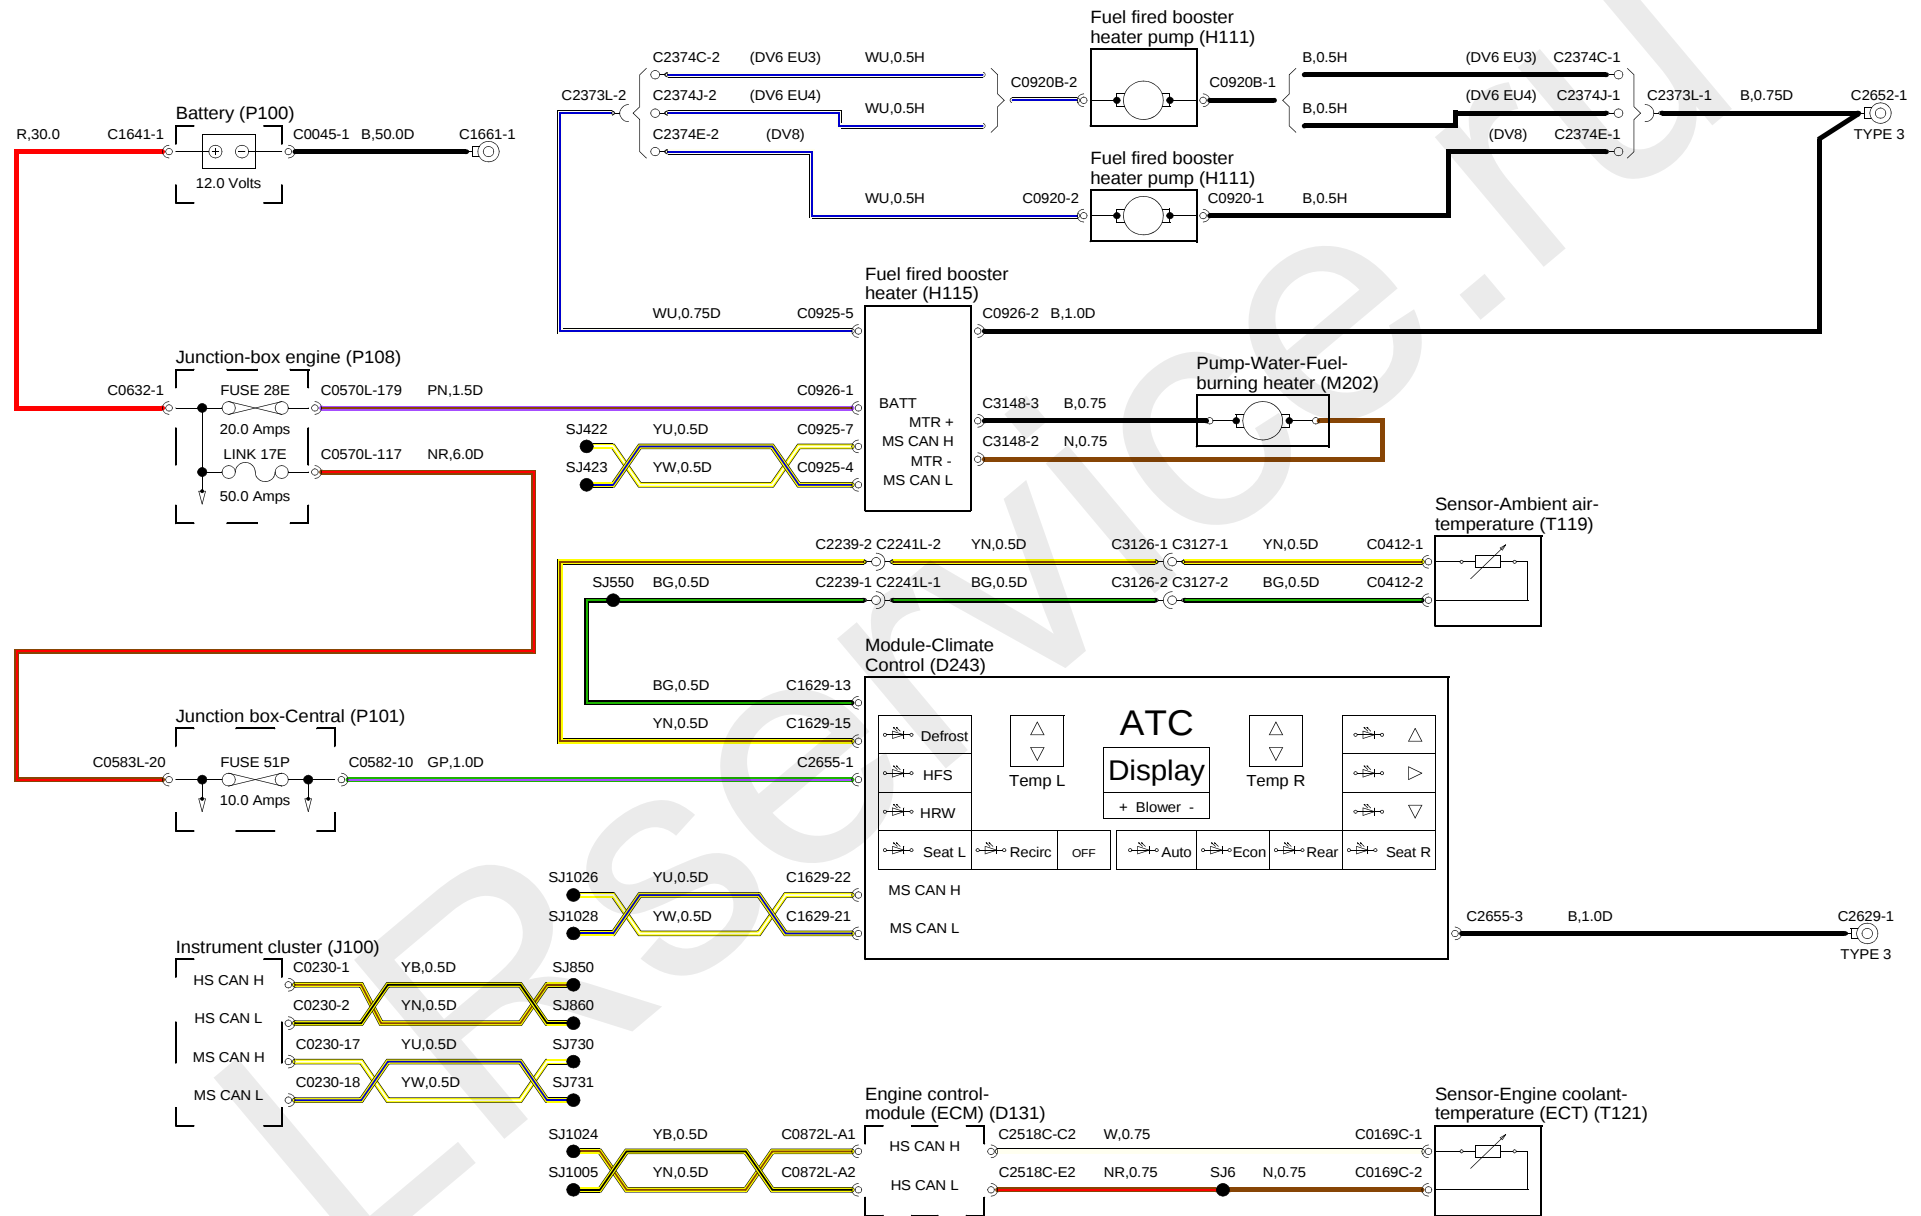


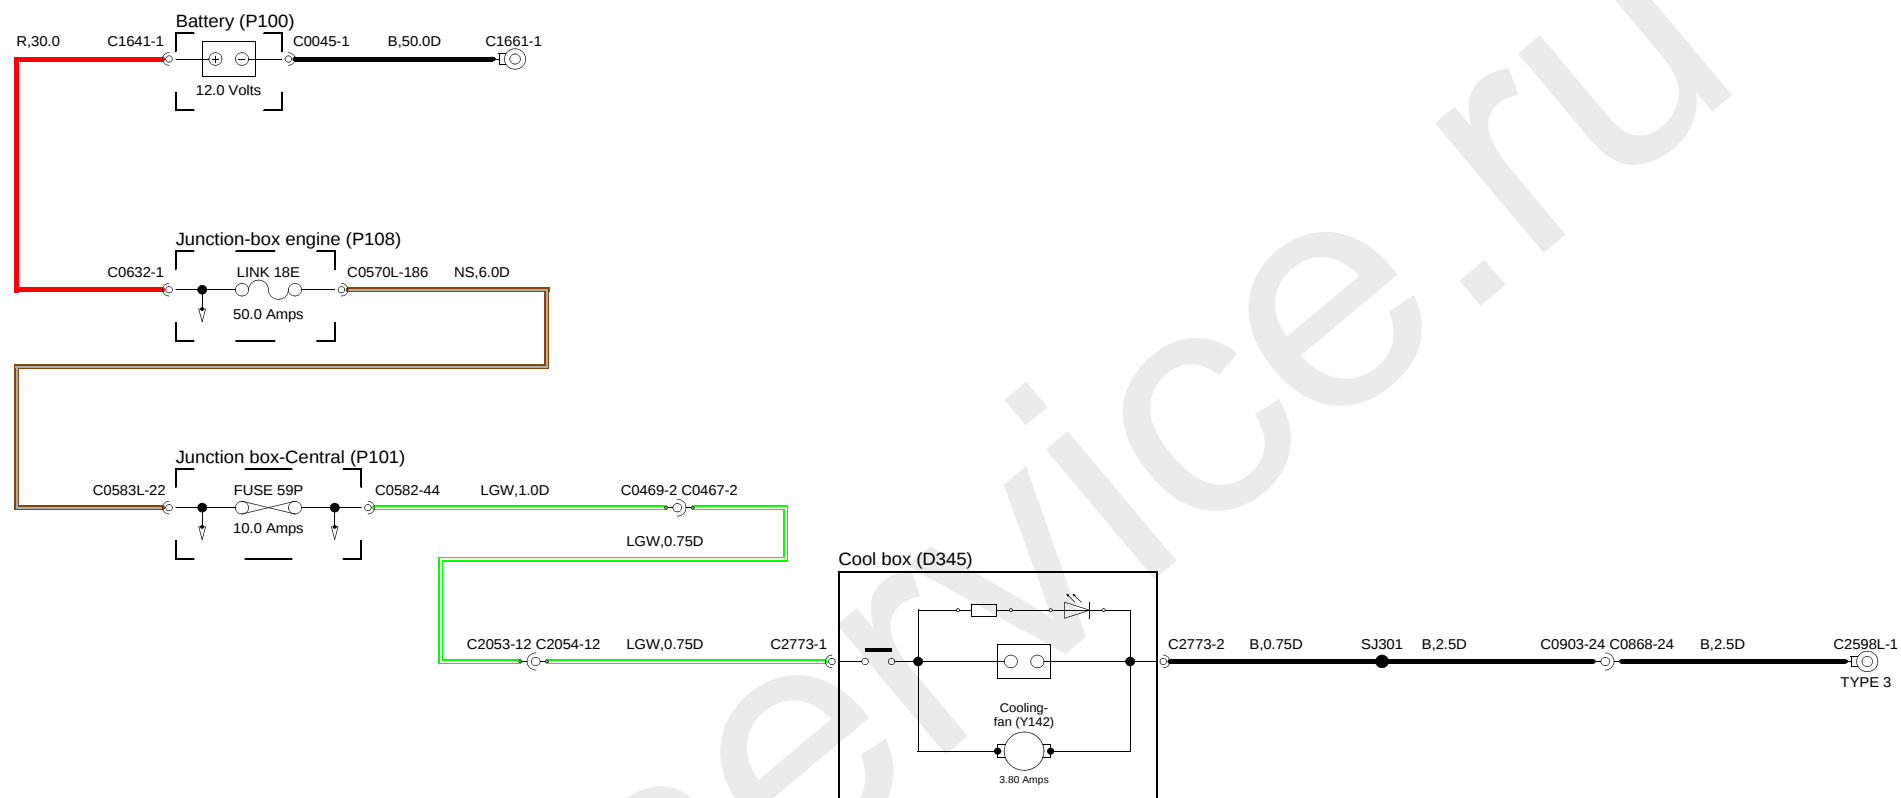


413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

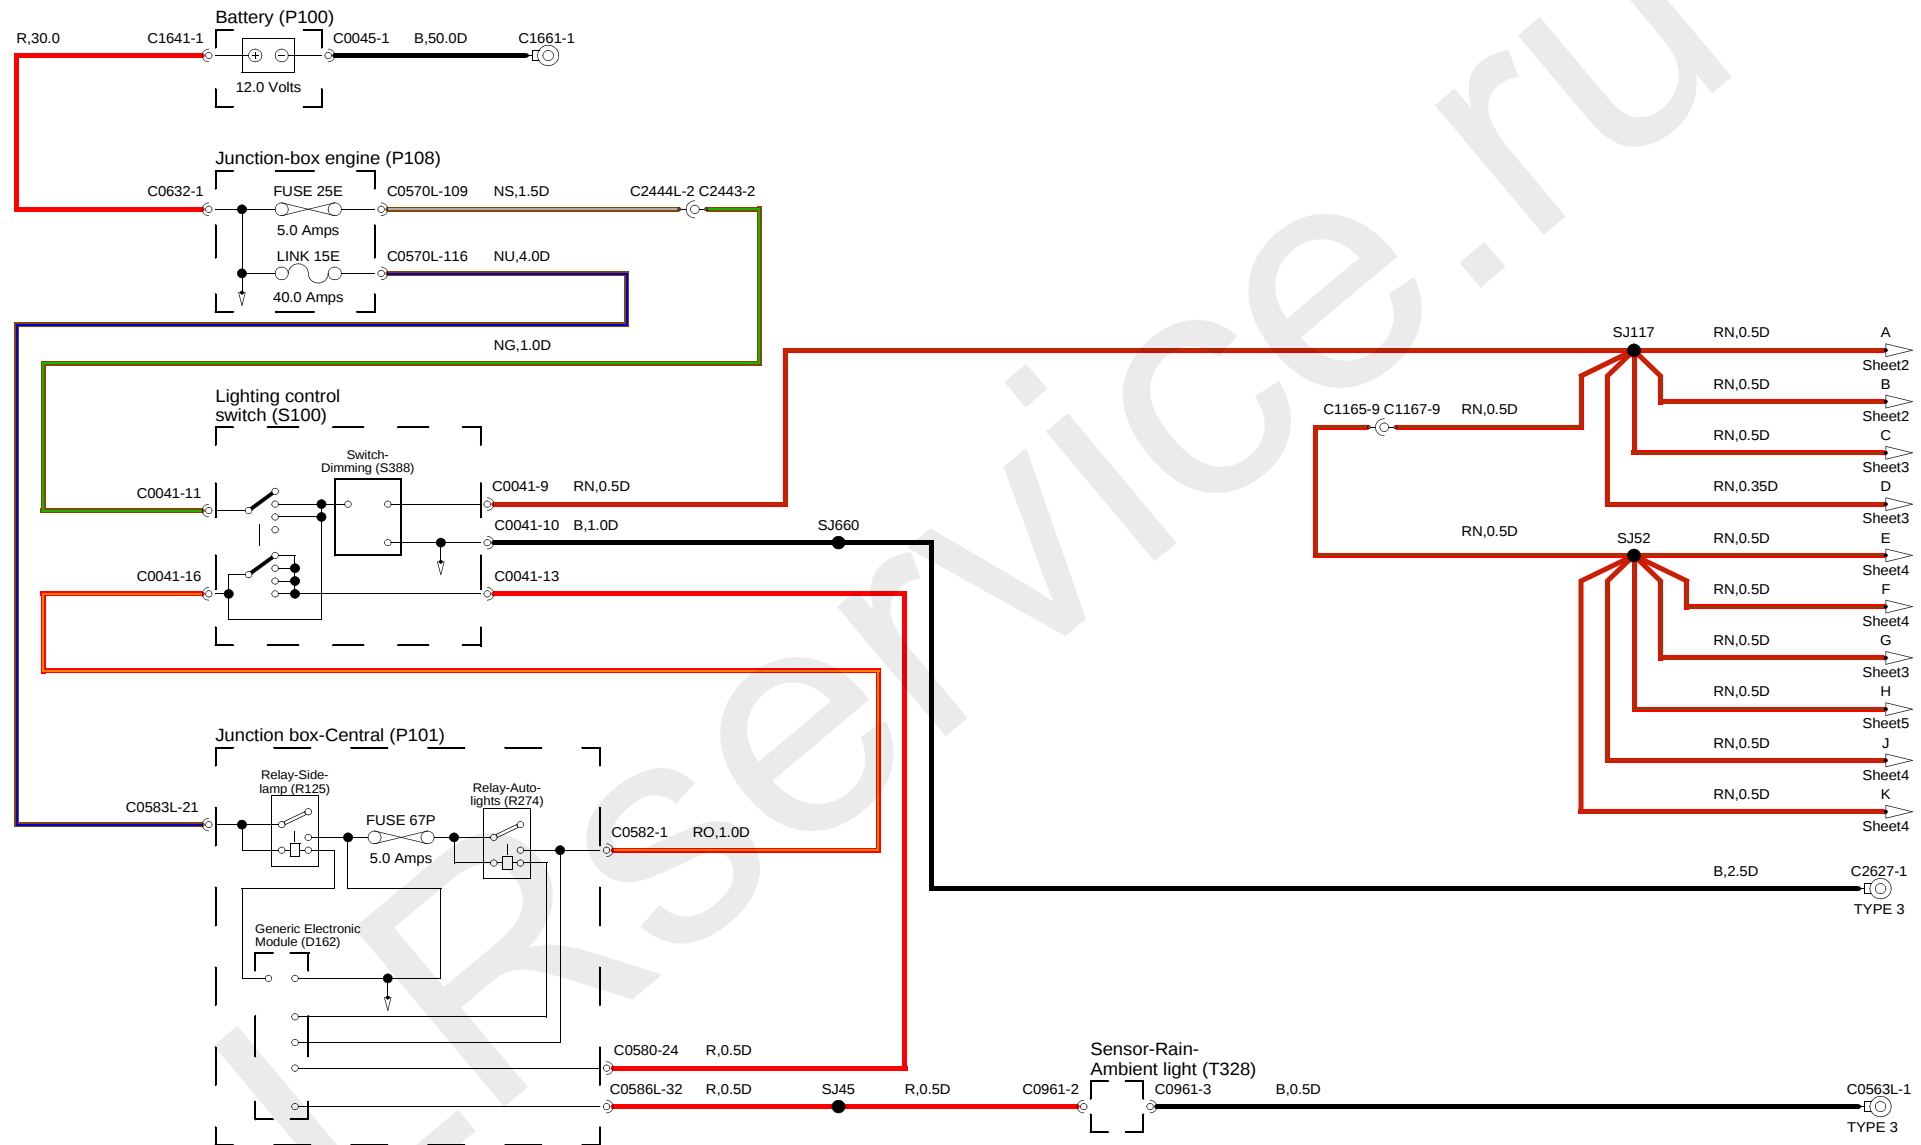


413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

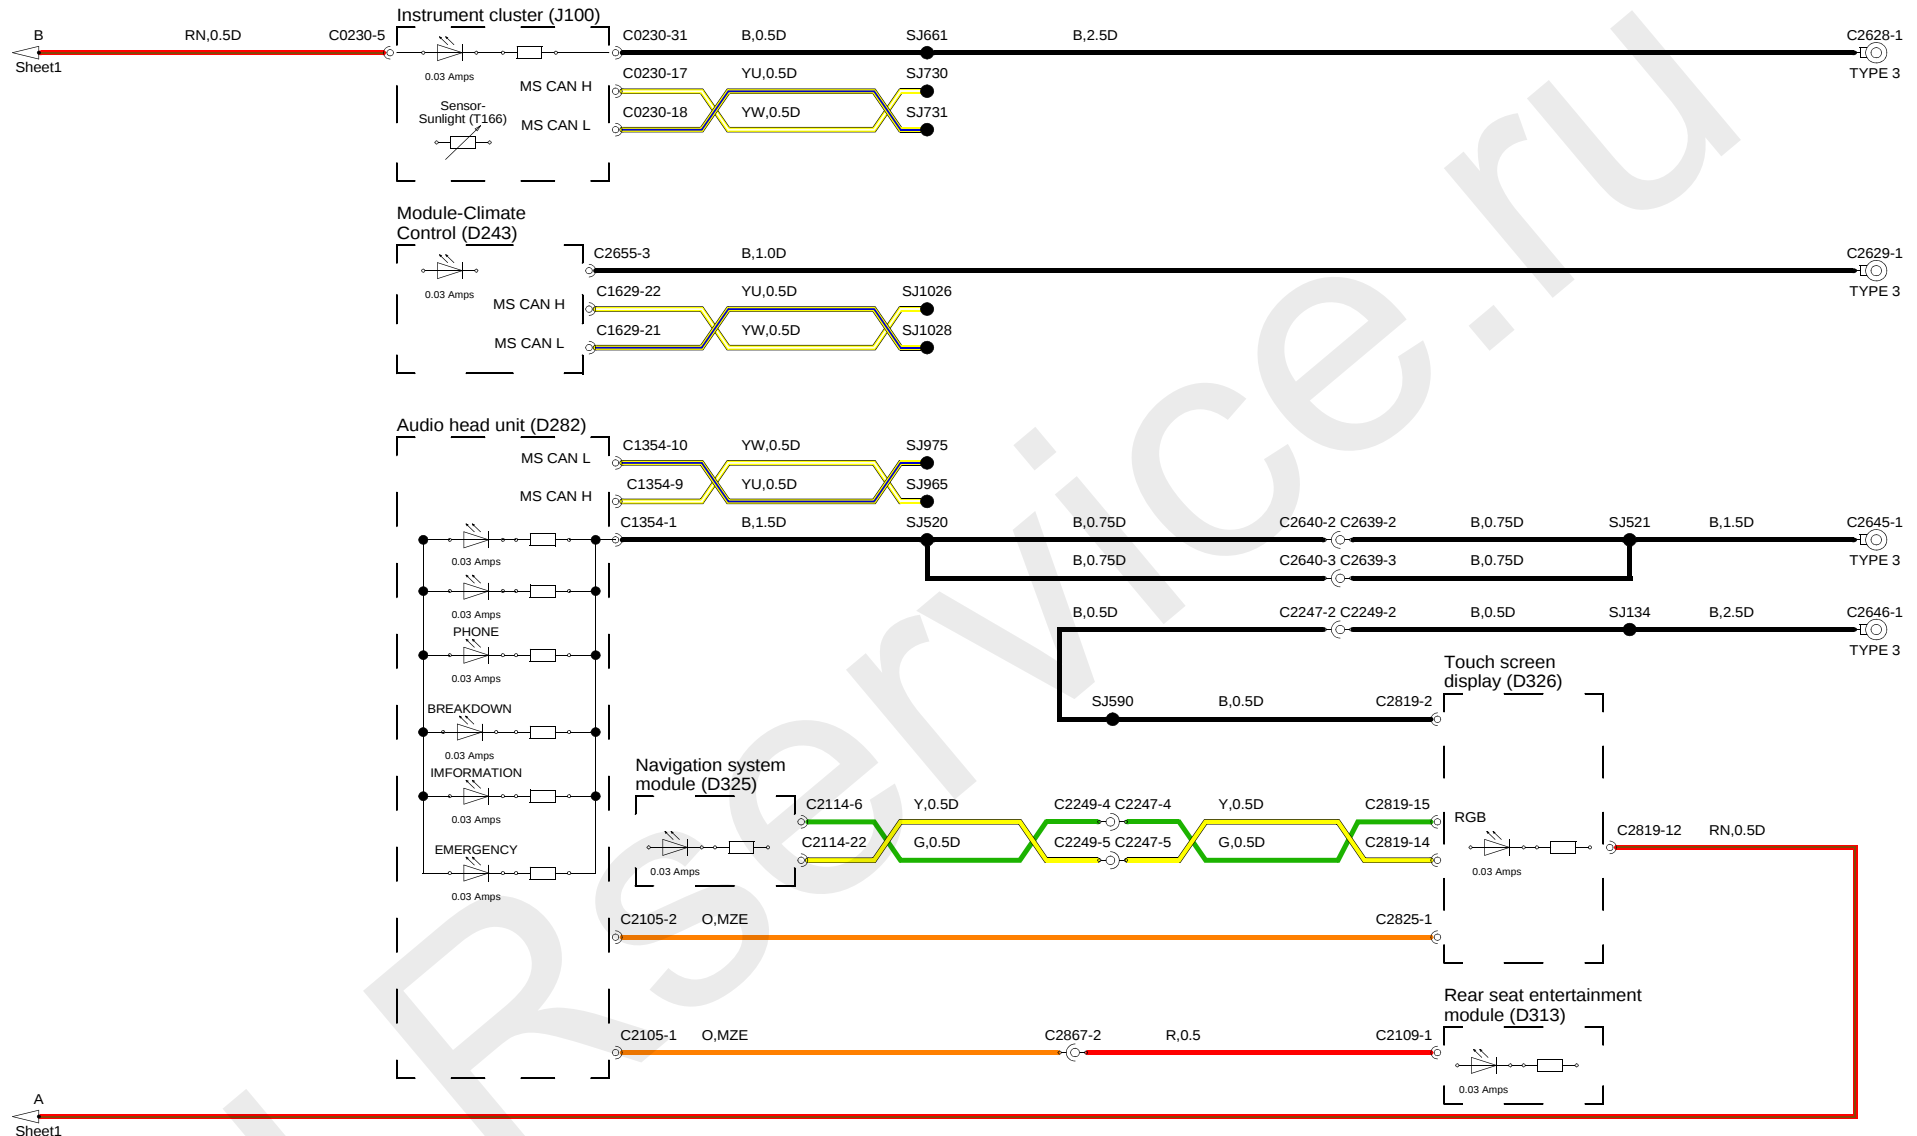



413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

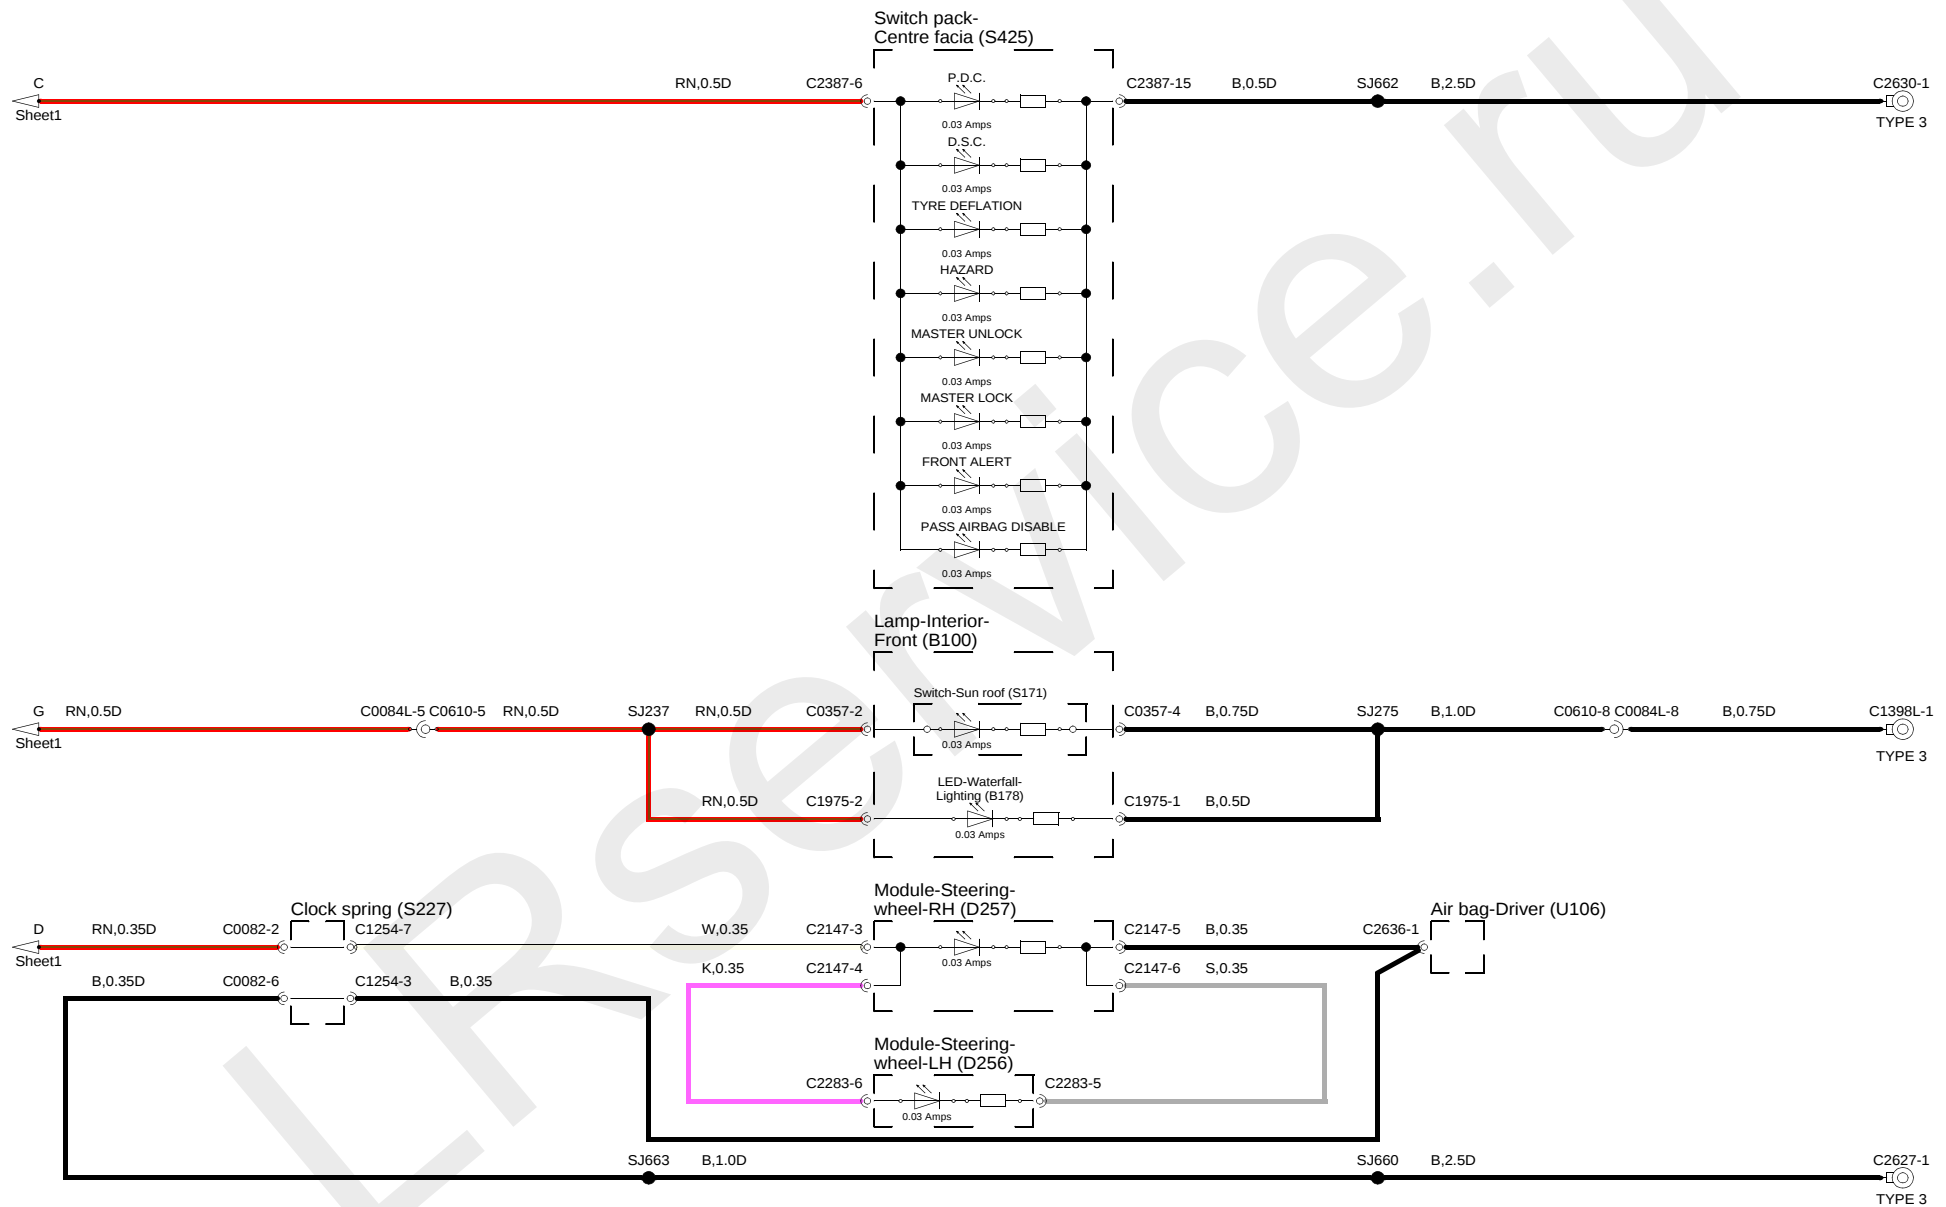

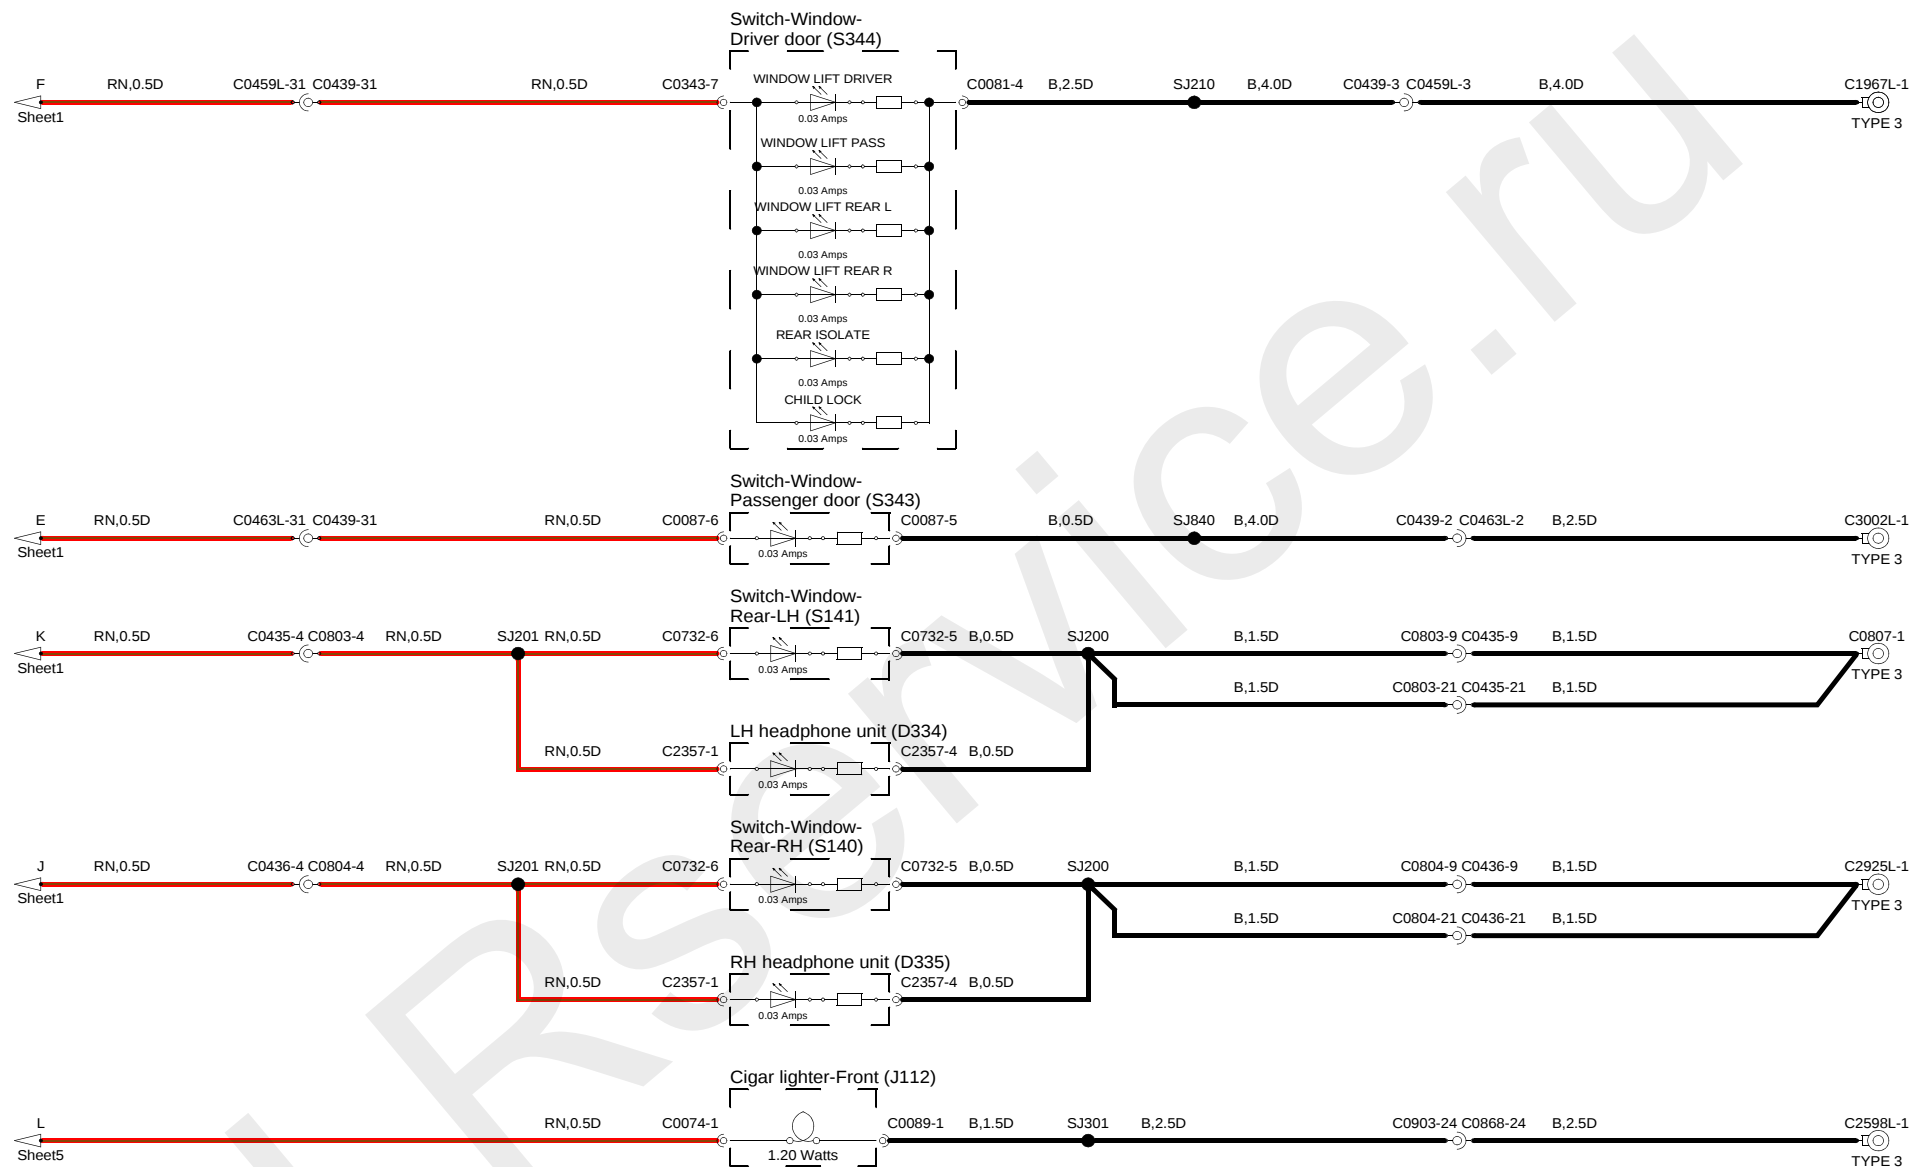


413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

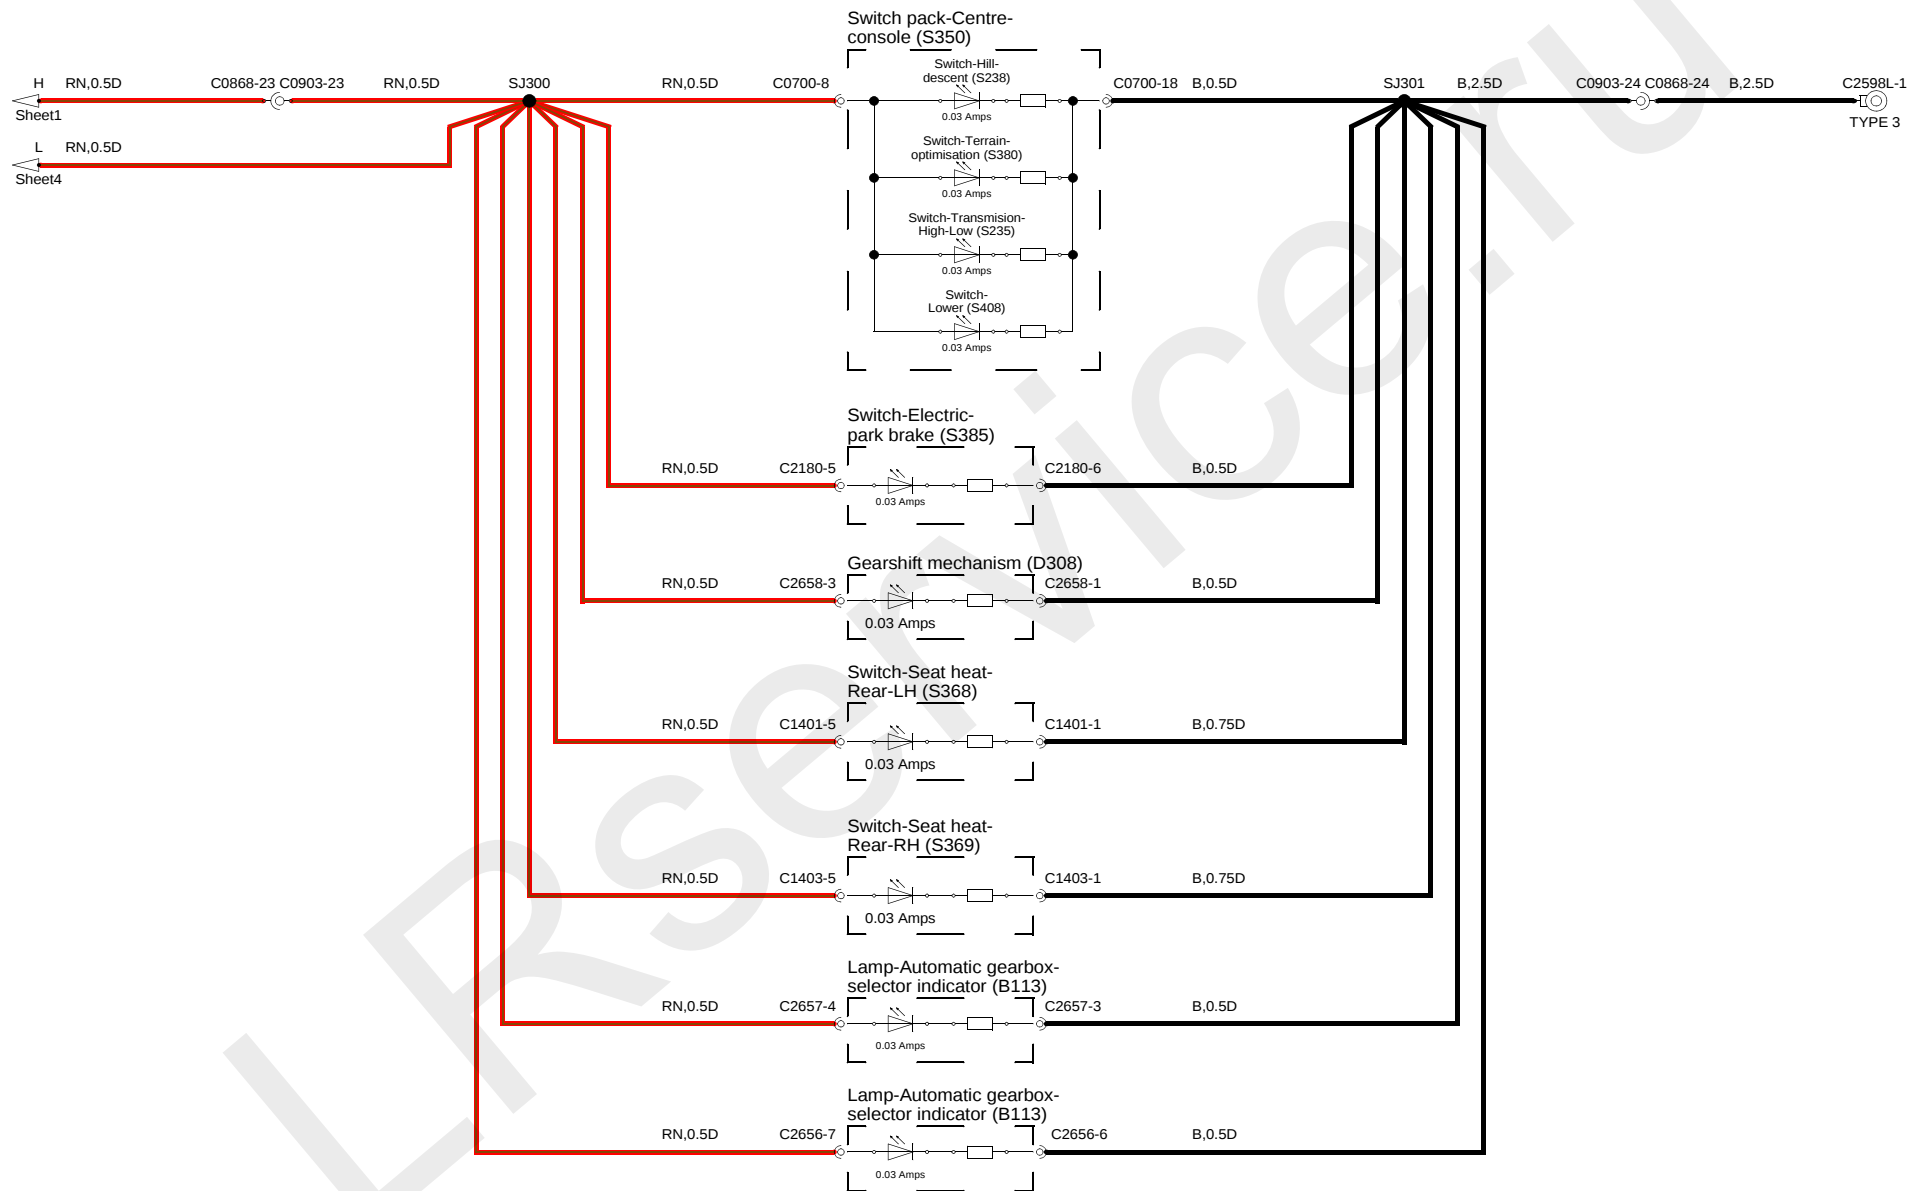

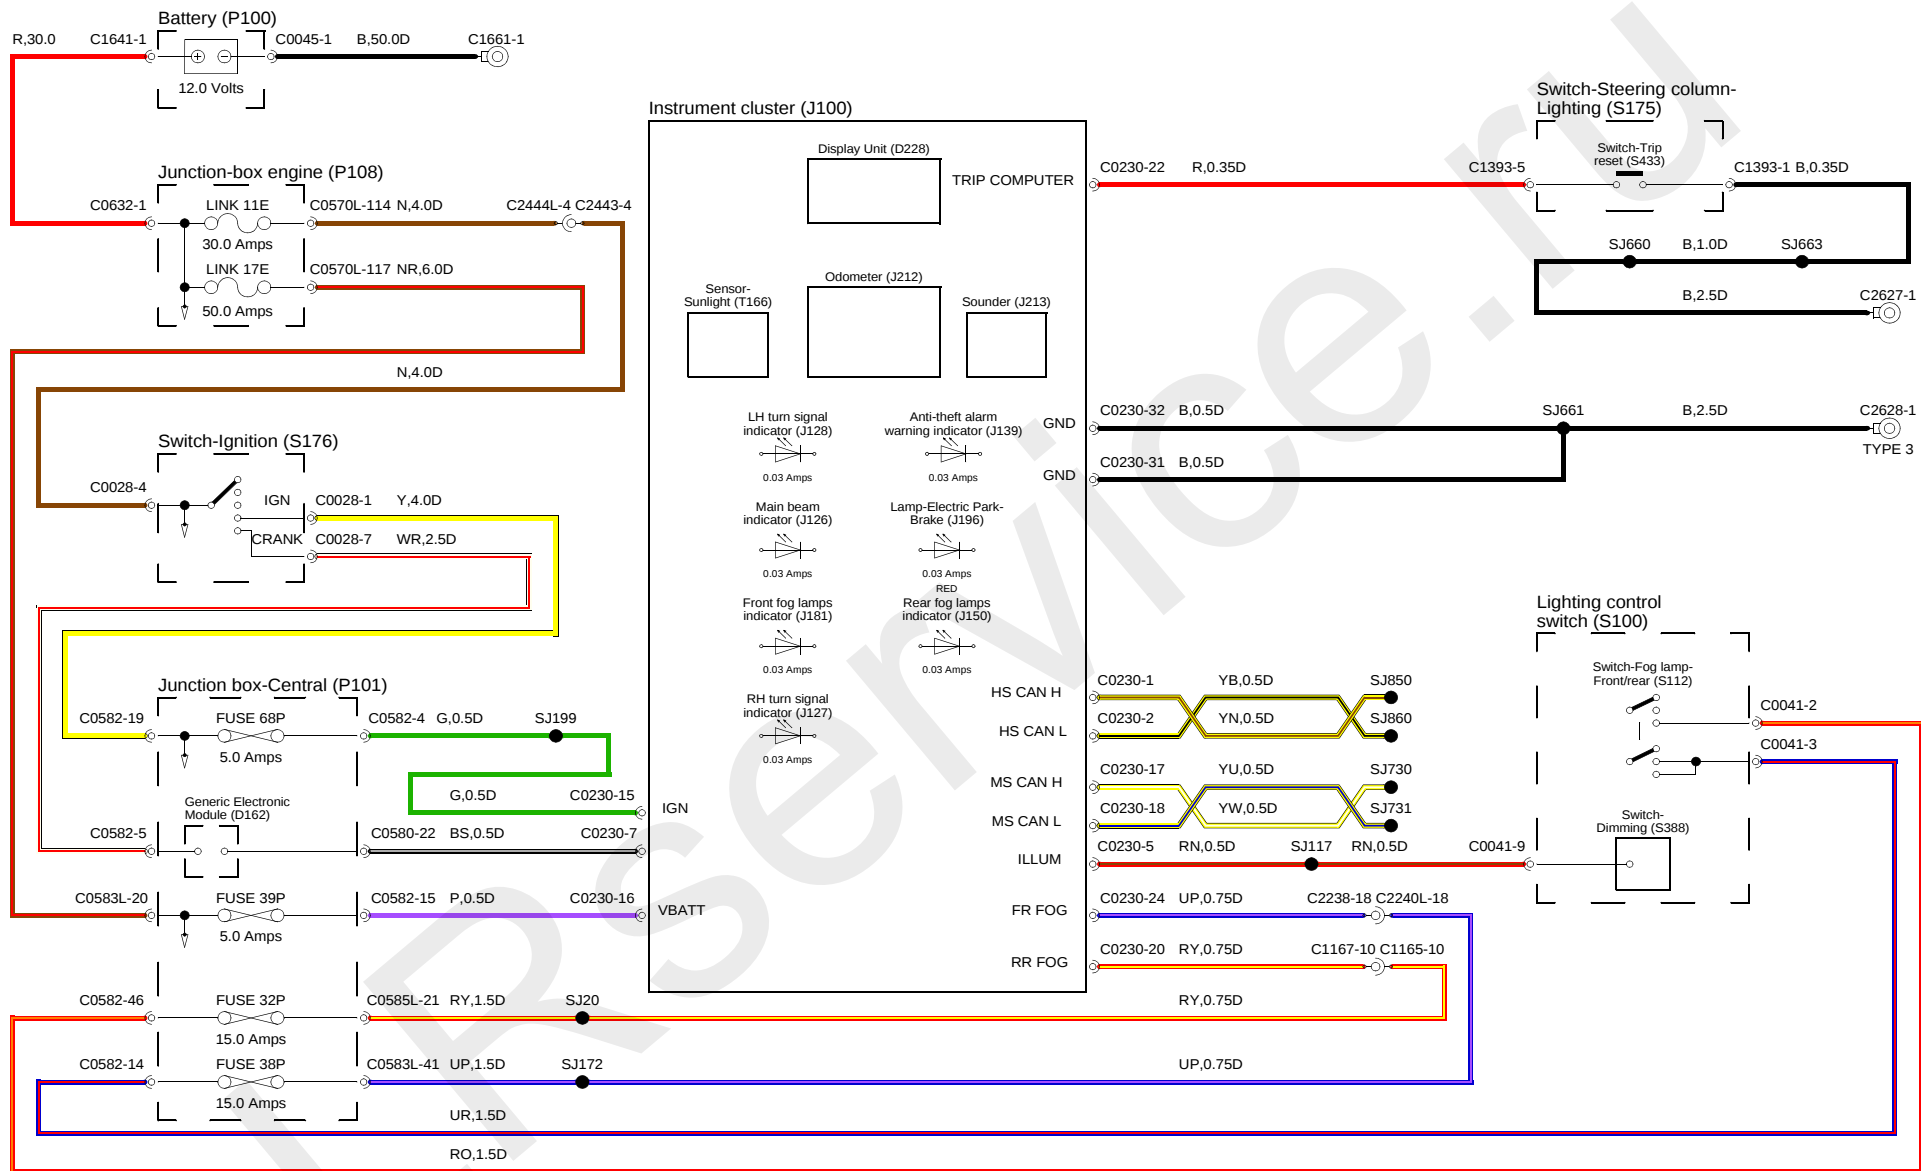



413-01 - INSTRUMENT CLUSTER


Instrument cluster (J100)

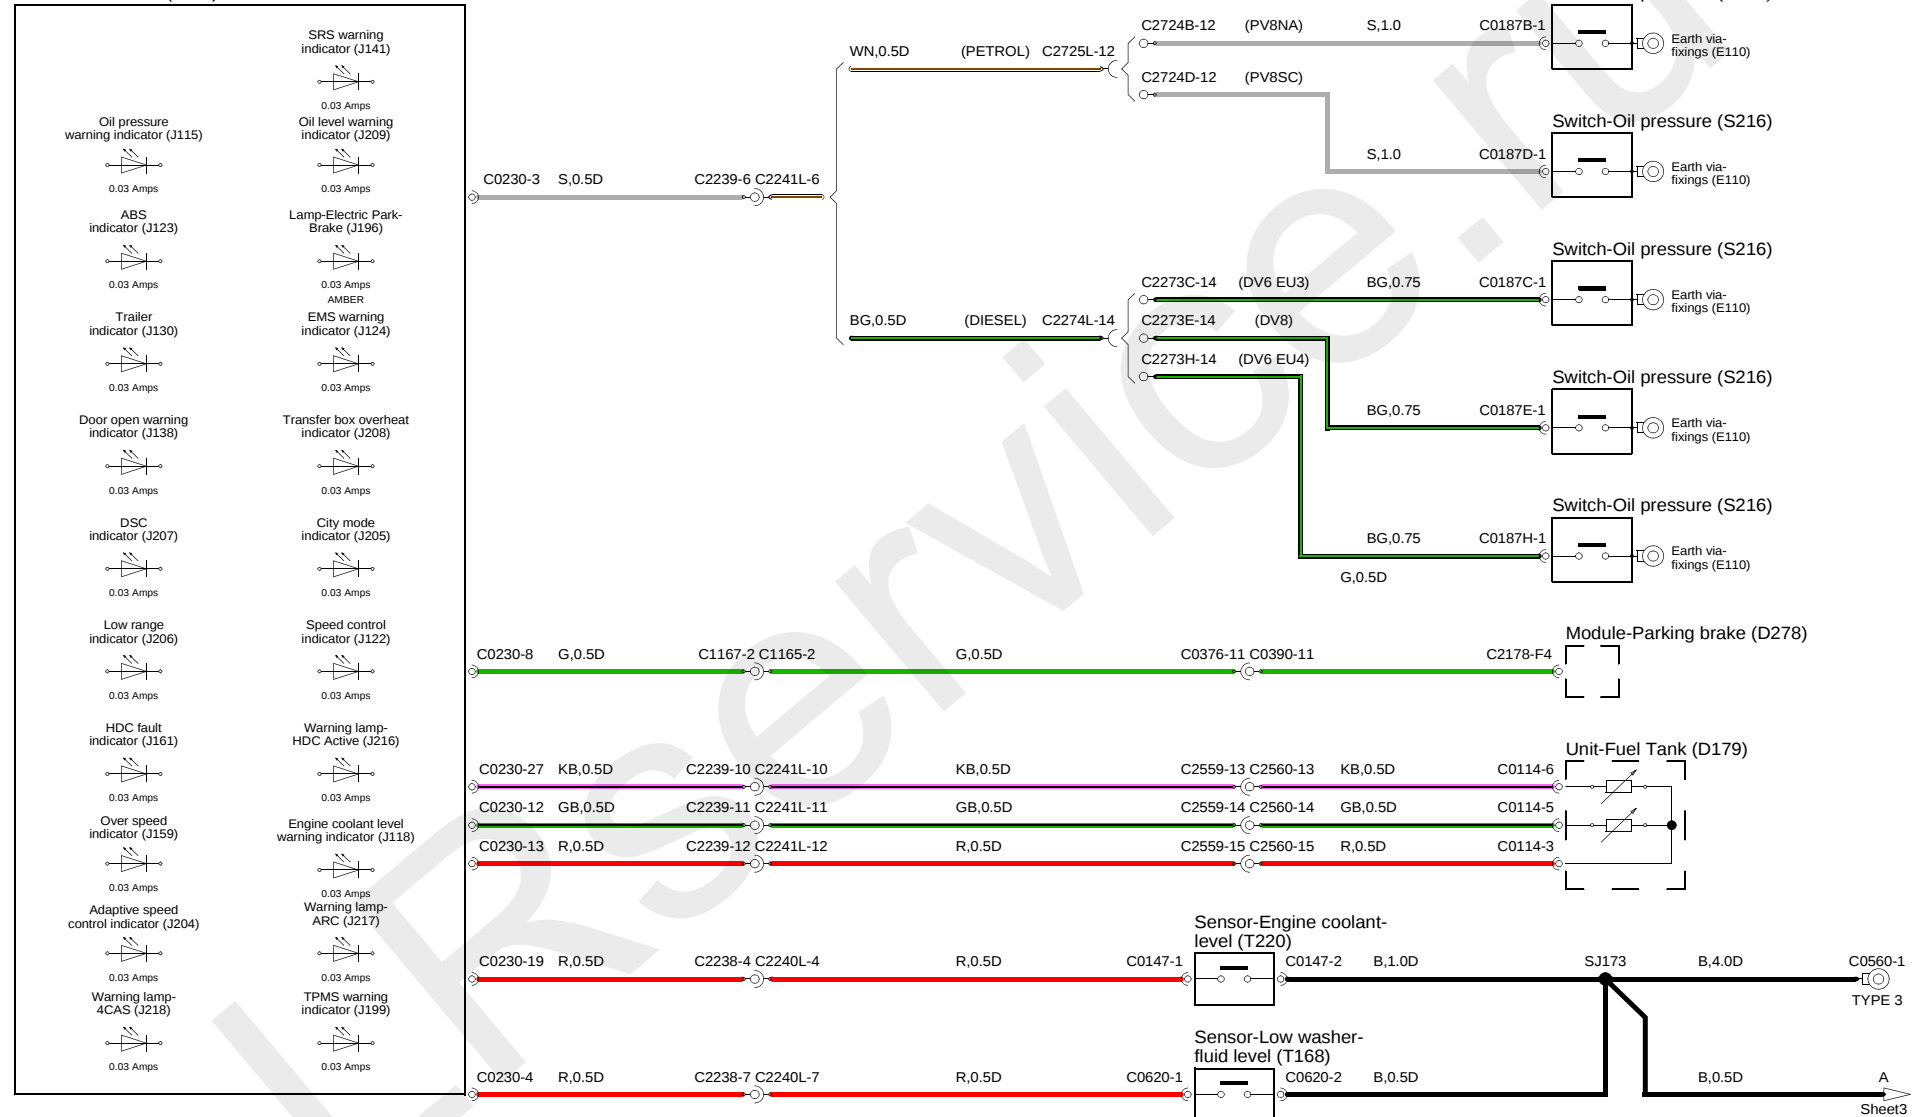


Instrument cluster (J100)

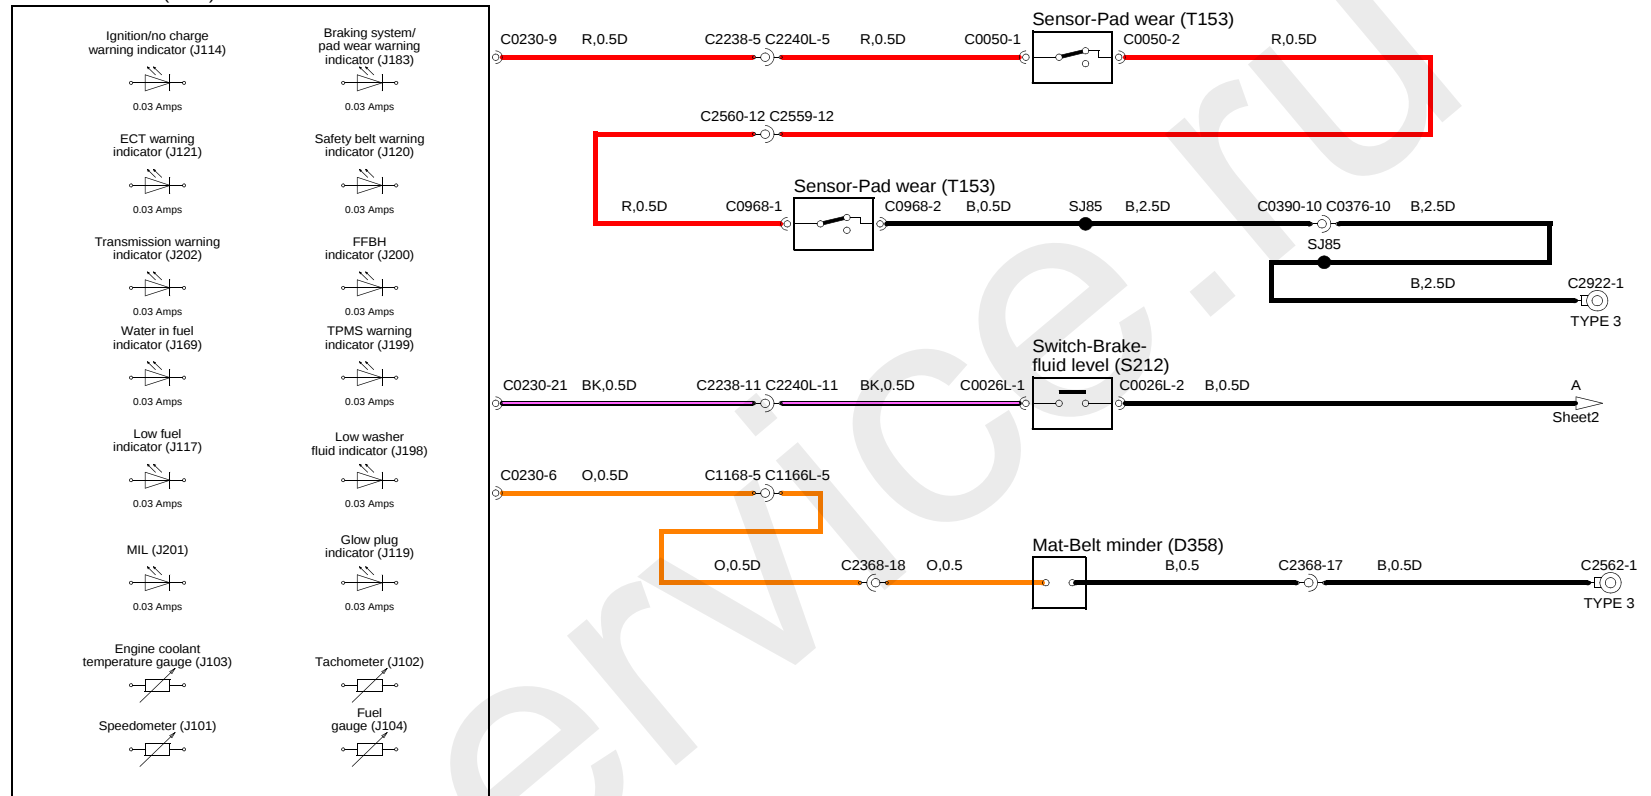


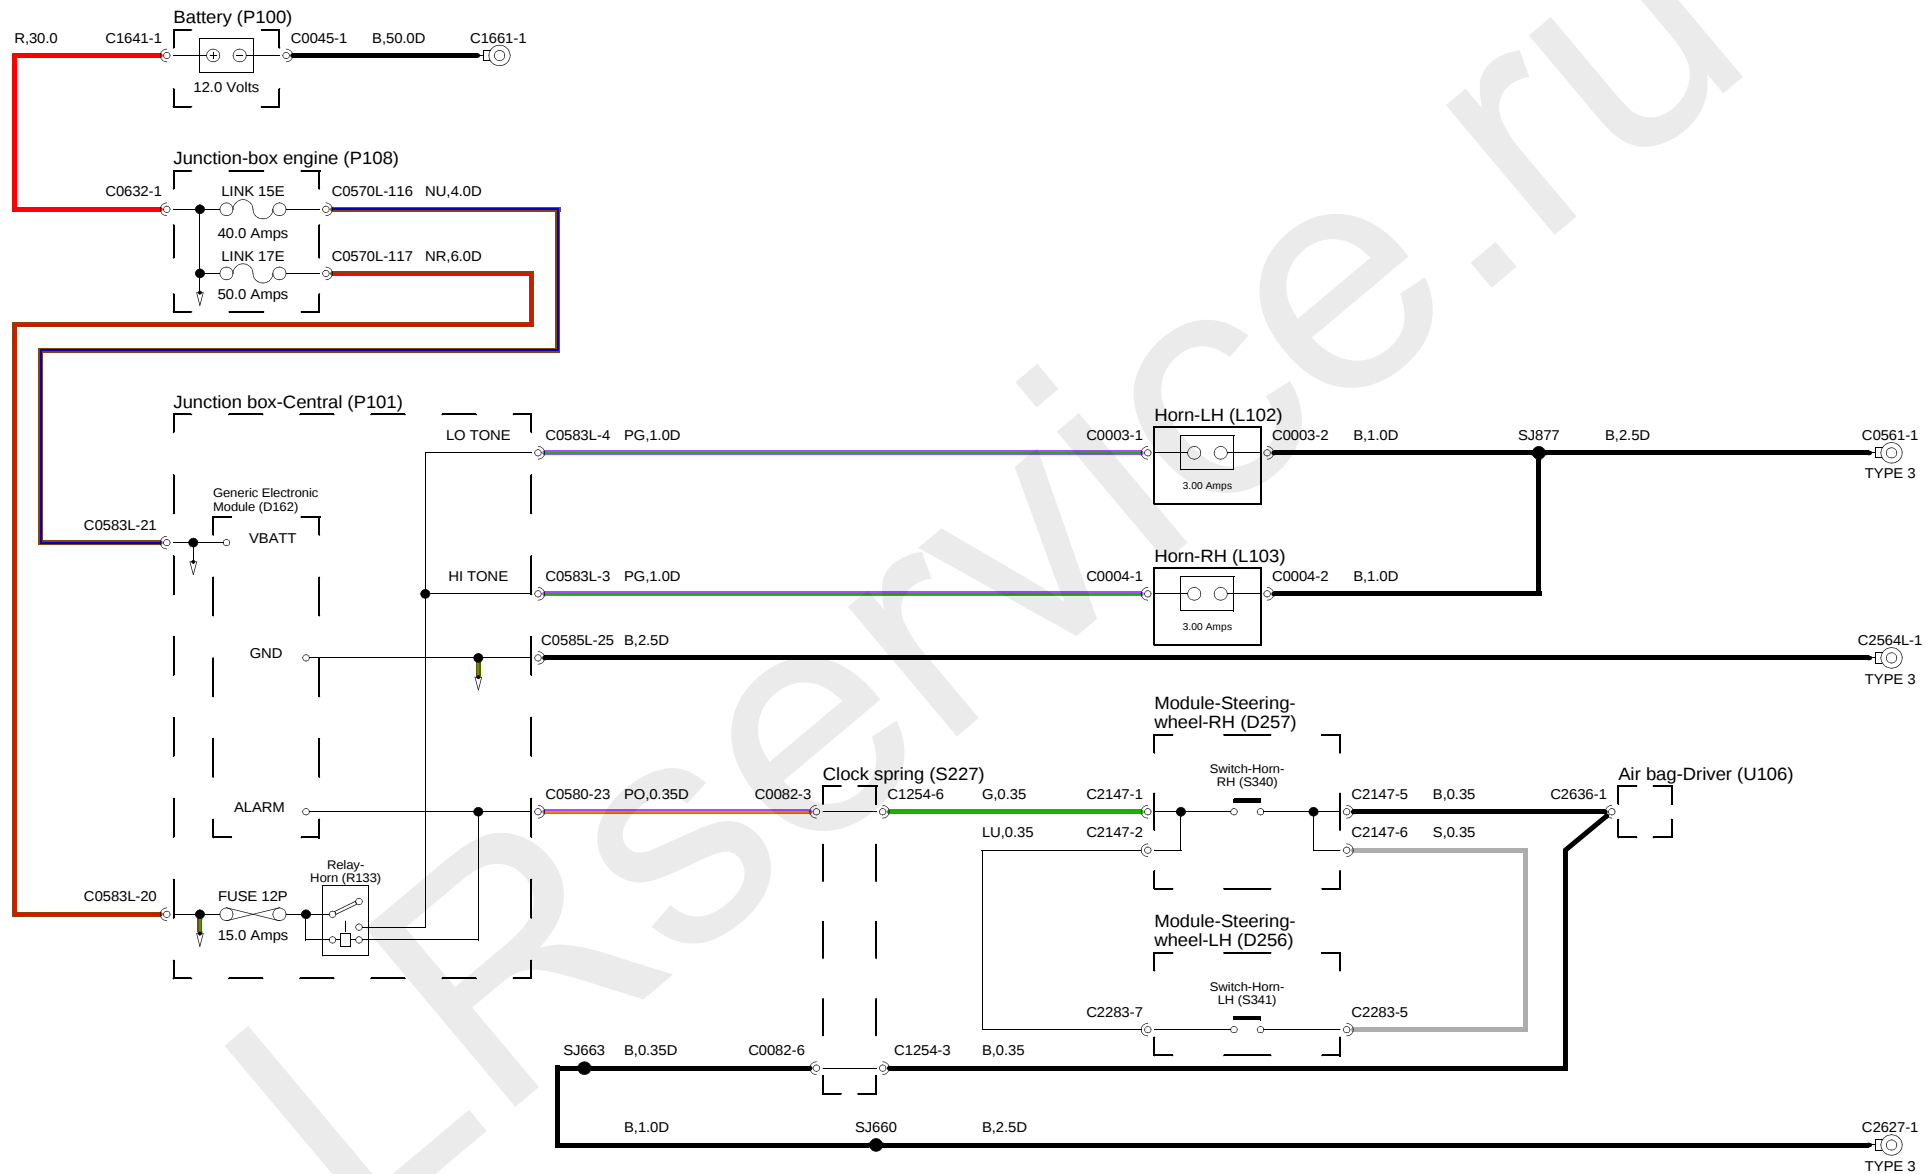


 



413-13 - PARKING AID

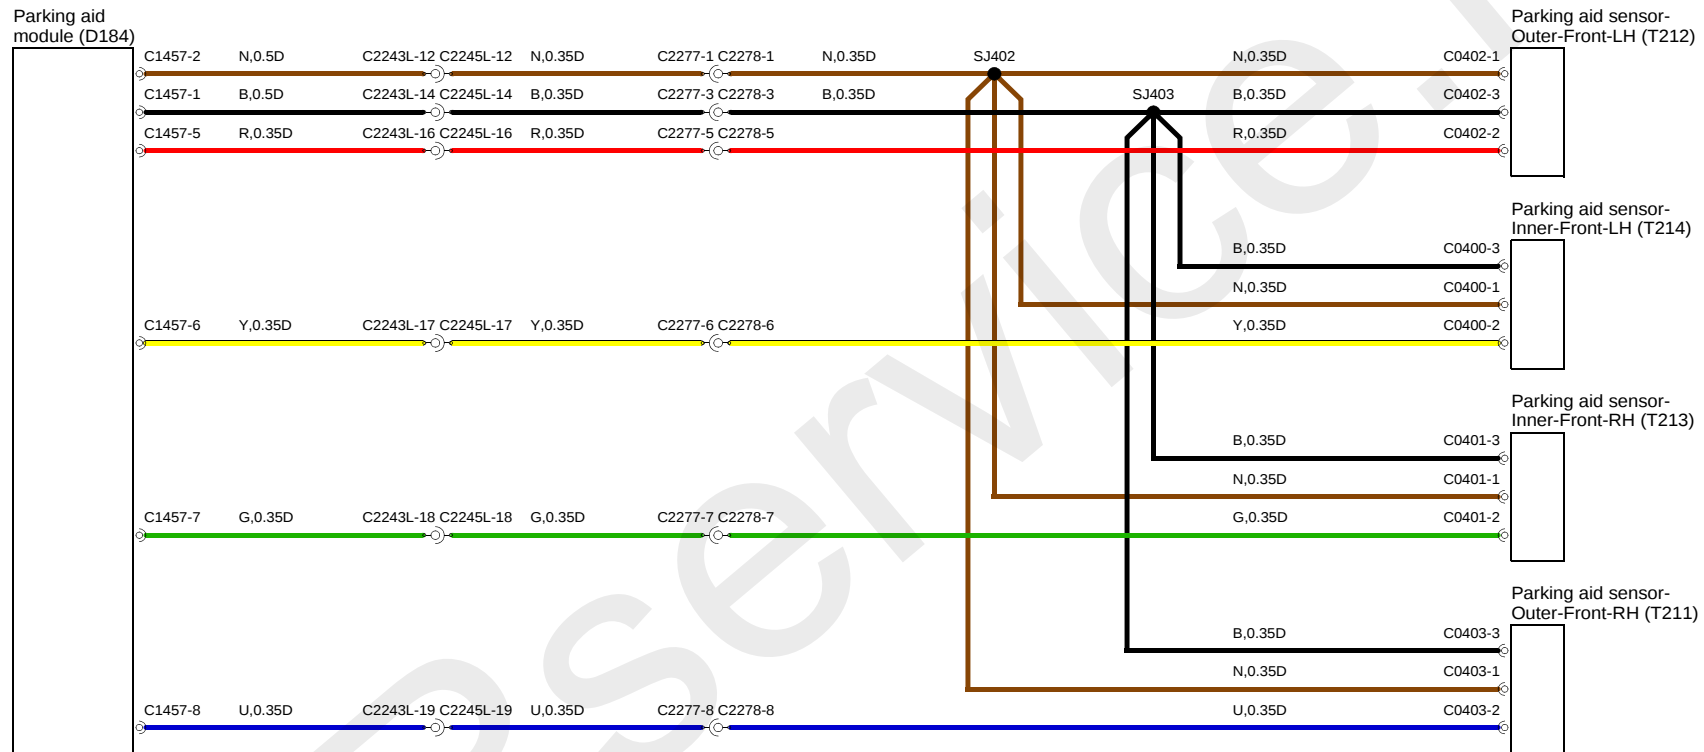


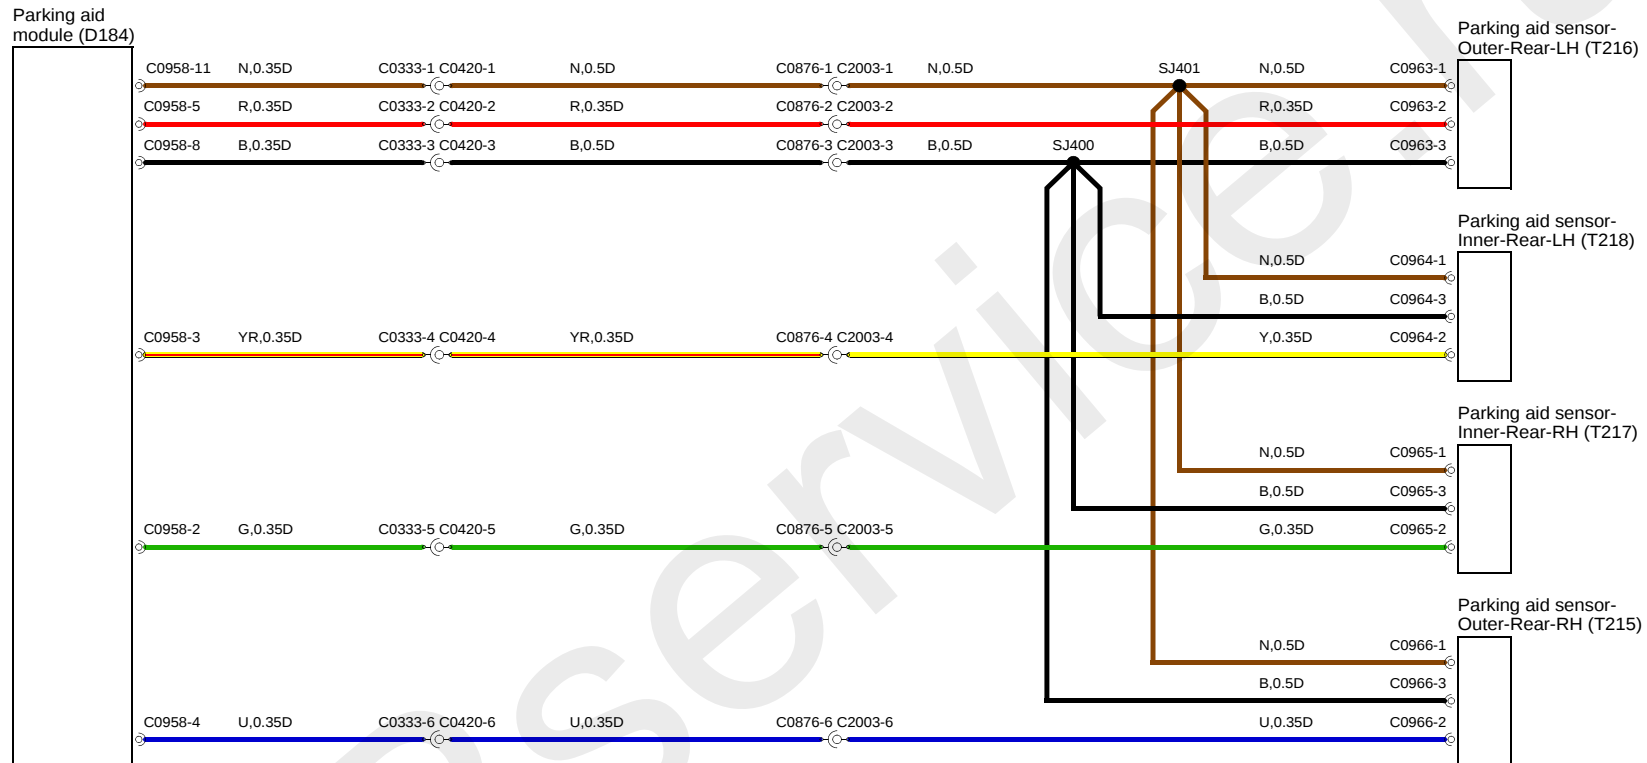


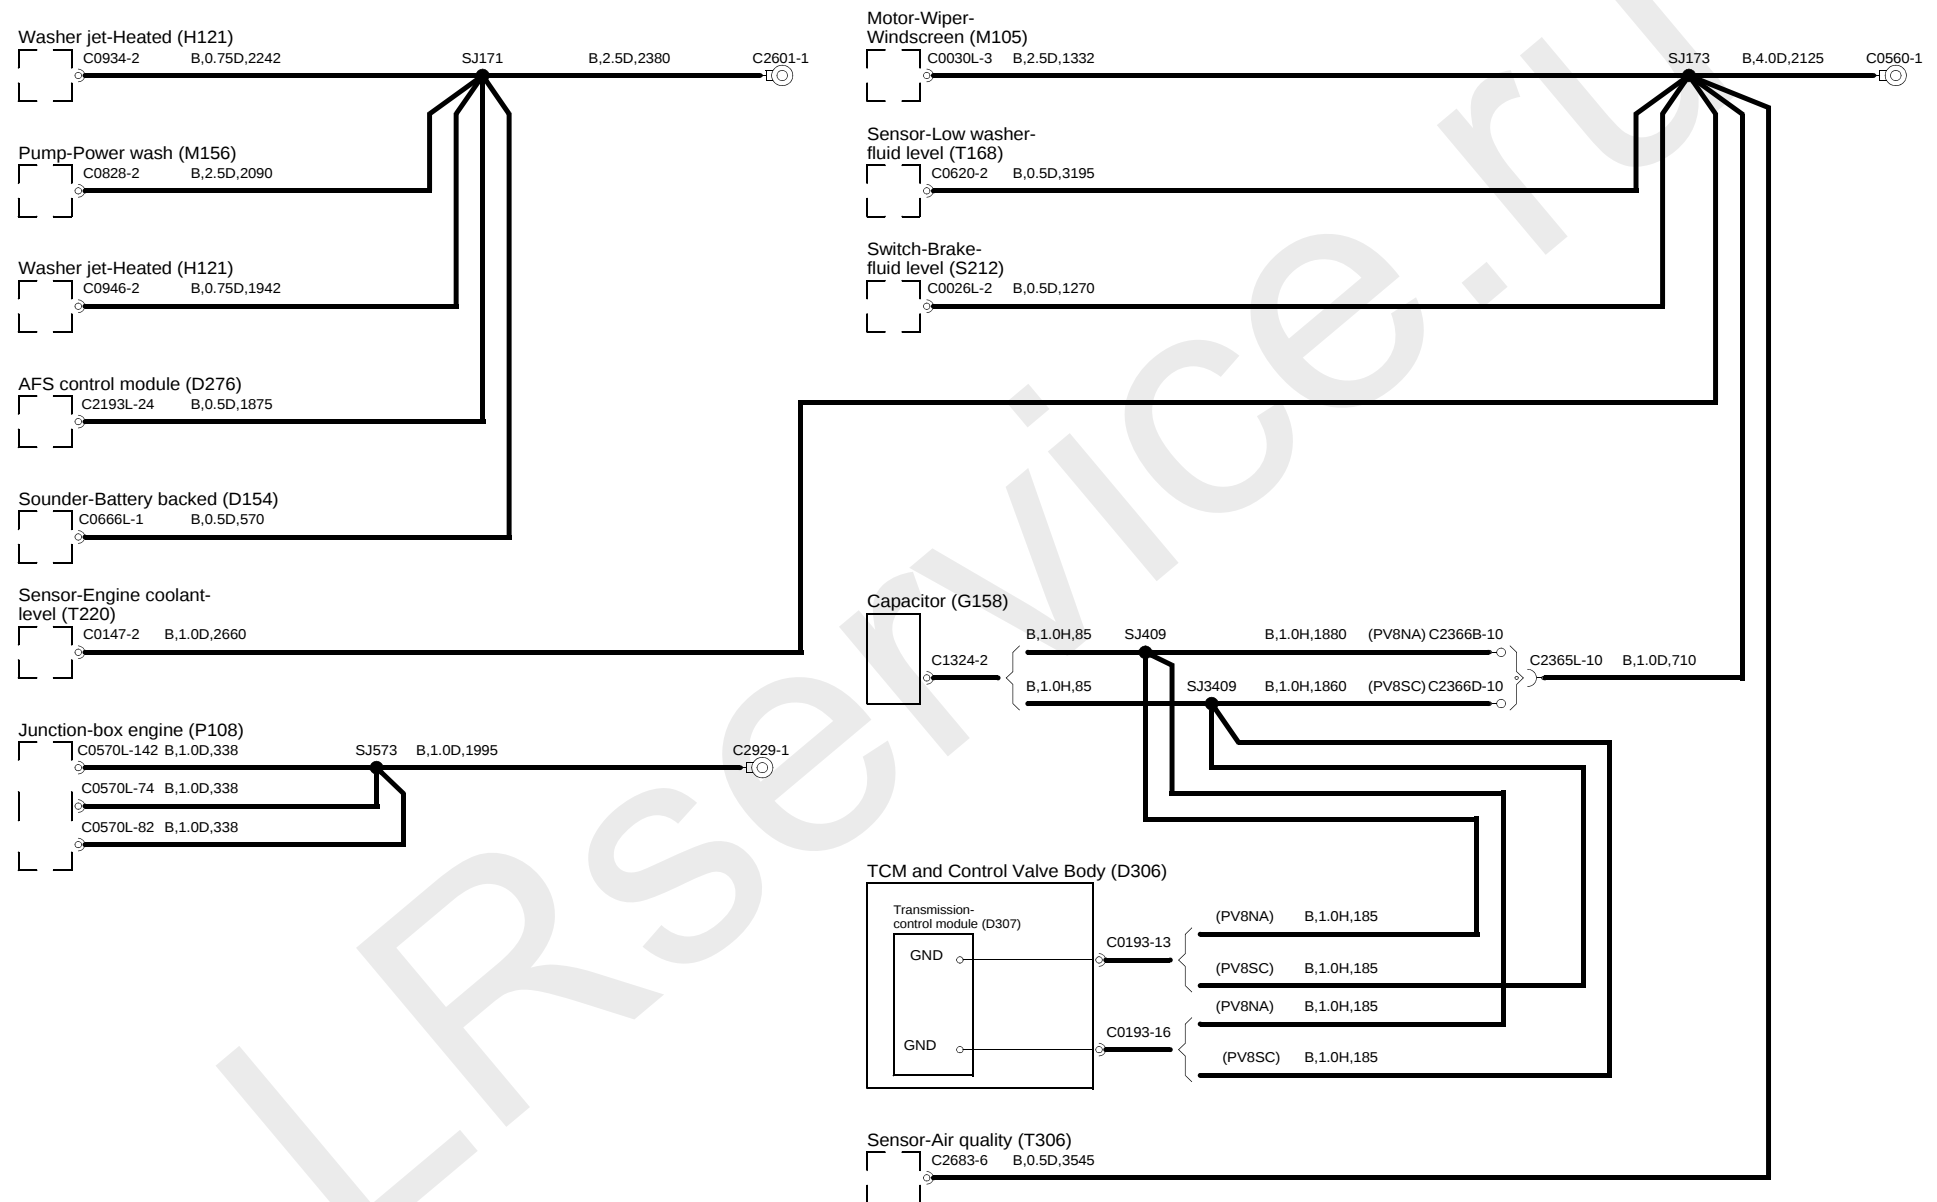


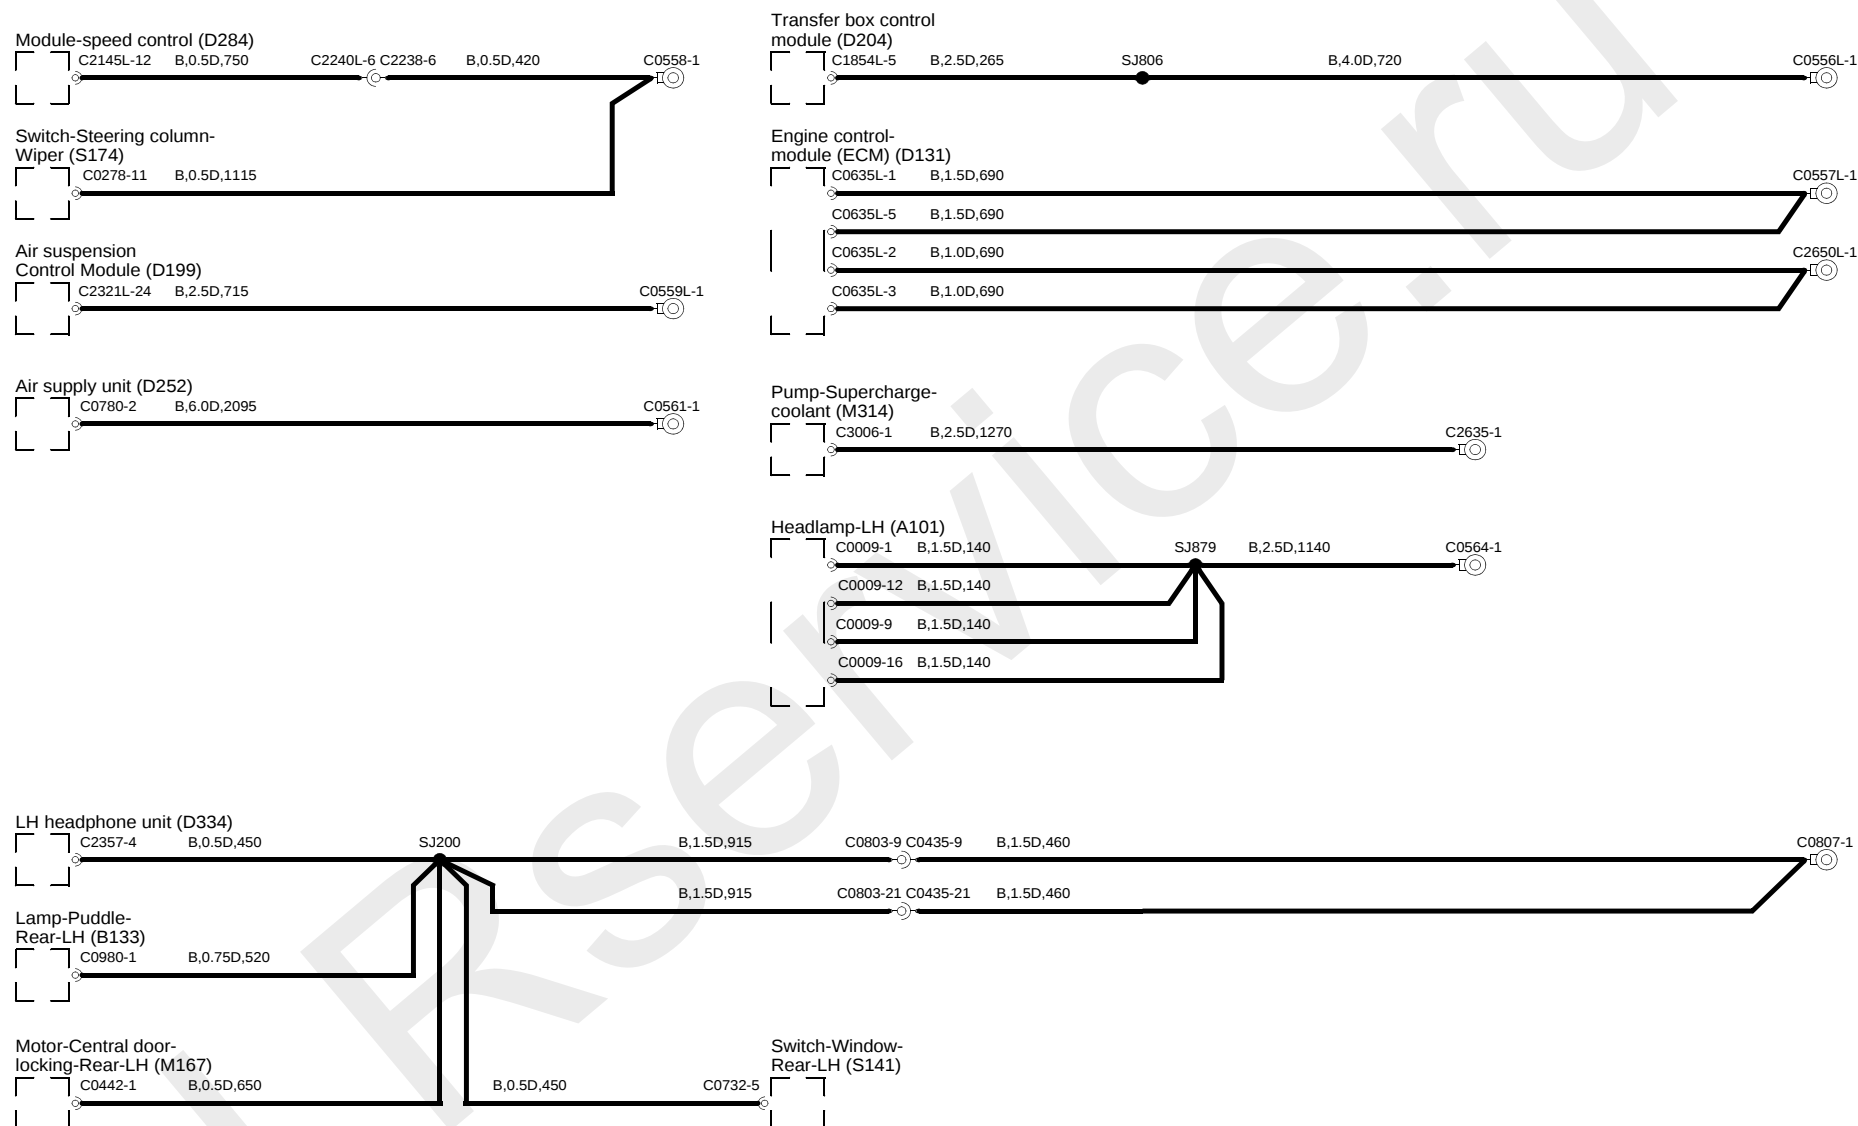



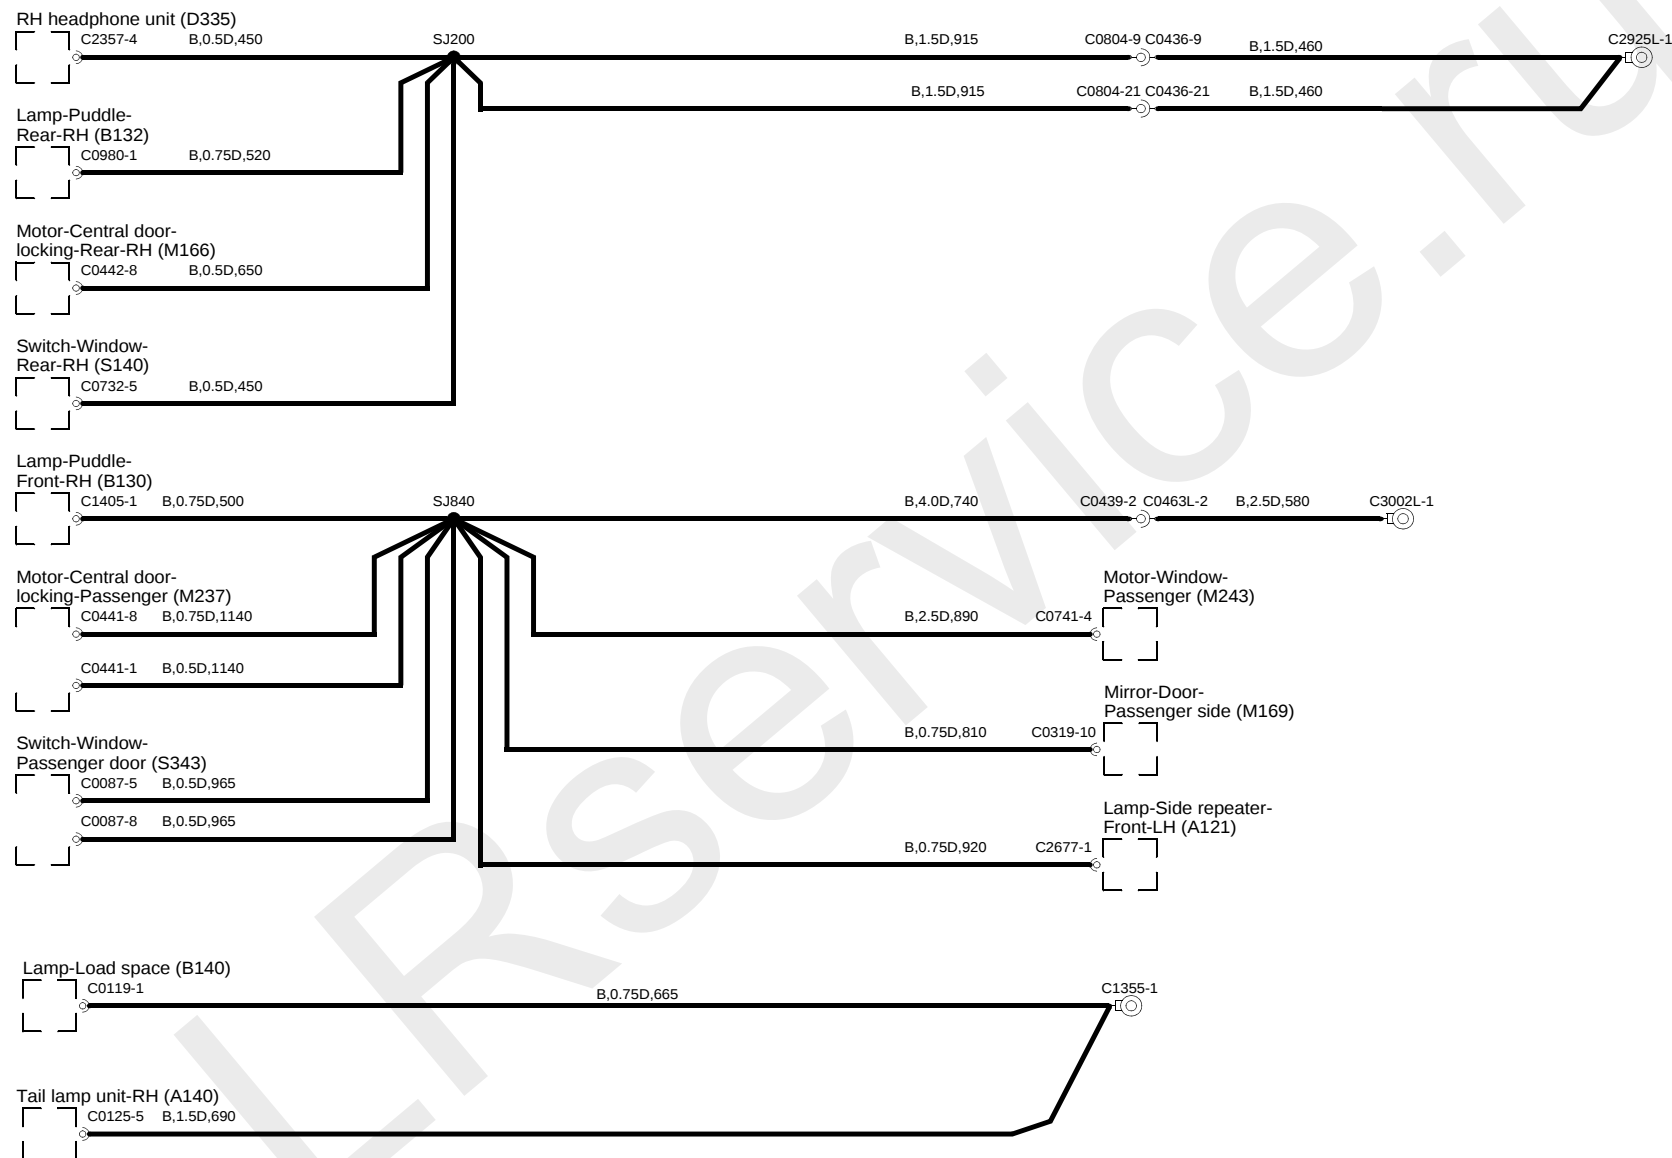


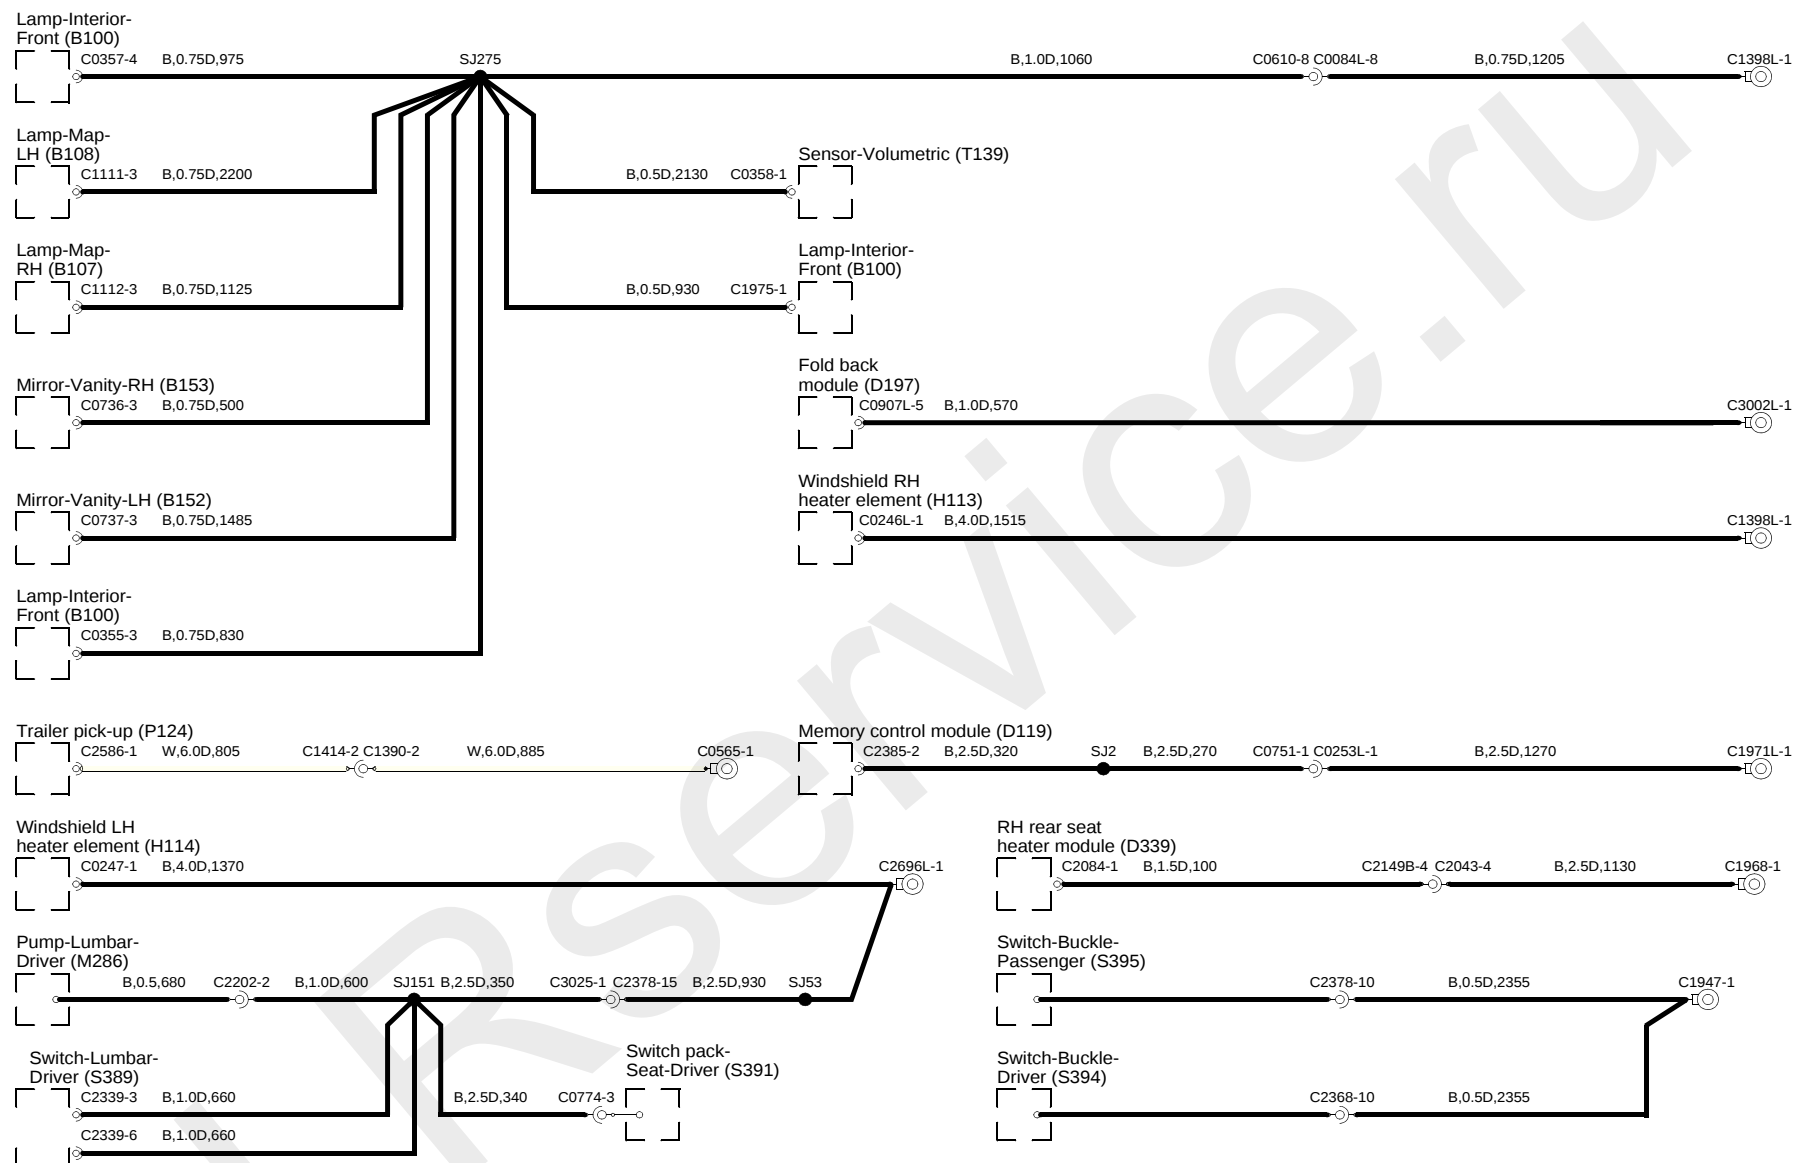


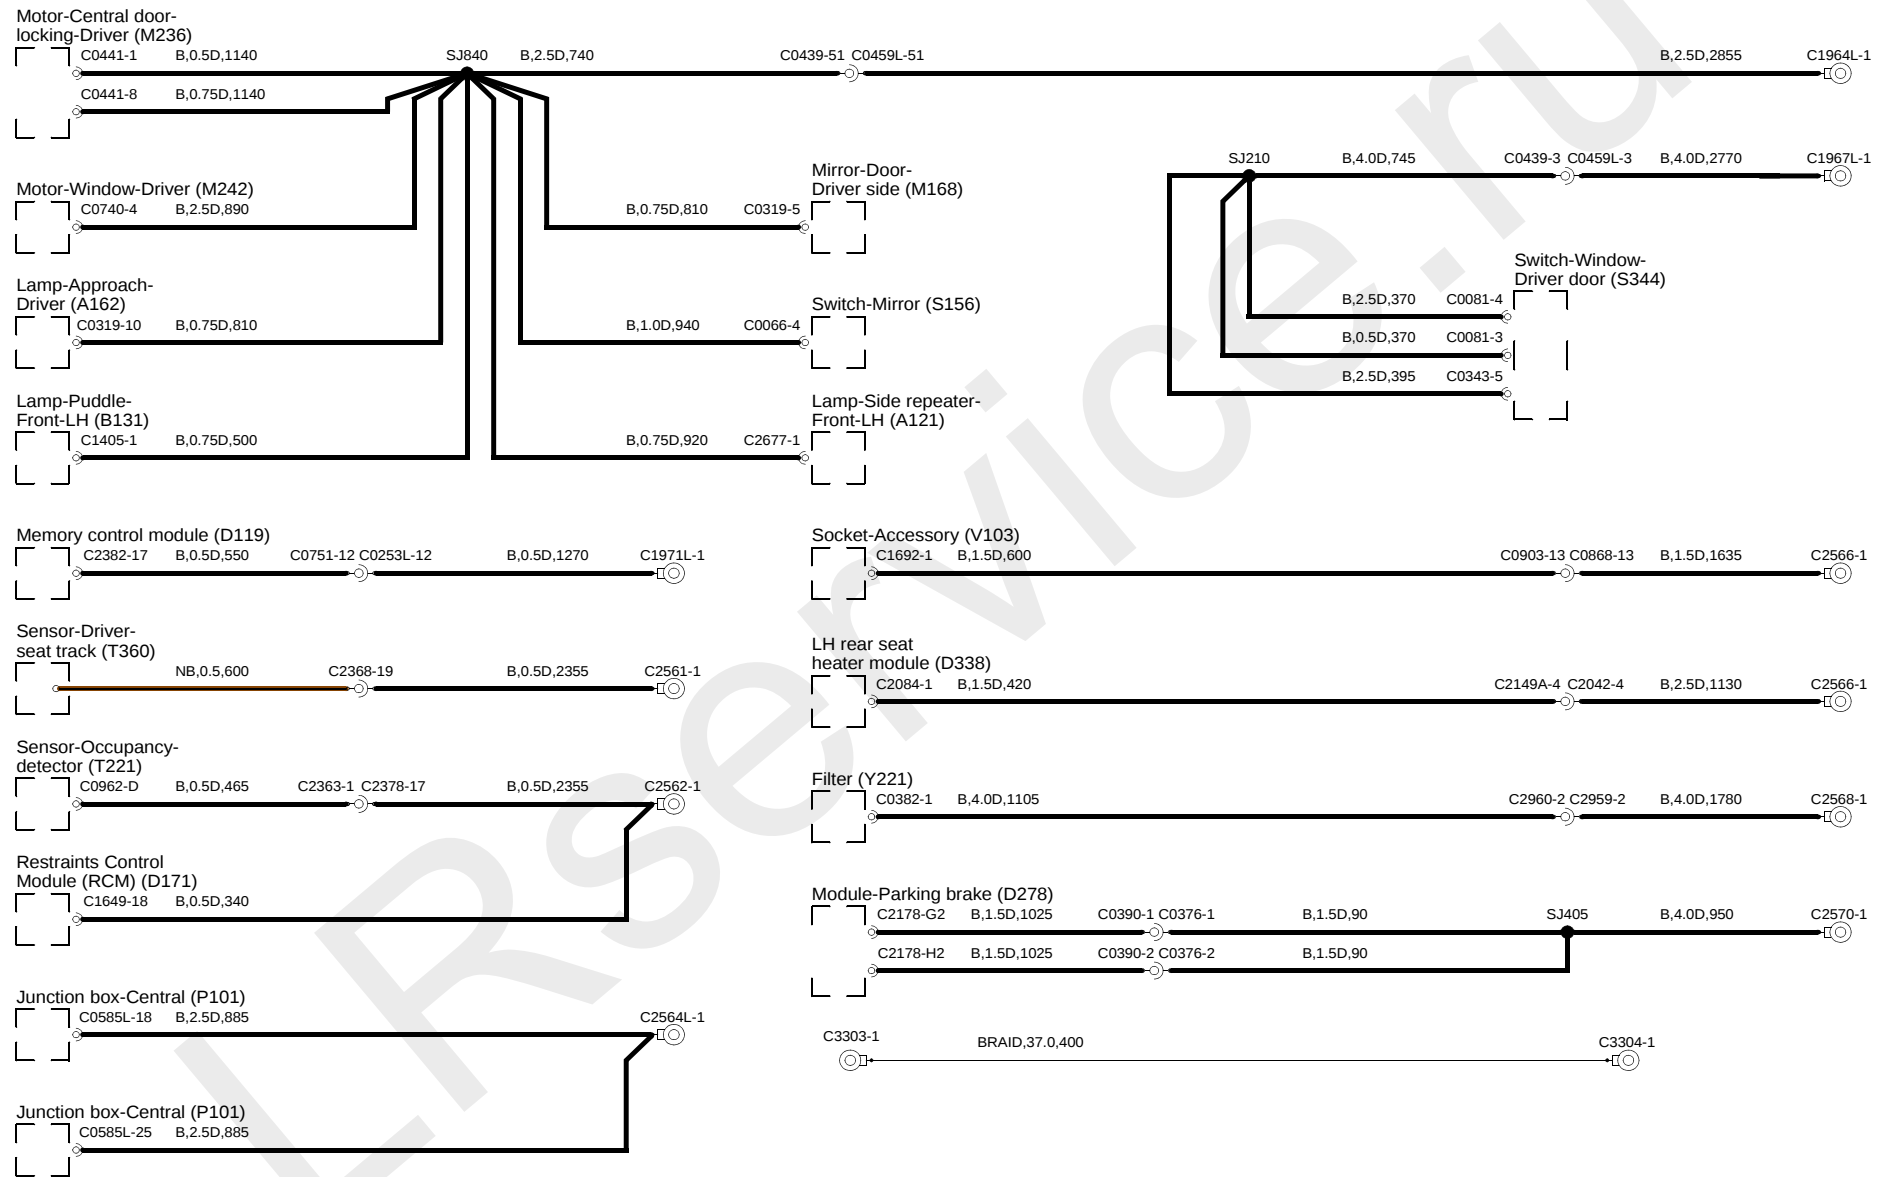


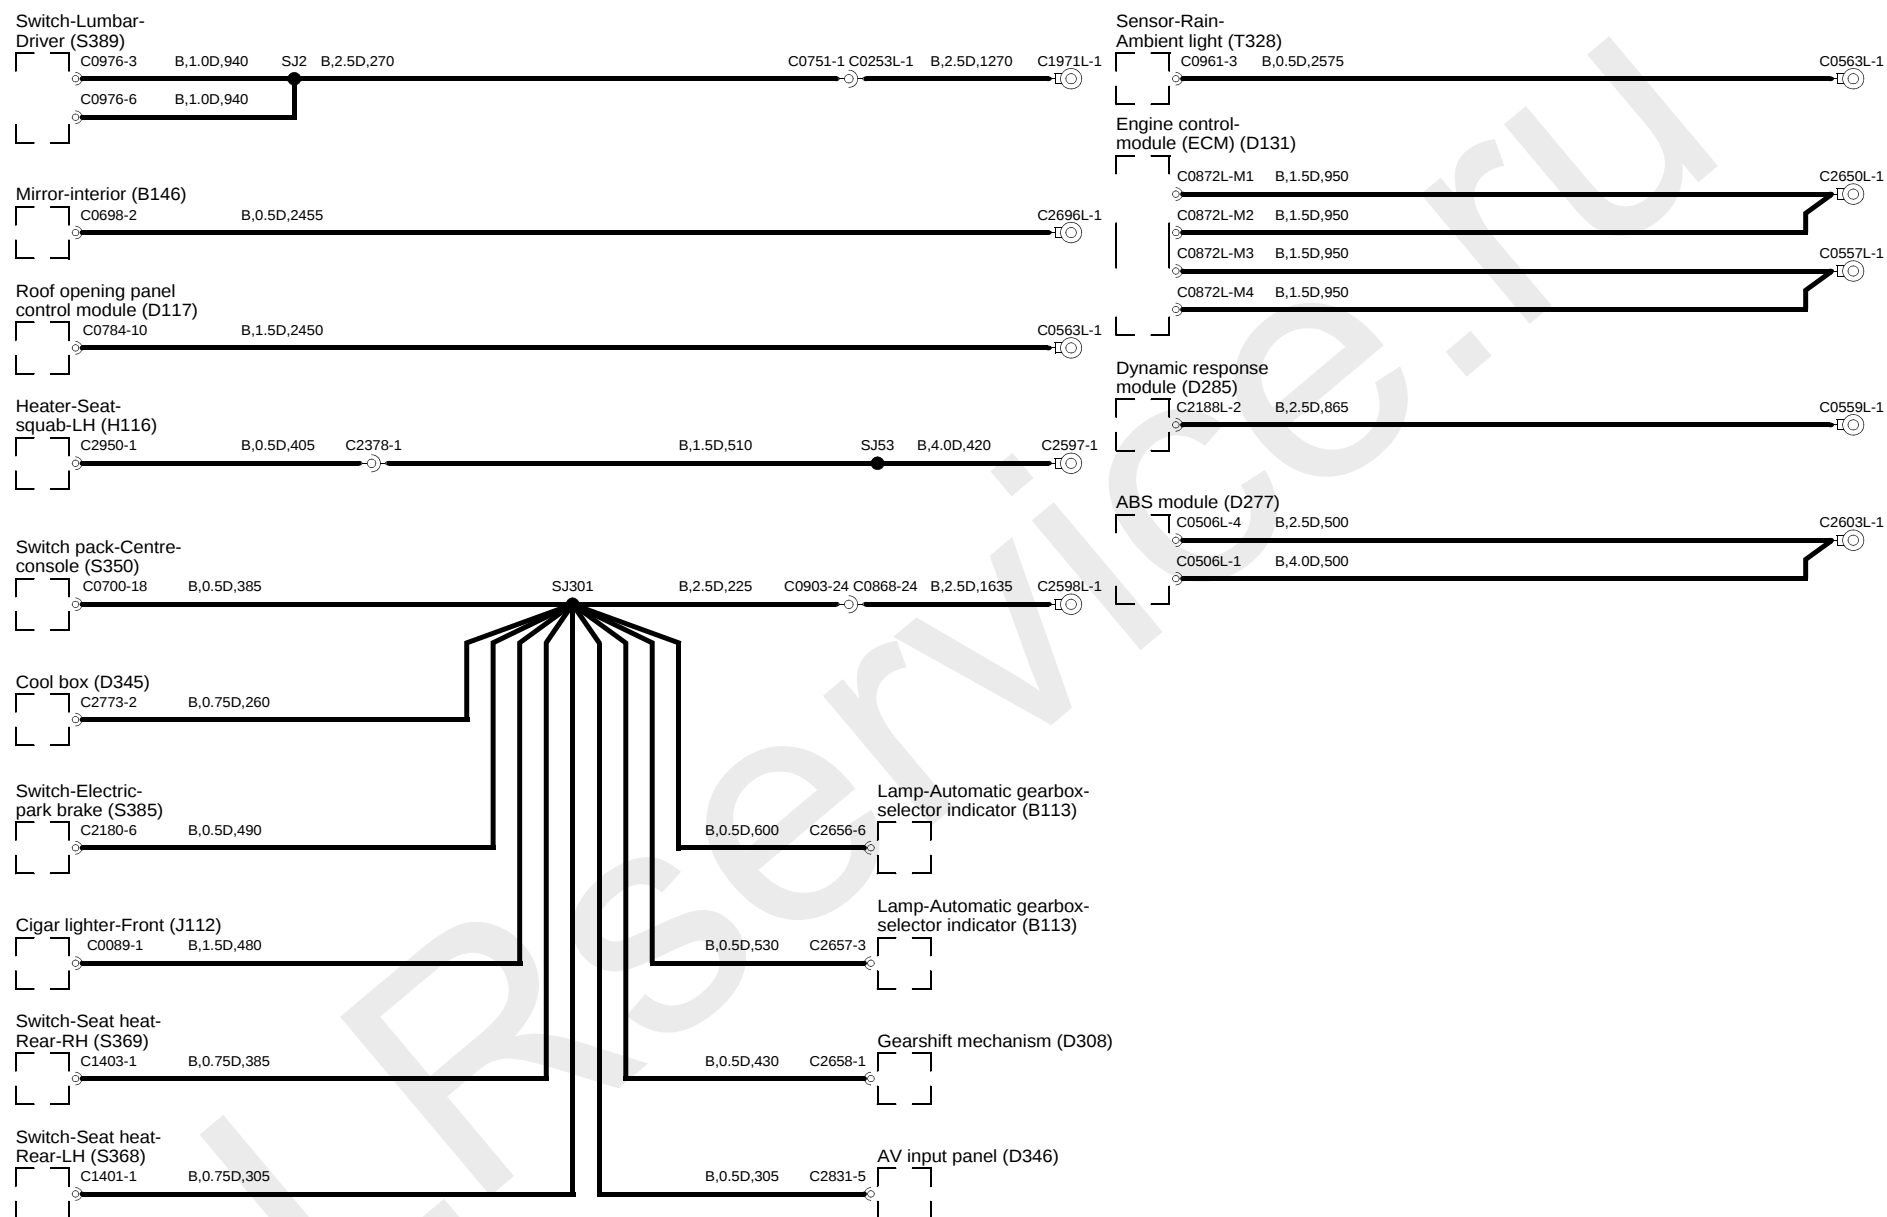


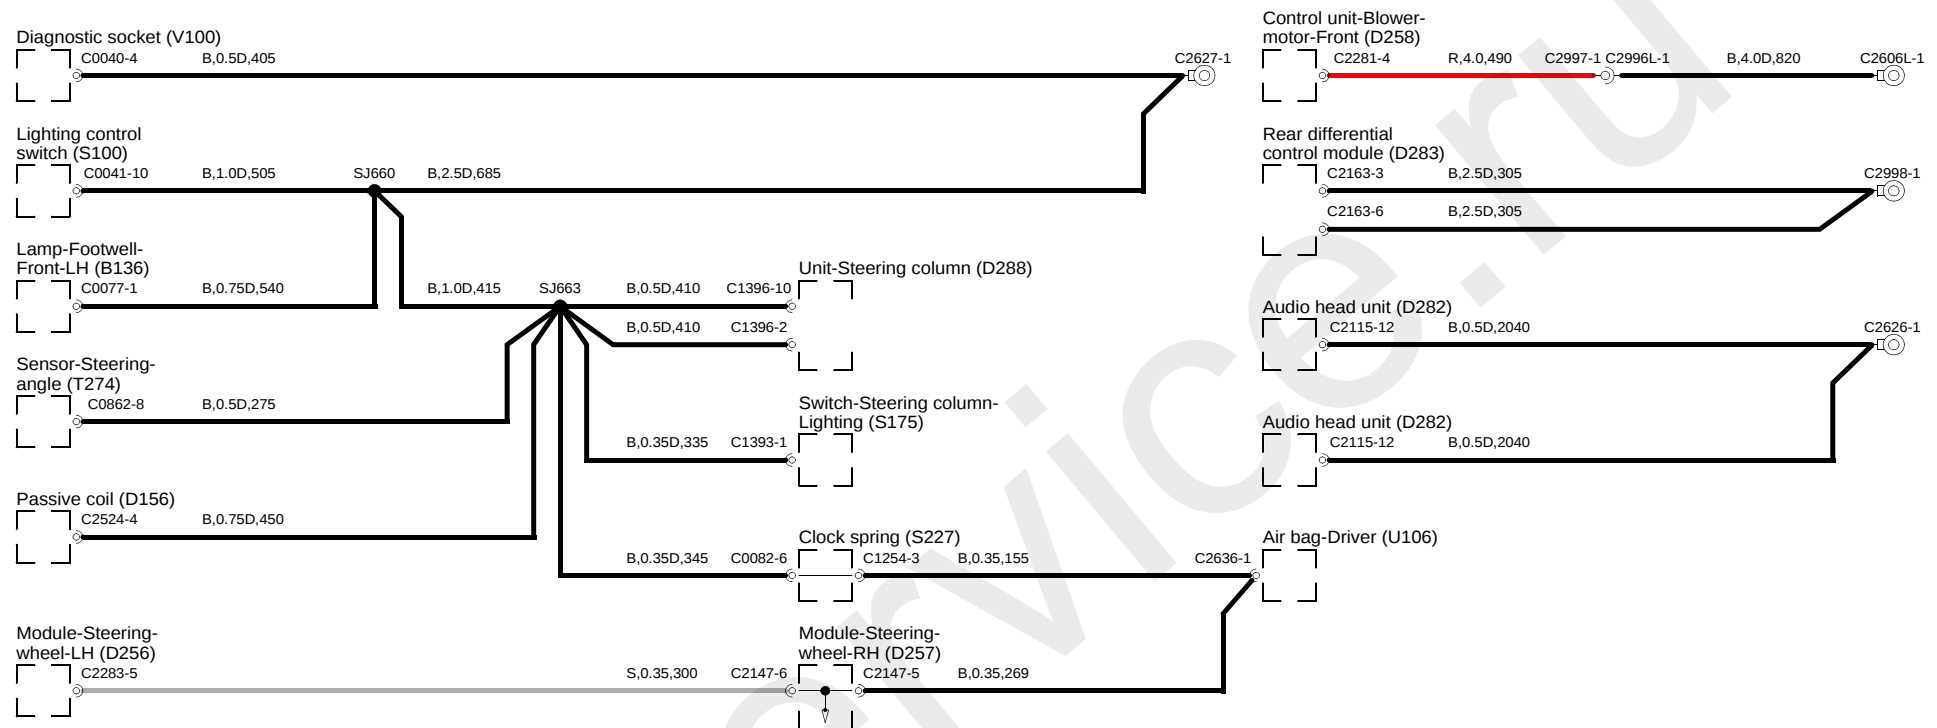


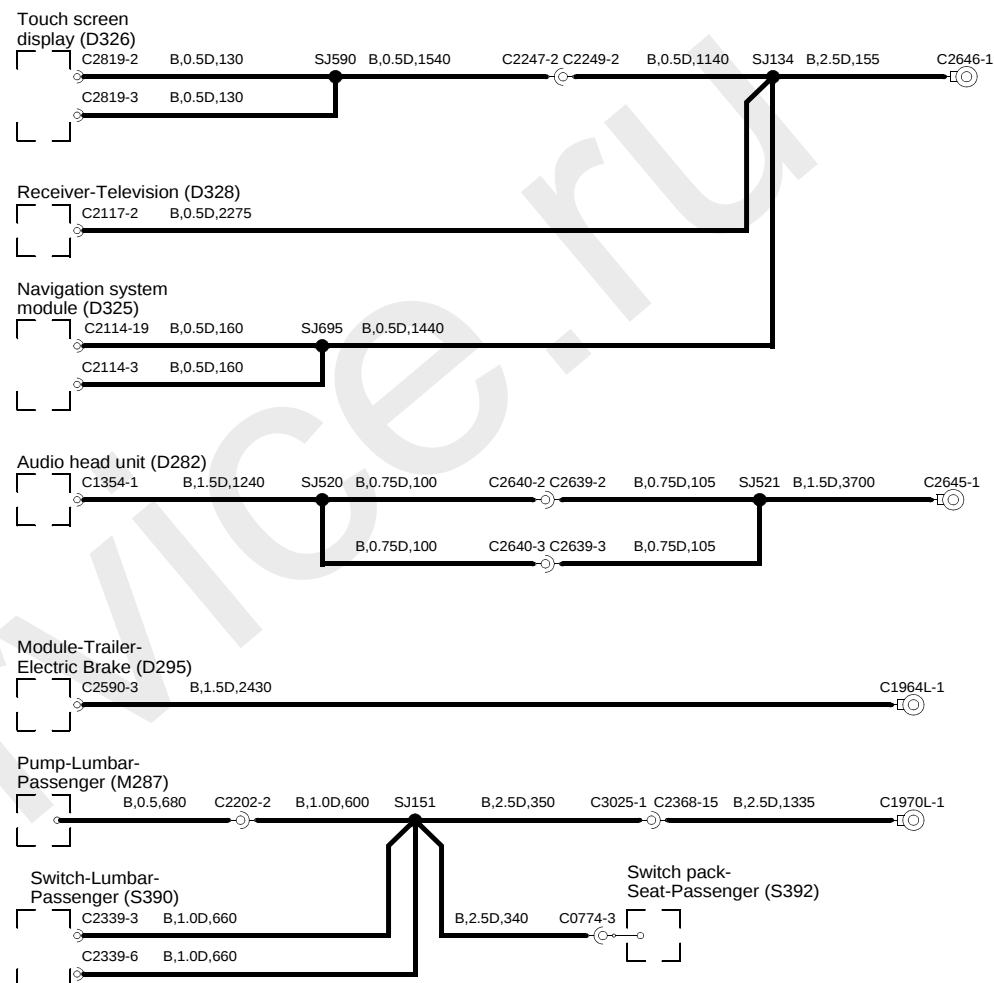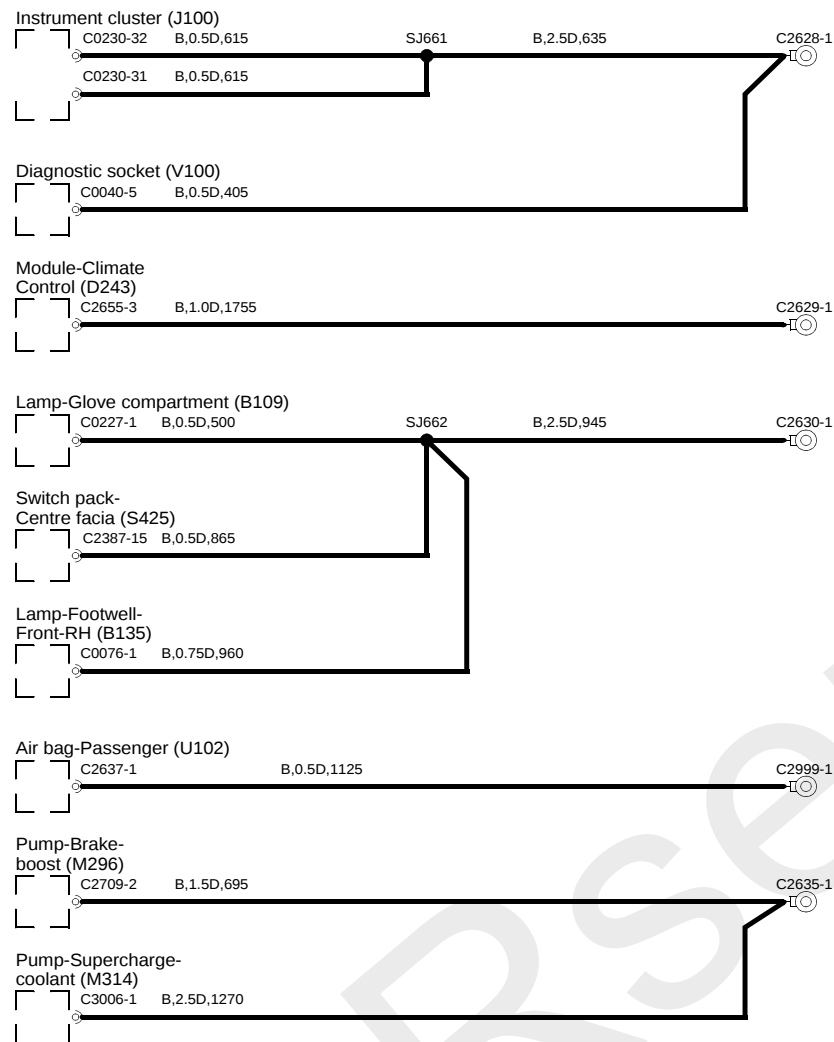


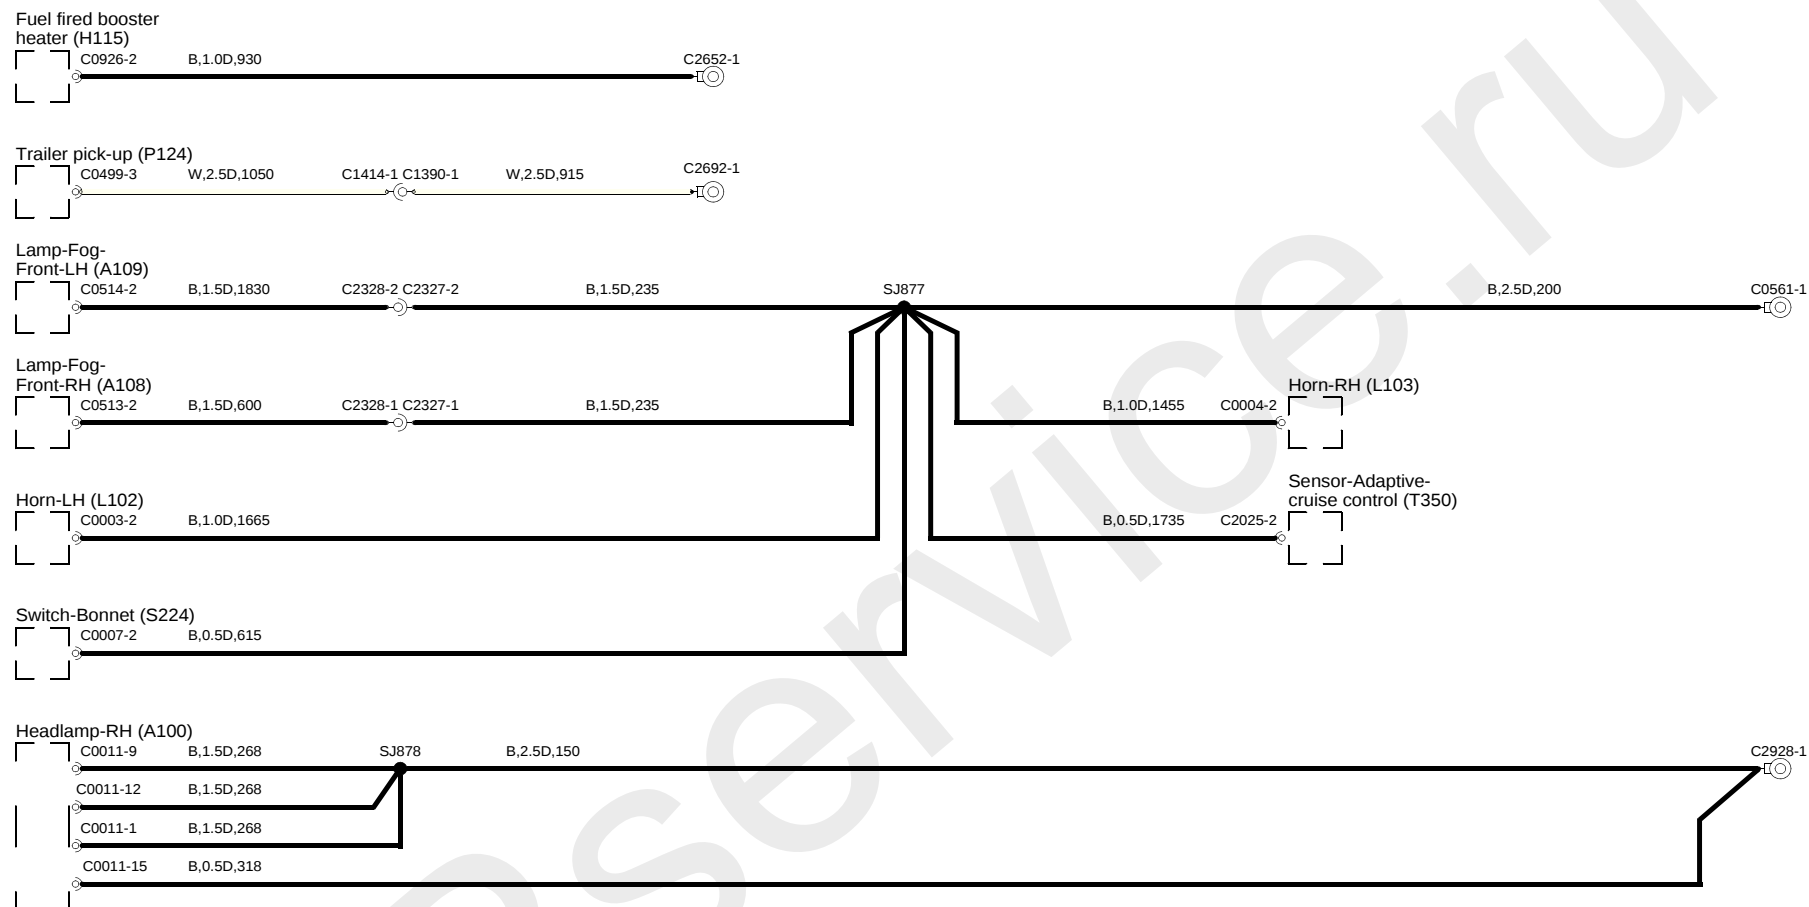




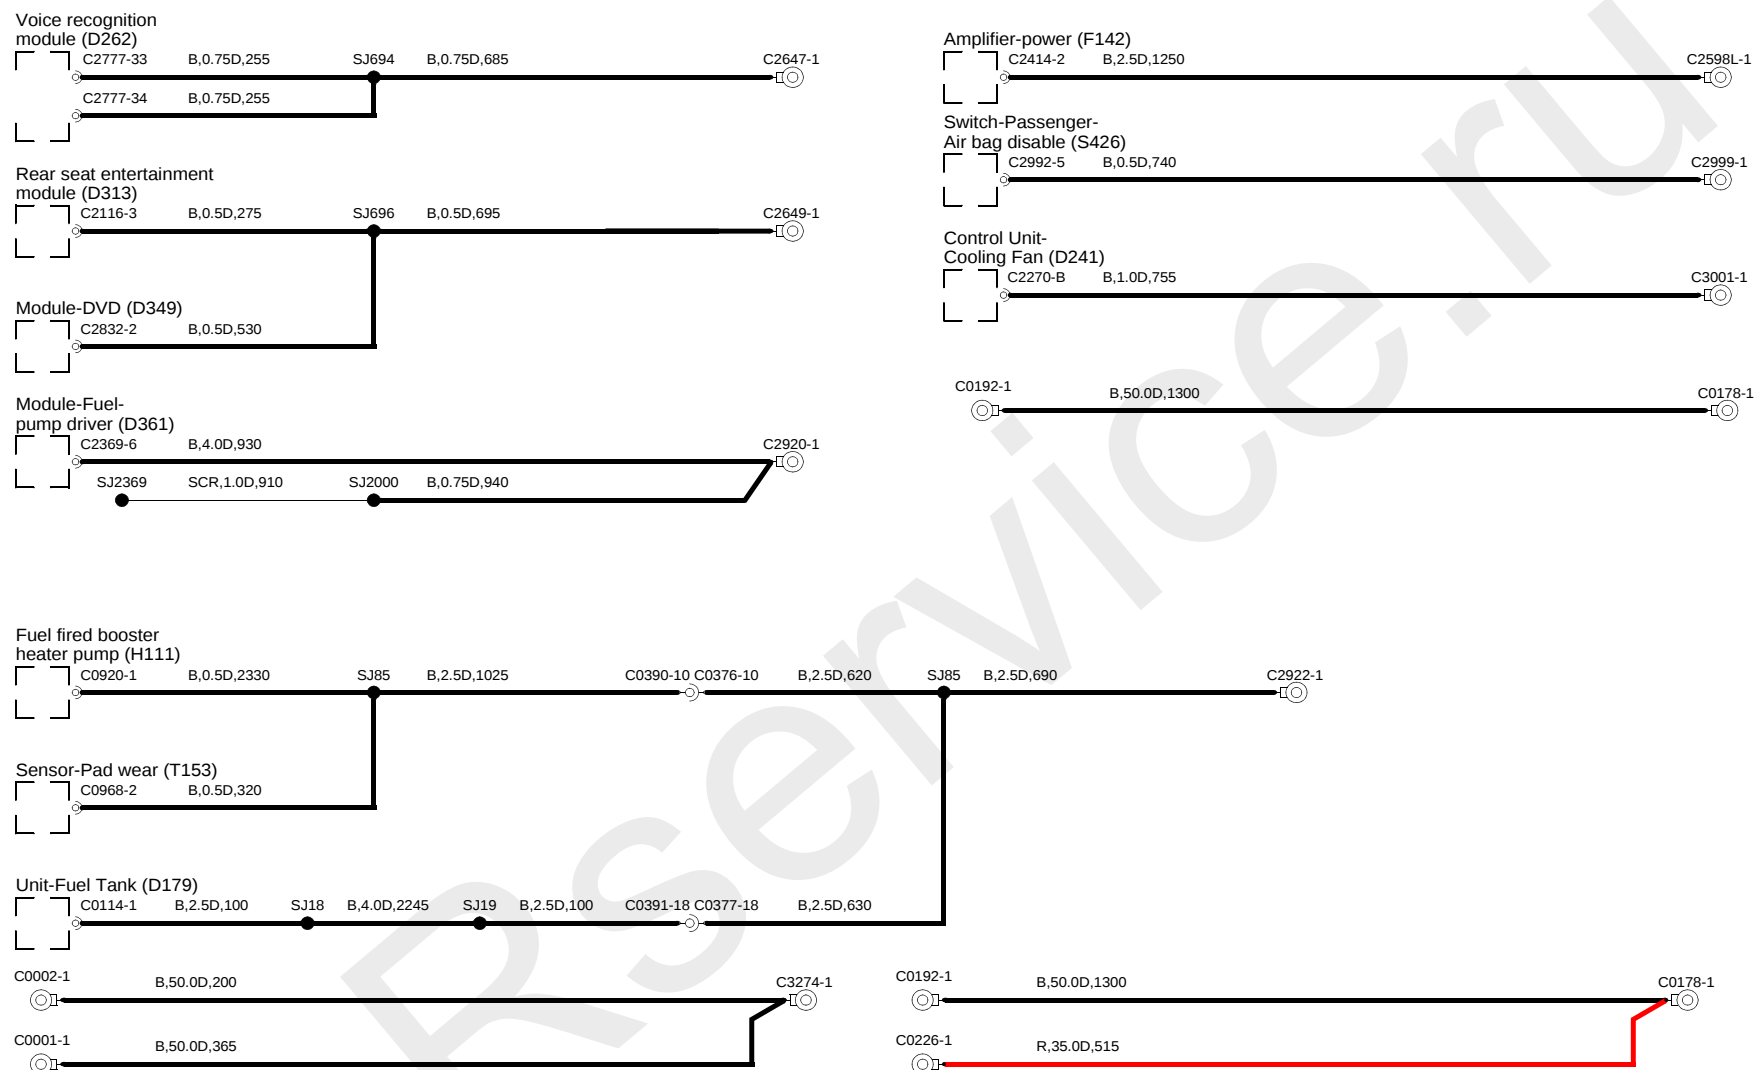


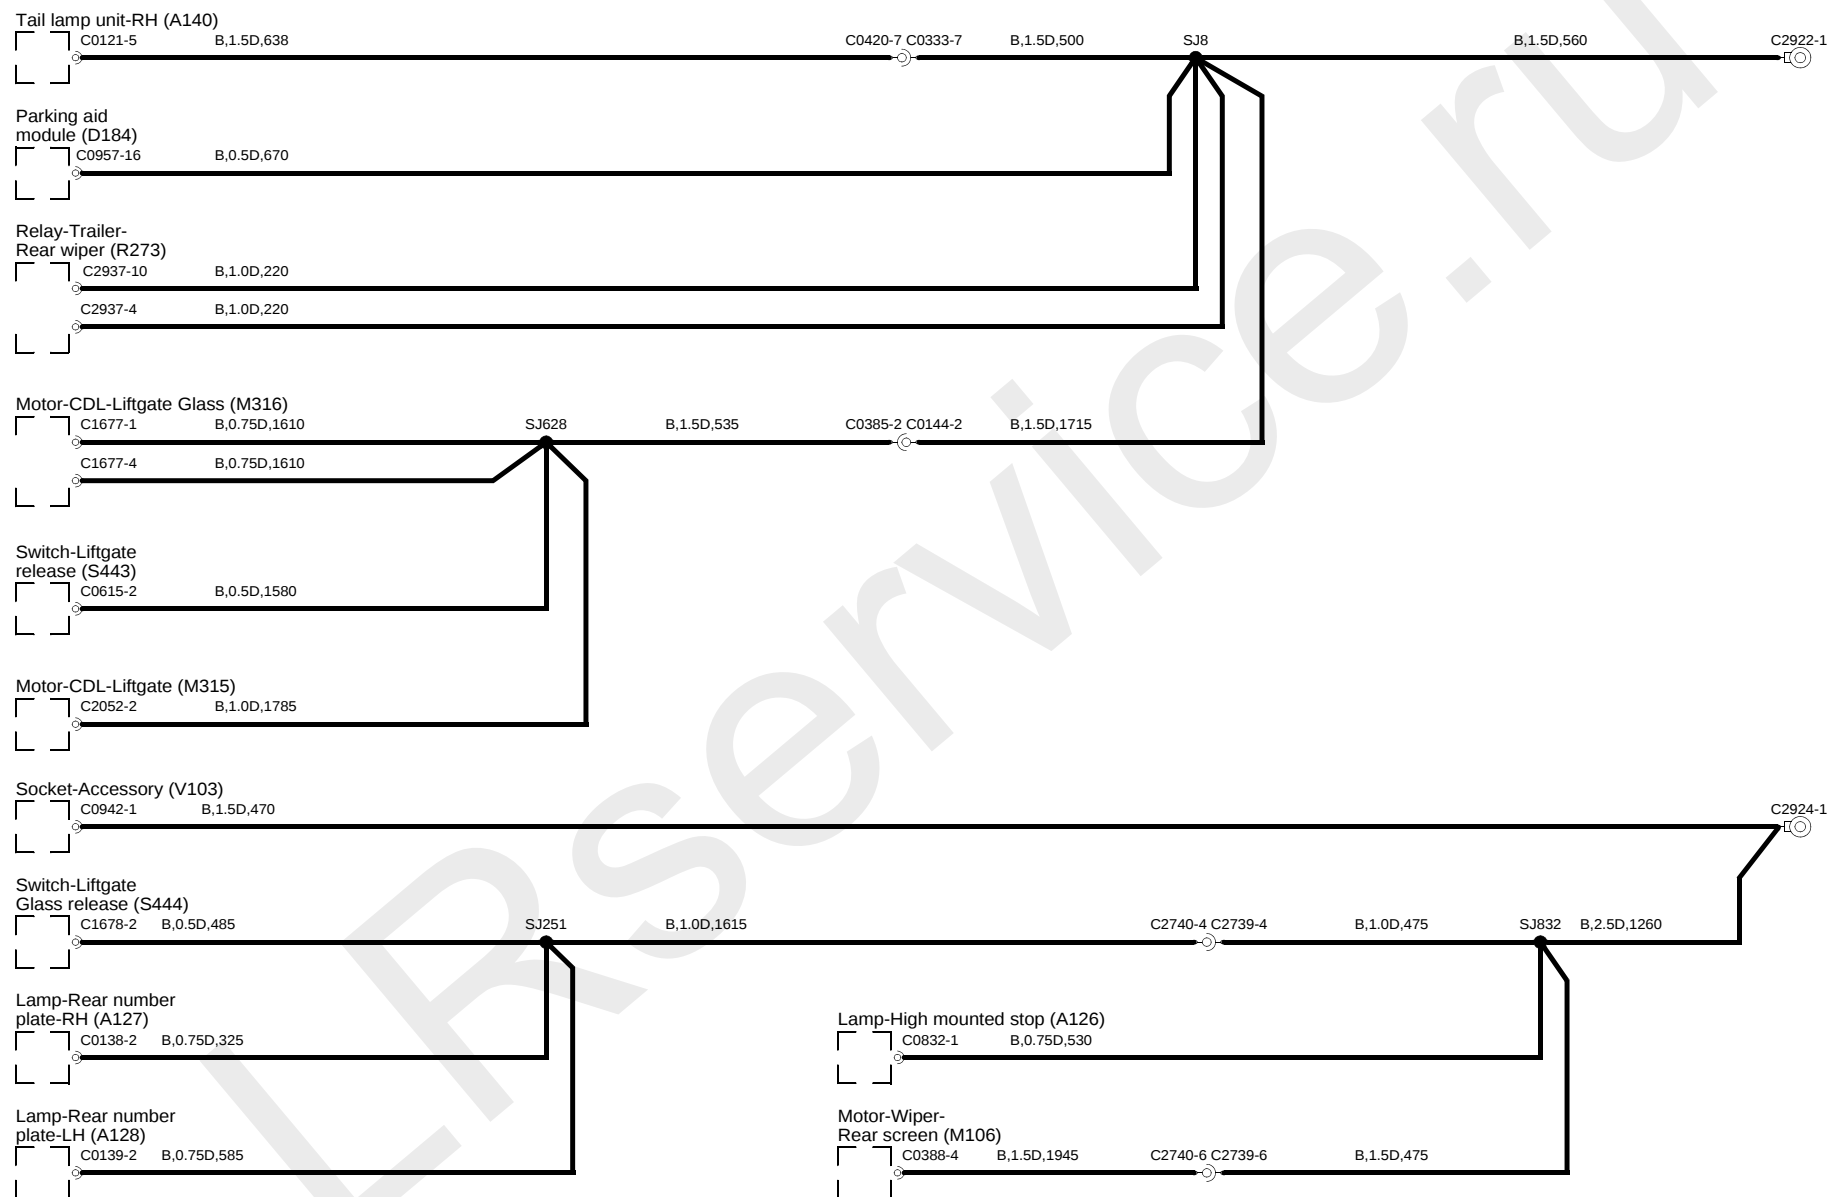




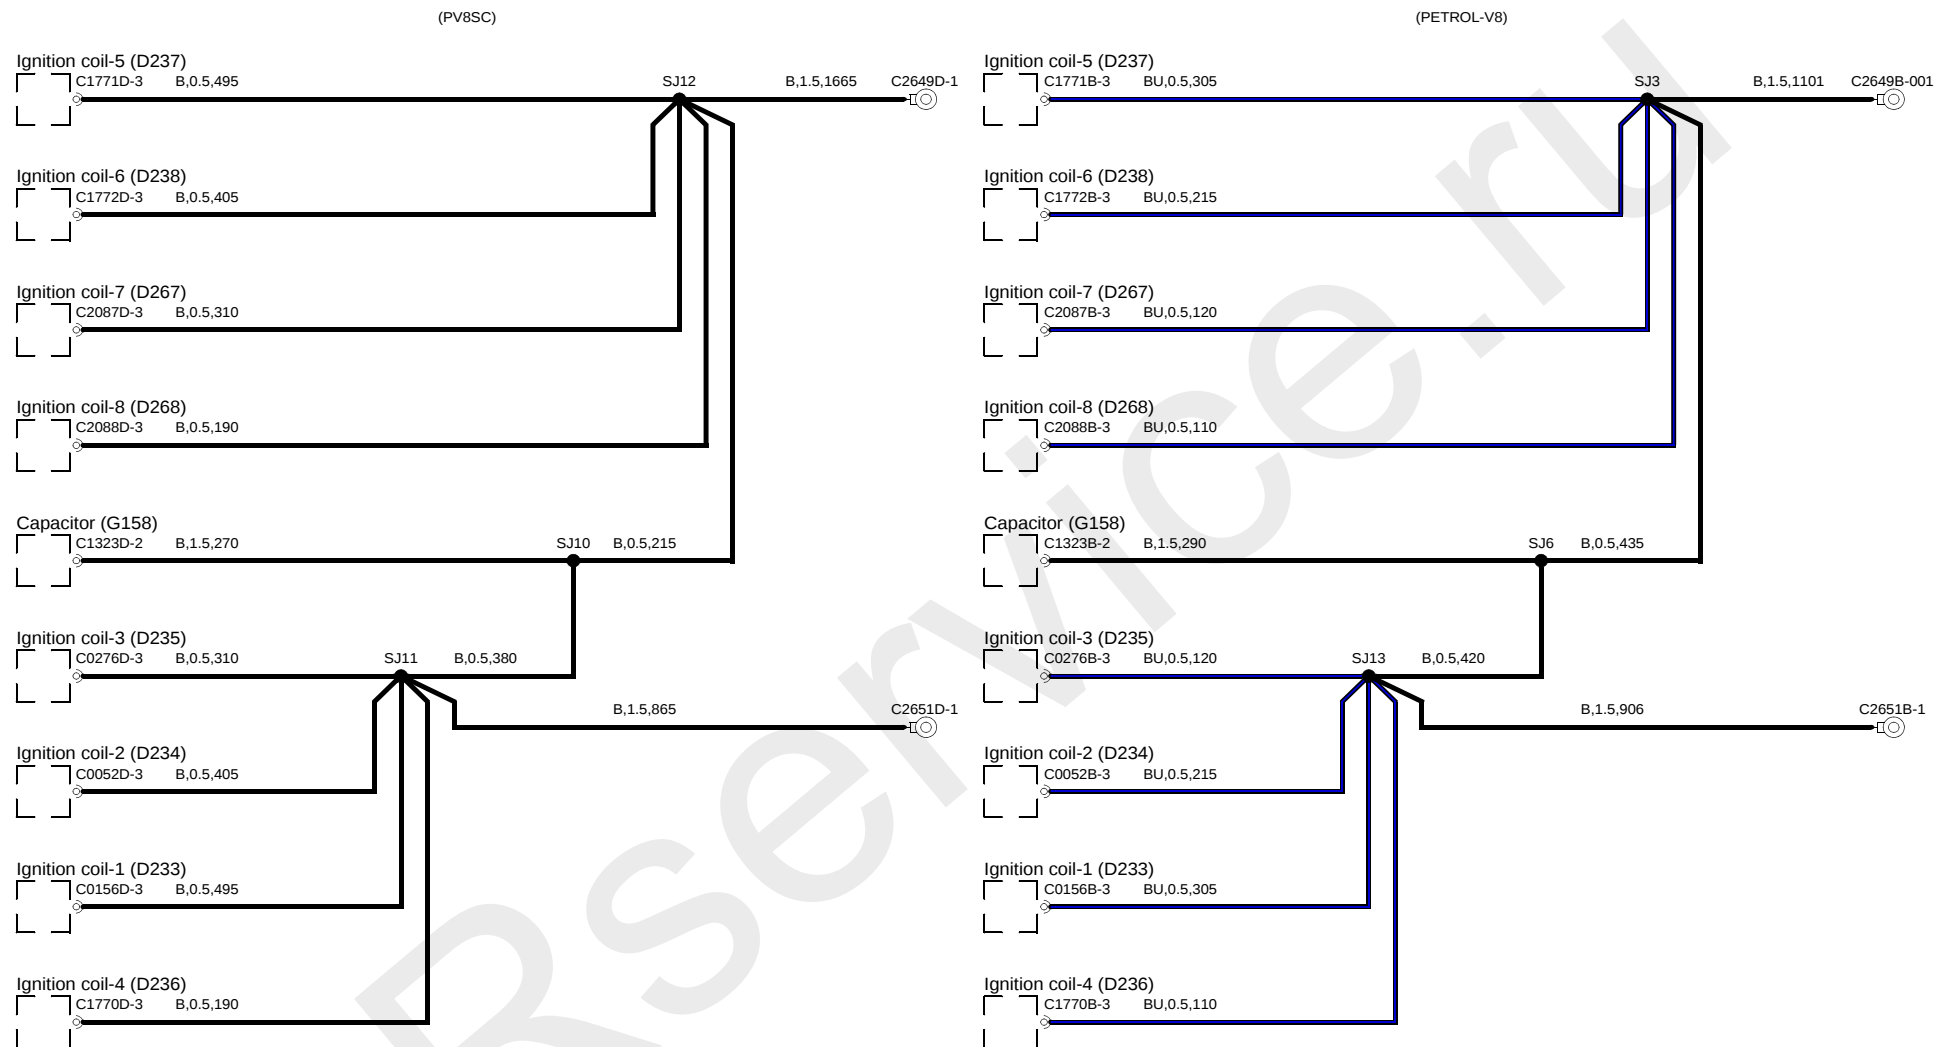


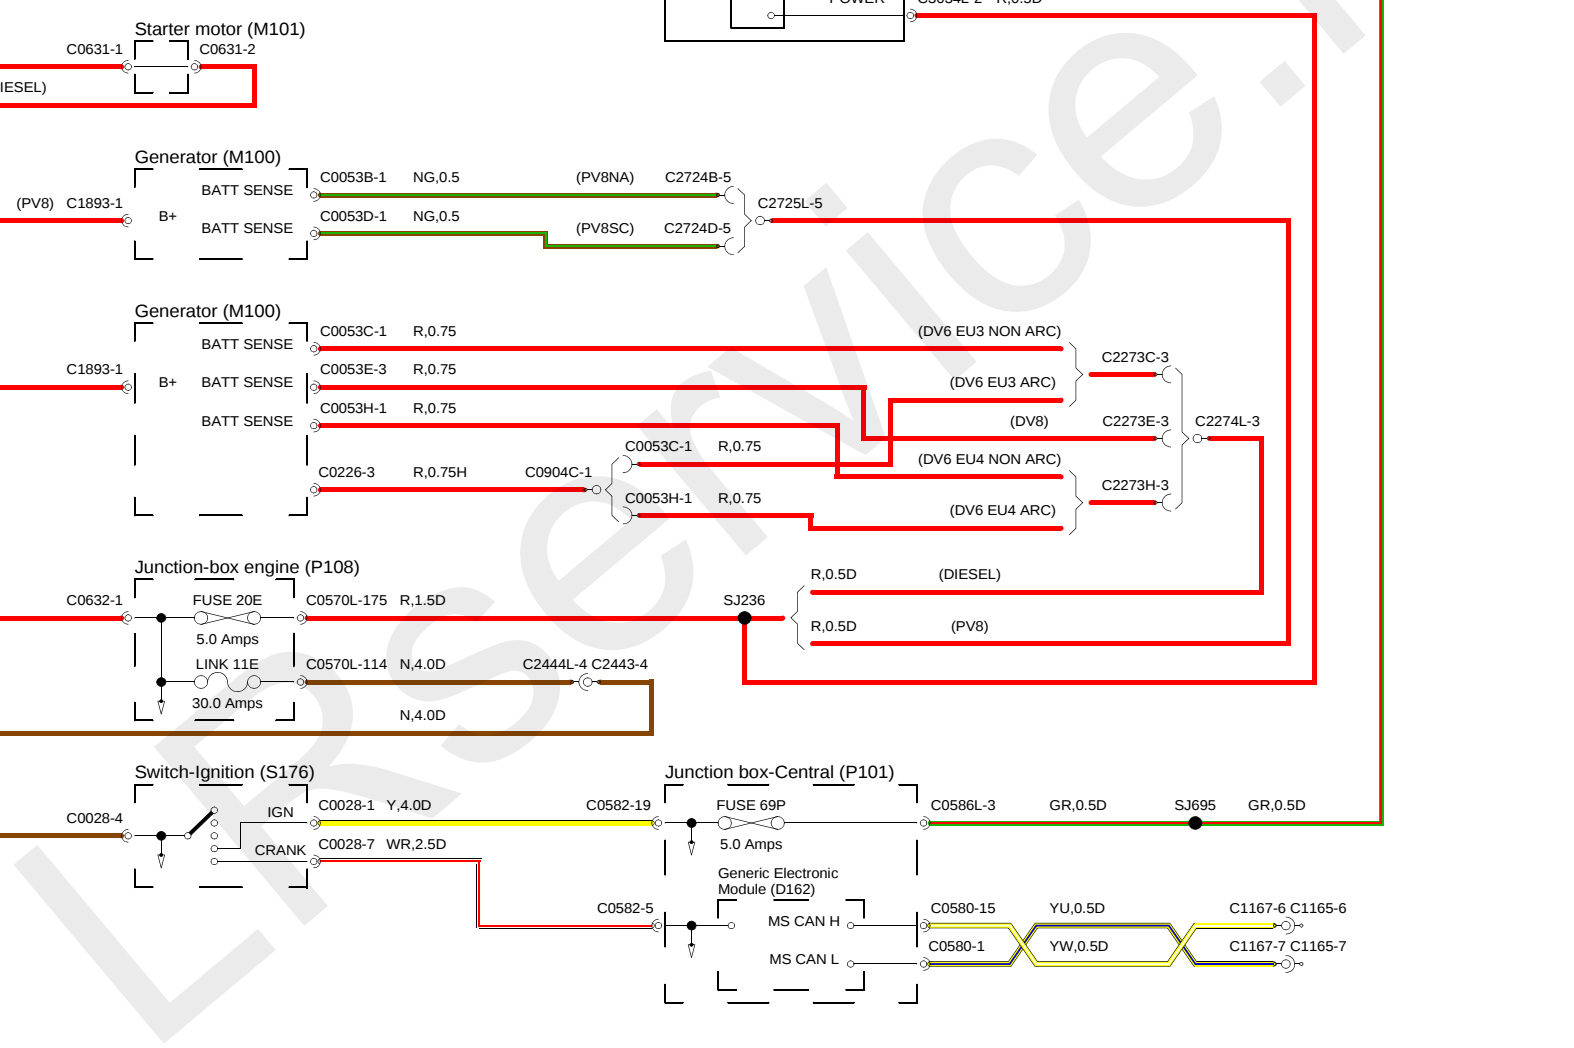



SJ3 (GW) MAIN

 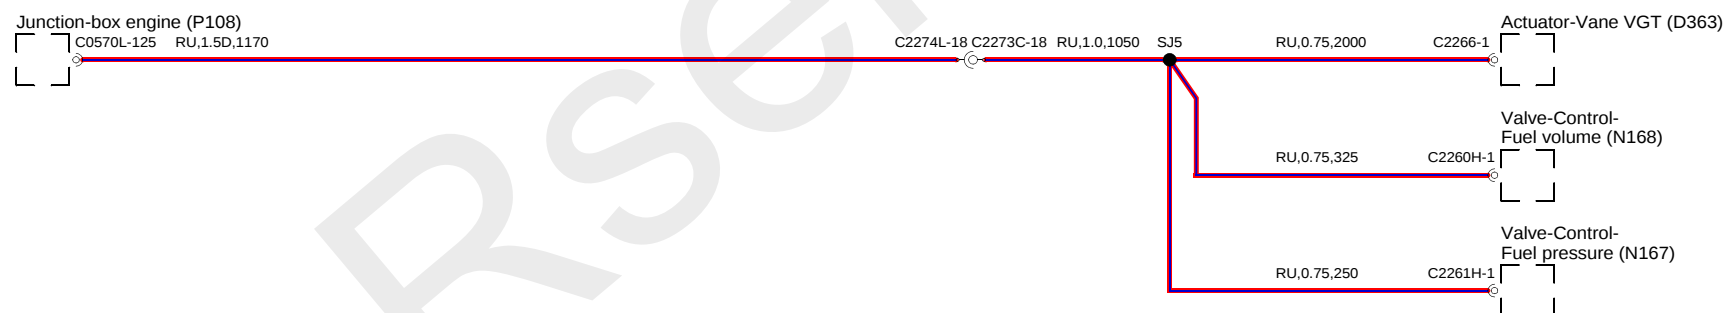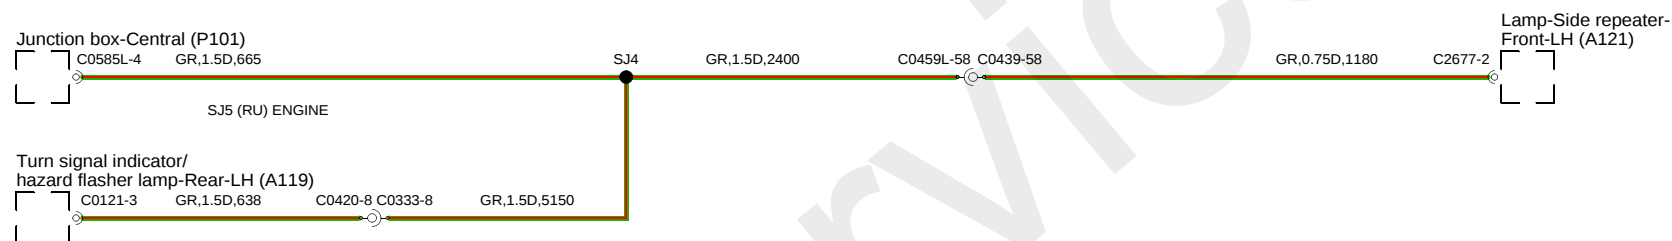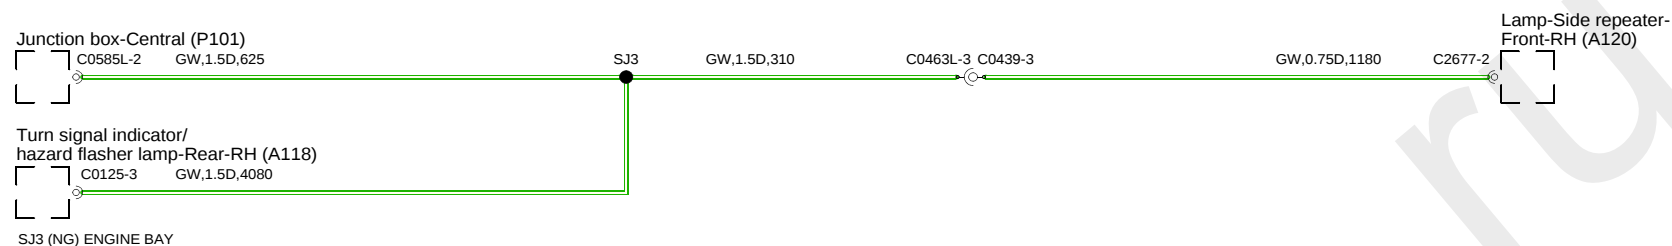



SJ7 (GN) MAIN

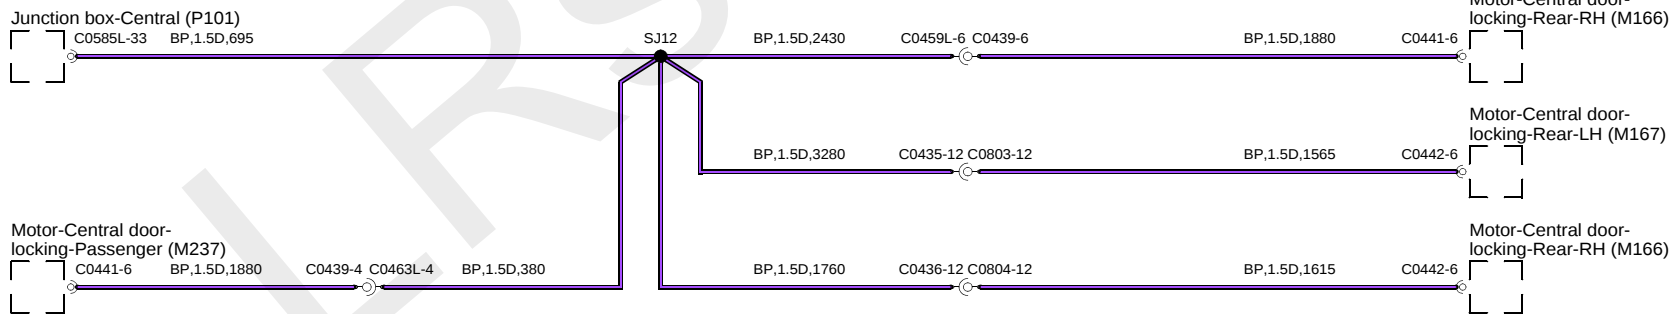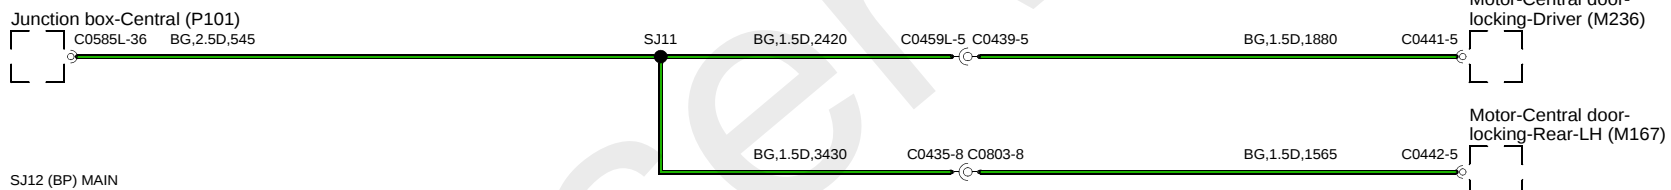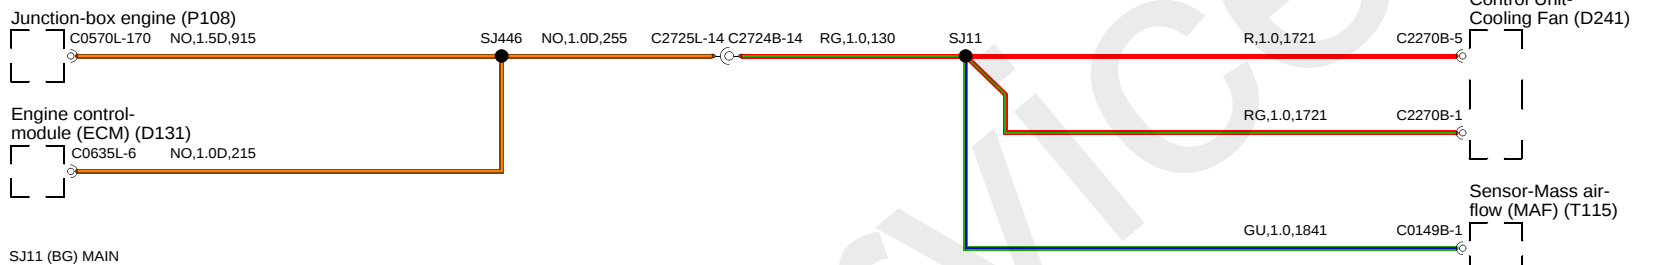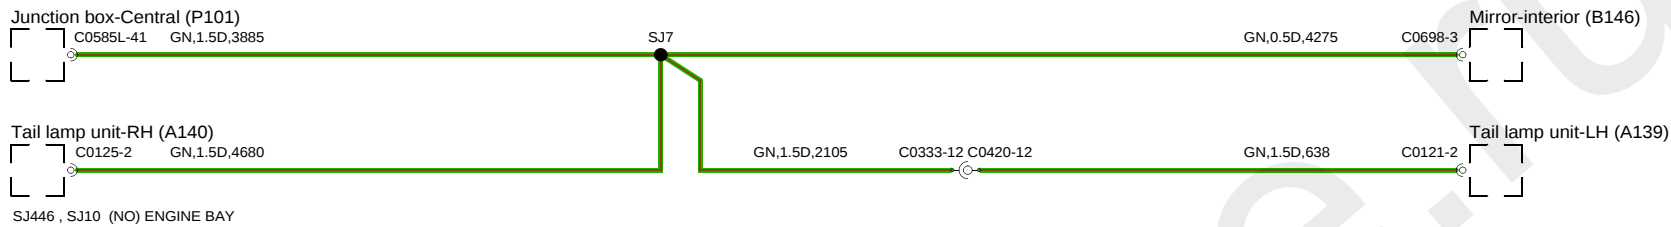

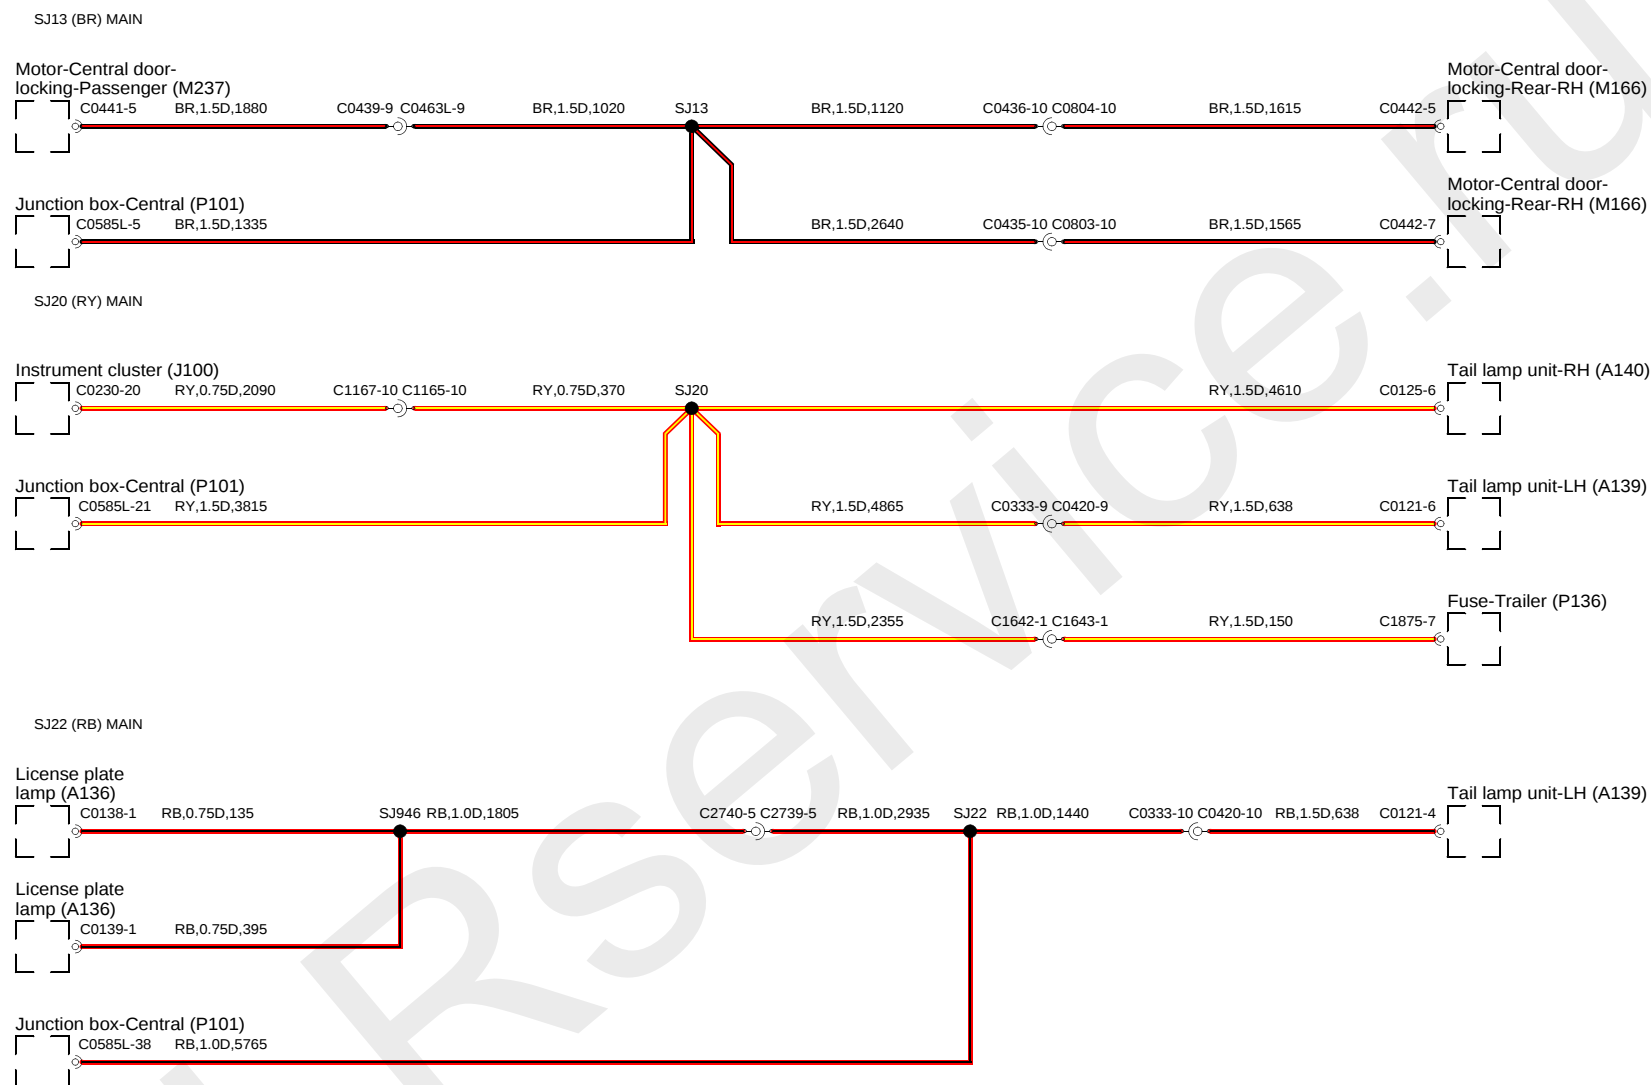


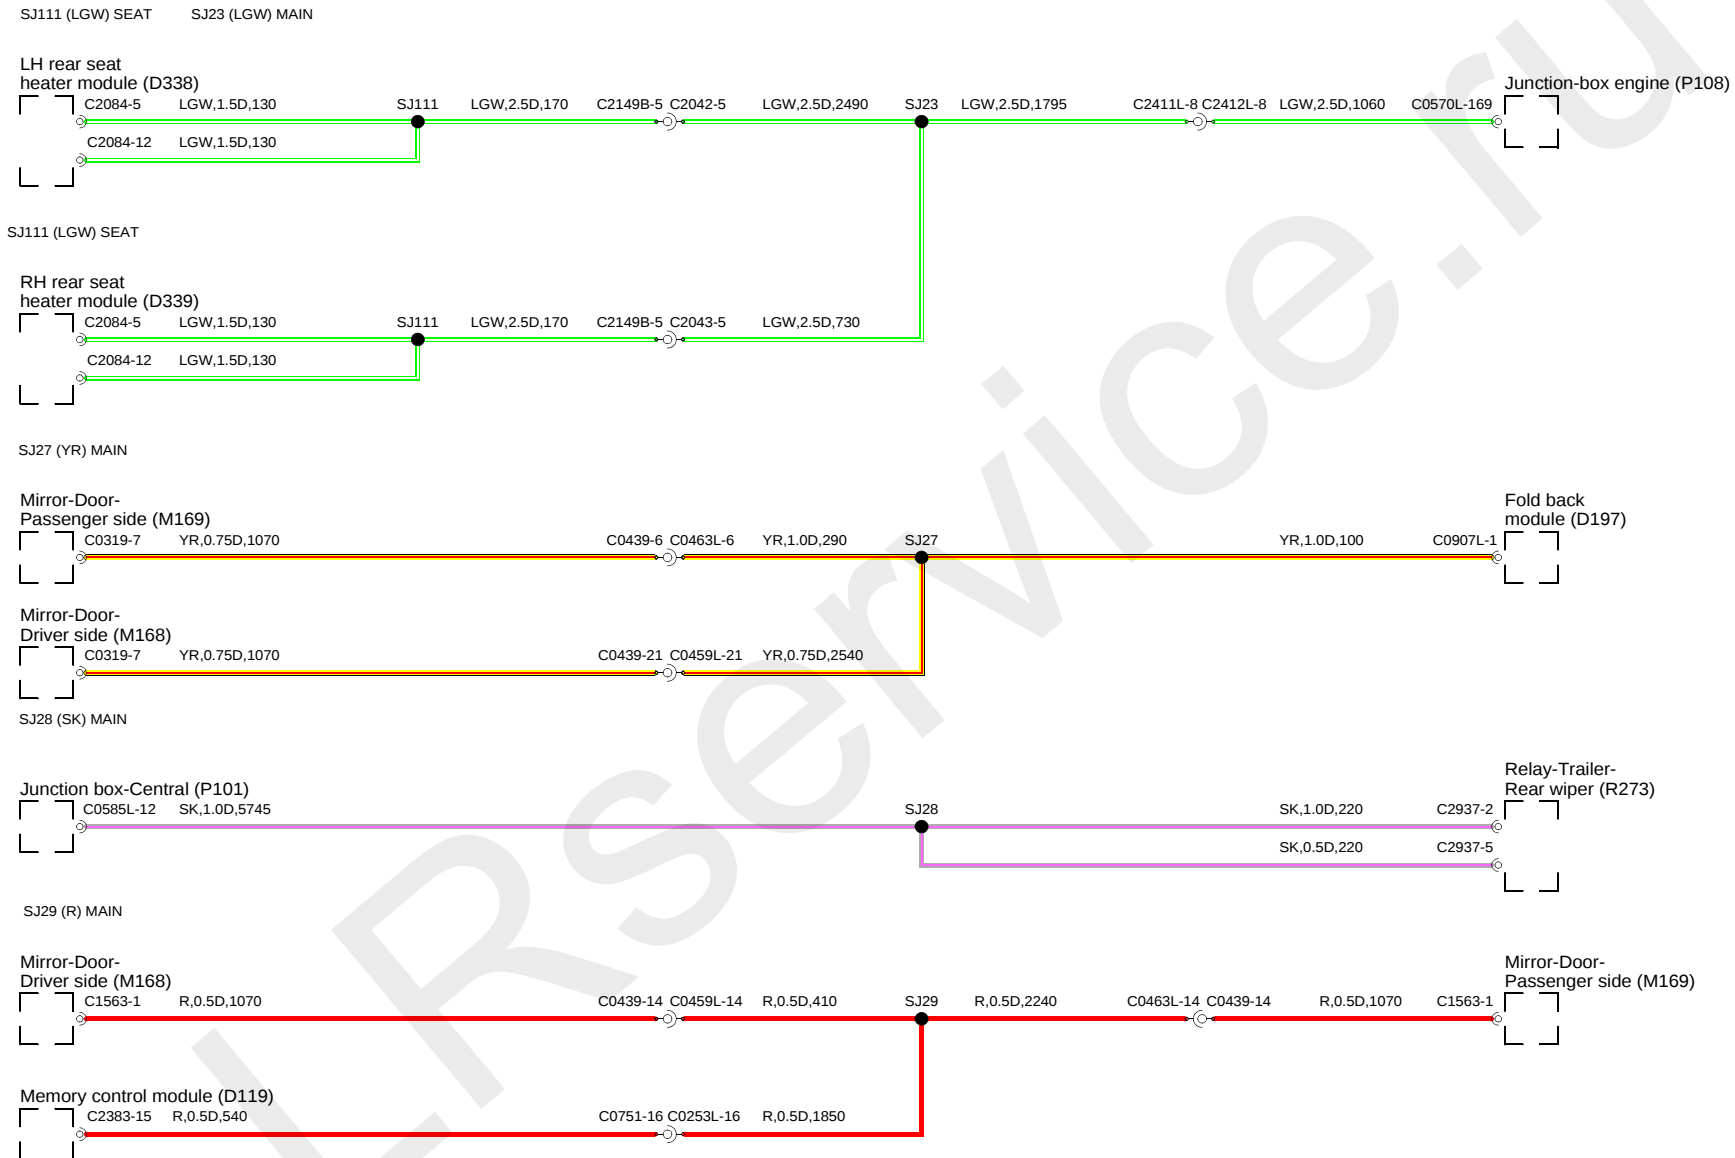

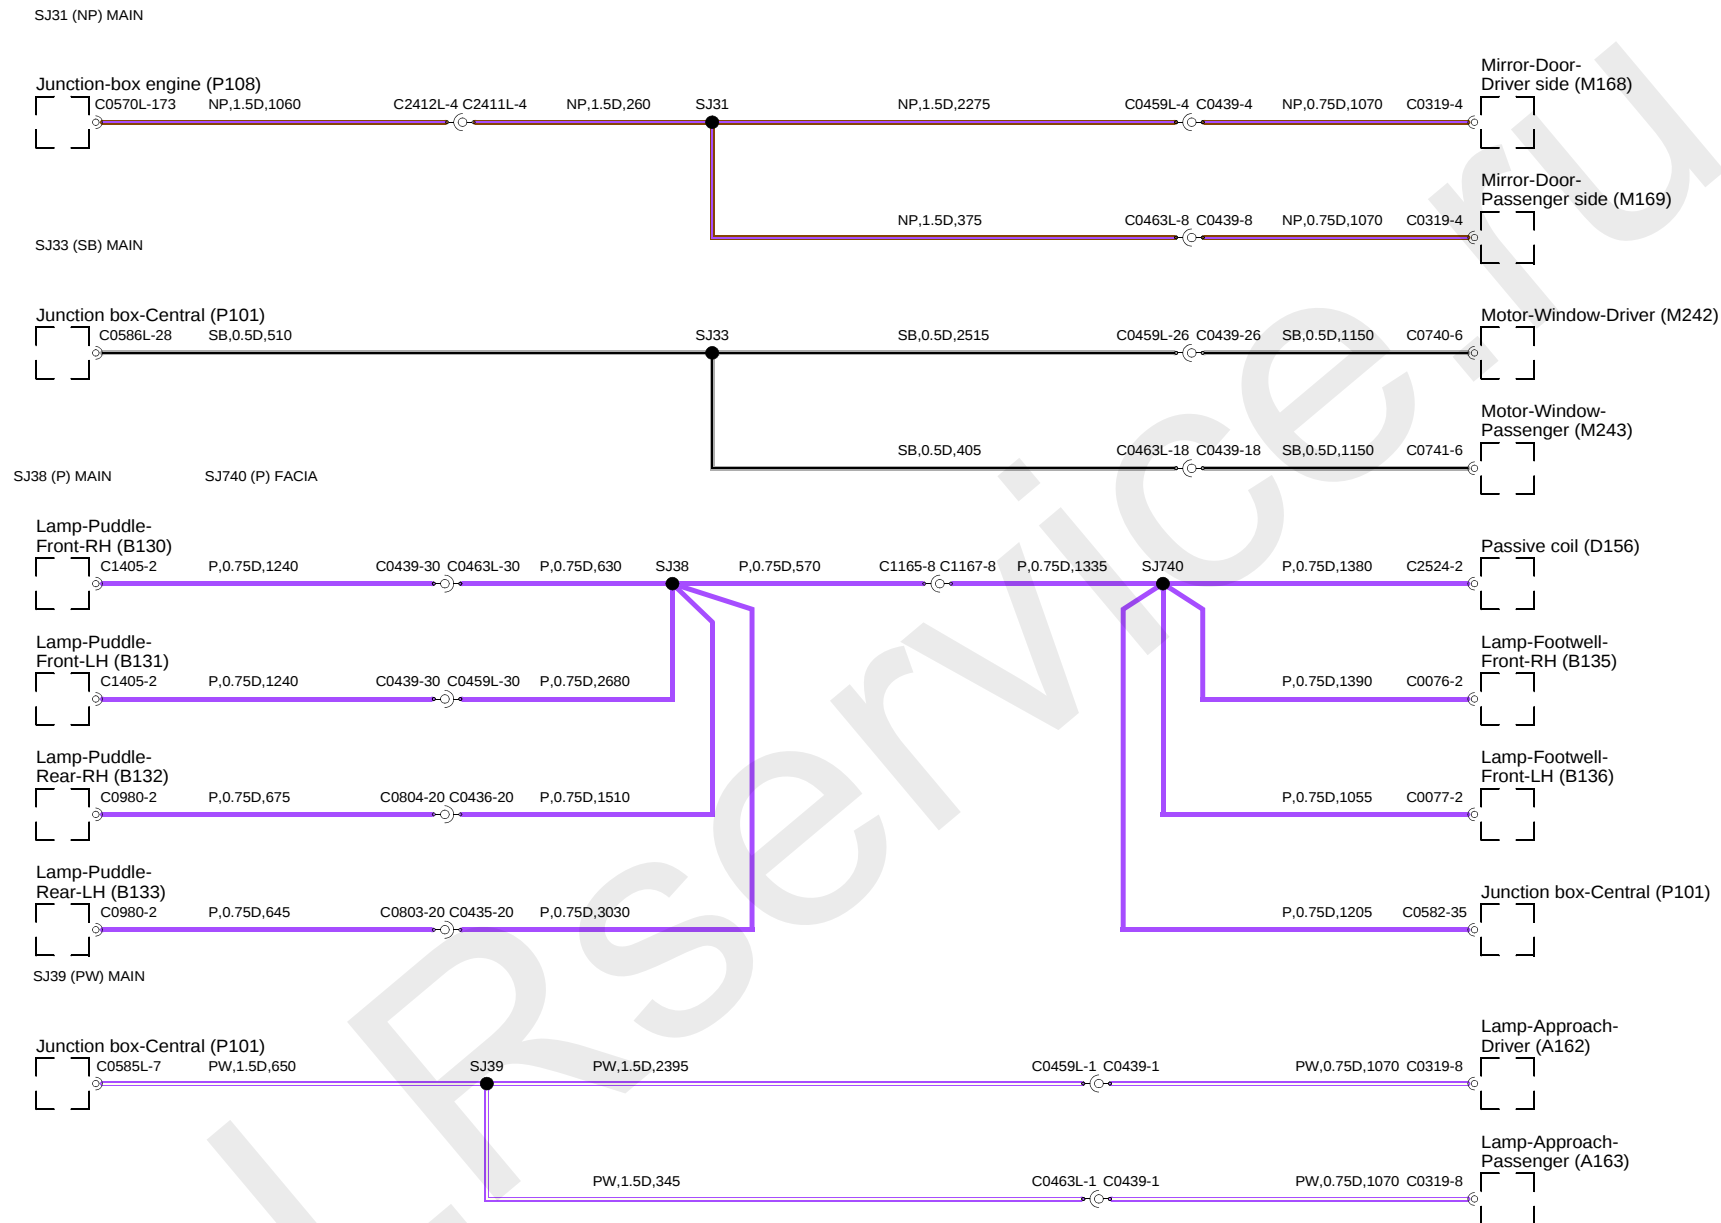


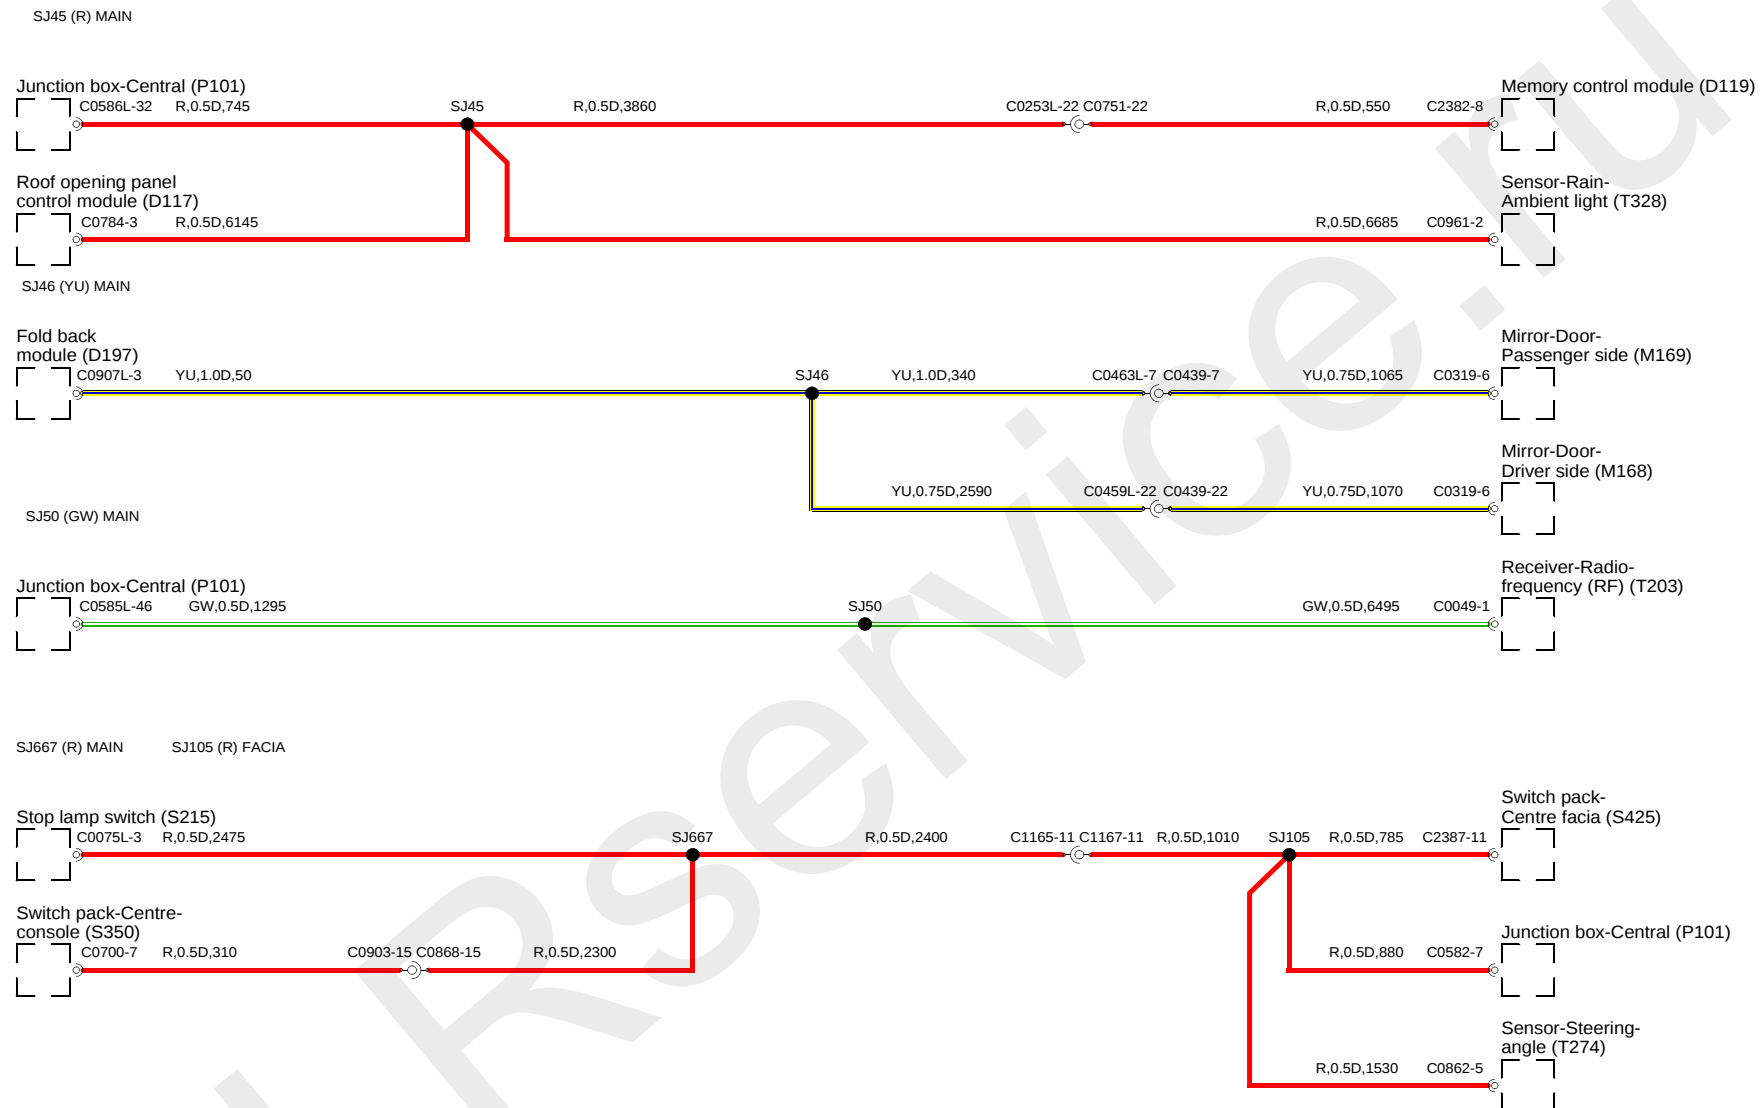

SJ40 (P) MAIN

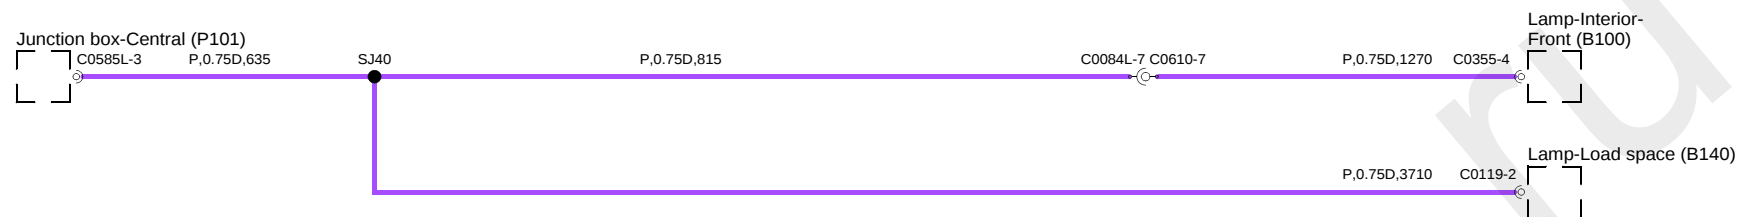



SJ201 (RN) REAR DOOR SJ52 (RN) MAIN SJ237 (RN) ROOF

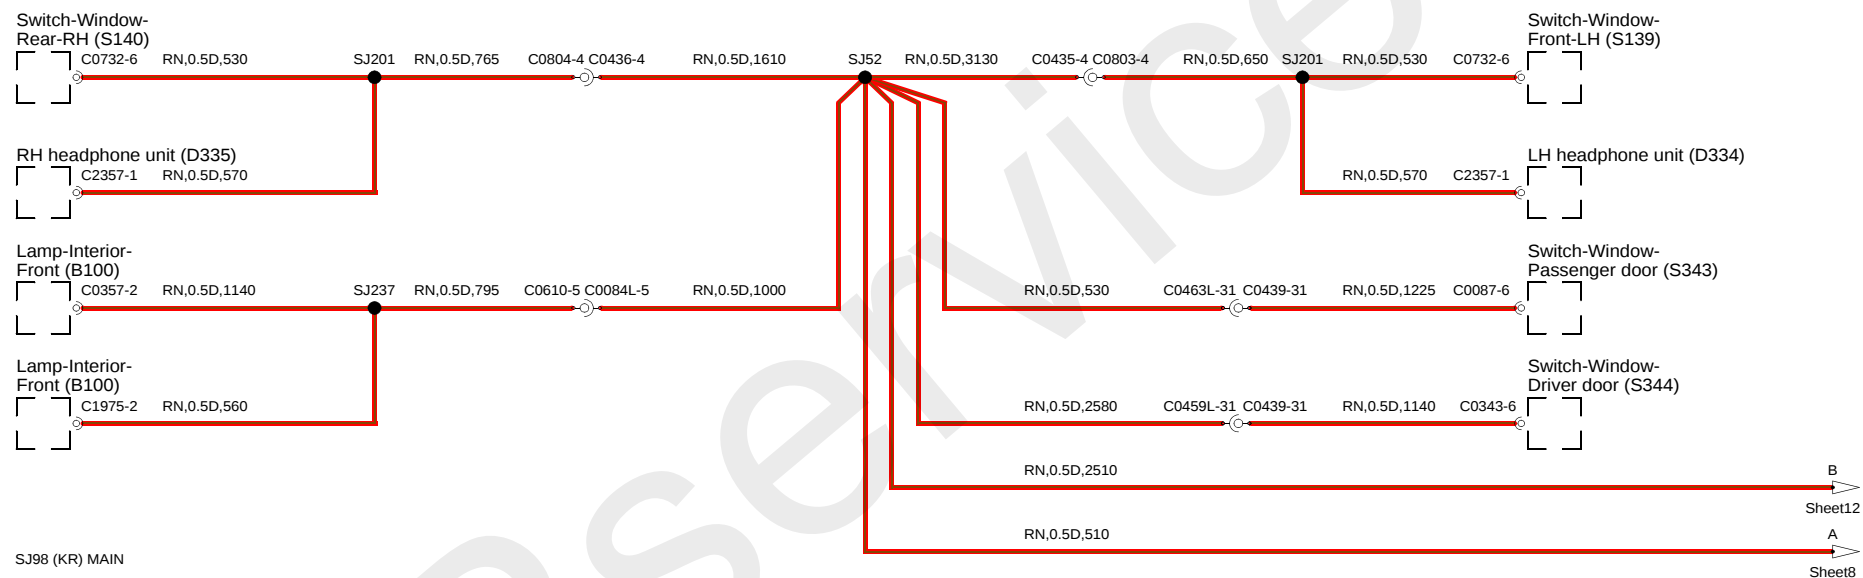


SJ98 (KR) MAIN



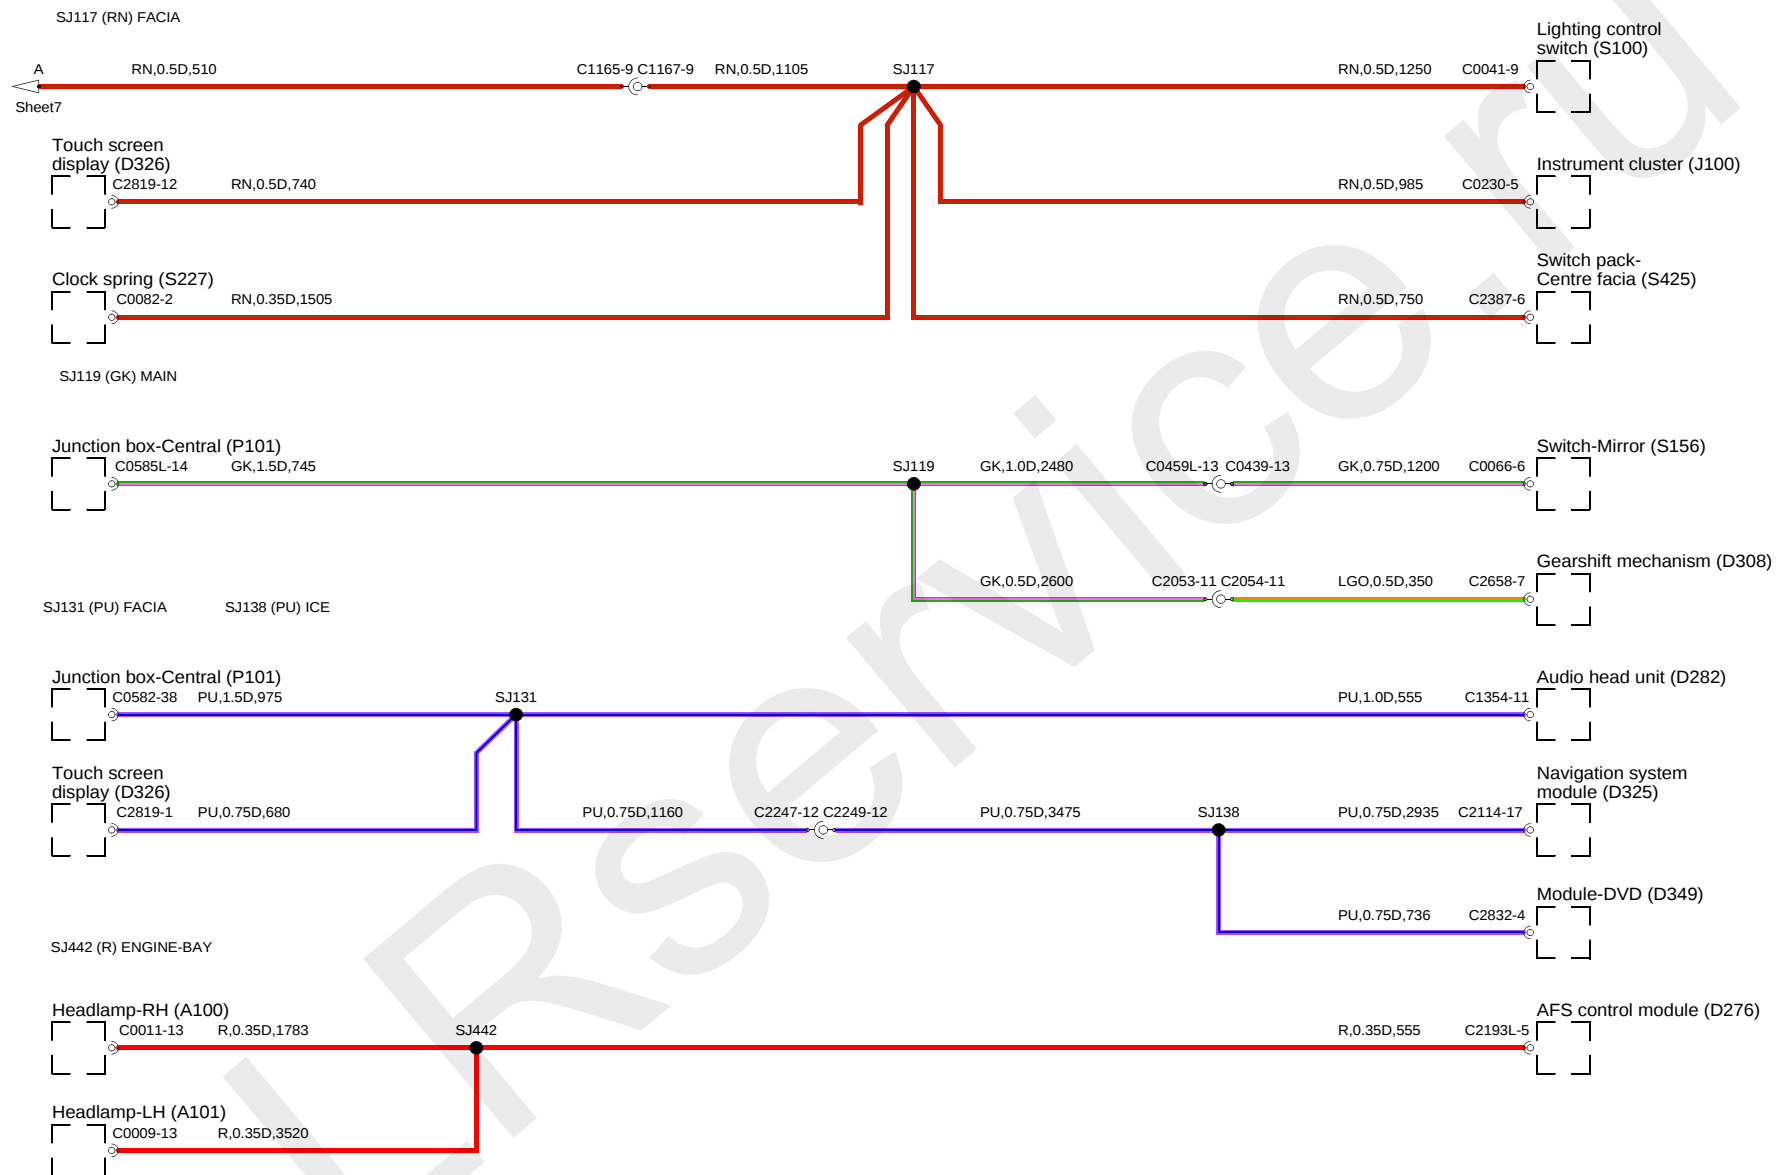


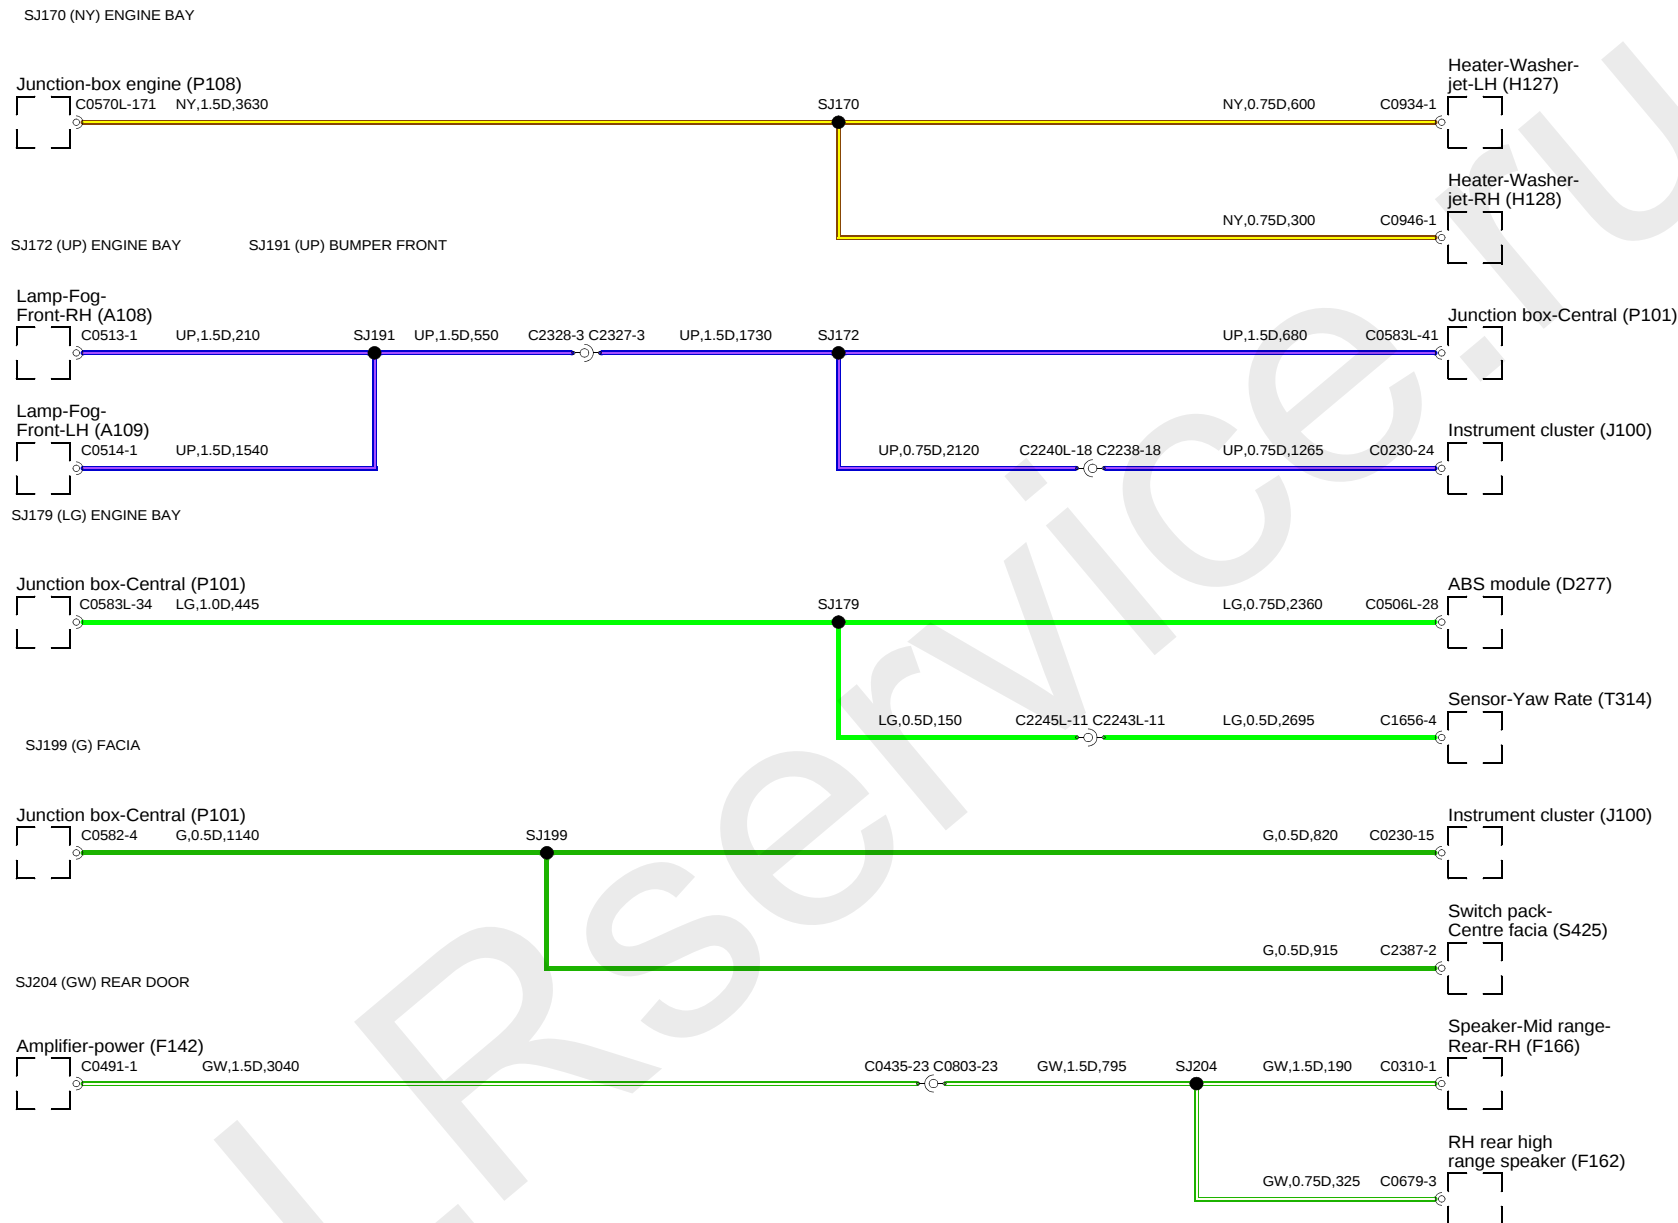


SJ204 (GW) REAR DOOR

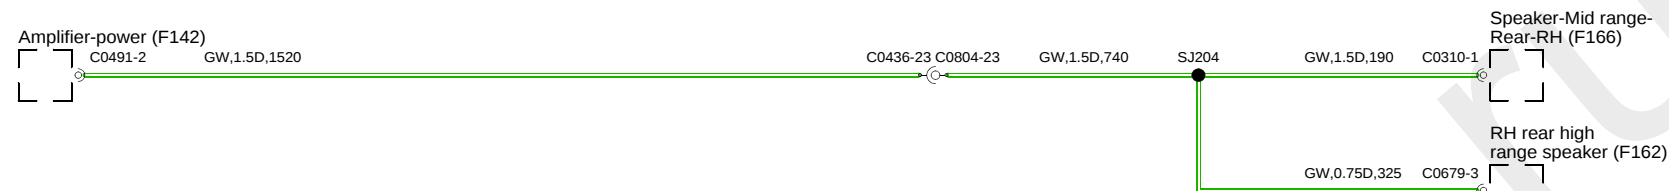


SJ205 (G) REAR DOOR

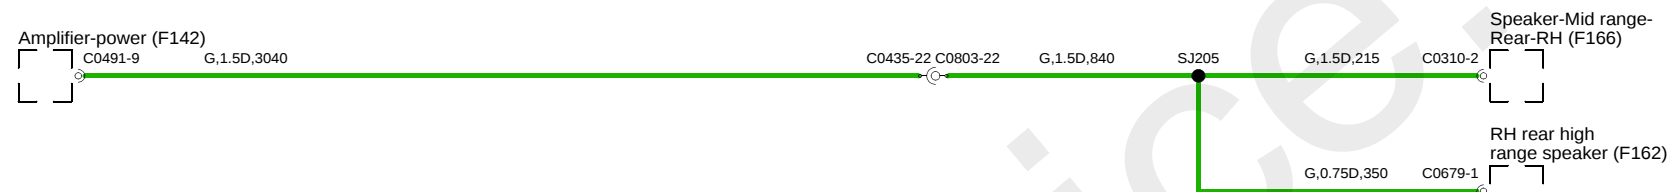


SJ205 (G) REAR DOOR

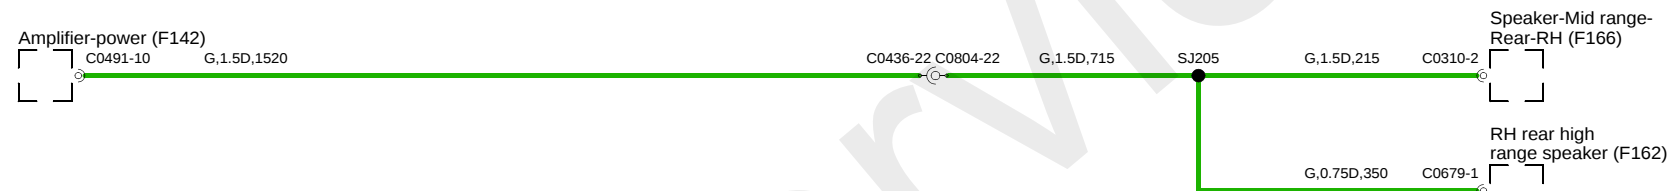



SJ217 (G) FRONT DOOR

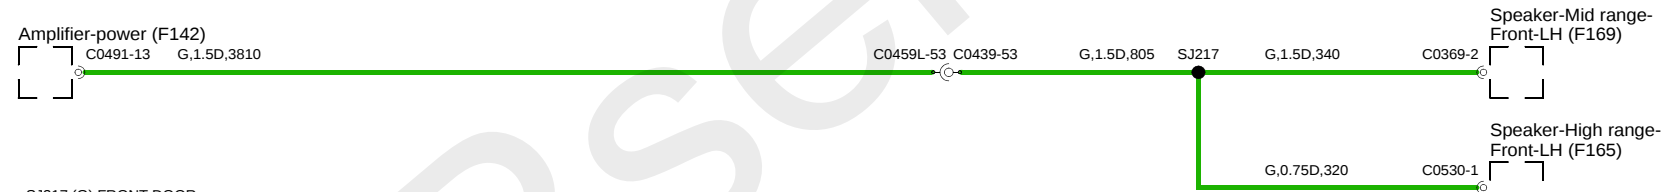


SJ217 (G) FRONT DOOR


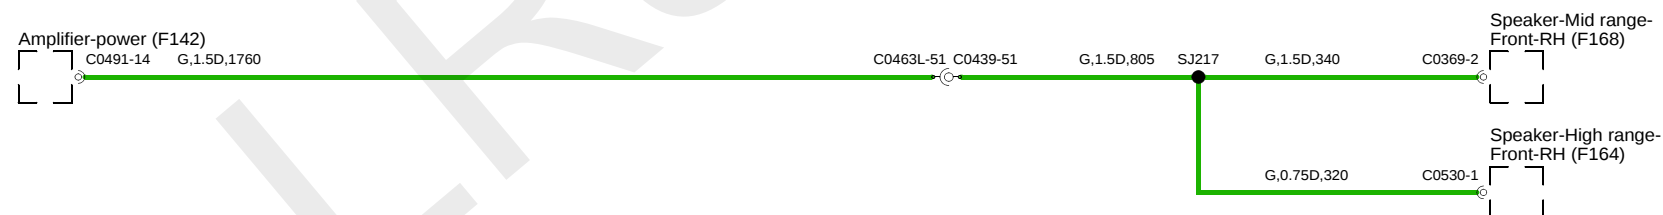


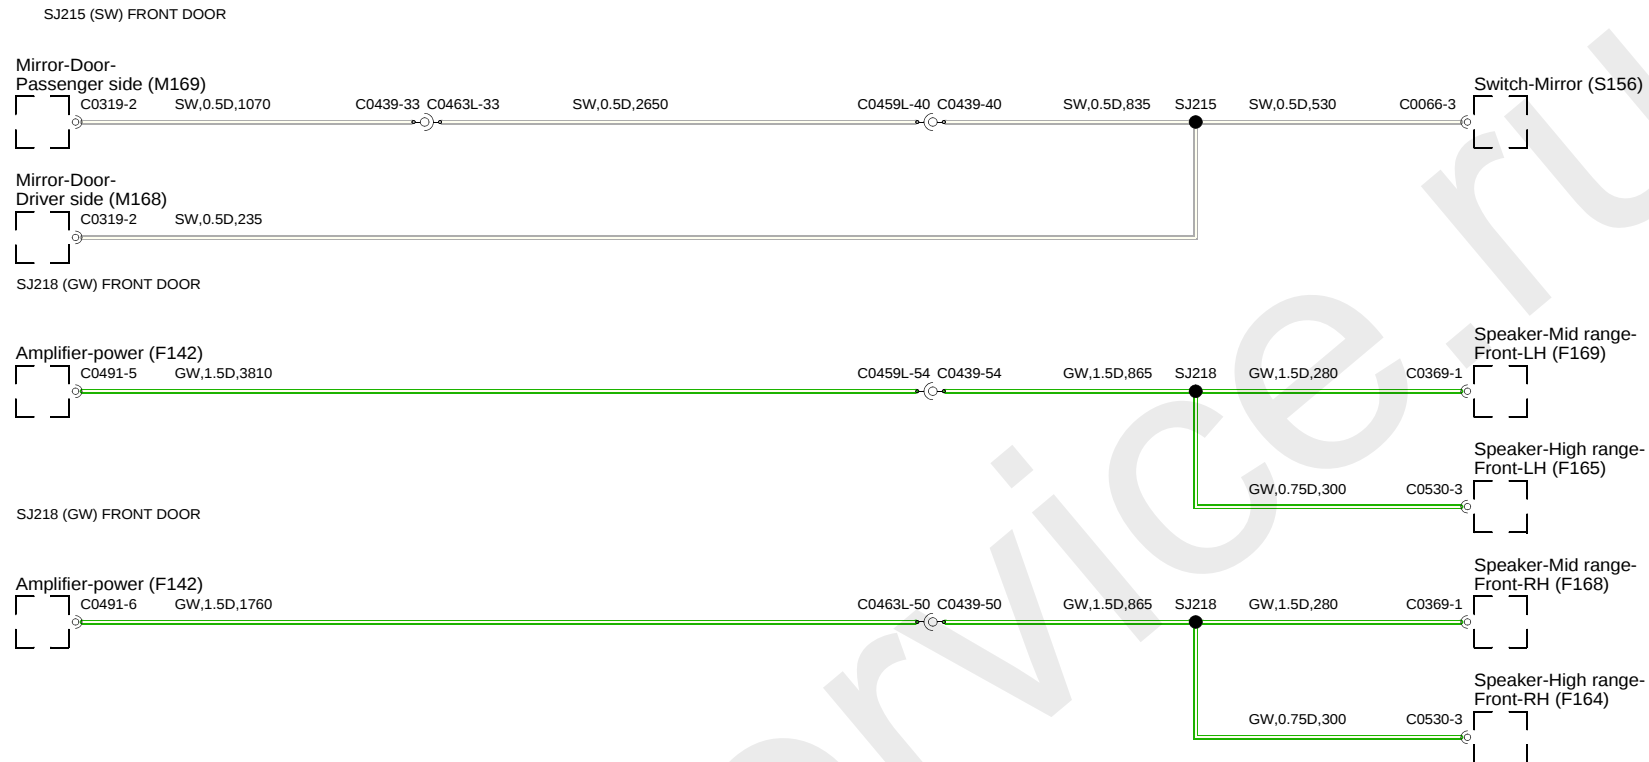

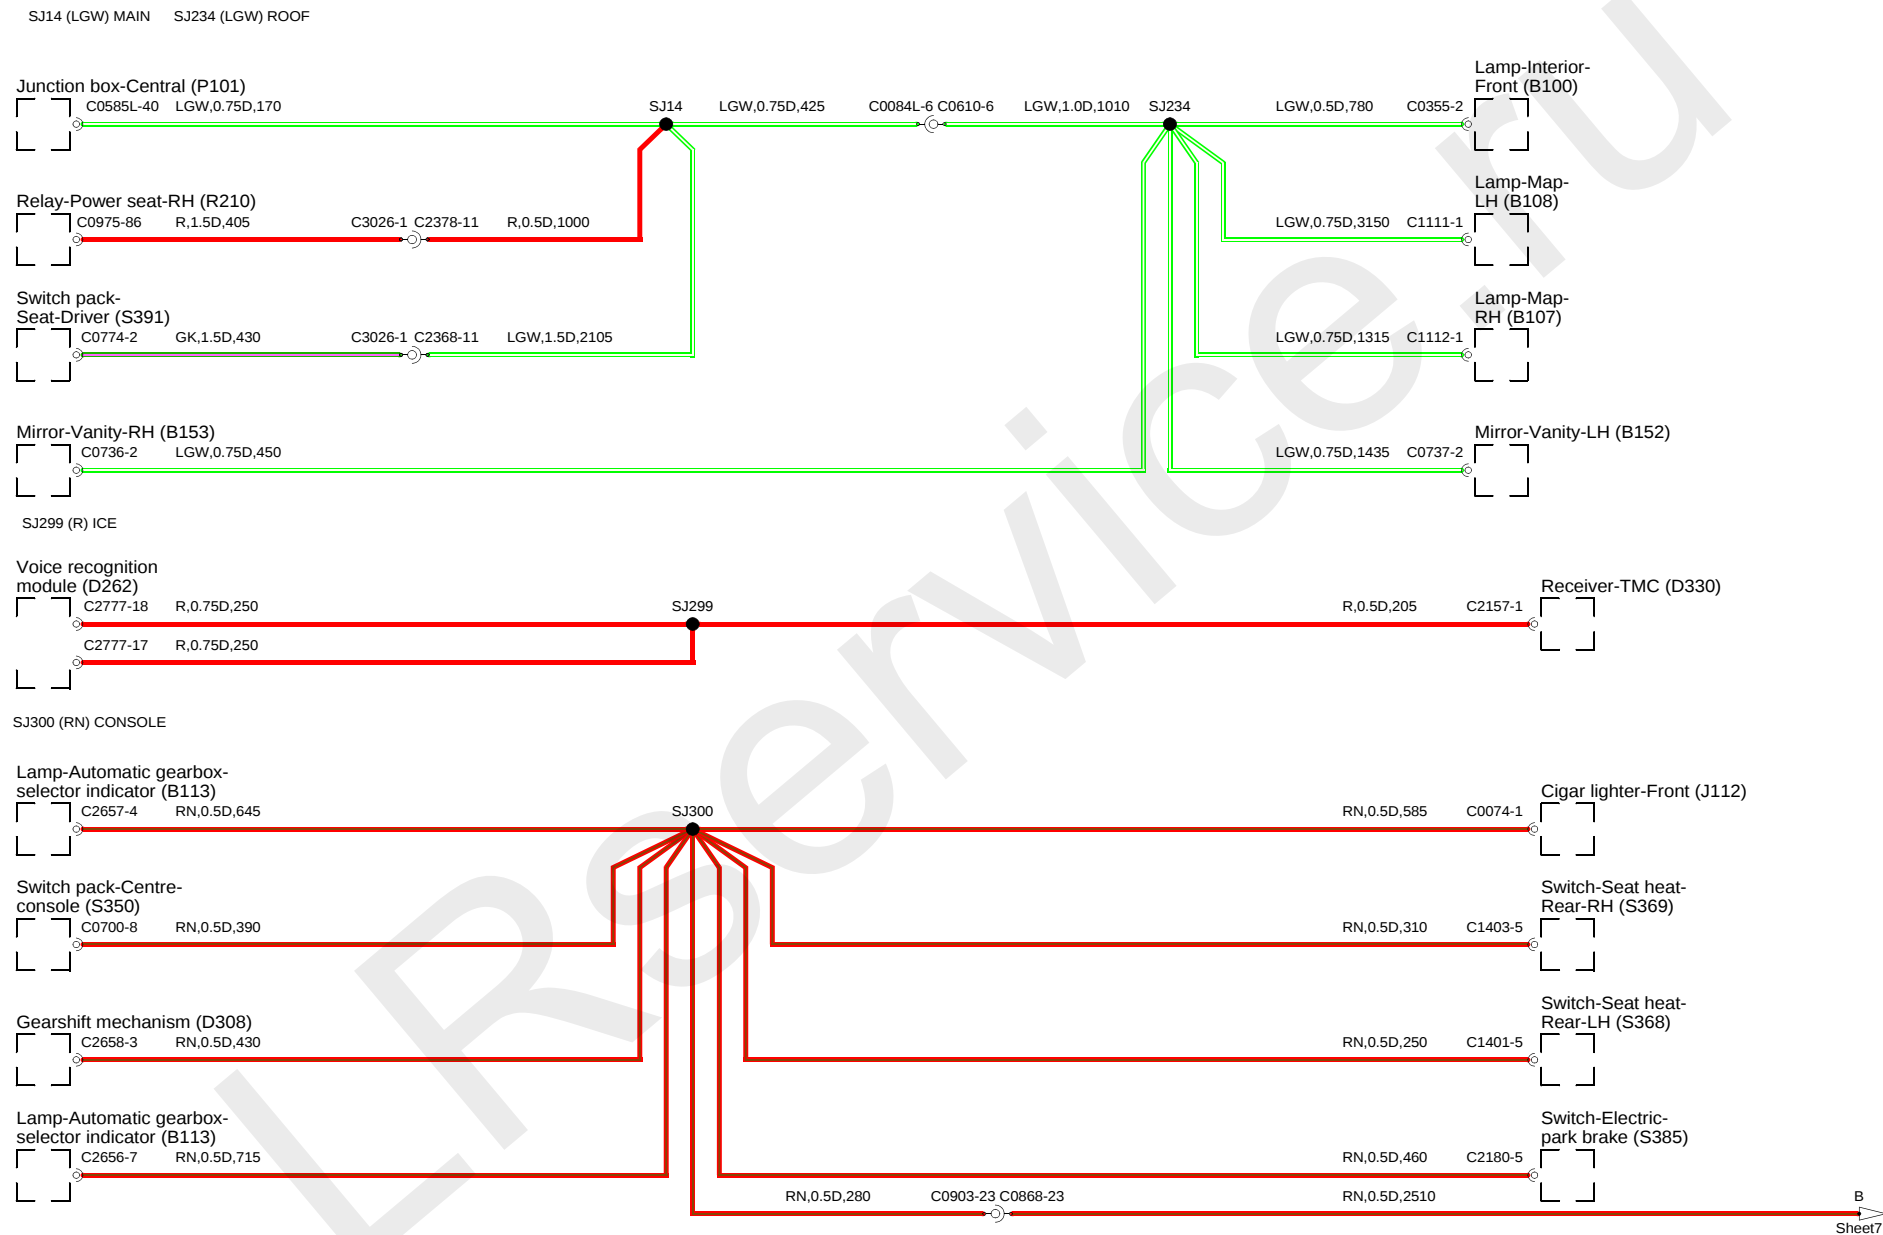


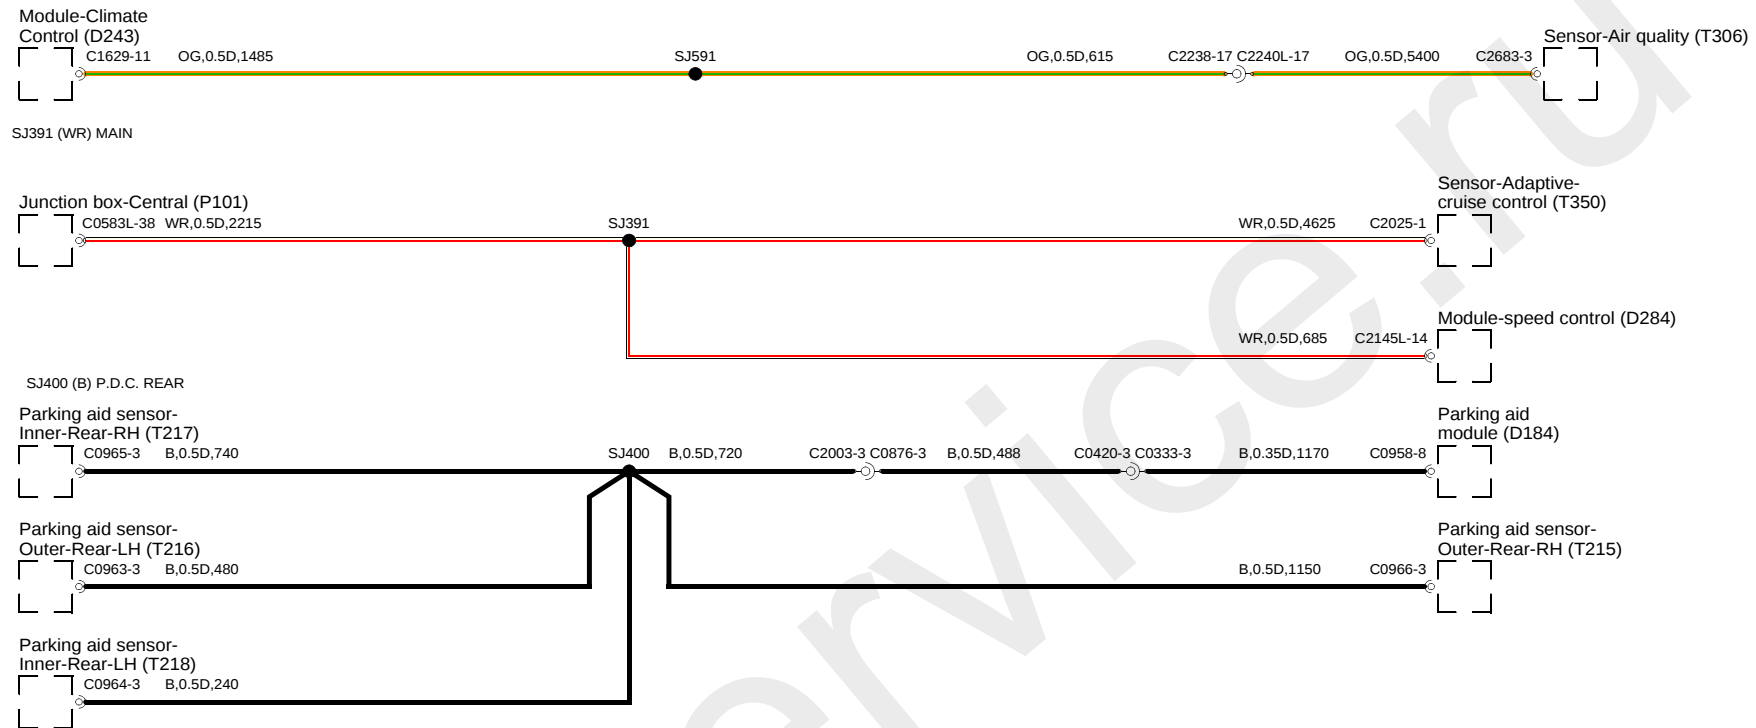


SJ401 (N) P.D.C. REAR

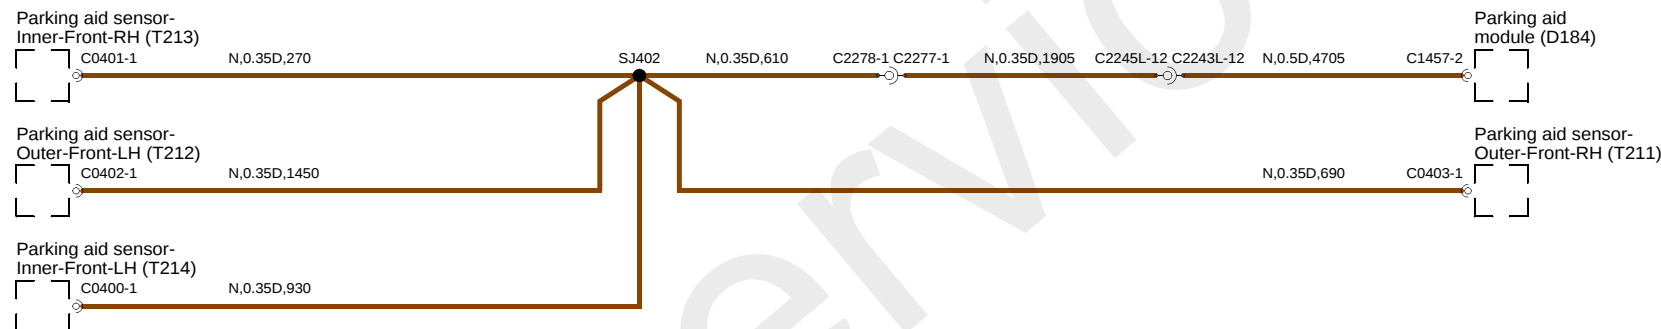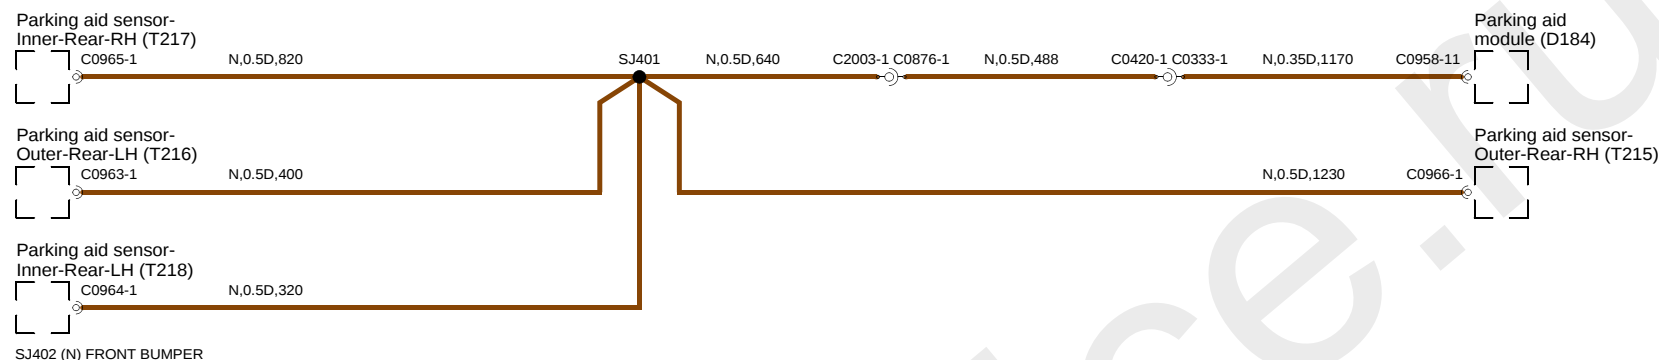


SJ403 (B) FRONT BUMPER

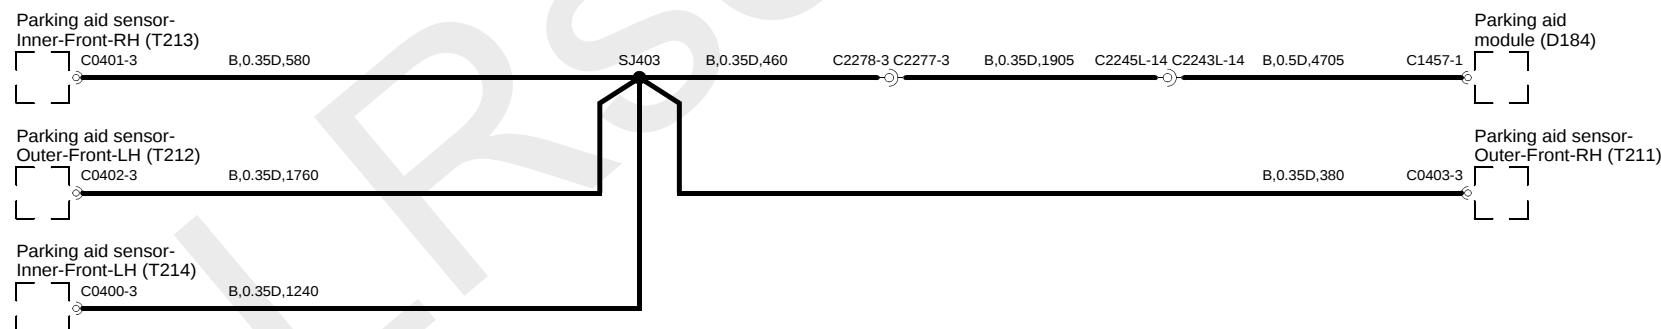



SJ406 (GY) REAR CHASSIS

 


SJ410 (PY) AUTO TRANSMISSION SJ3410 (PY) AUTO TRANSMISSION SJ2410 (PY) AUTO TRANSMISSION

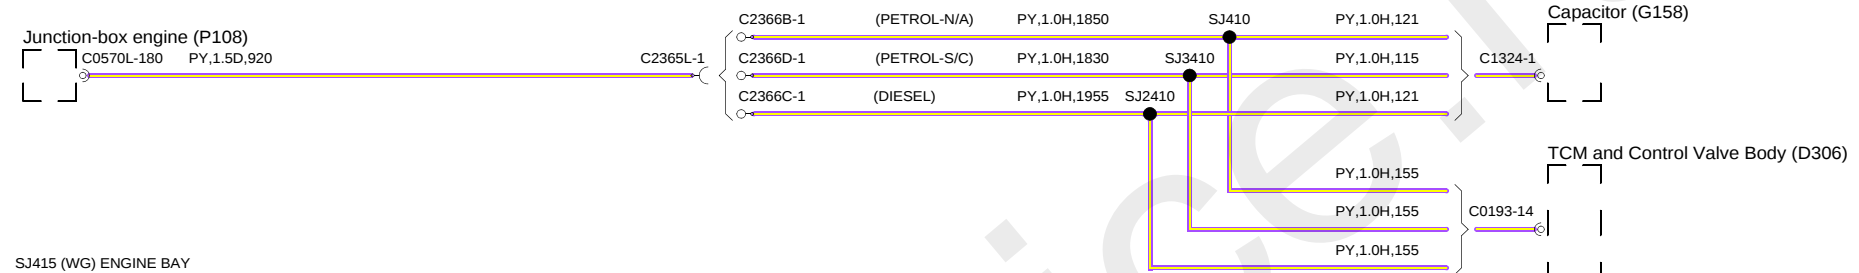



SJ415 (WG) ENGINE BAY

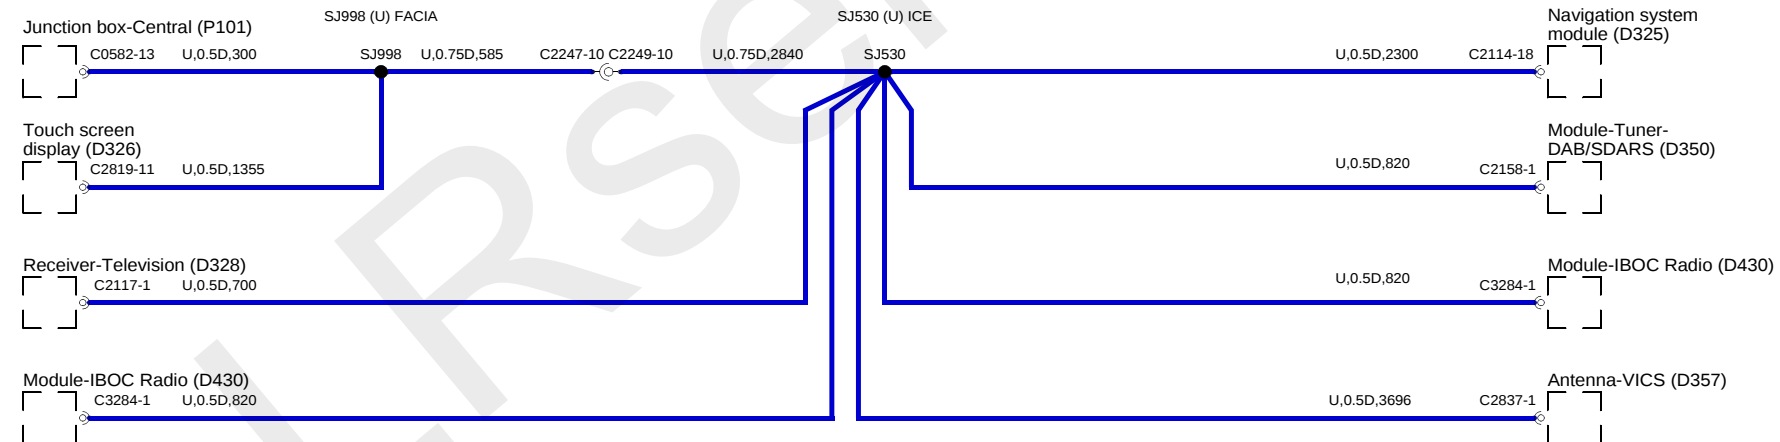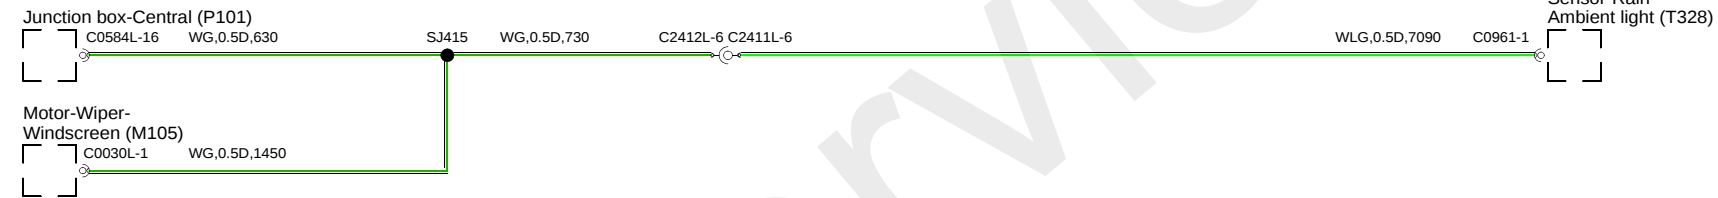




SJ444 (NK) TRANSMISSION AUTO

 


SJ445 (NK) ENGINE-BAY

  


  SJ450 (NK) ENGINE BAY SJ7 (GU, B, WU) ENGINE SJ1 (WU) ENGINE

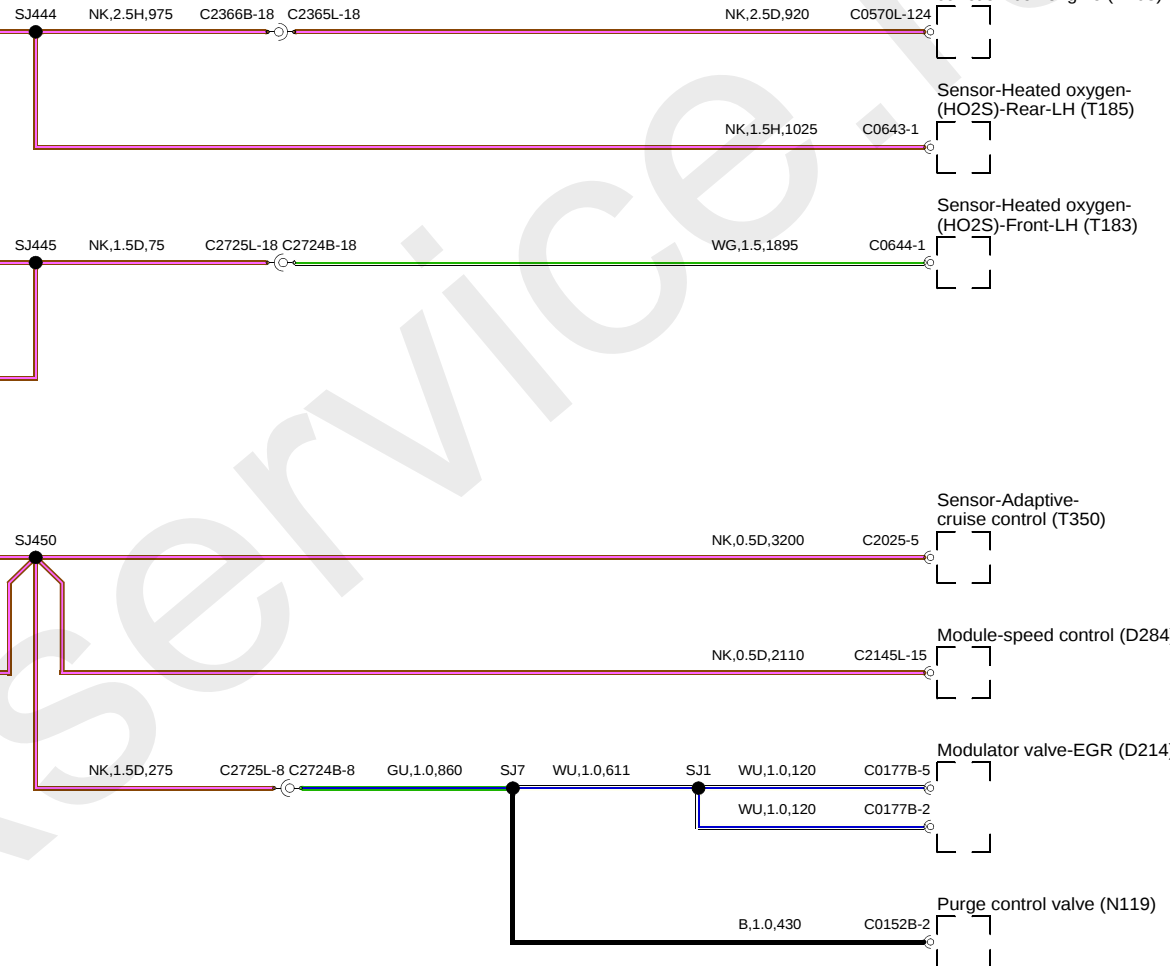


SJ489 (NB) ENGINE BAY

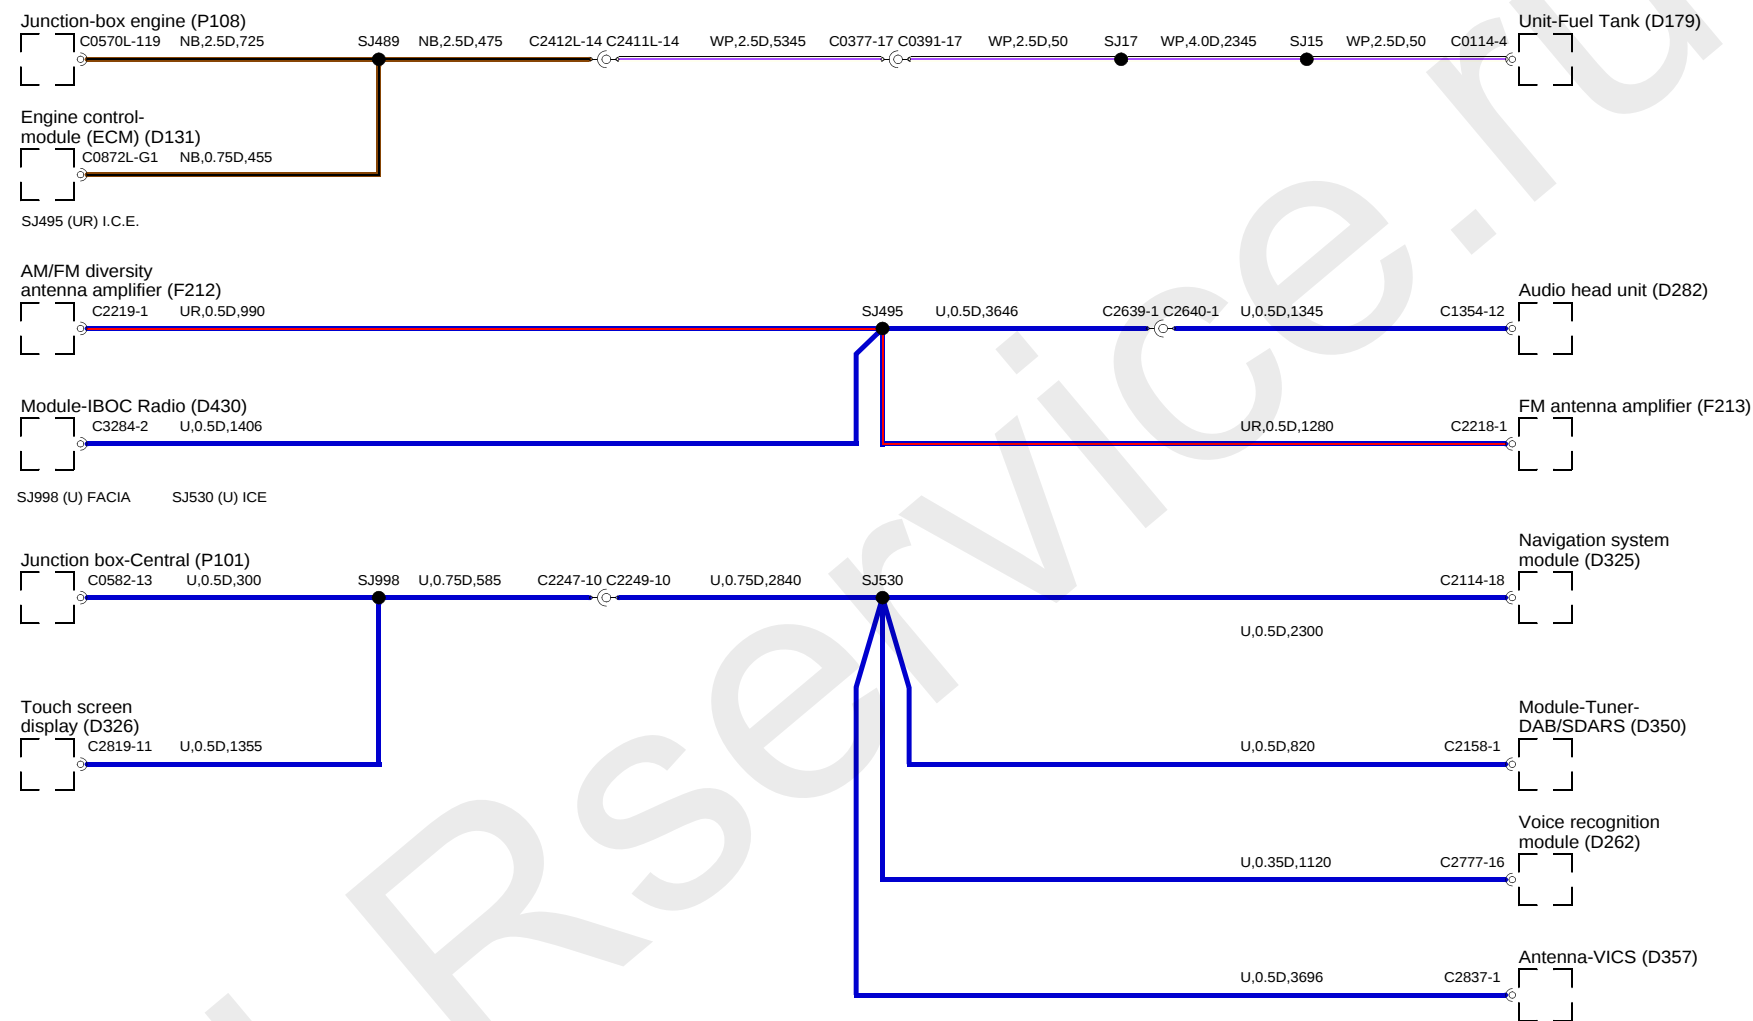

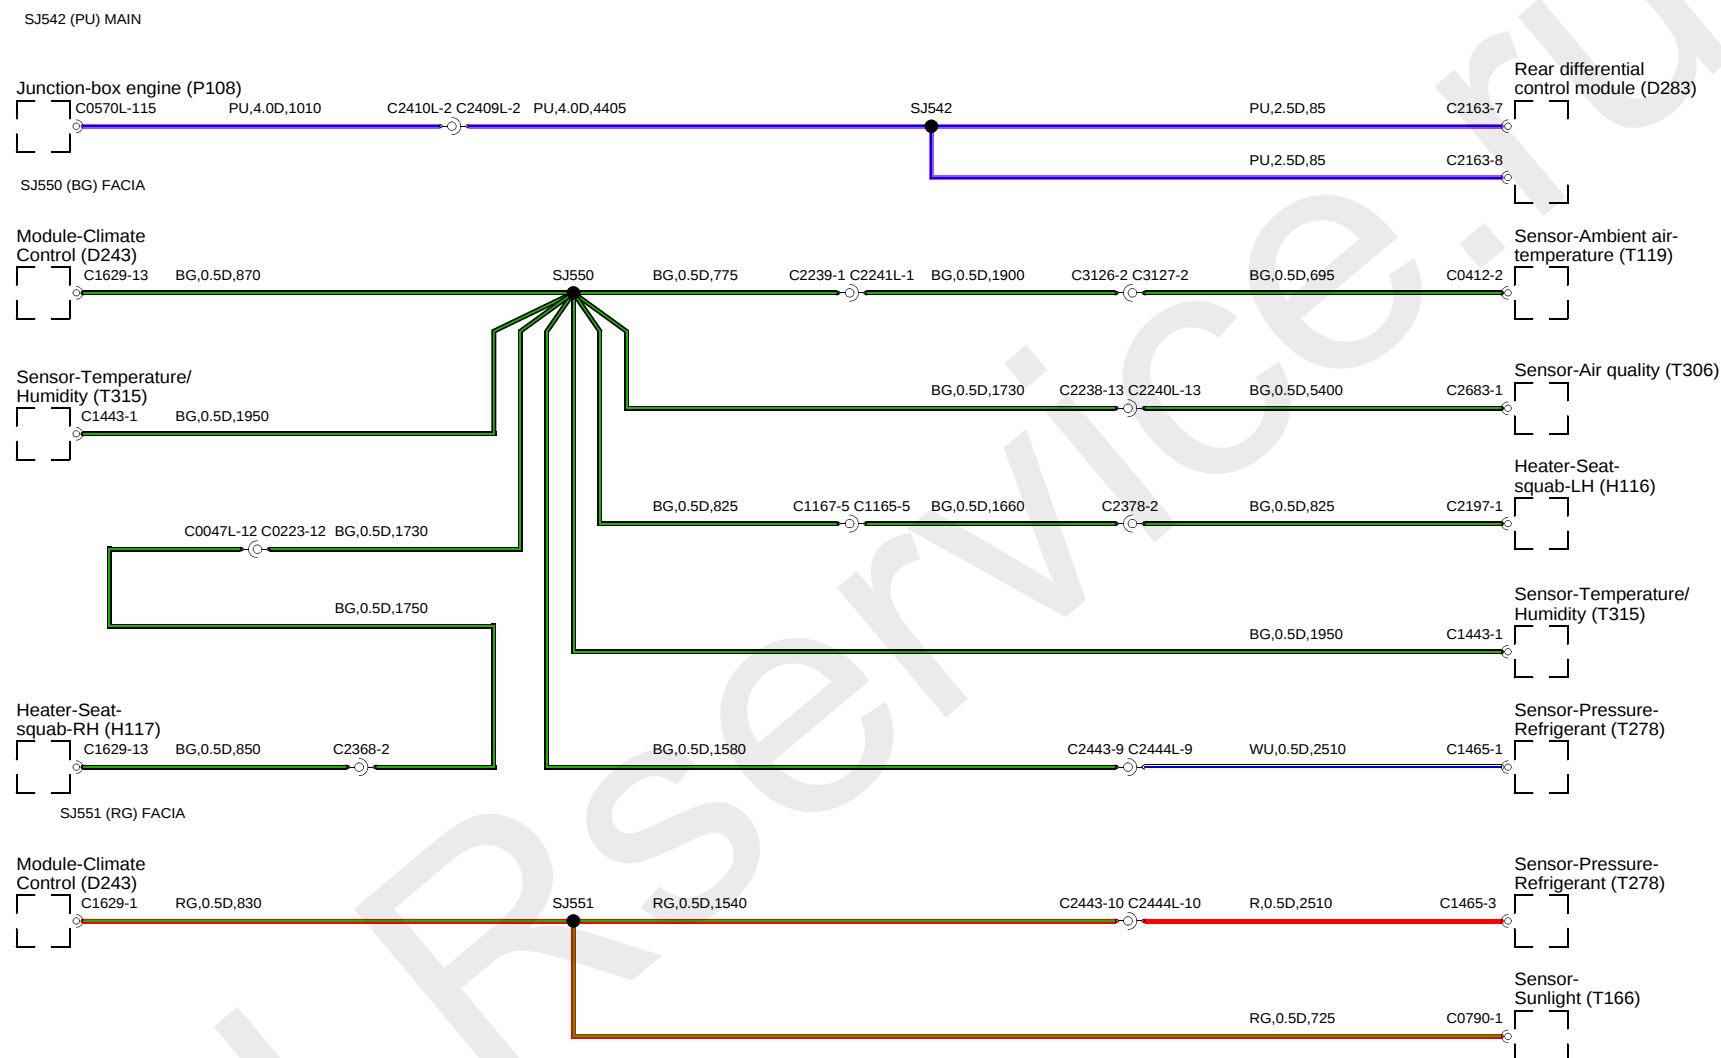


SJ559 (RU) ENGINE BAY

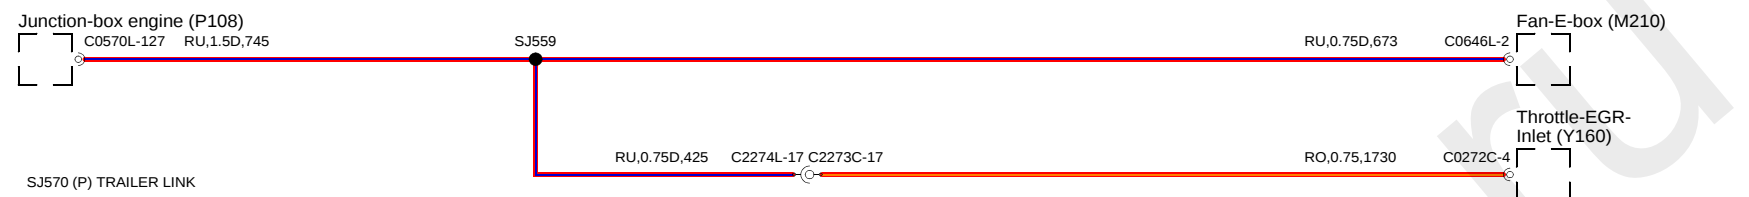

Fuse-Trailer (P136)




SJ571 (RO) TRAILER LINK

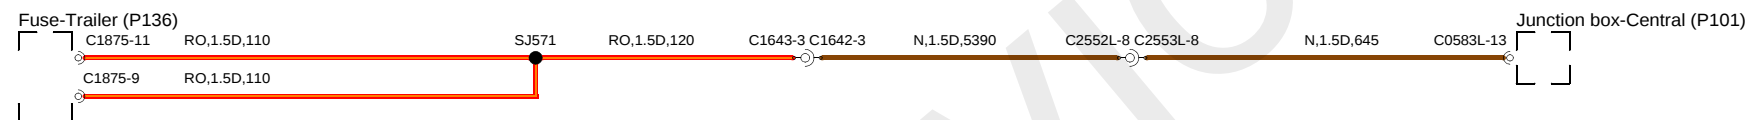


SJ572 (NR) ENGINE BAY




SJ574 (LG) ENGINE BAY

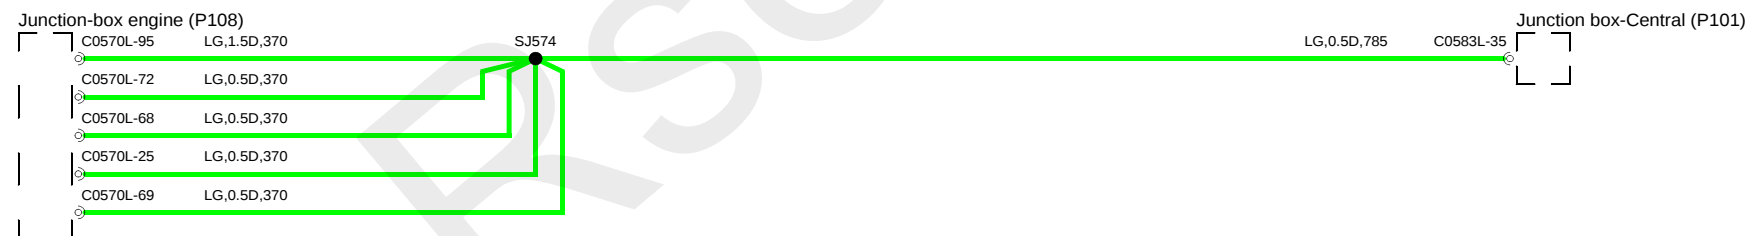

SJ592 (GO) ENGINE BAY

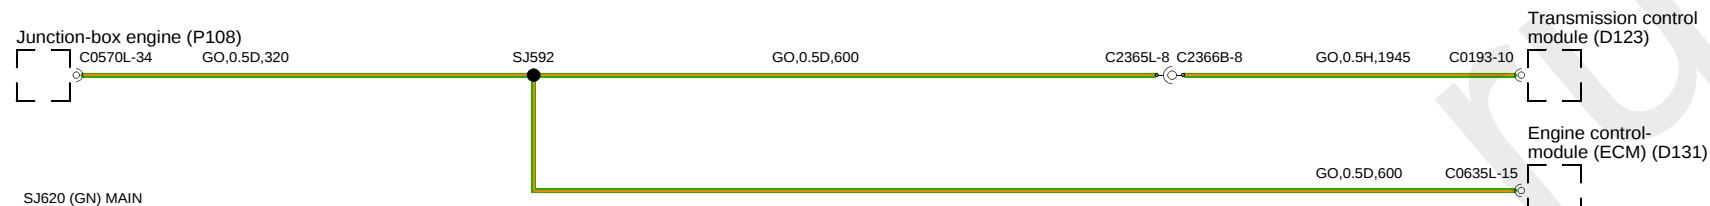


SJ620 (GN) MAIN

 


SJ630 (BN) ENGINE BAY




SJ670 (BG) MAIN

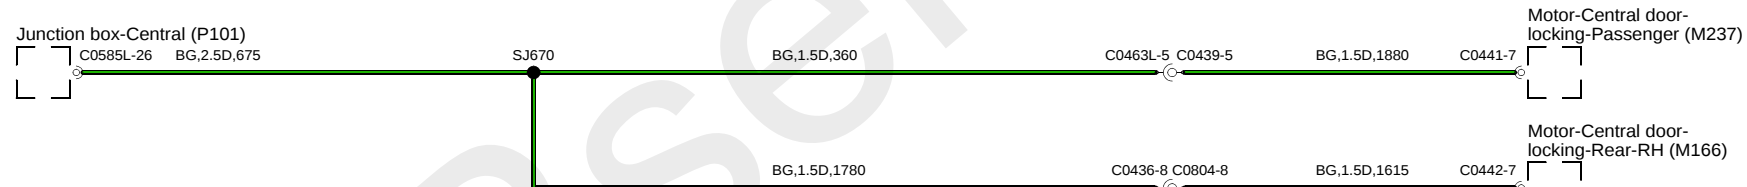


SJ668 (LGW) FACIA

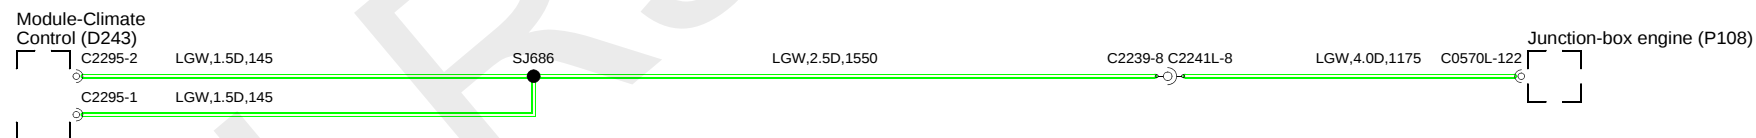


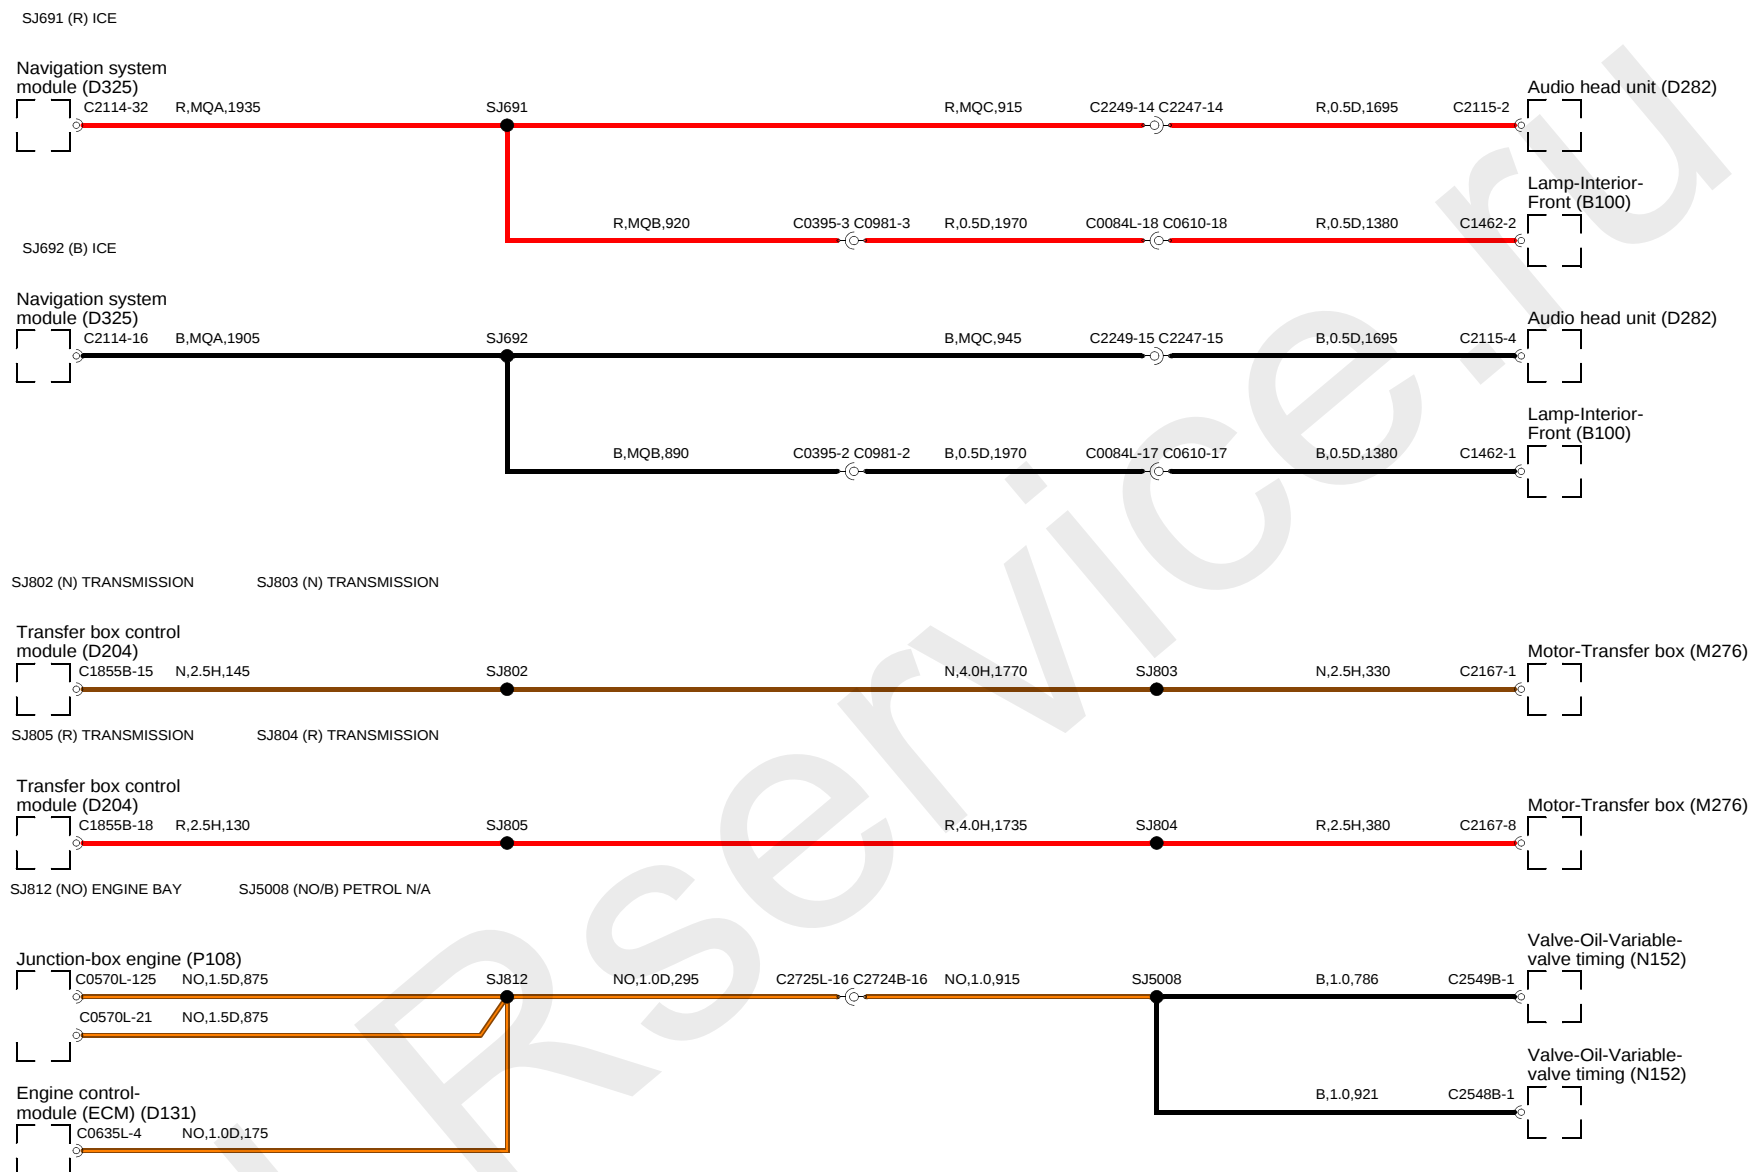


SJ6 (GP) MAIN SJ882 (GP) ENGINE BAY SJ813 (GP) ENGINE BAY

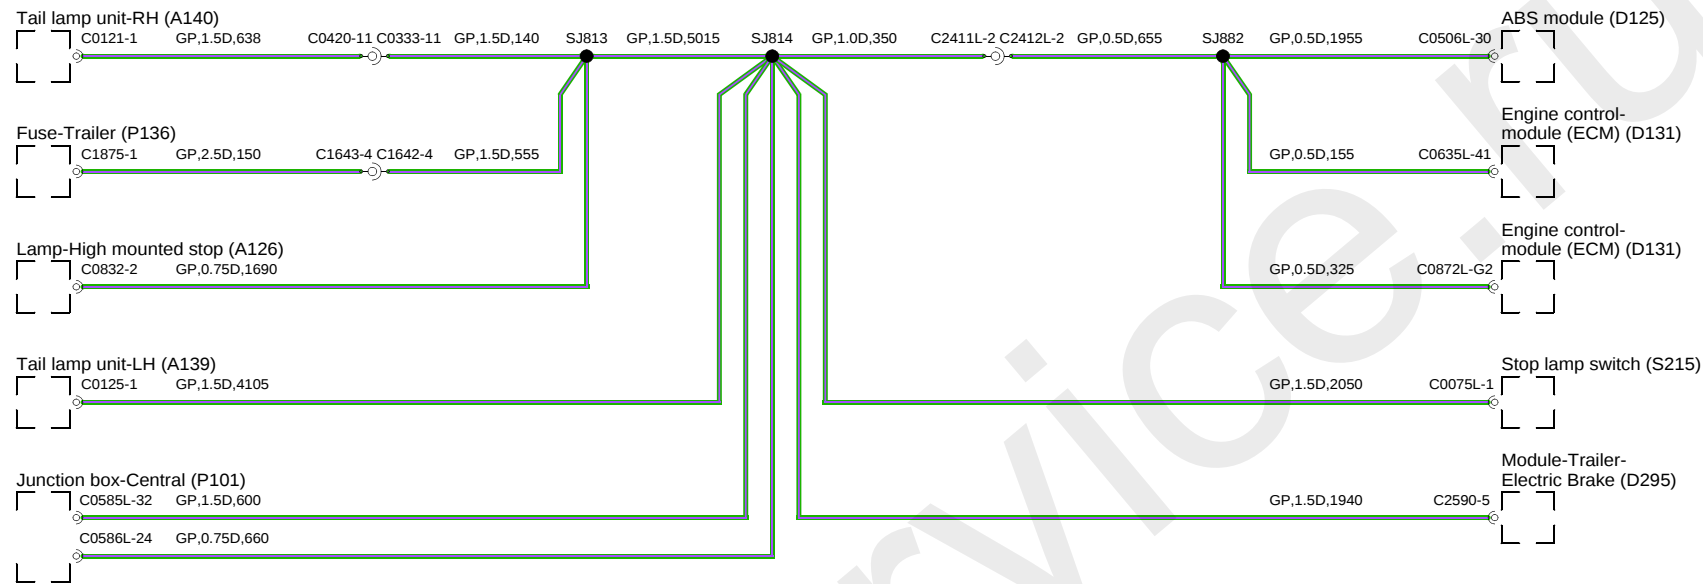


SJ923 (PU) ENGINE BAY

 


SJ901 (YB) ENGINE BAY

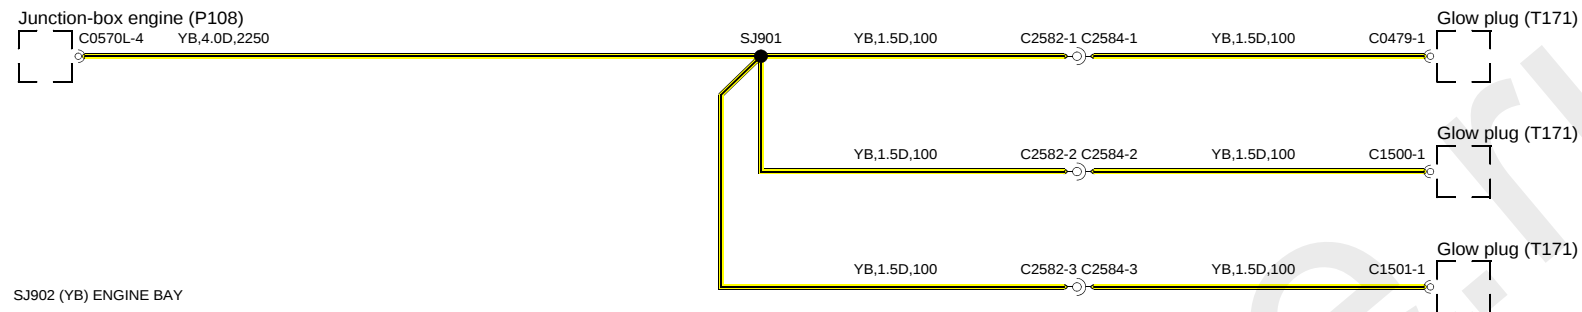


SJ902 (YB) ENGINE BAY

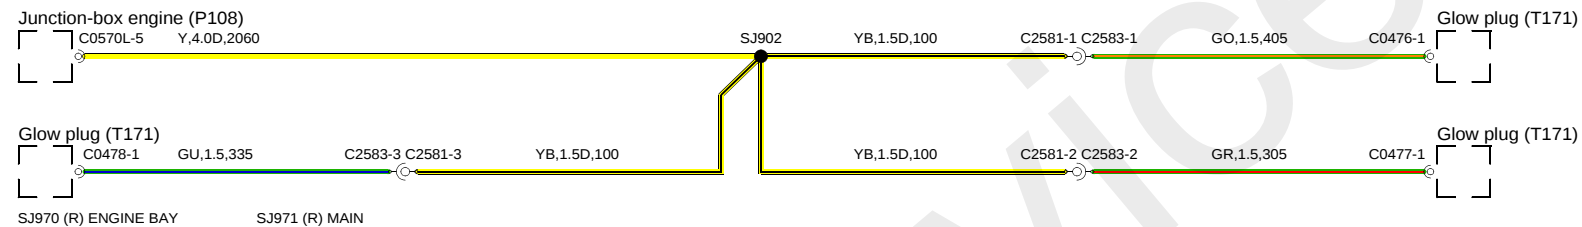

Junction box-Central (P101)

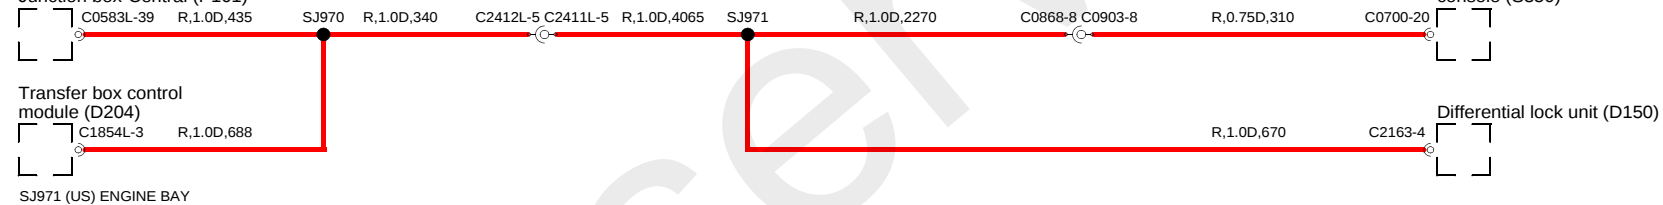


Junction box-Central (P101)

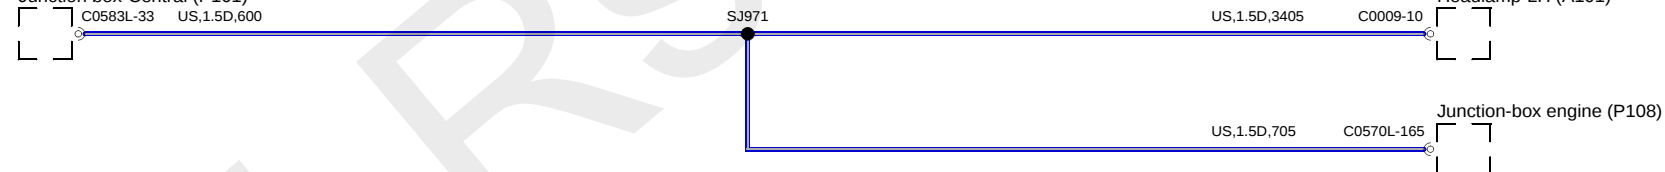


SJ995 (R) ENGINE BAY

 Junction-box engine (P108)




SJ998 (R) CONSOLE

Lamp-Automatic gearbox-selector indicator (B113)

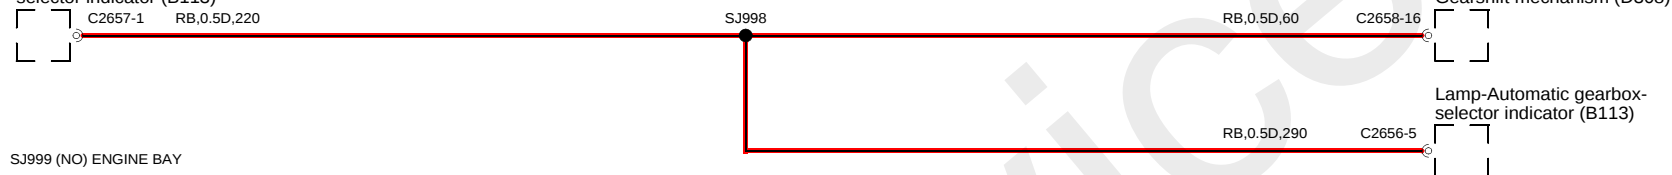


SJ999 (NO) ENGINE BAY


Junction-box engine (P108)

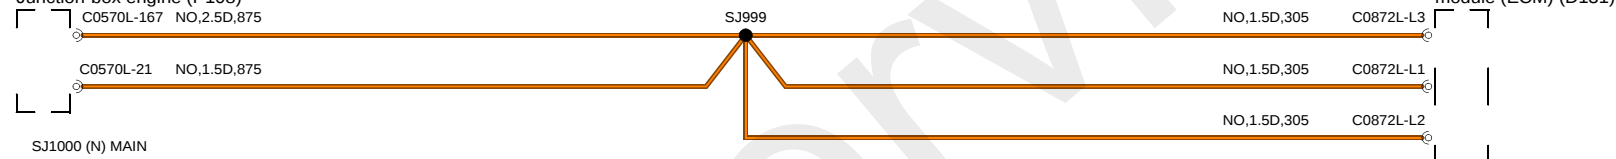



SJ1000 (N) MAIN


Junction box-Central (P101)

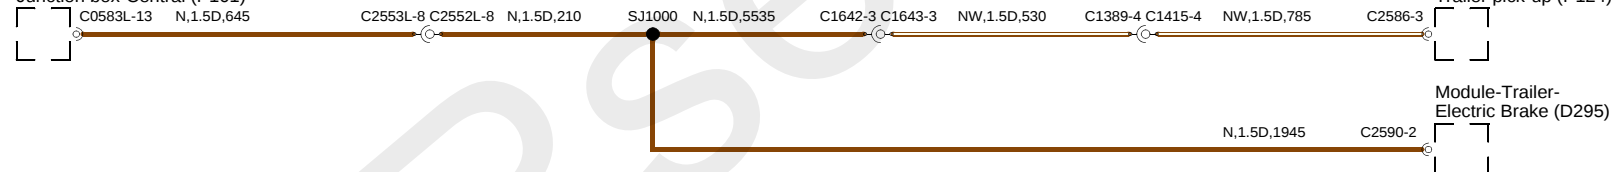


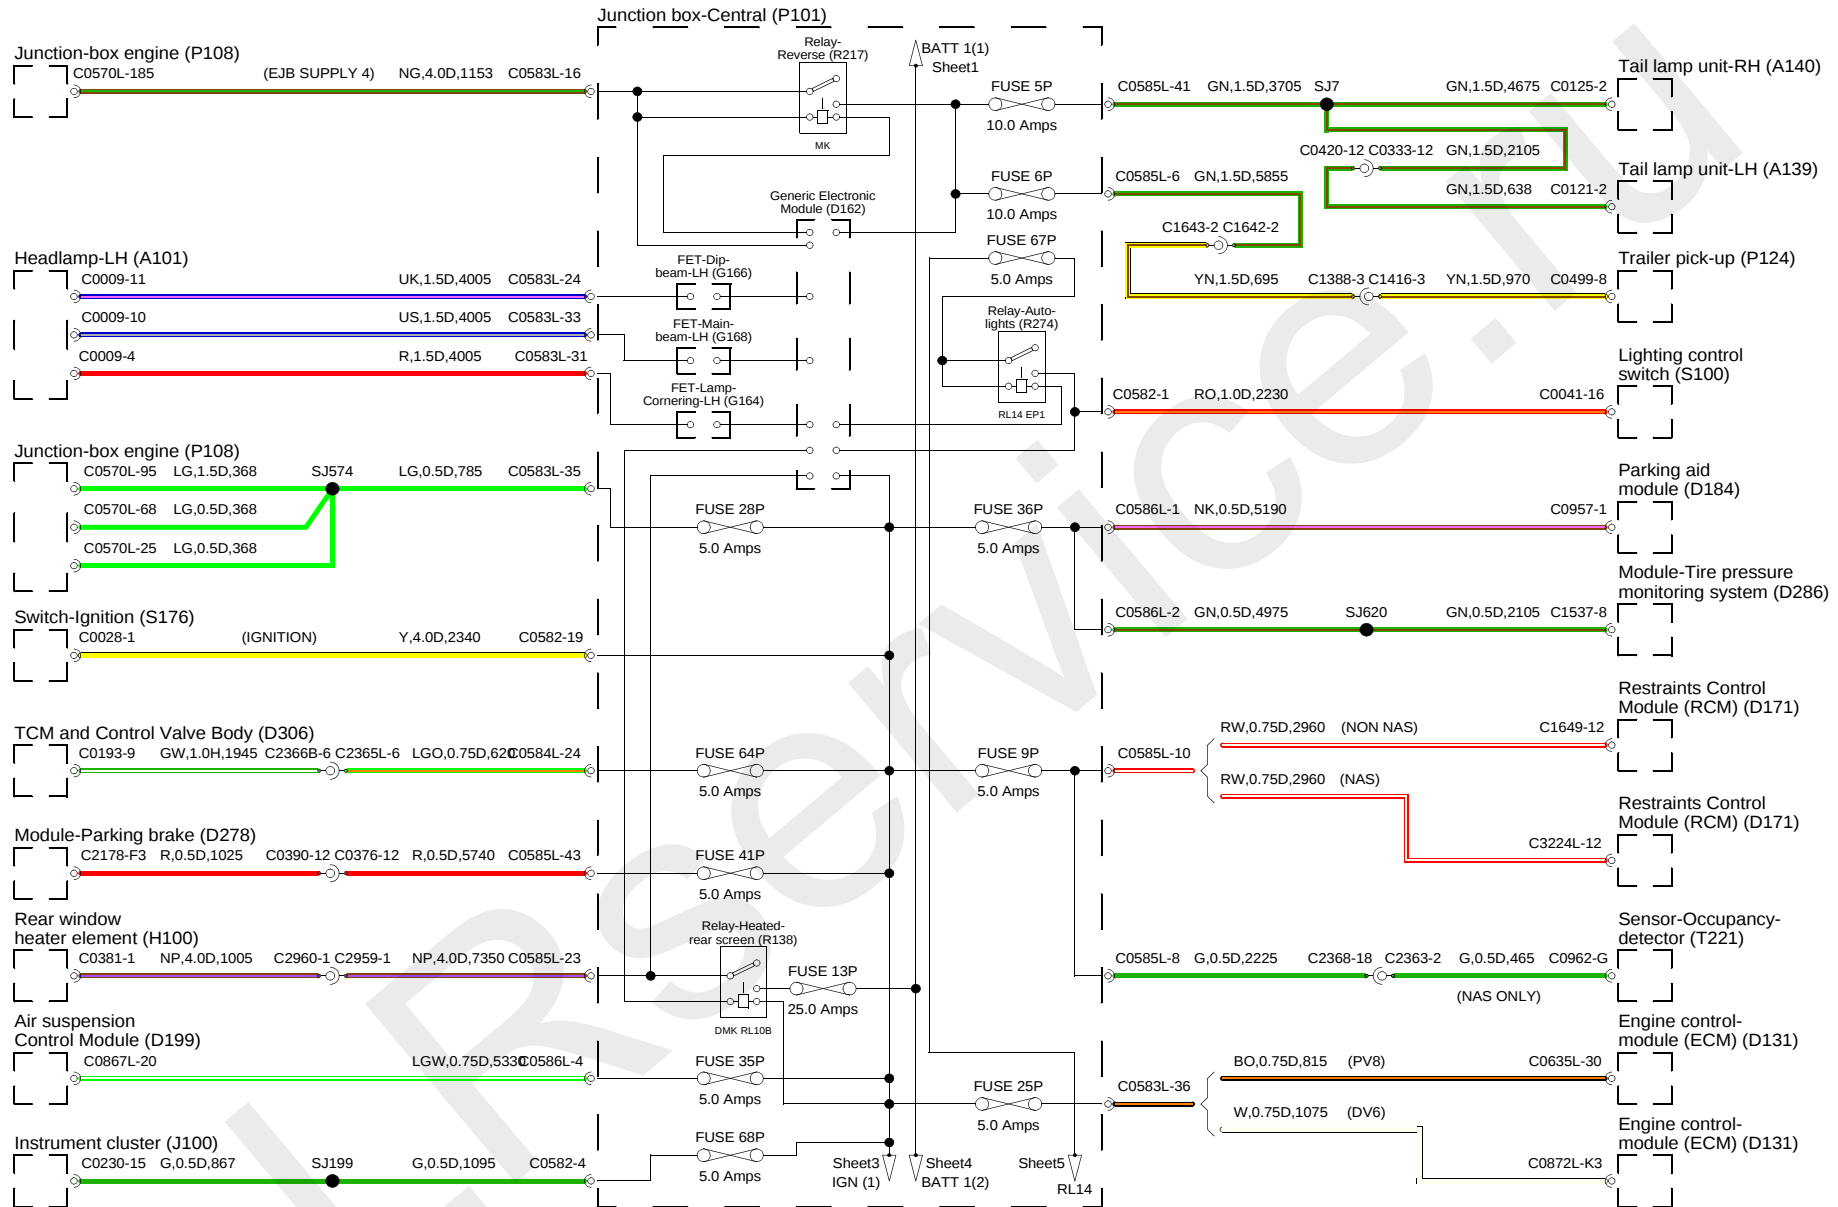


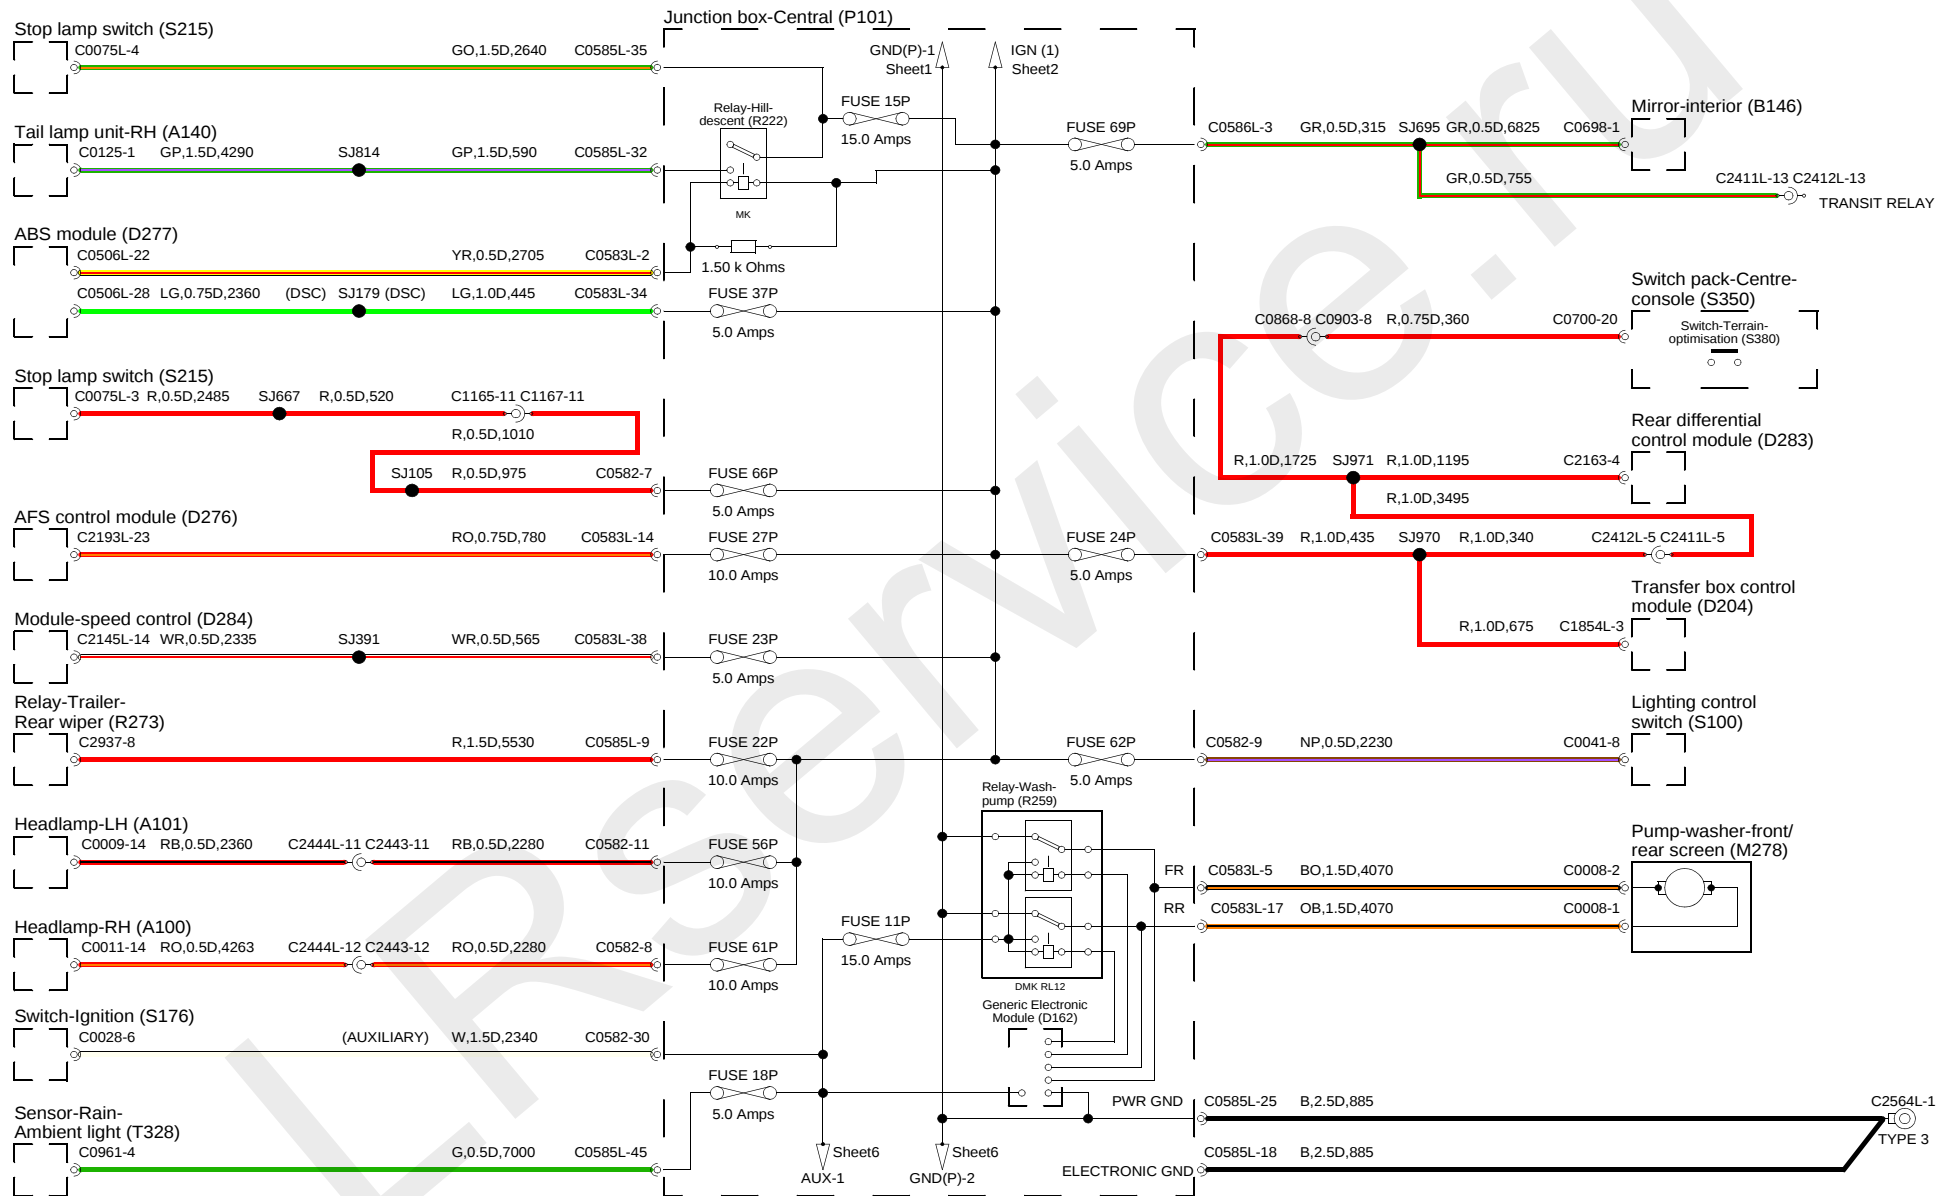


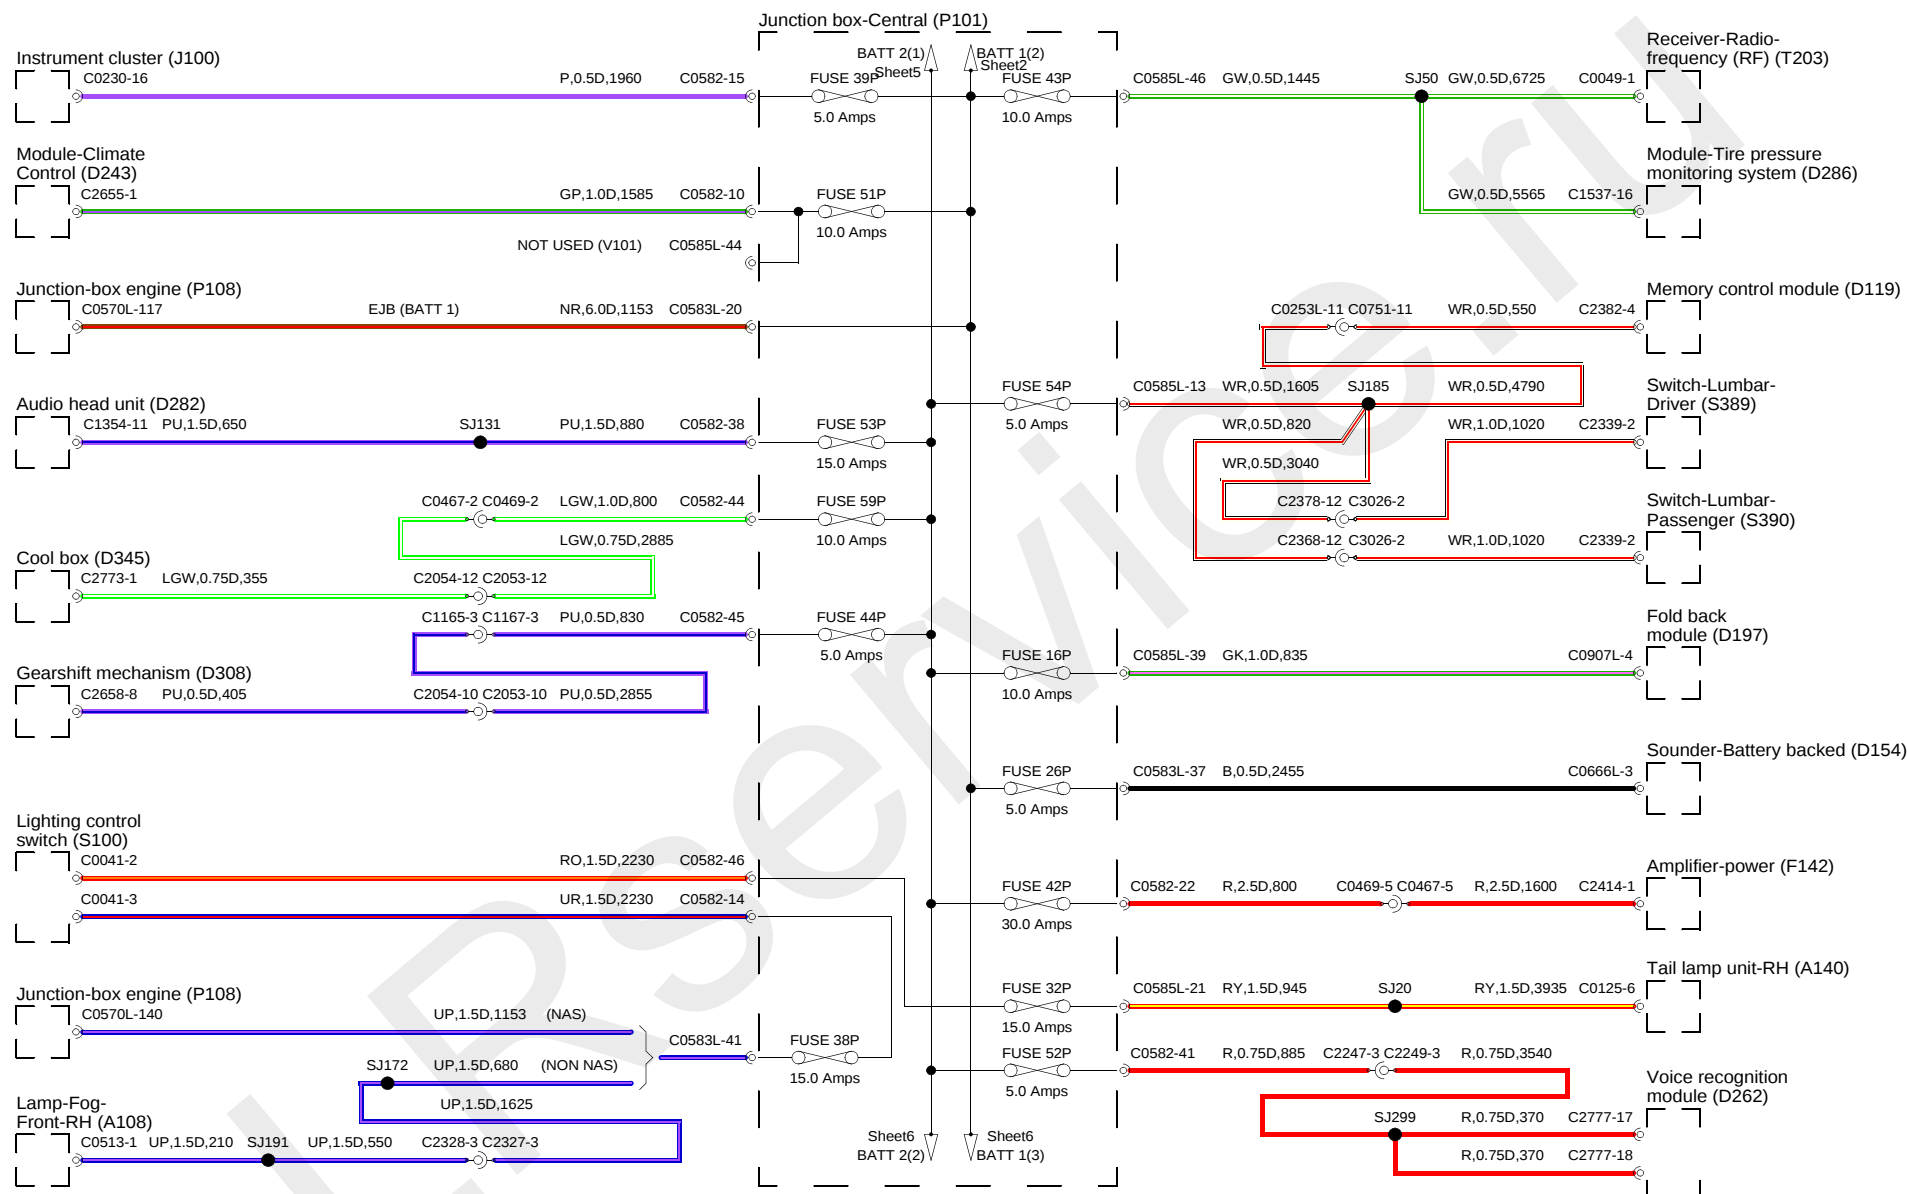

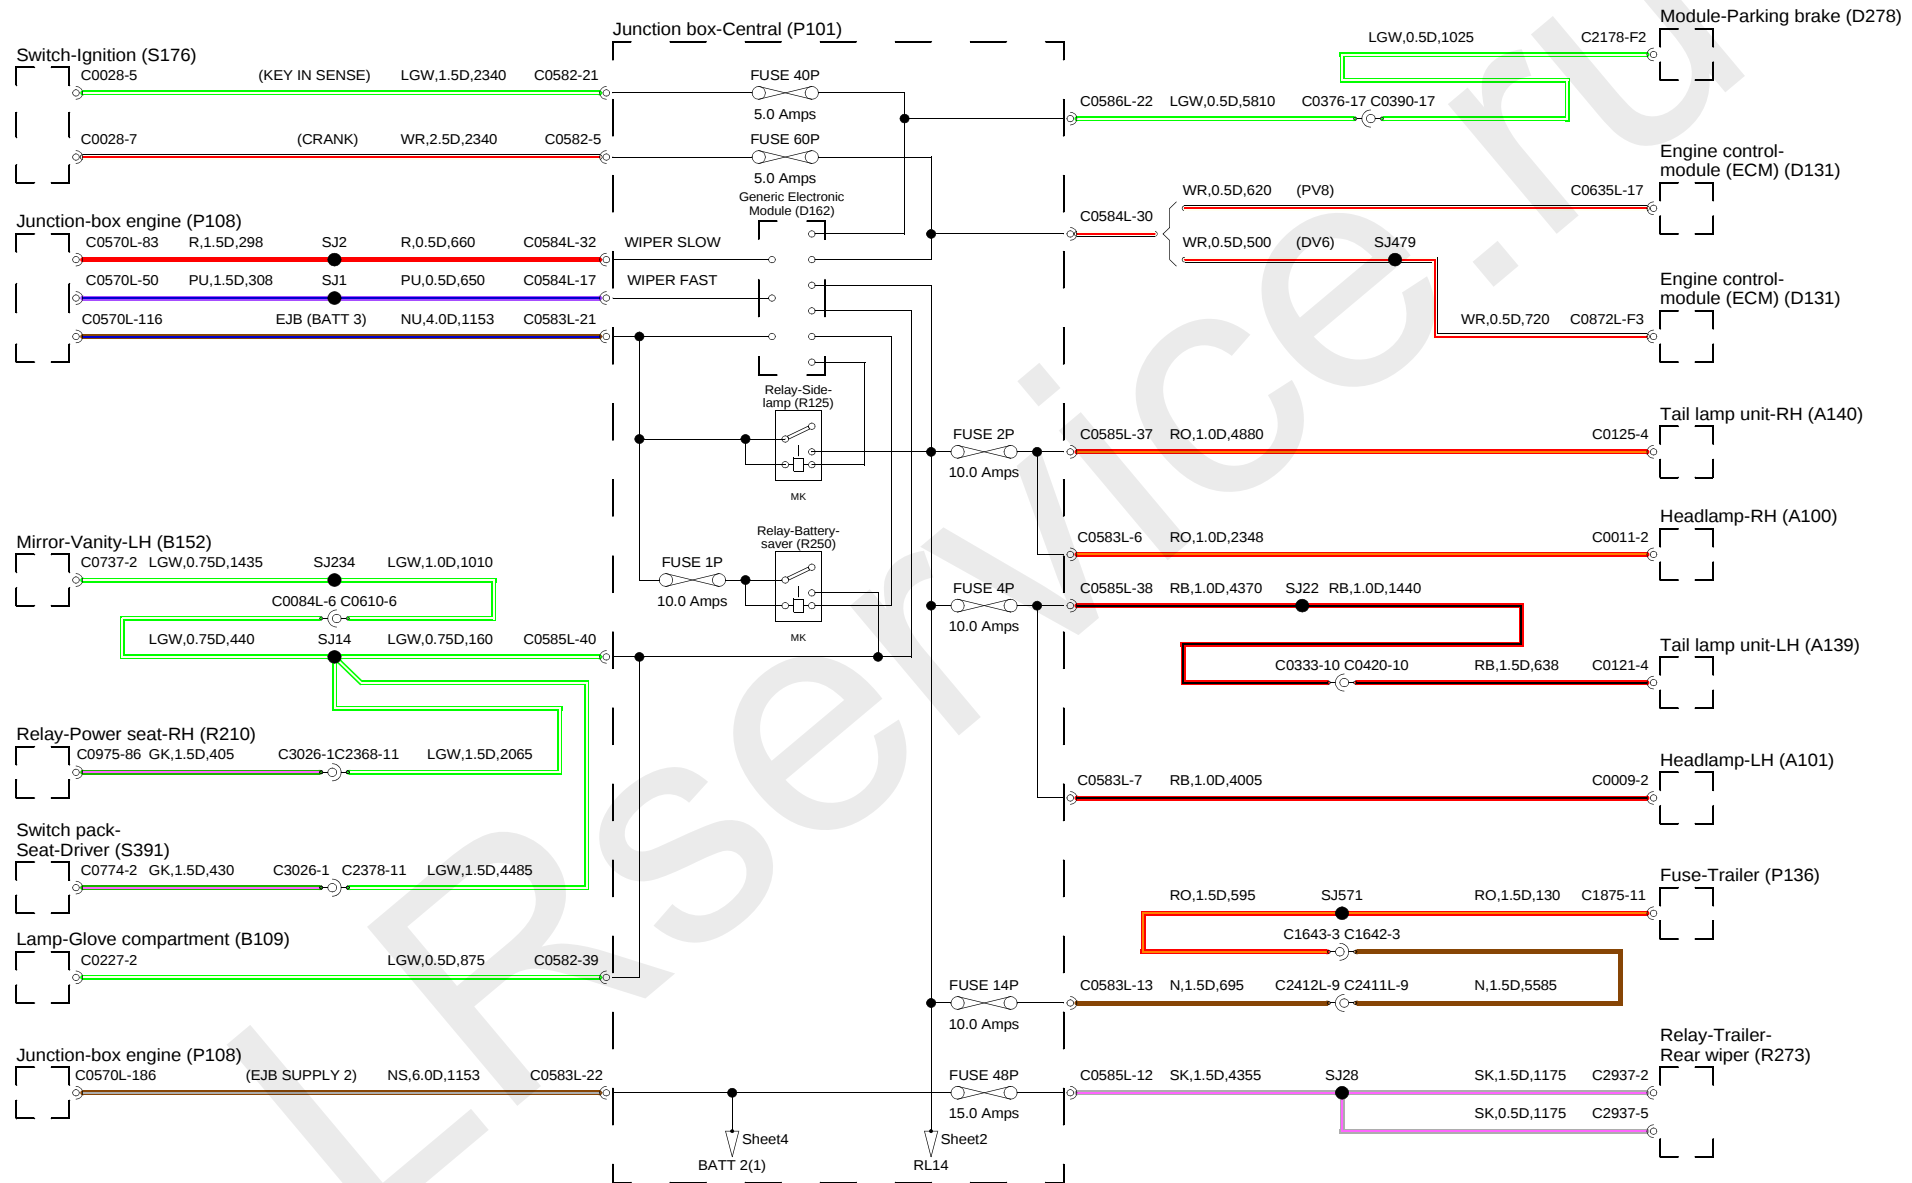


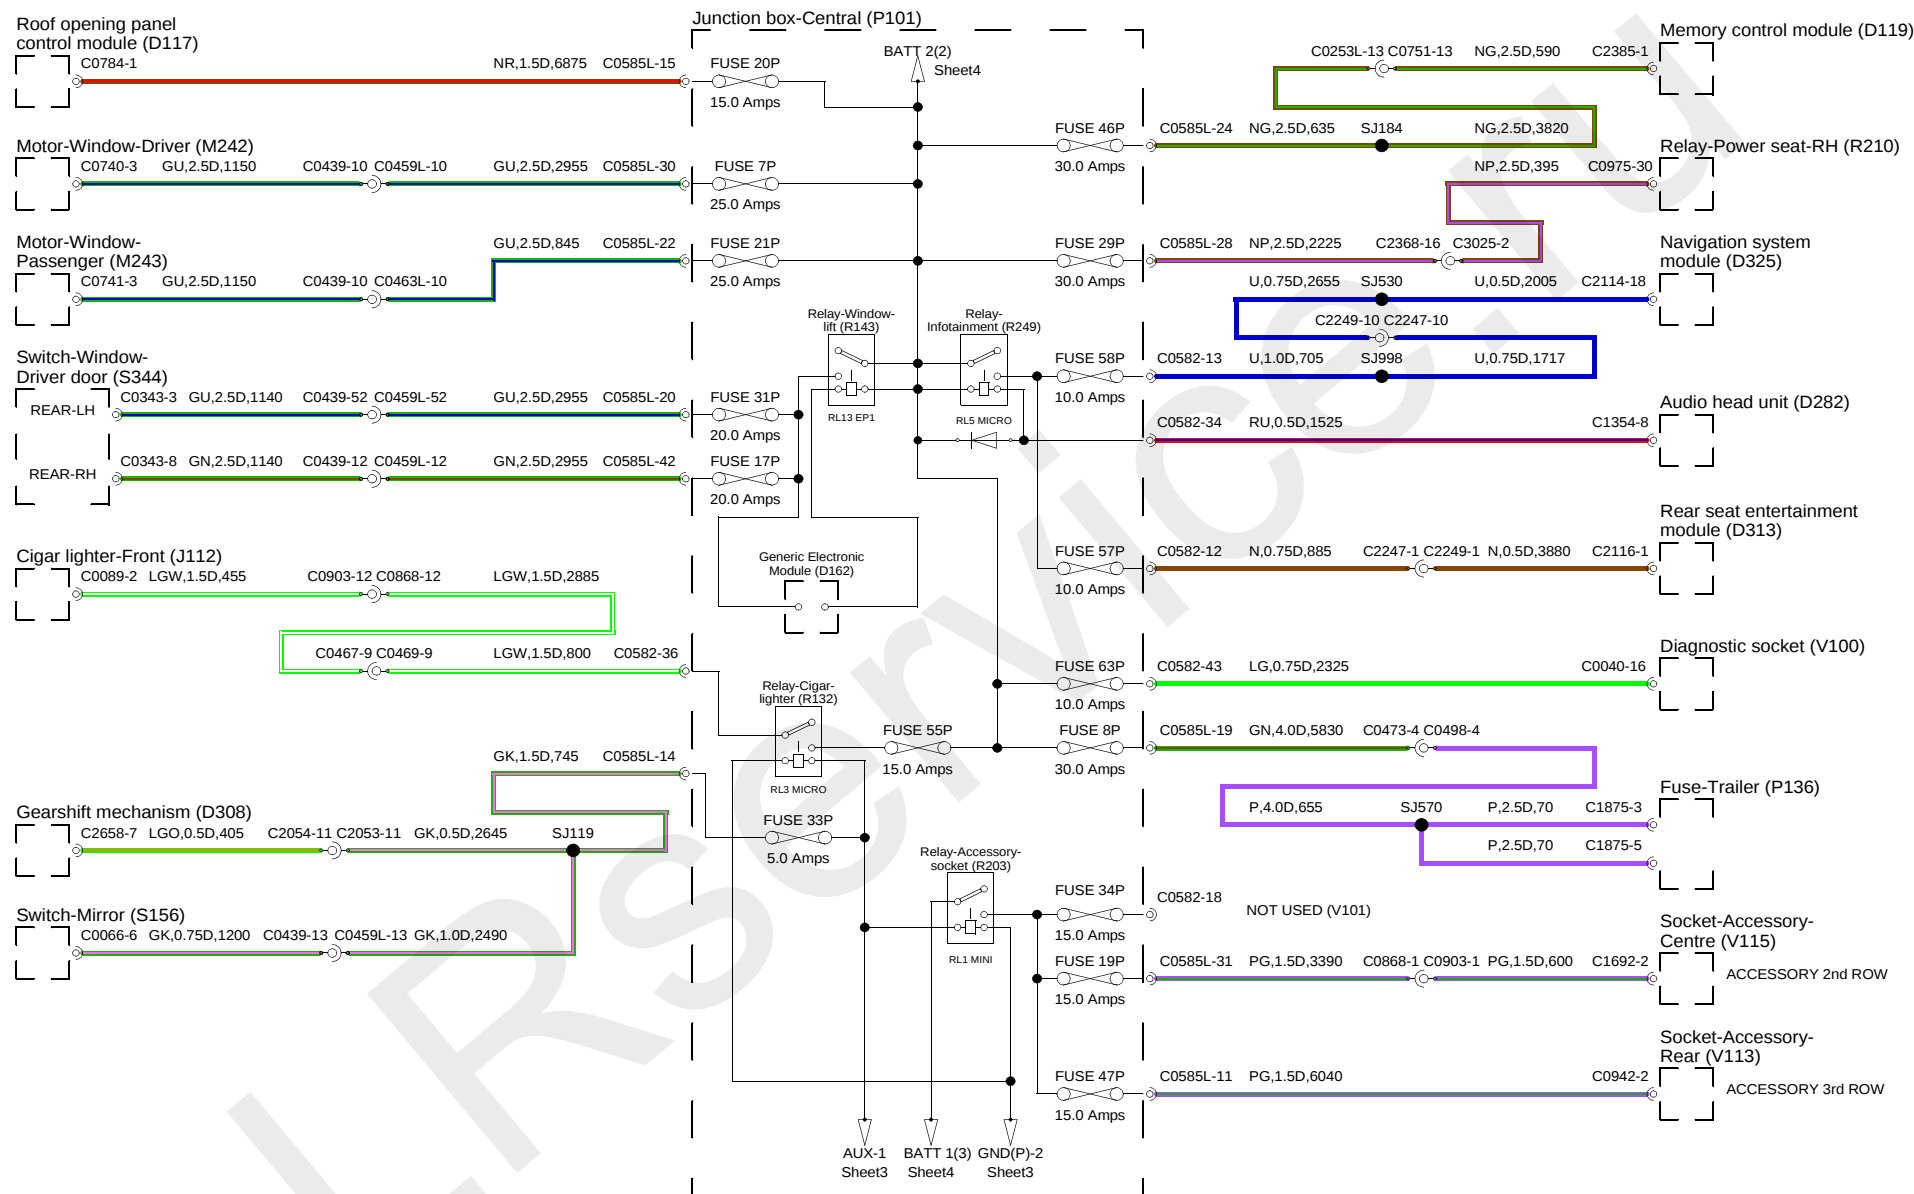


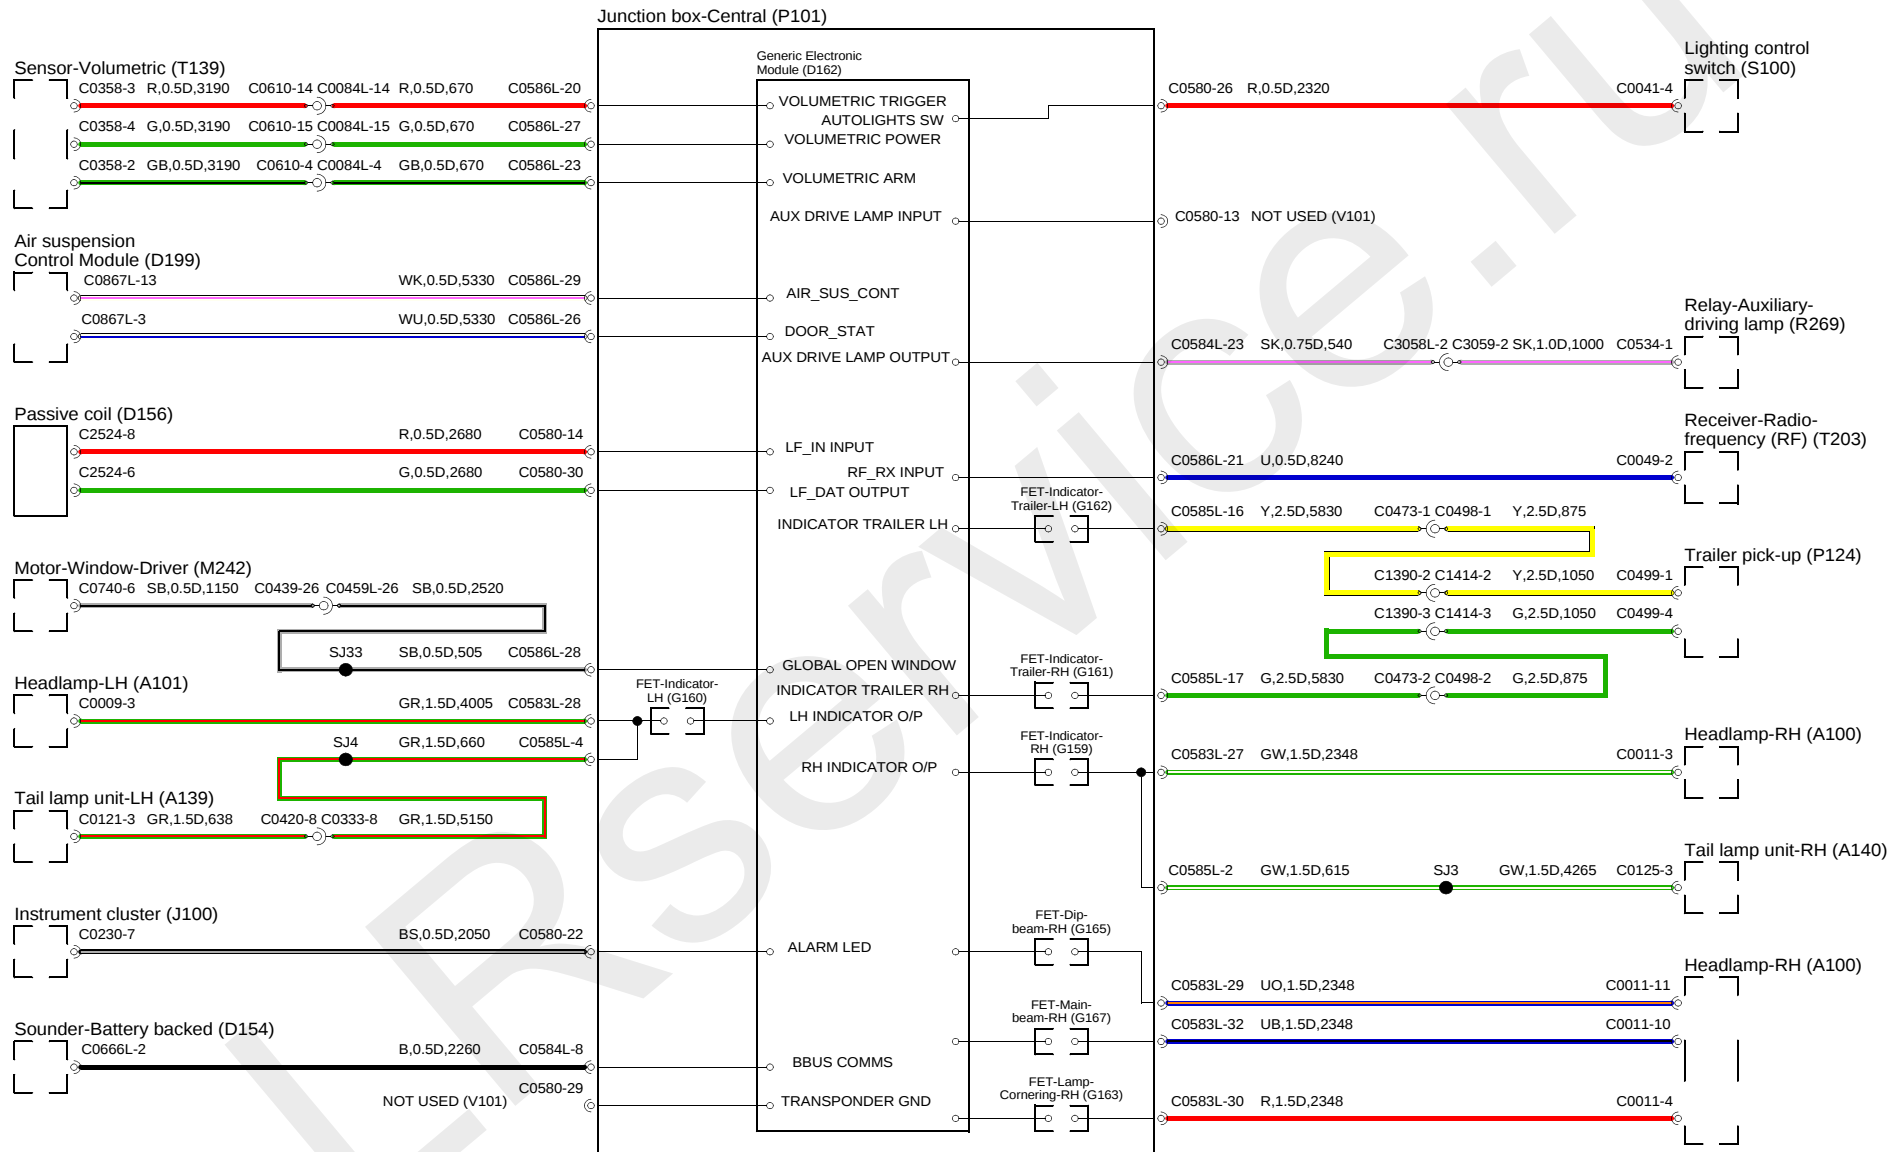


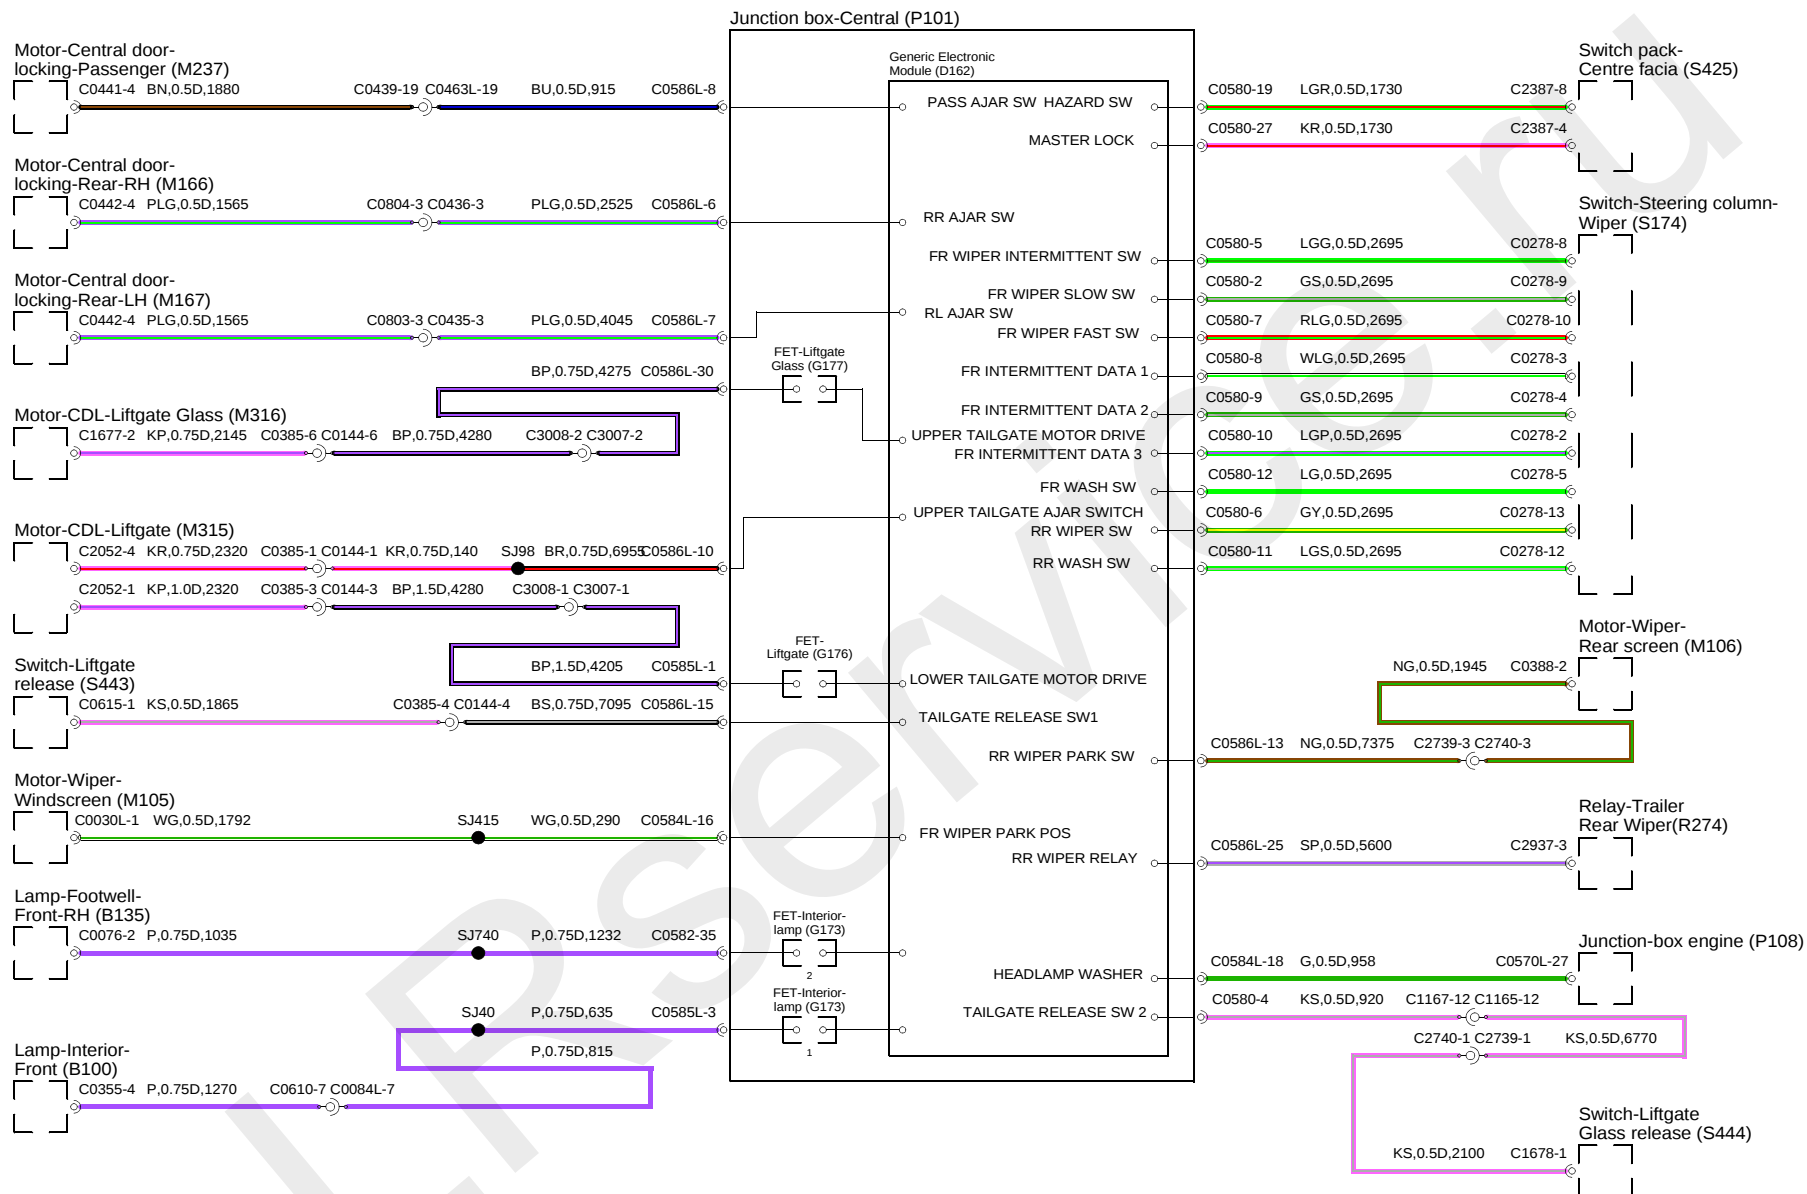





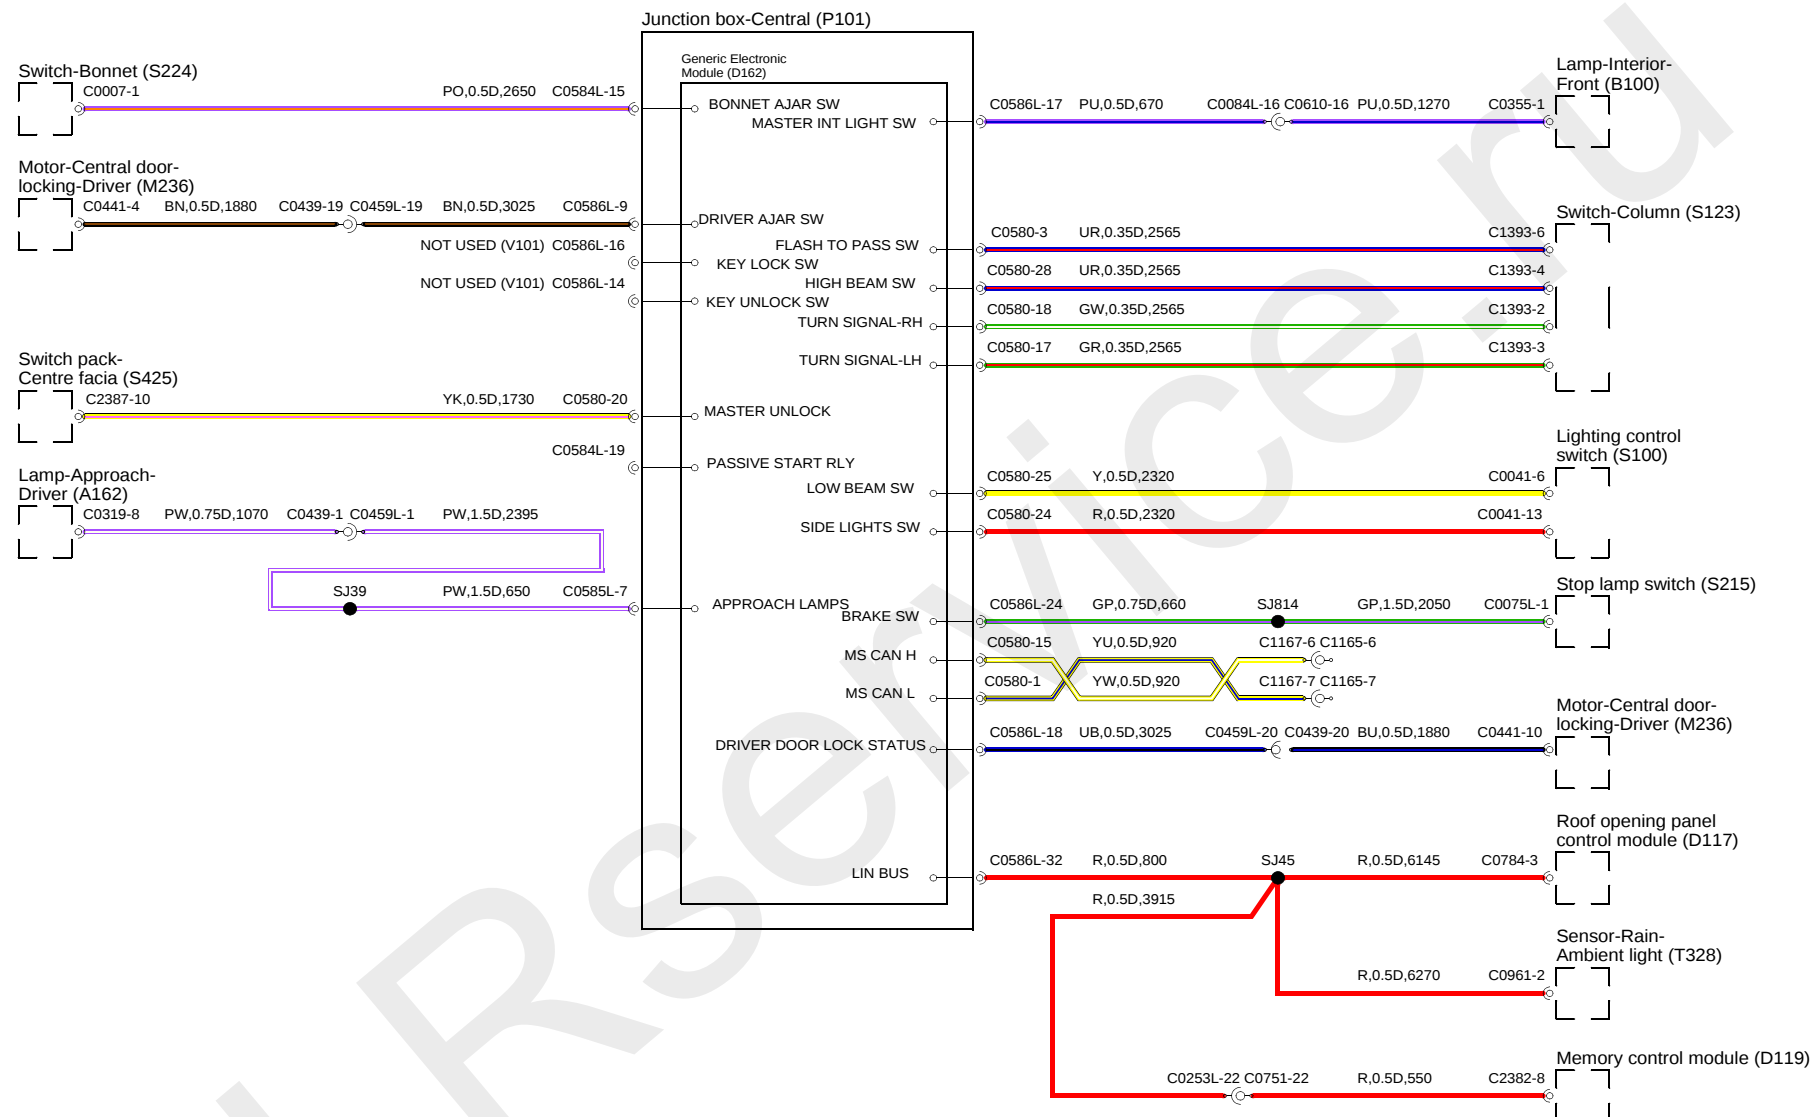


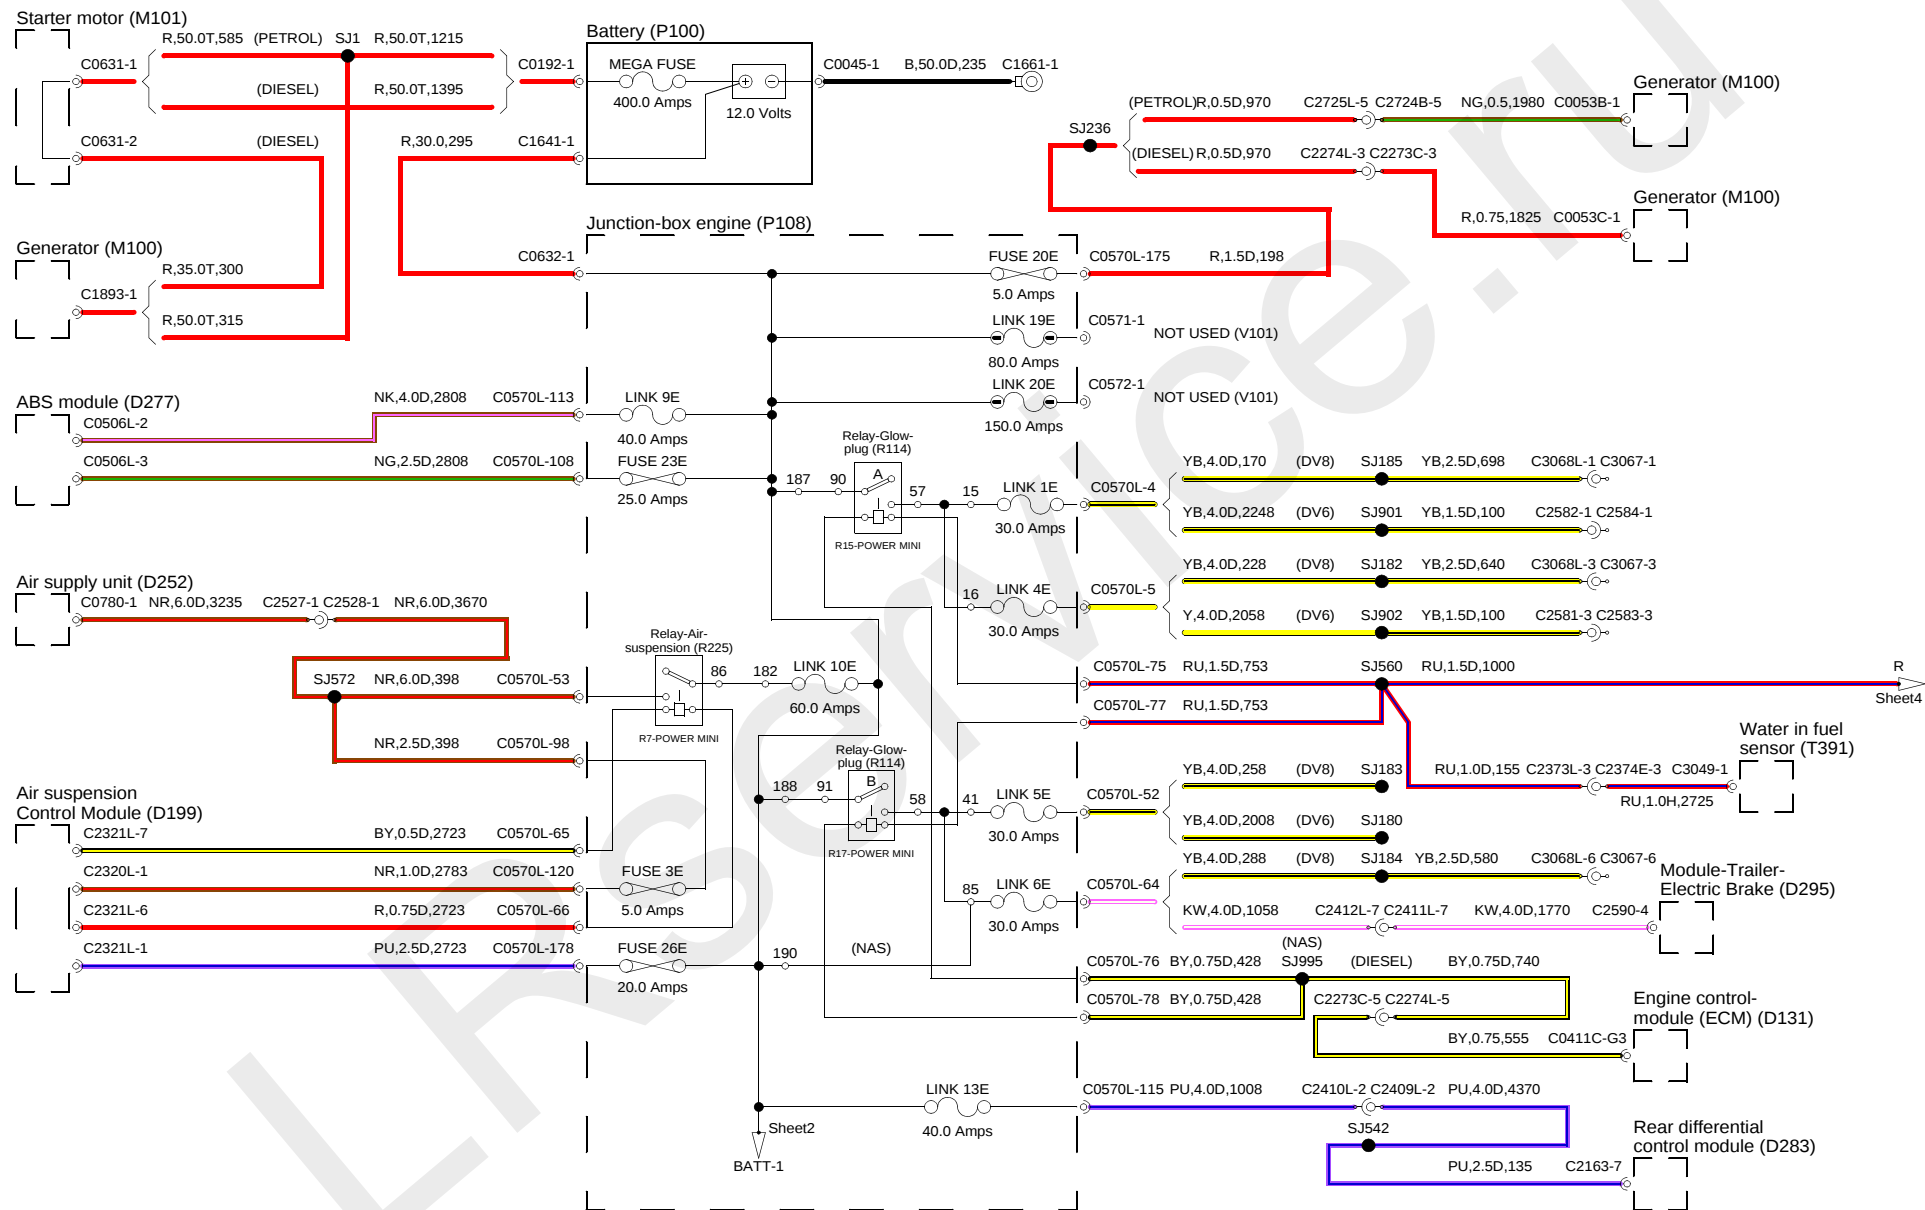


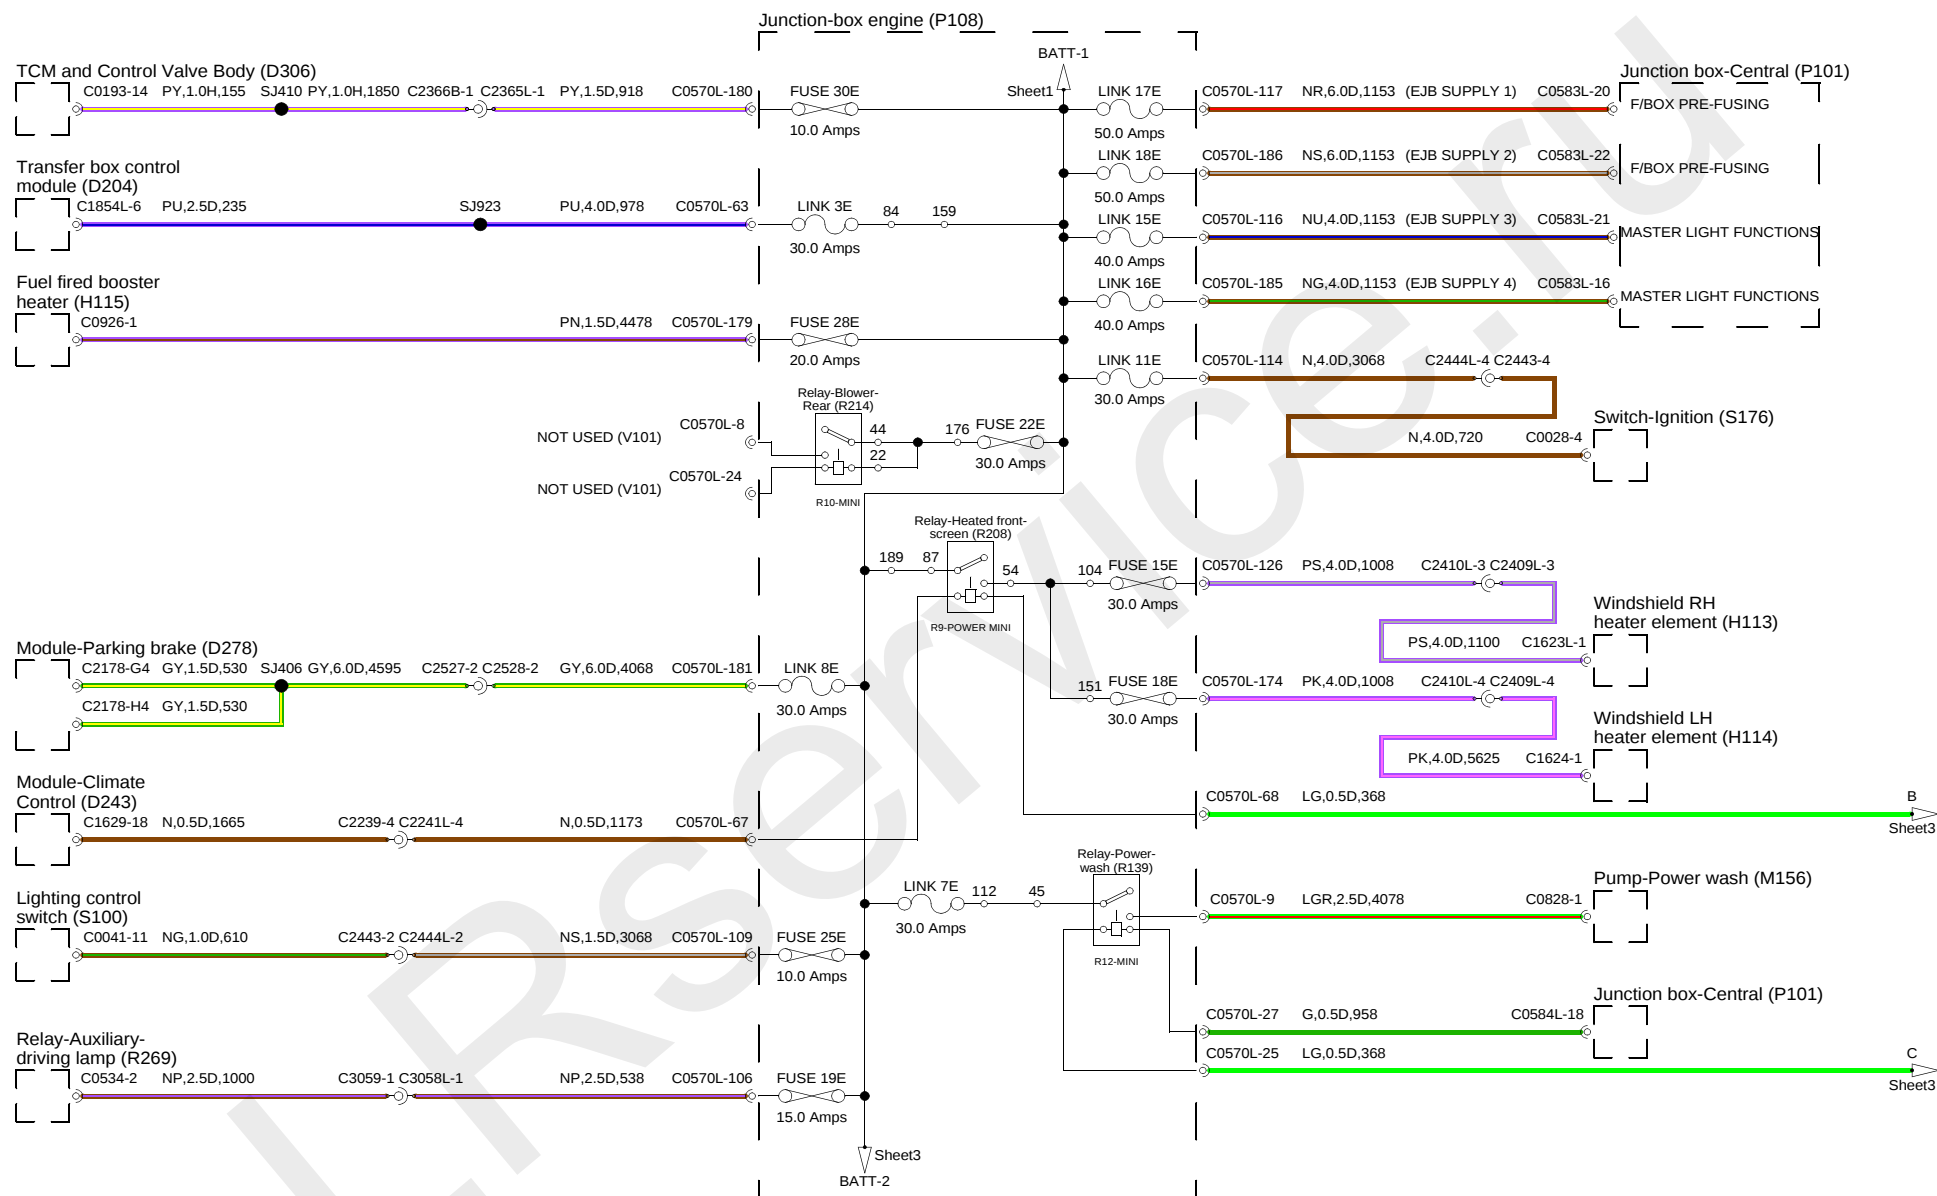


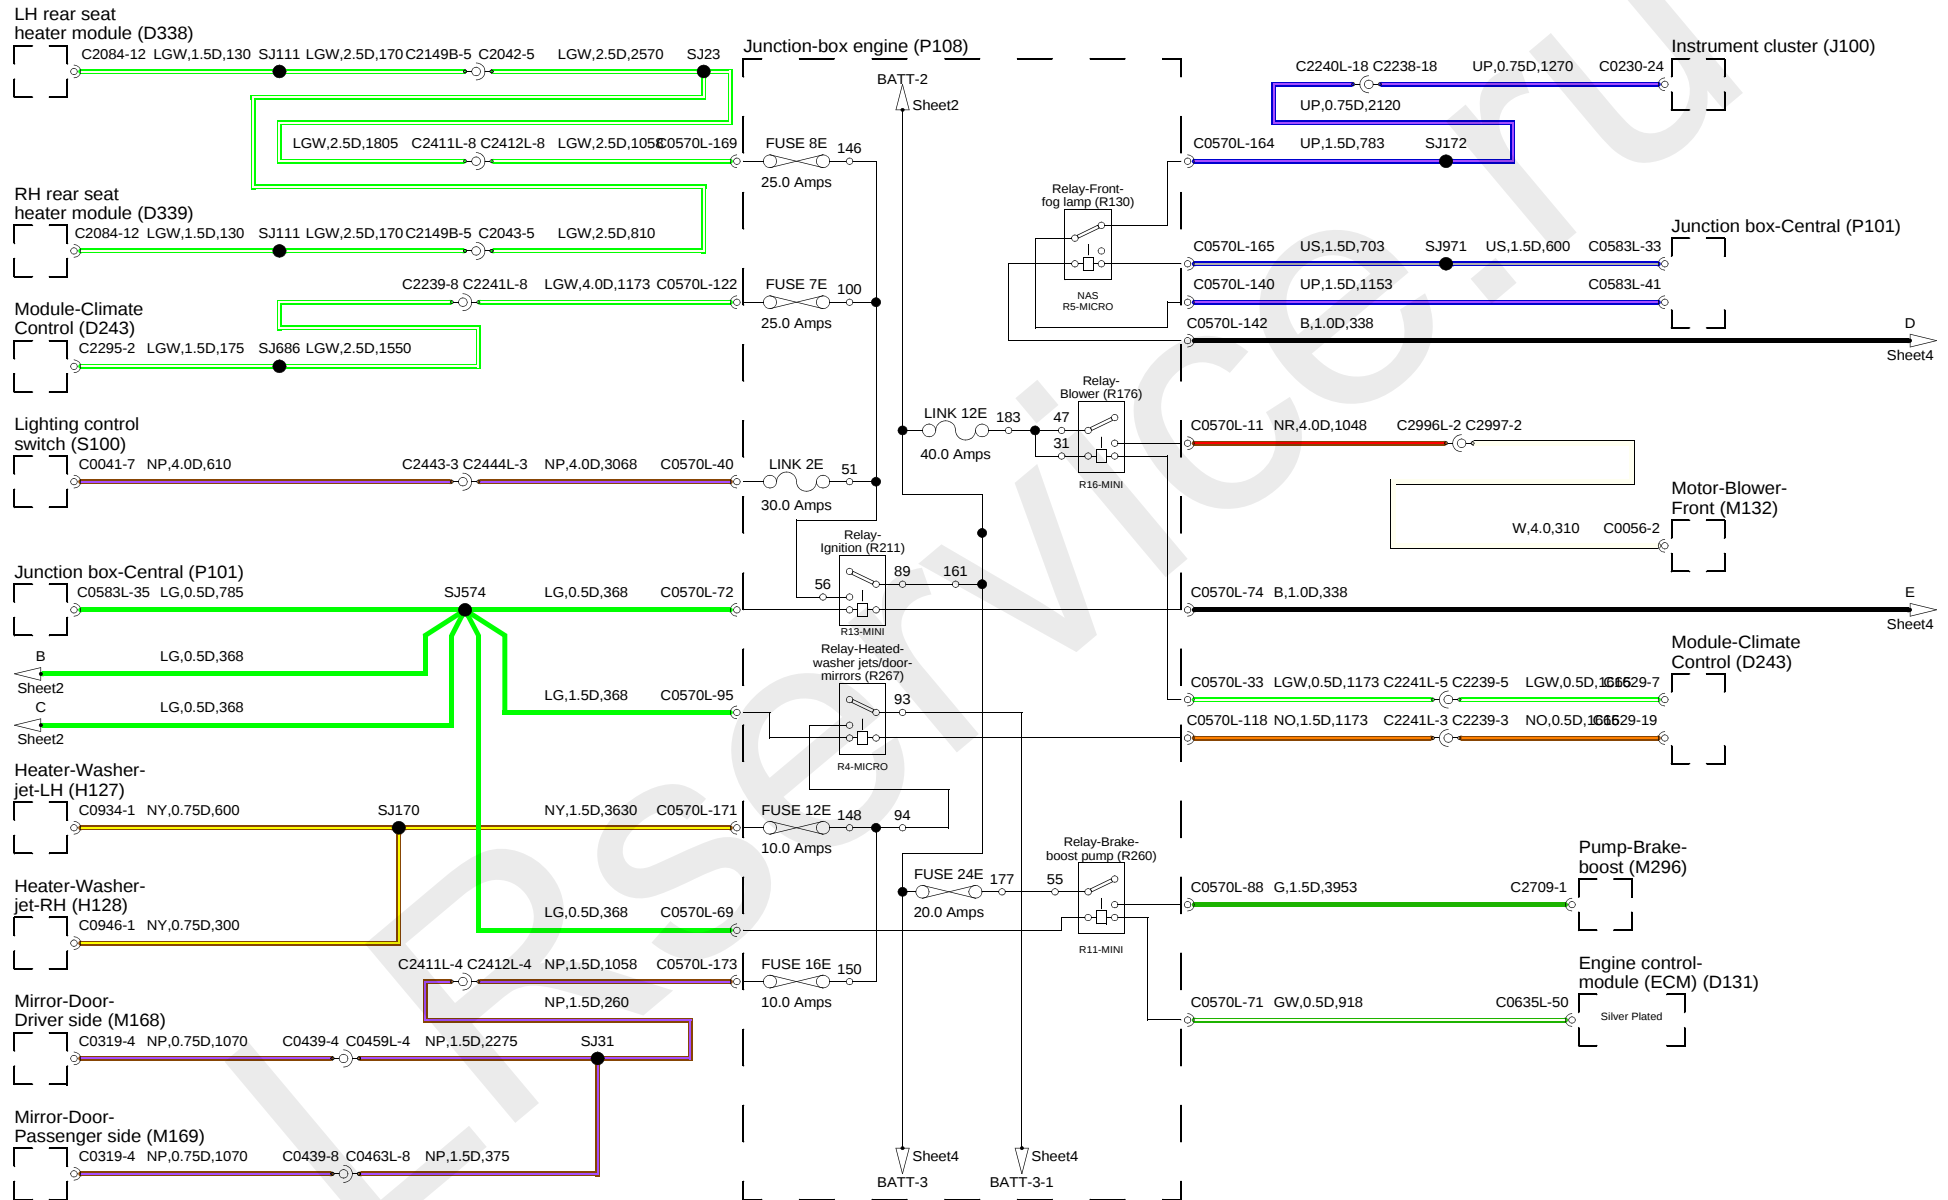


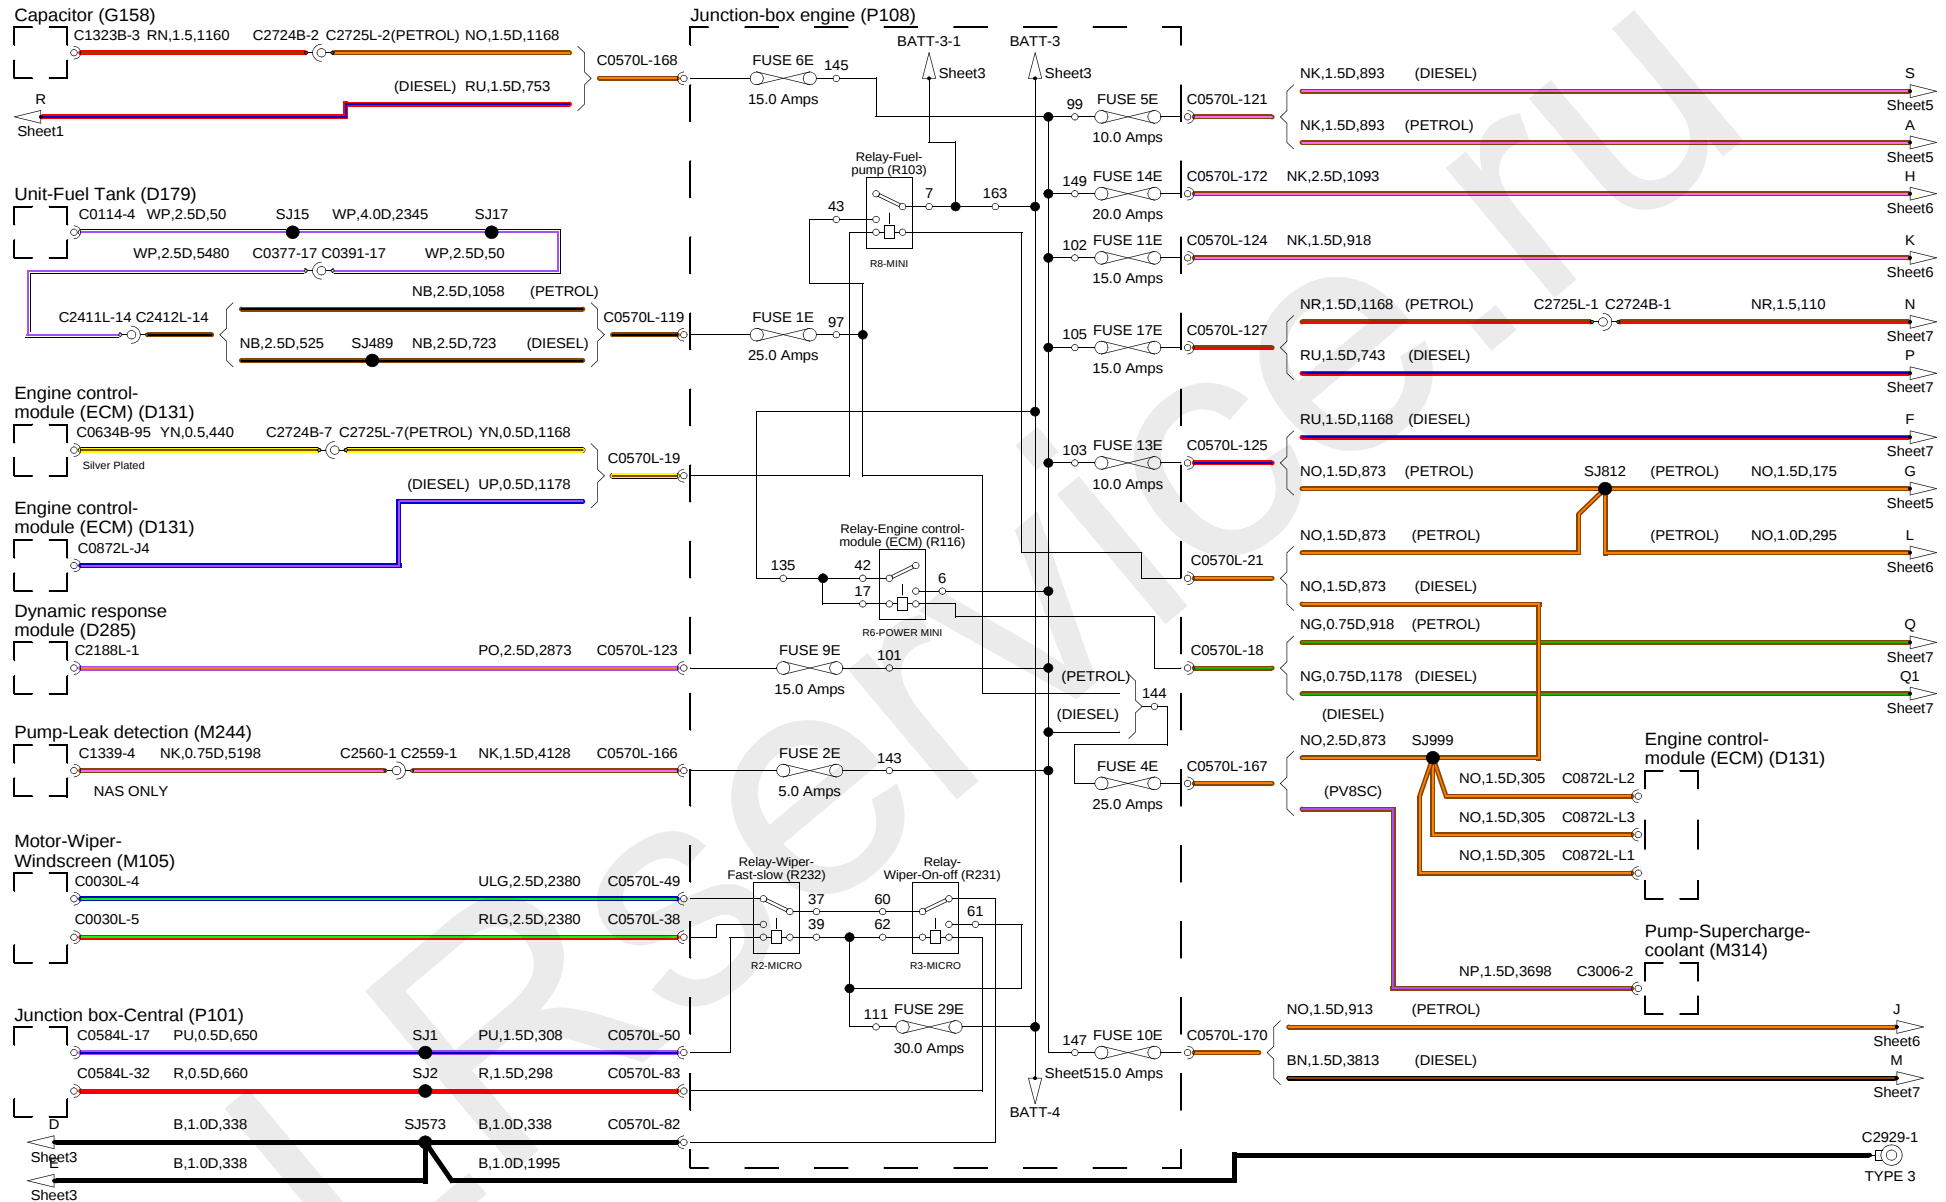


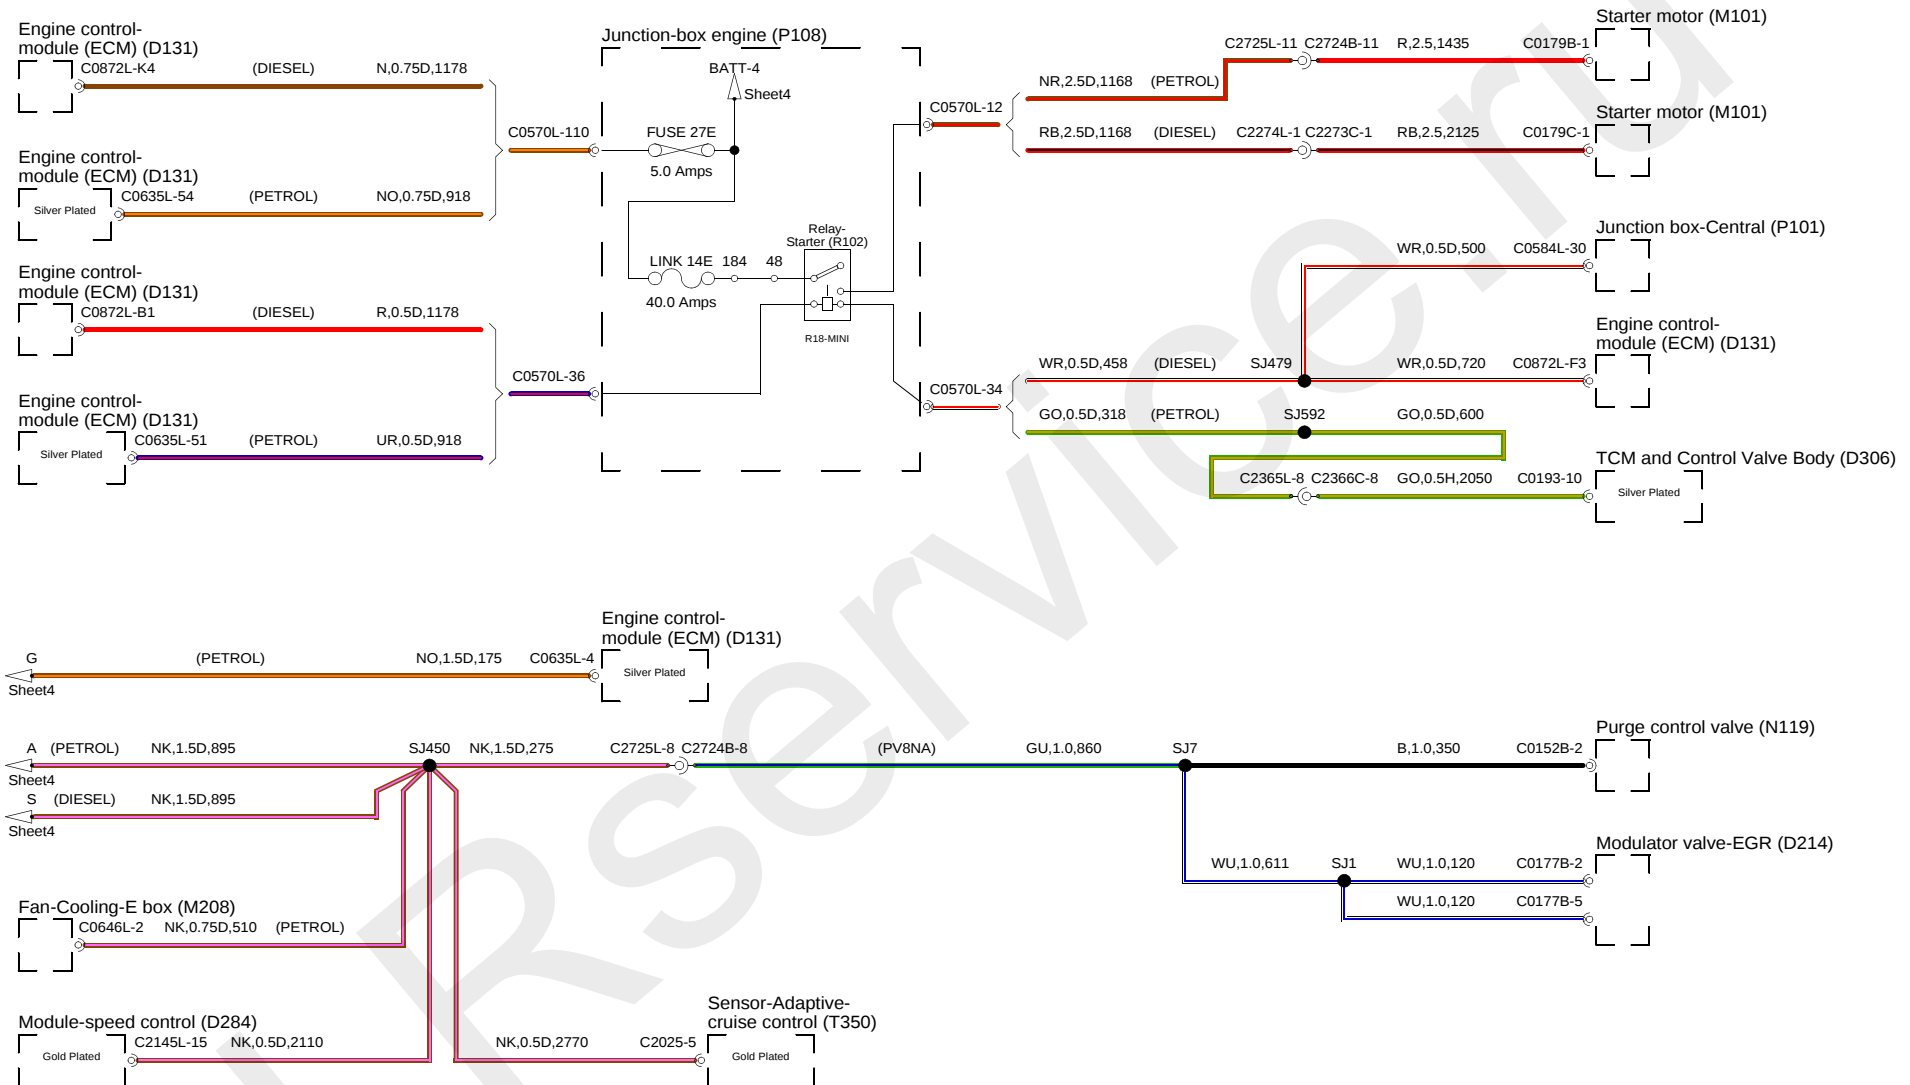


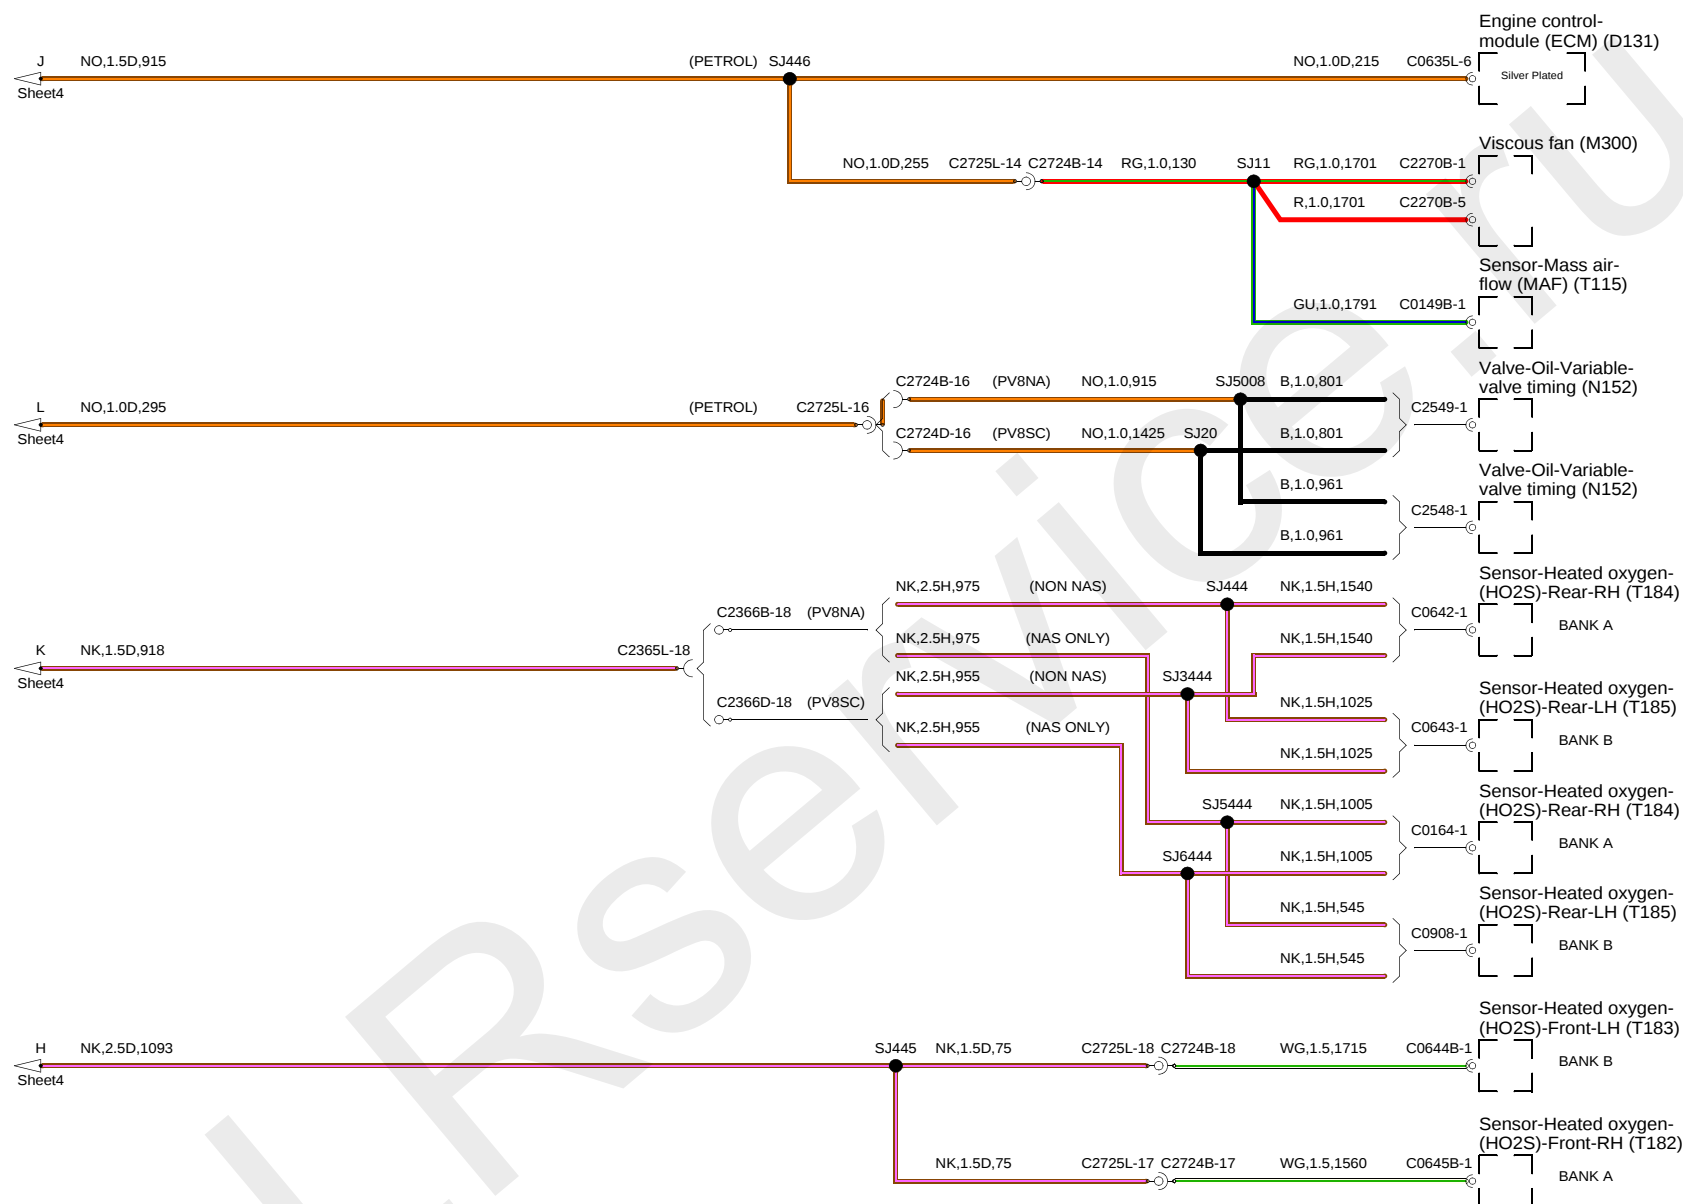


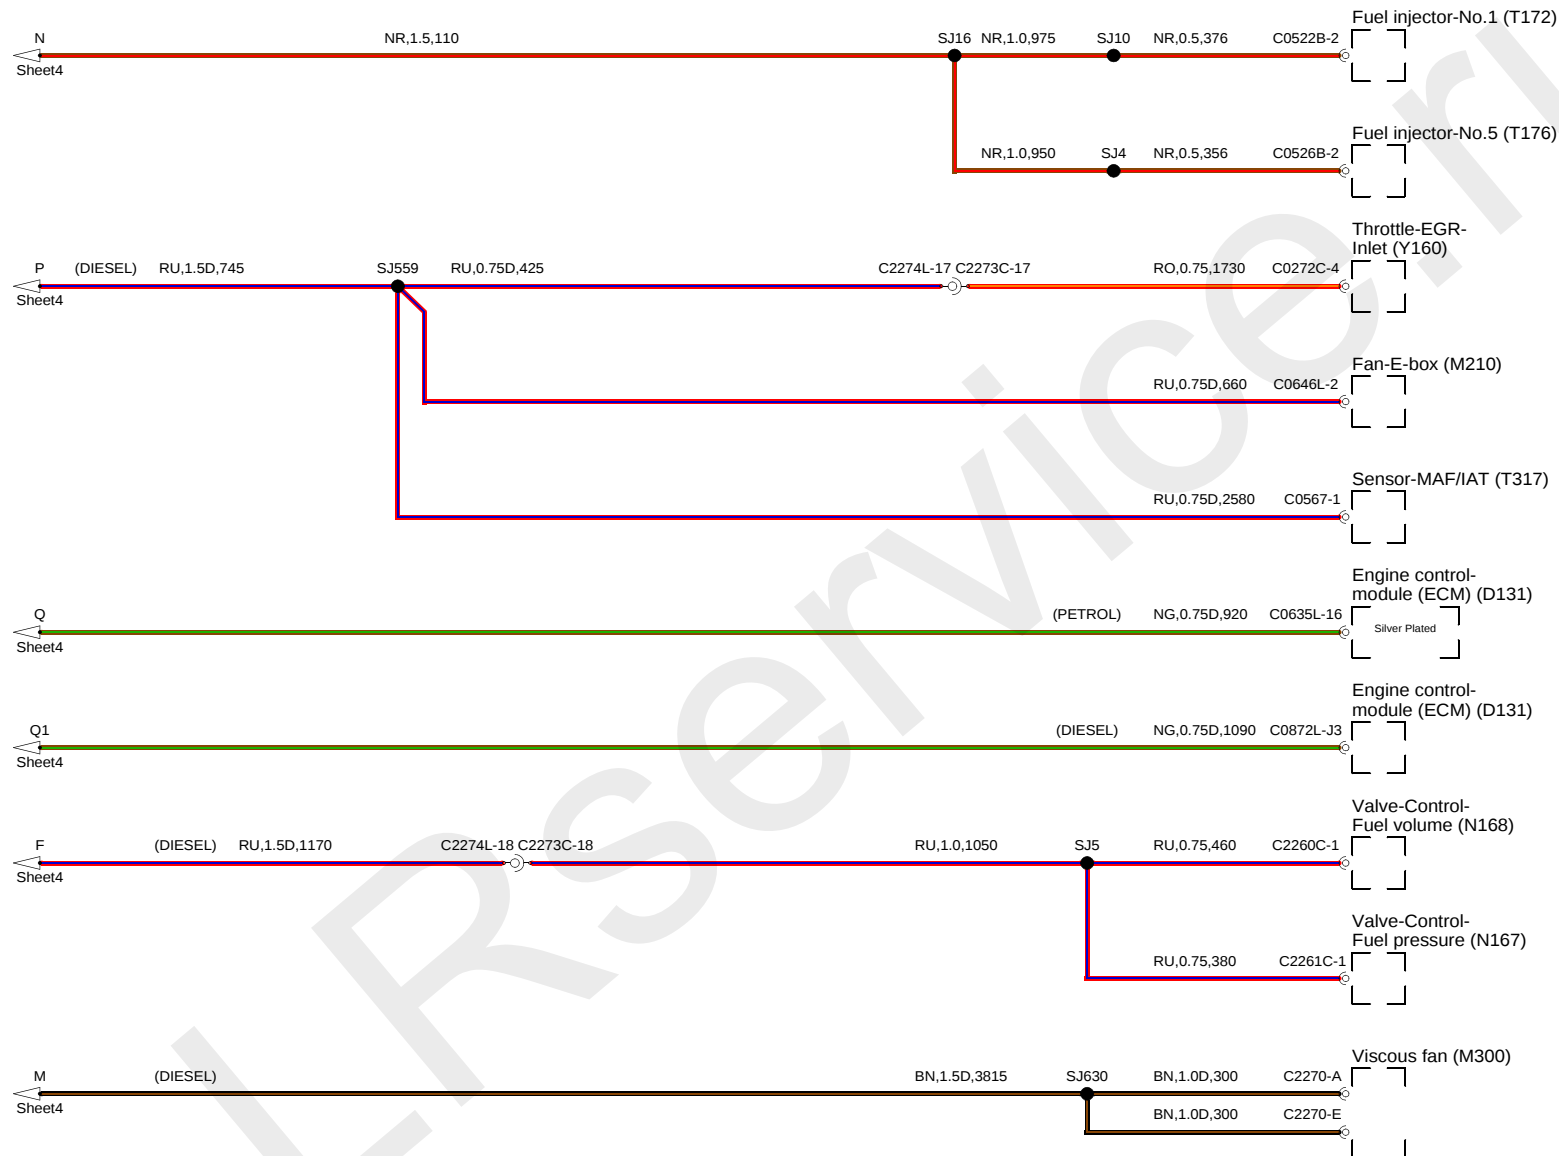


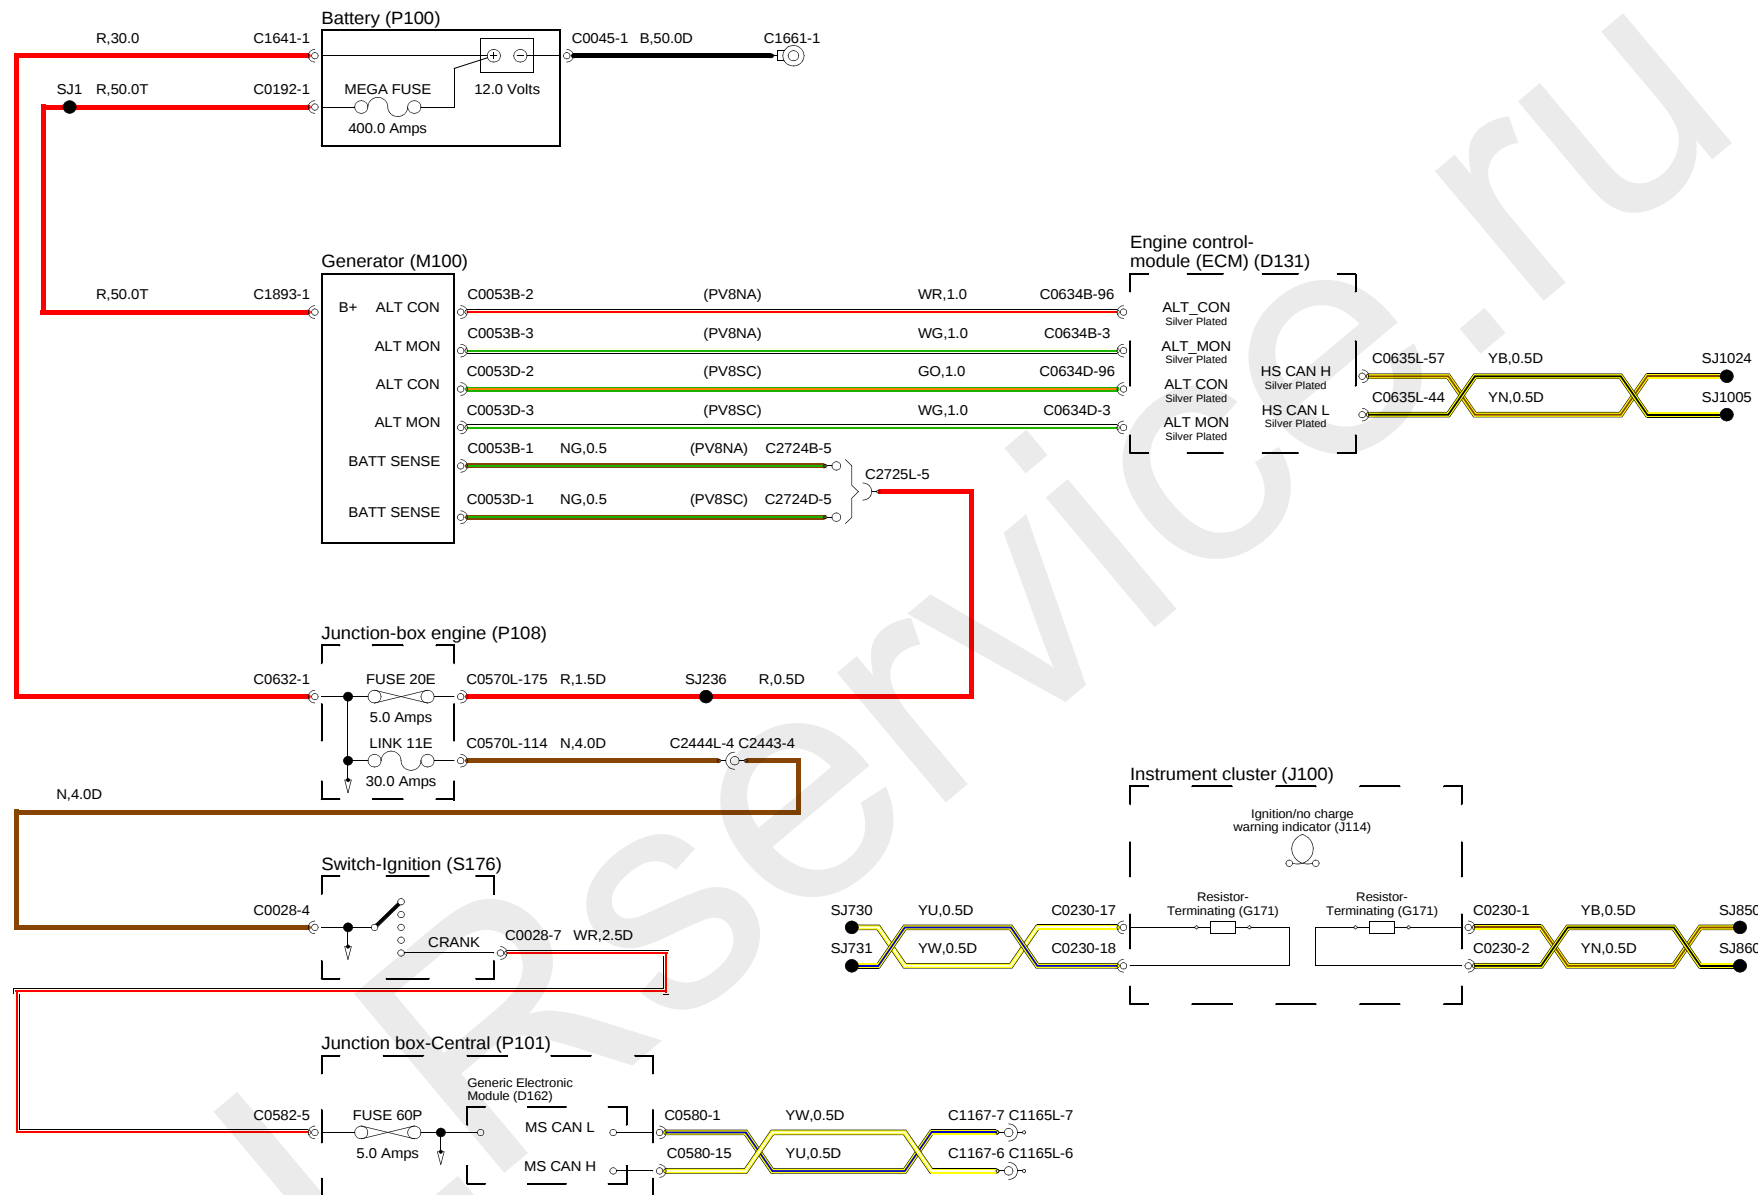


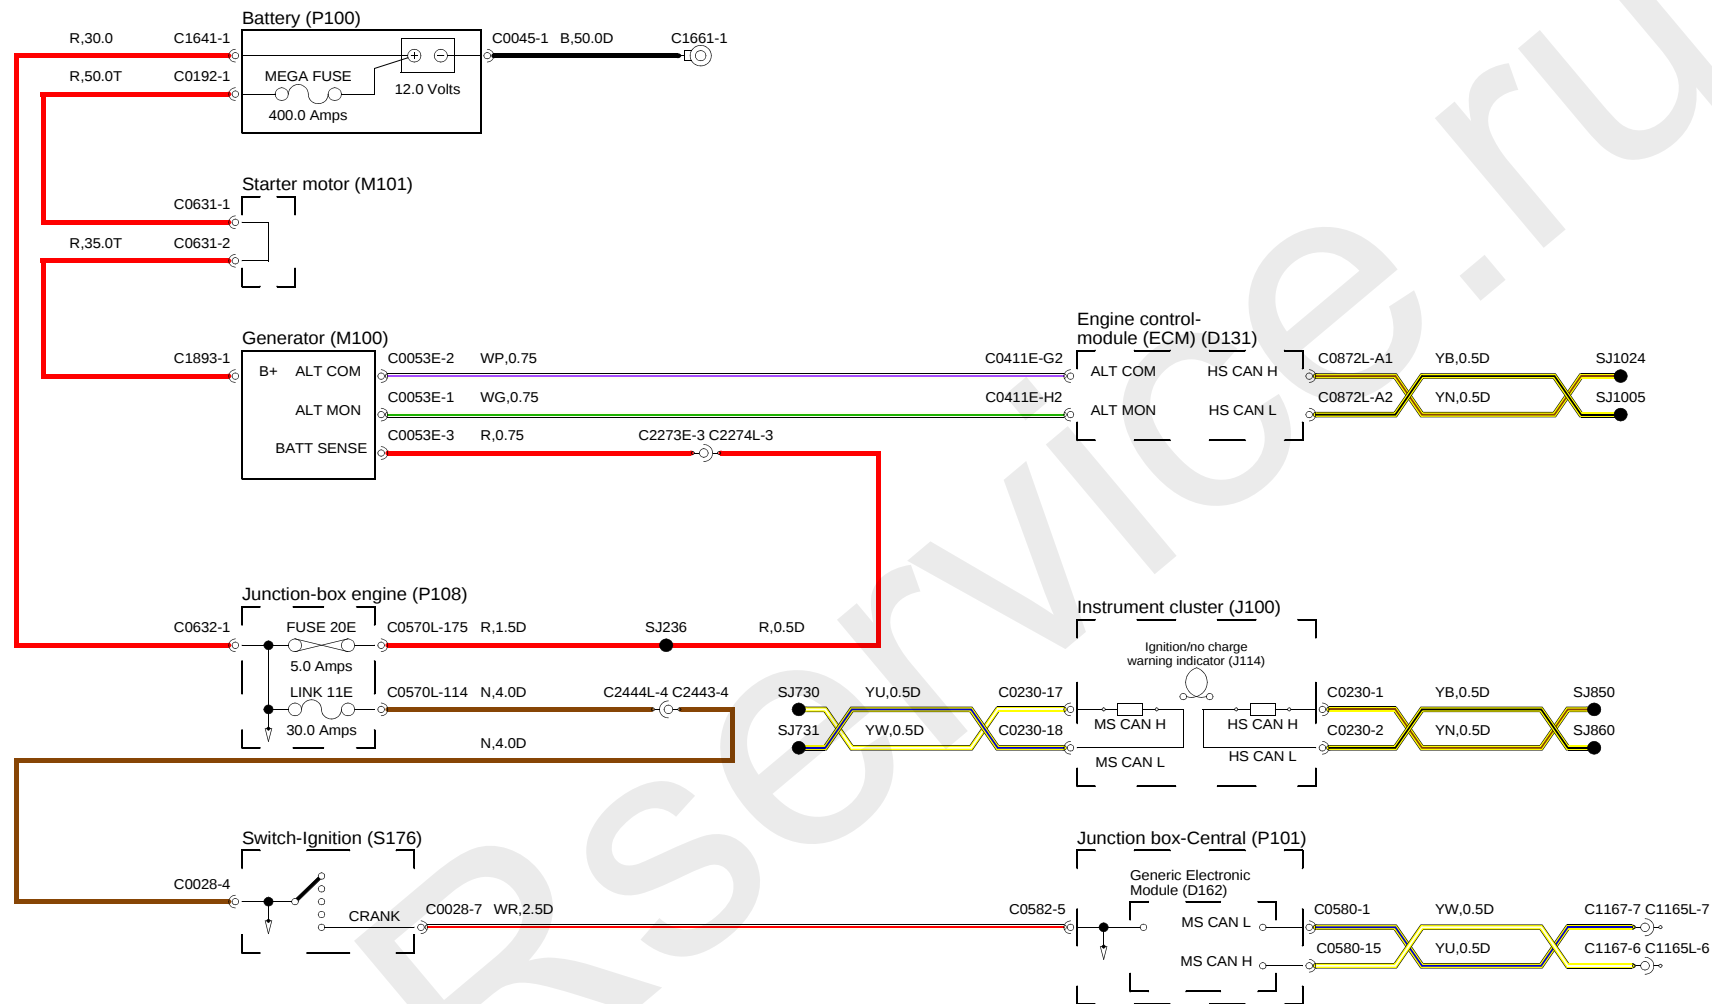


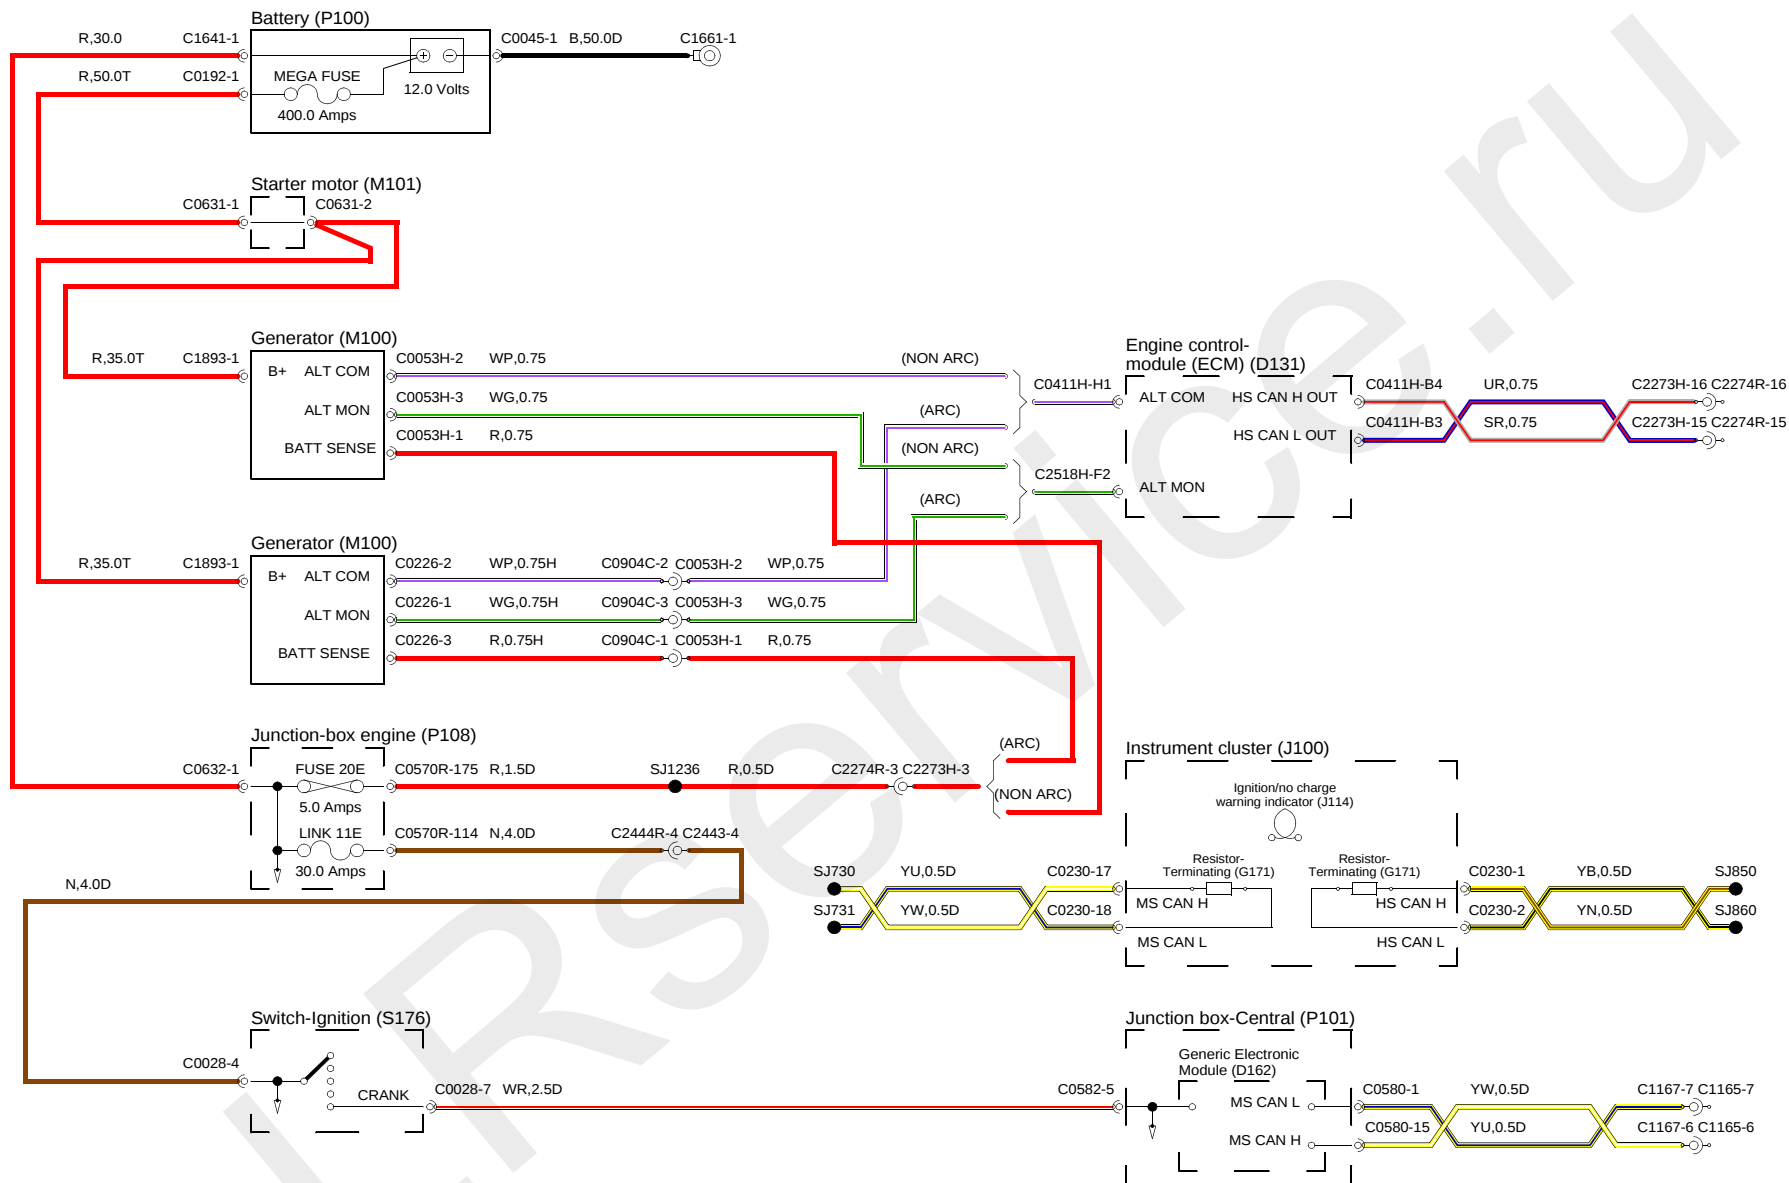


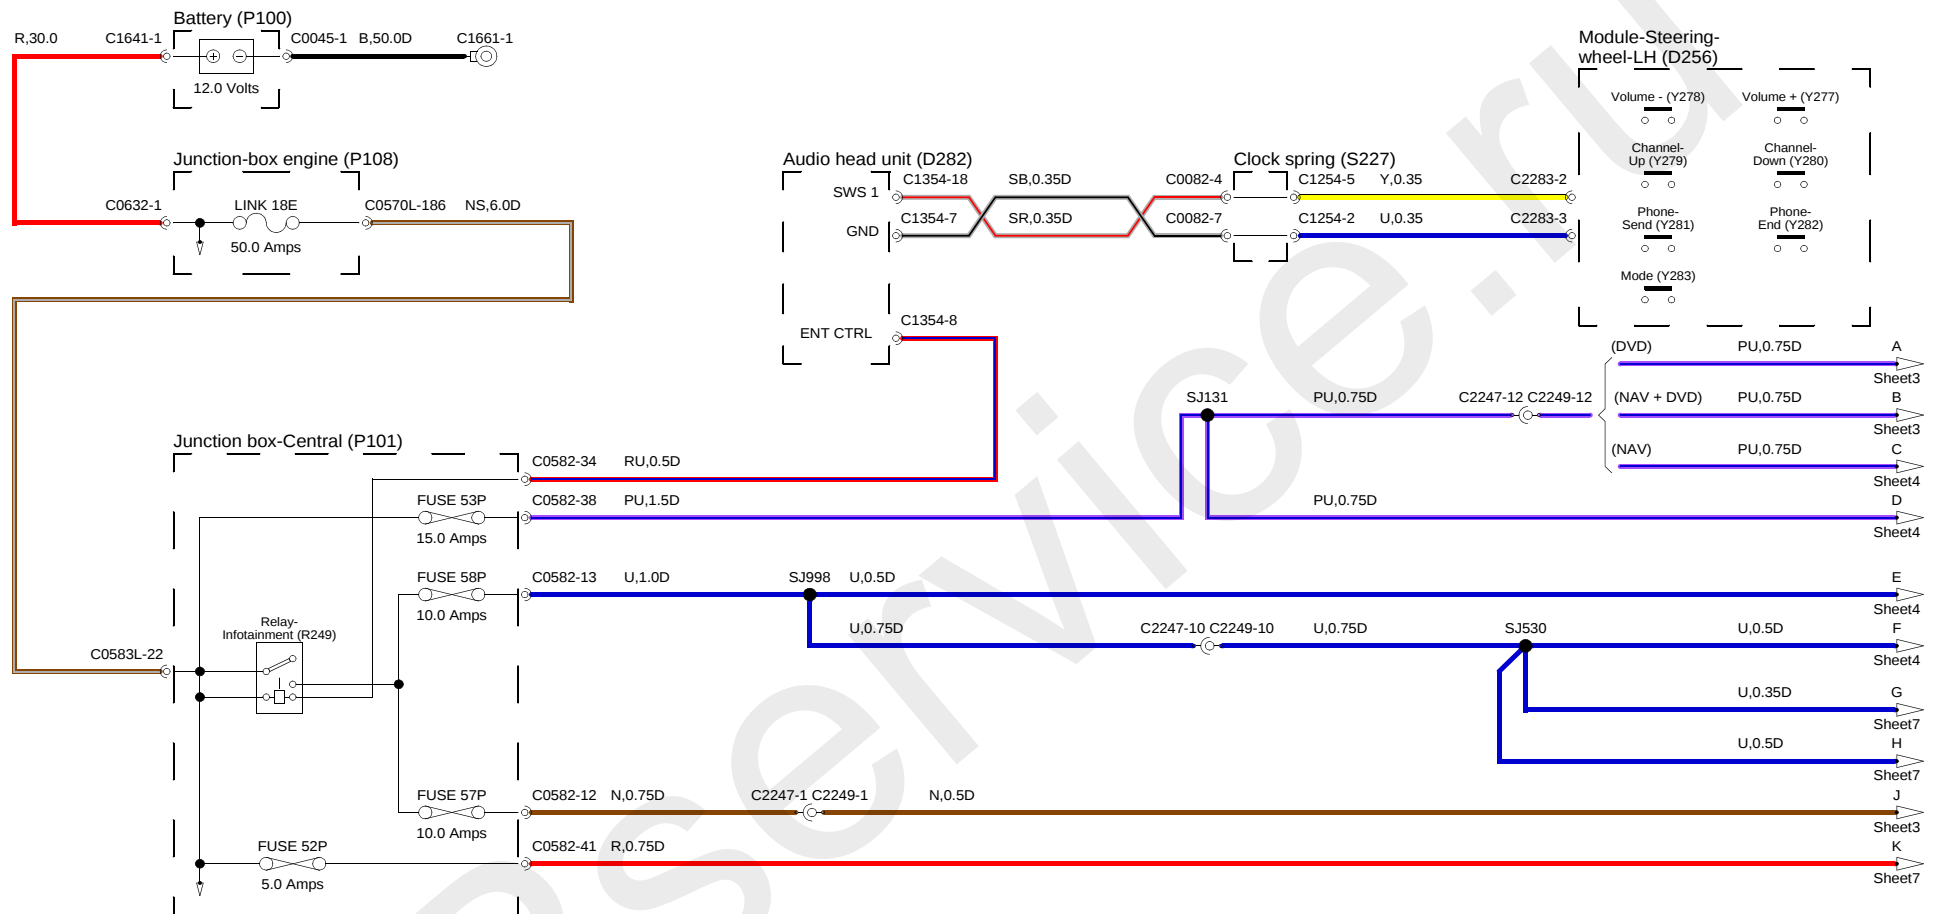


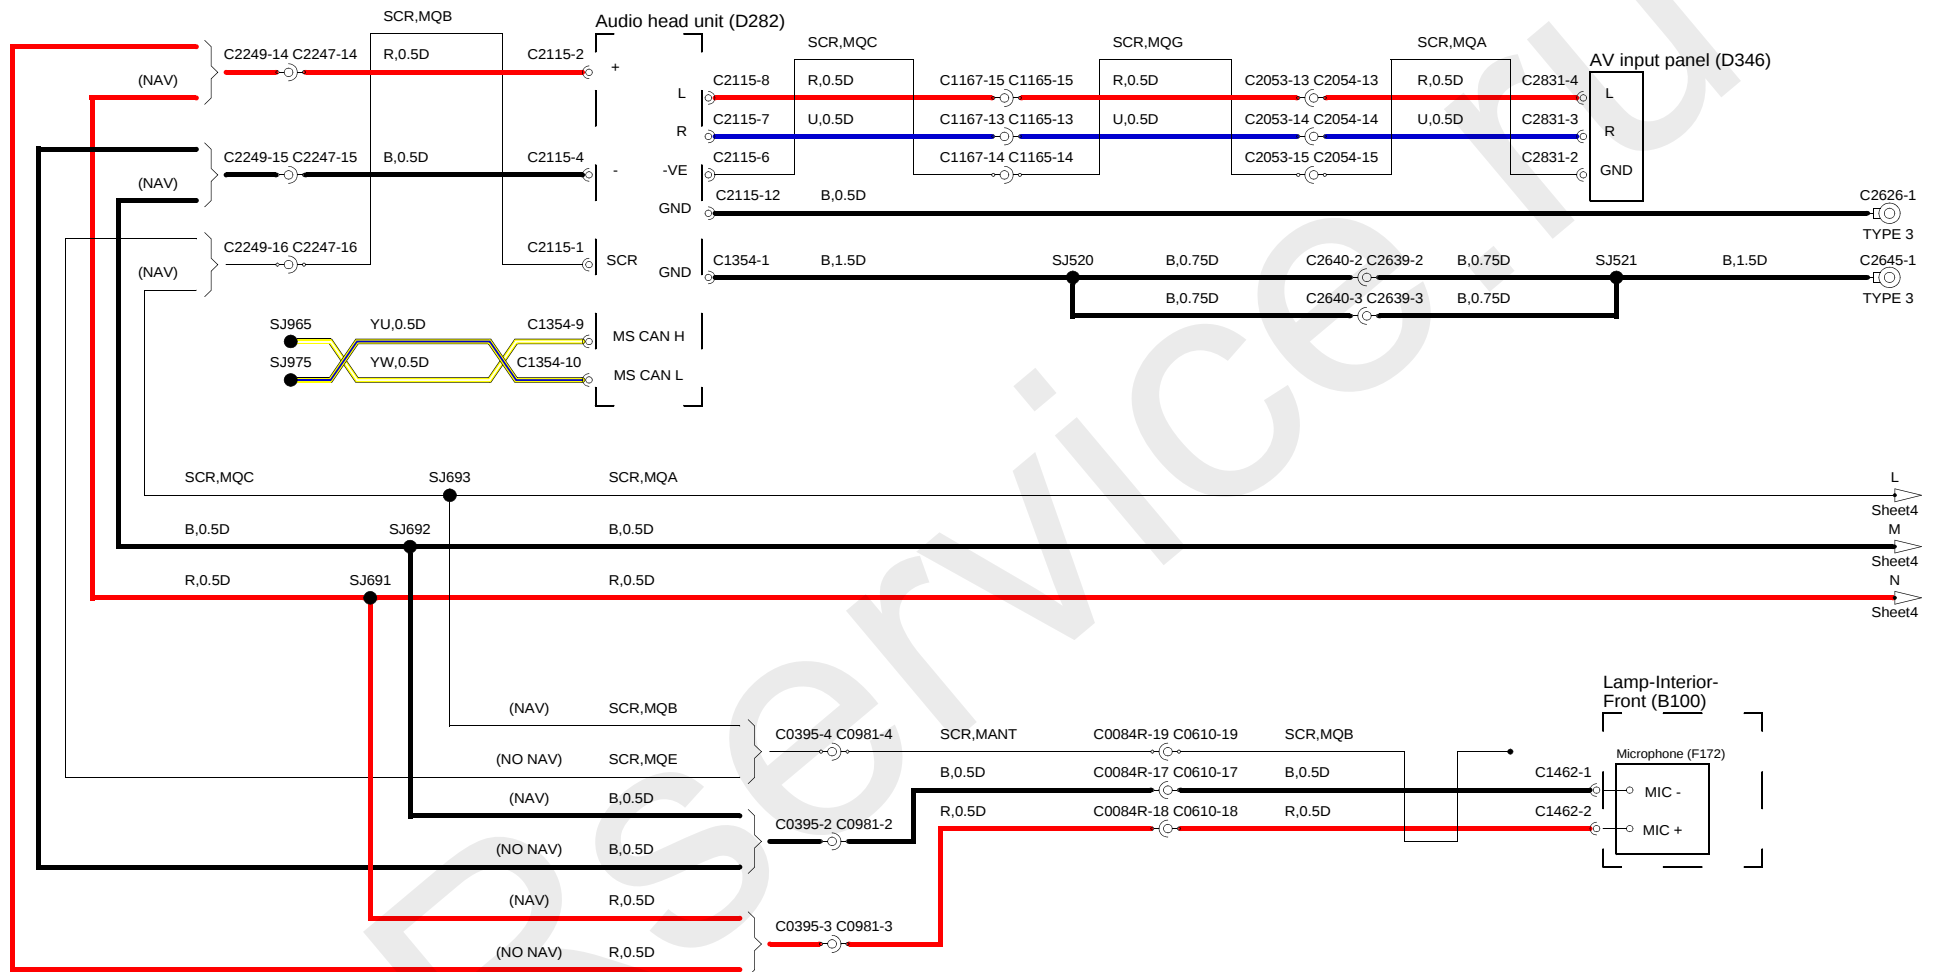


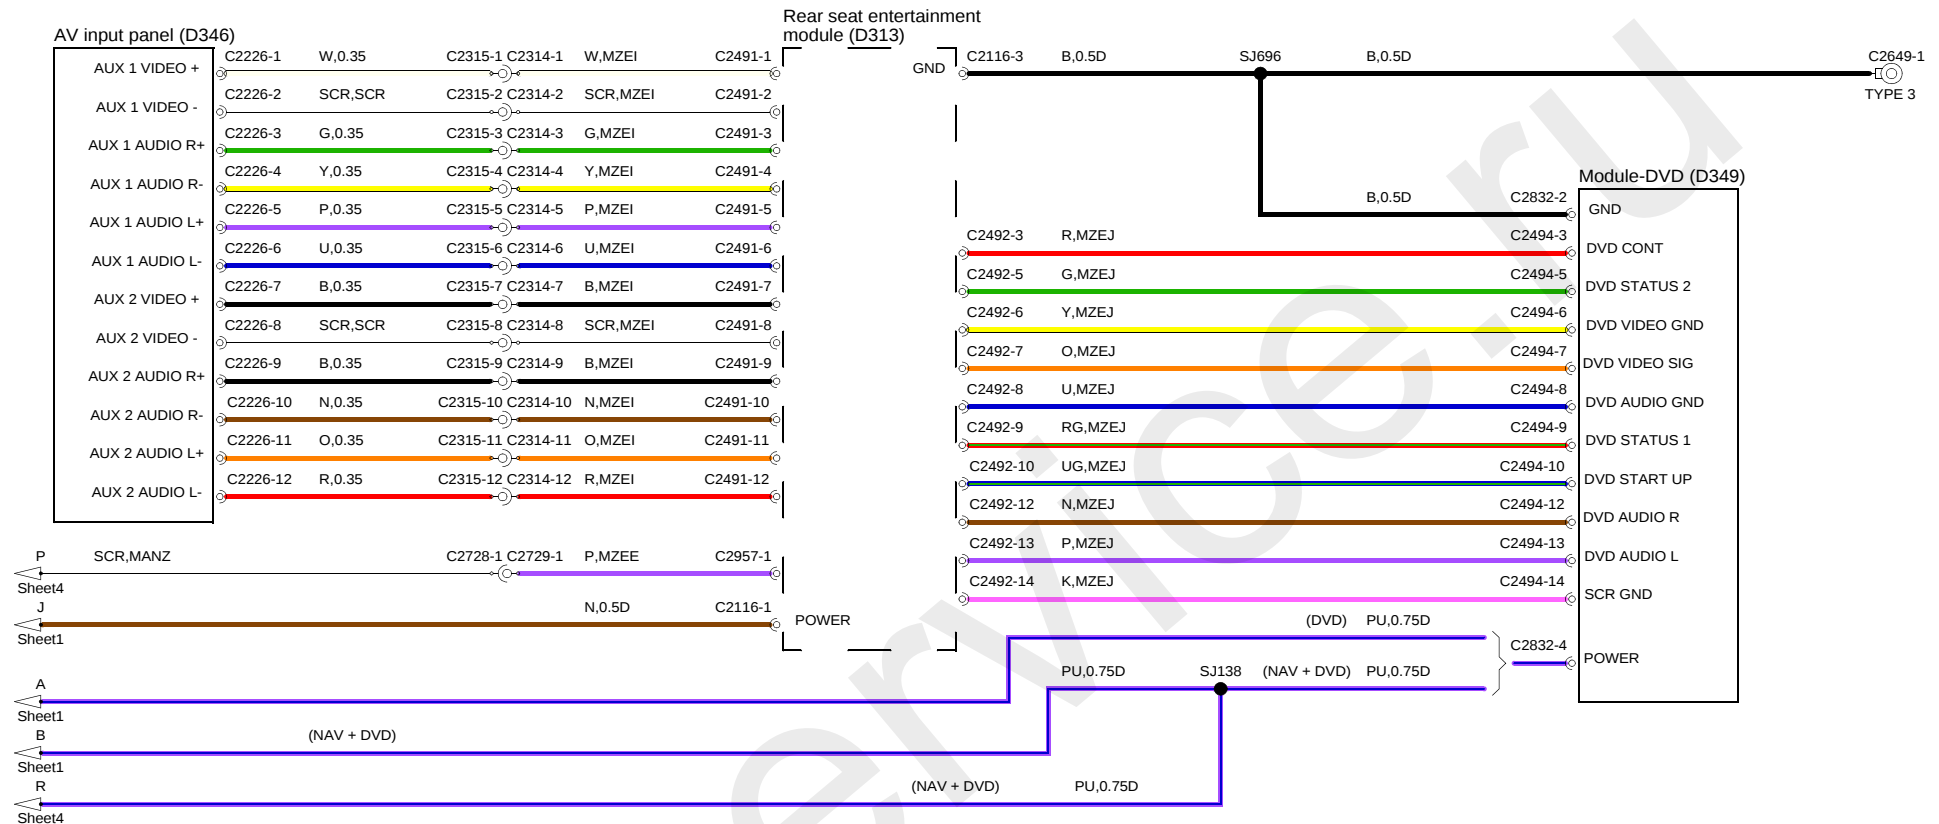


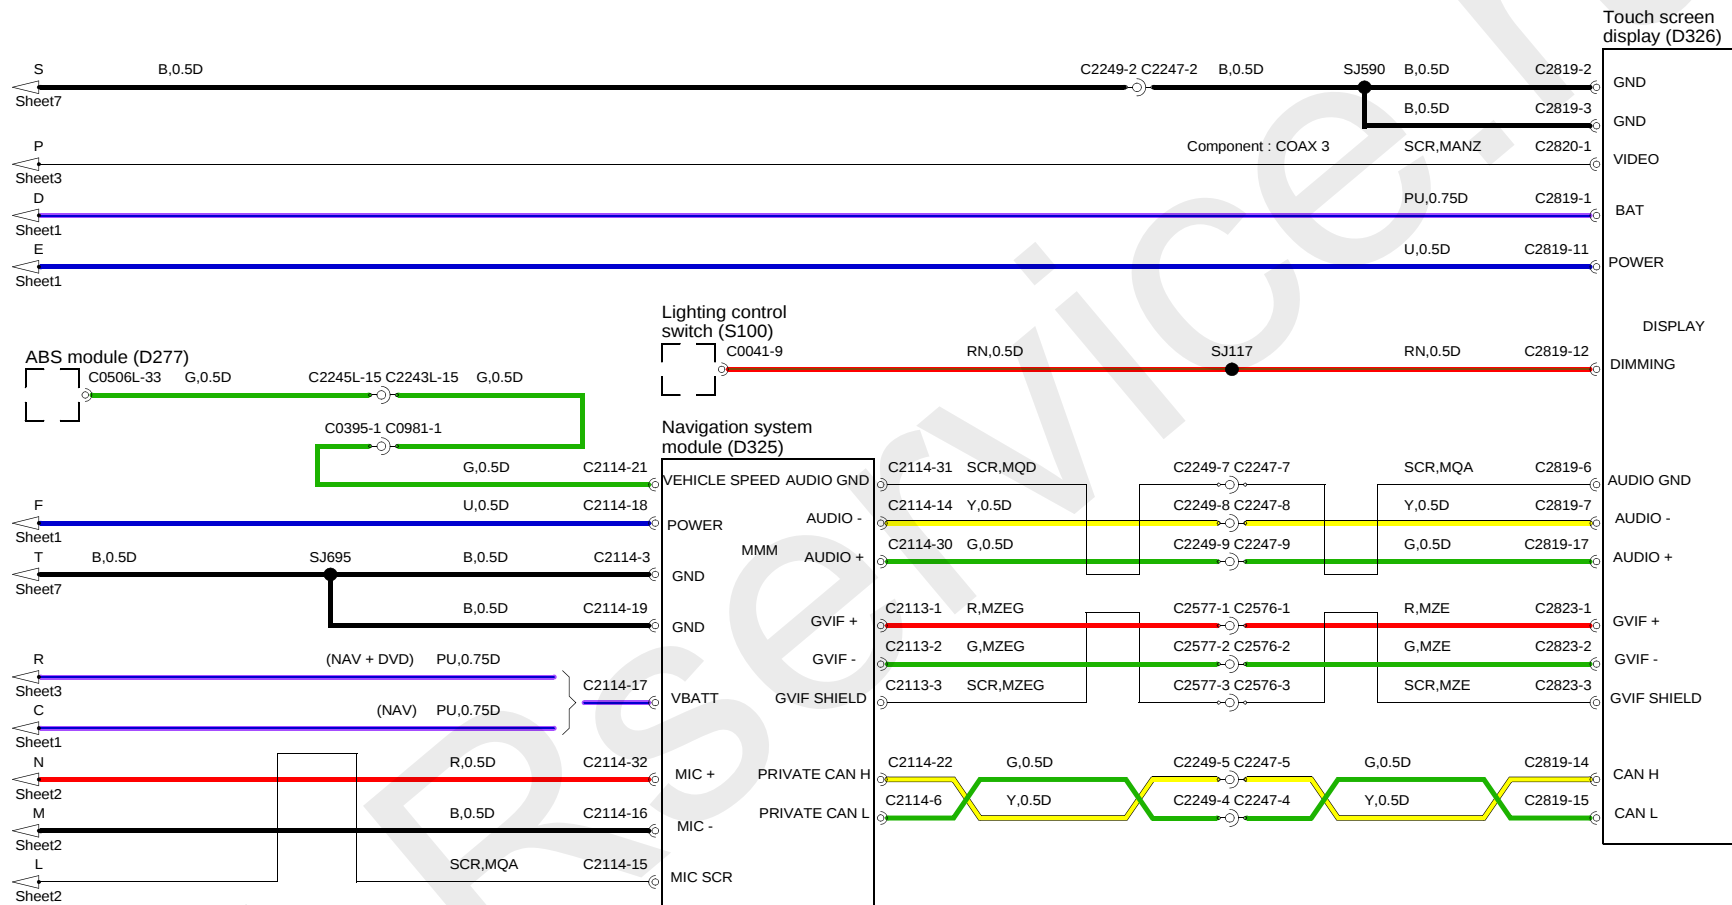


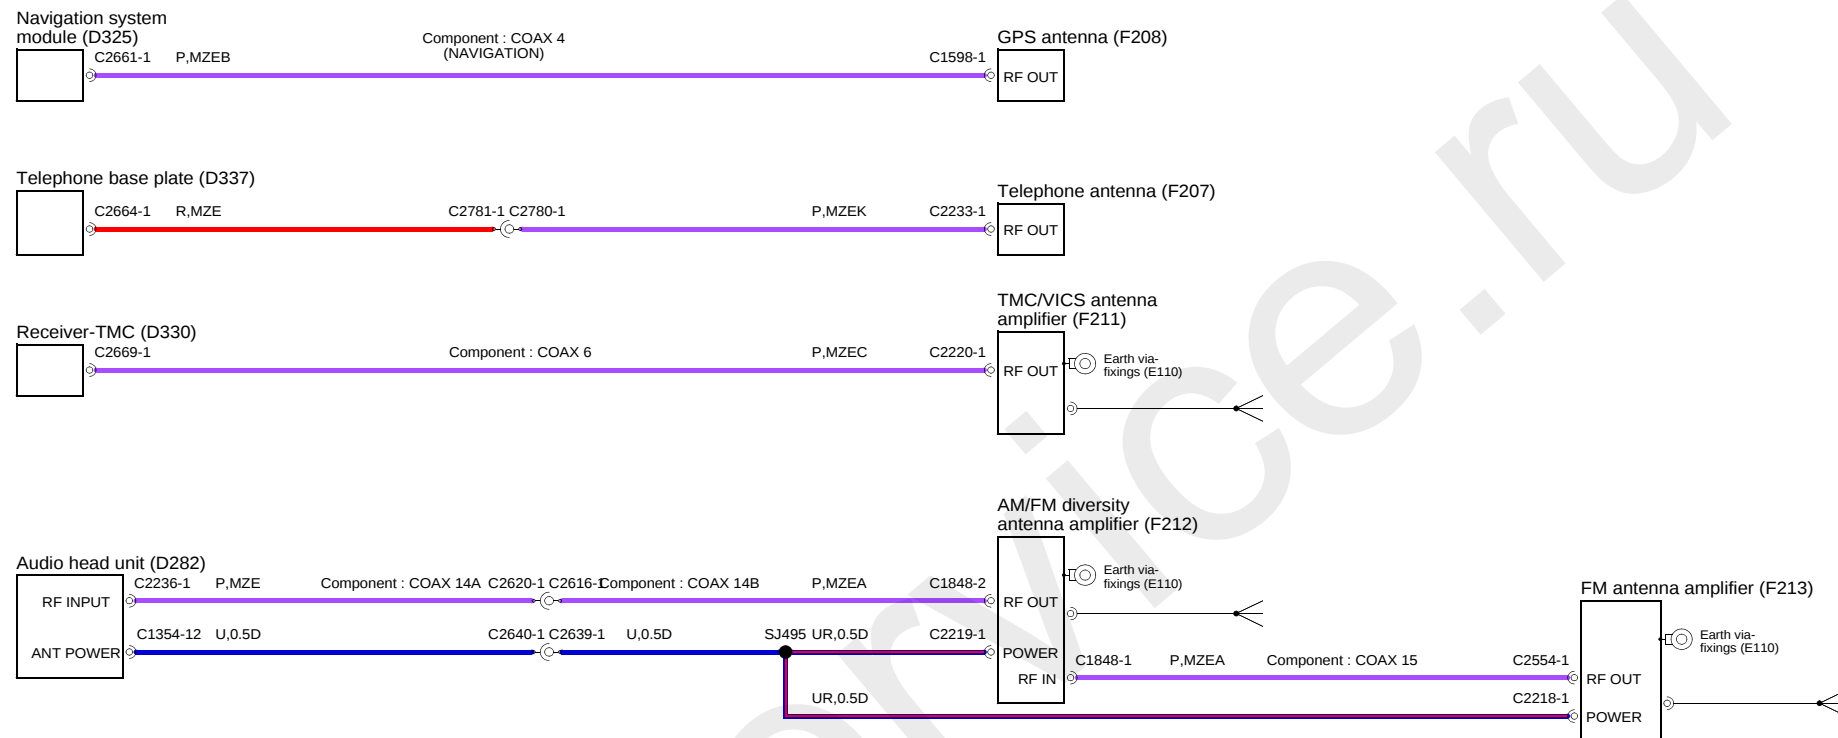


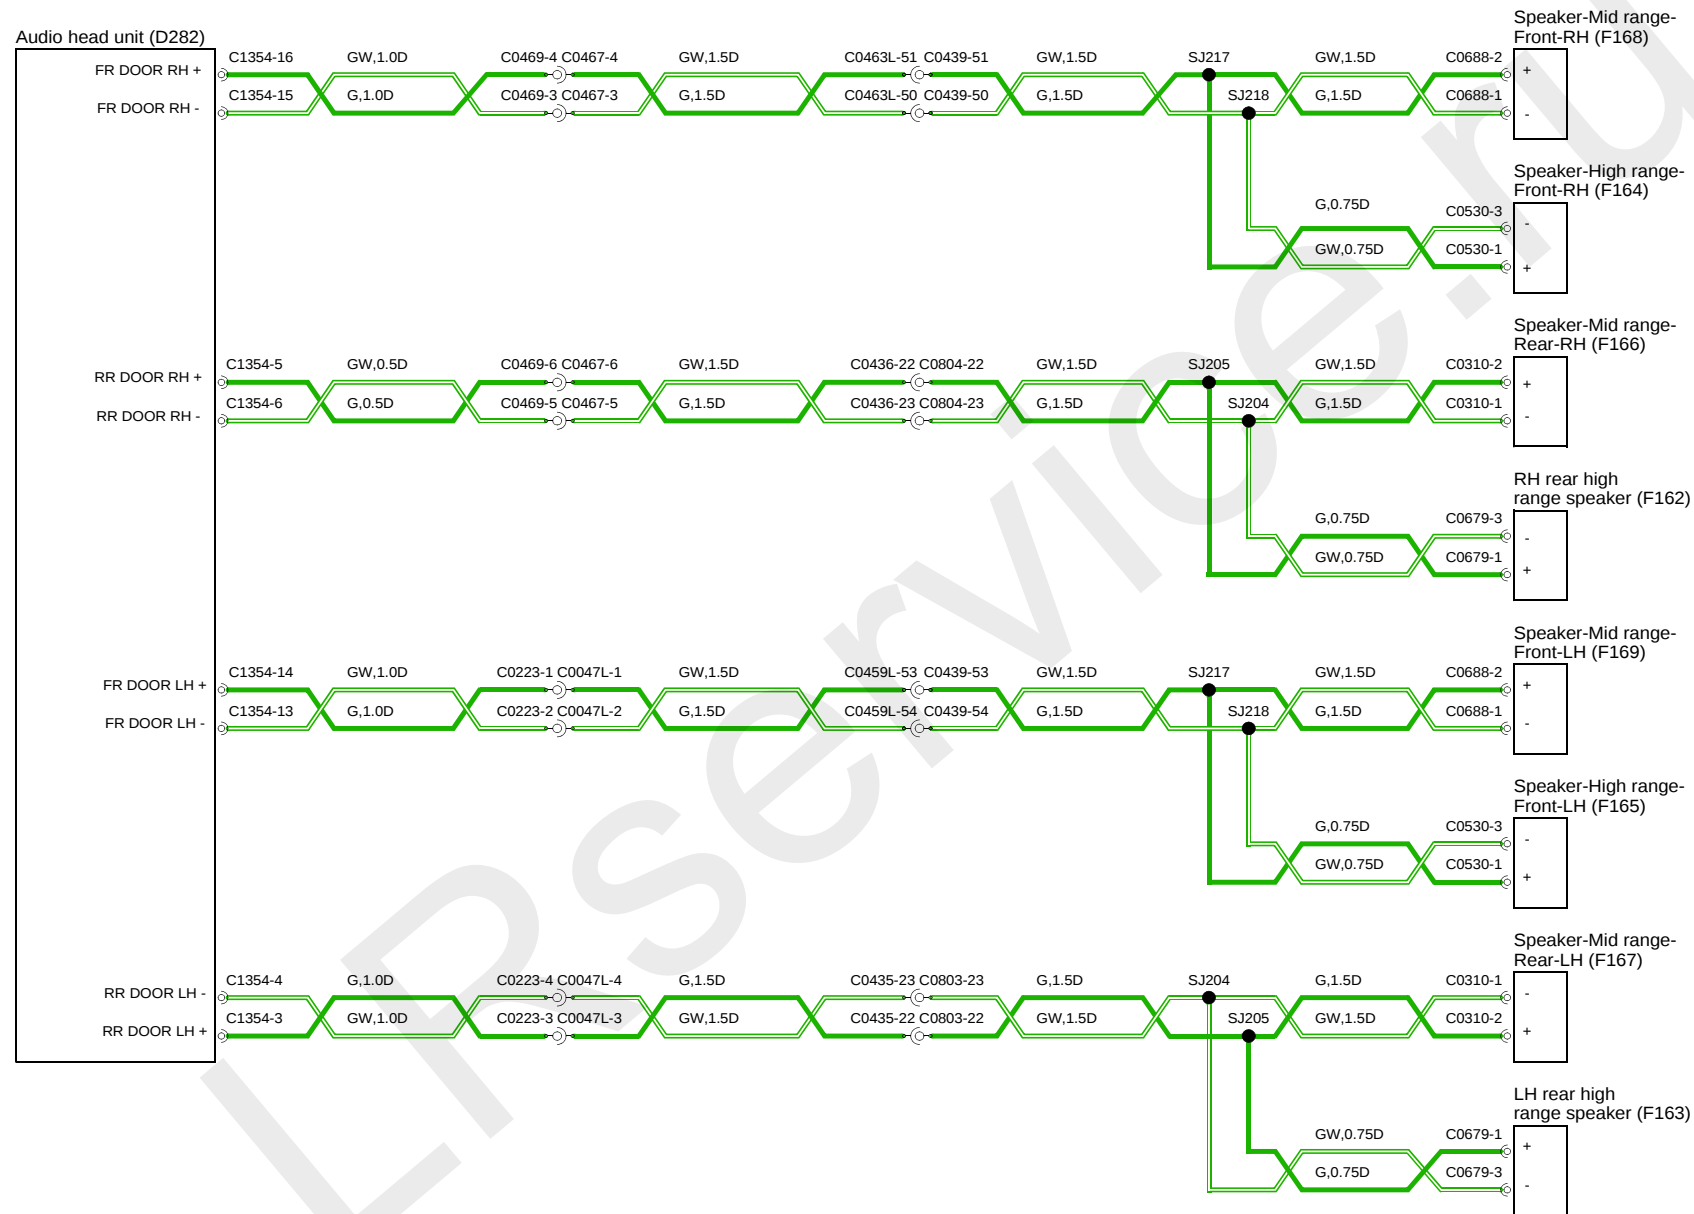


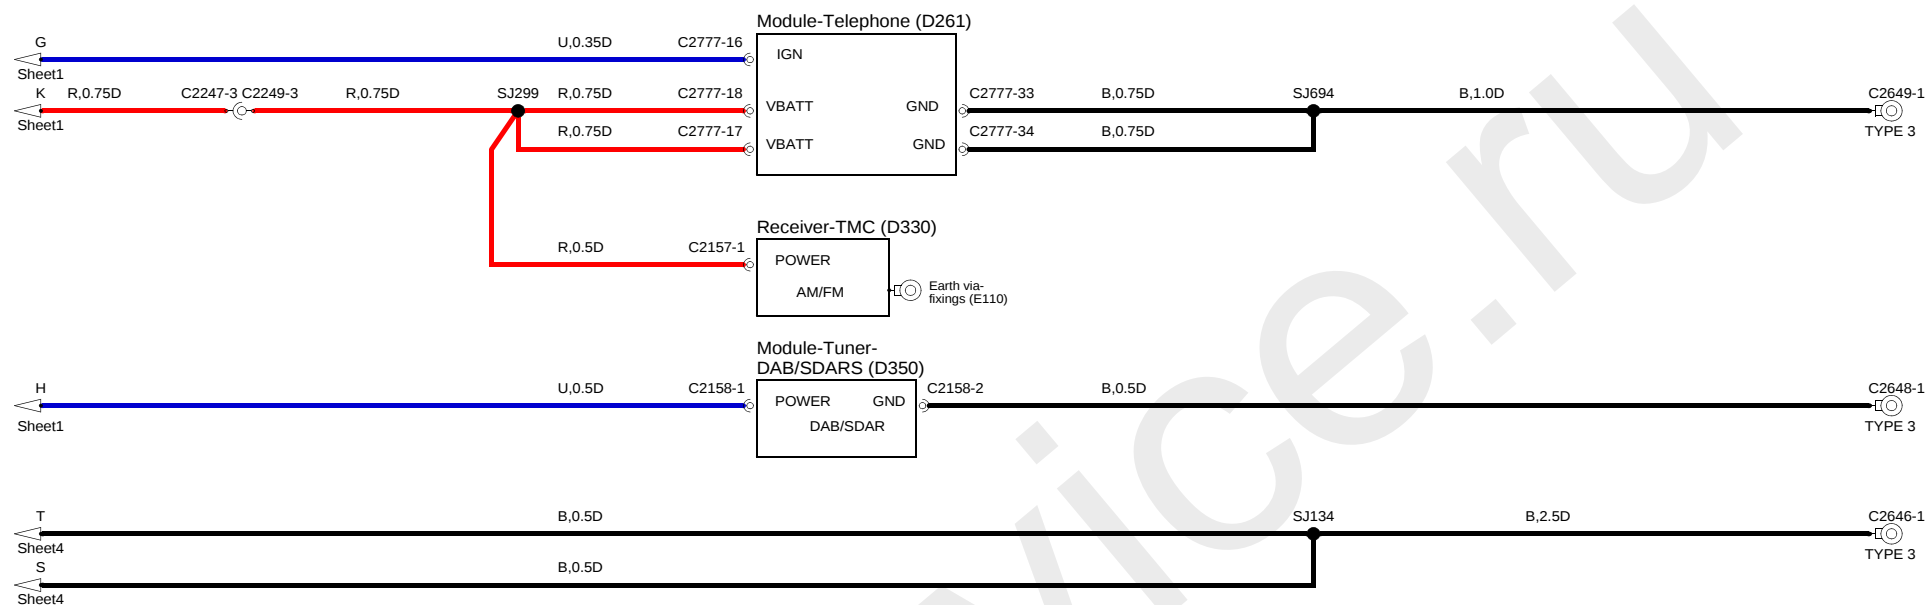


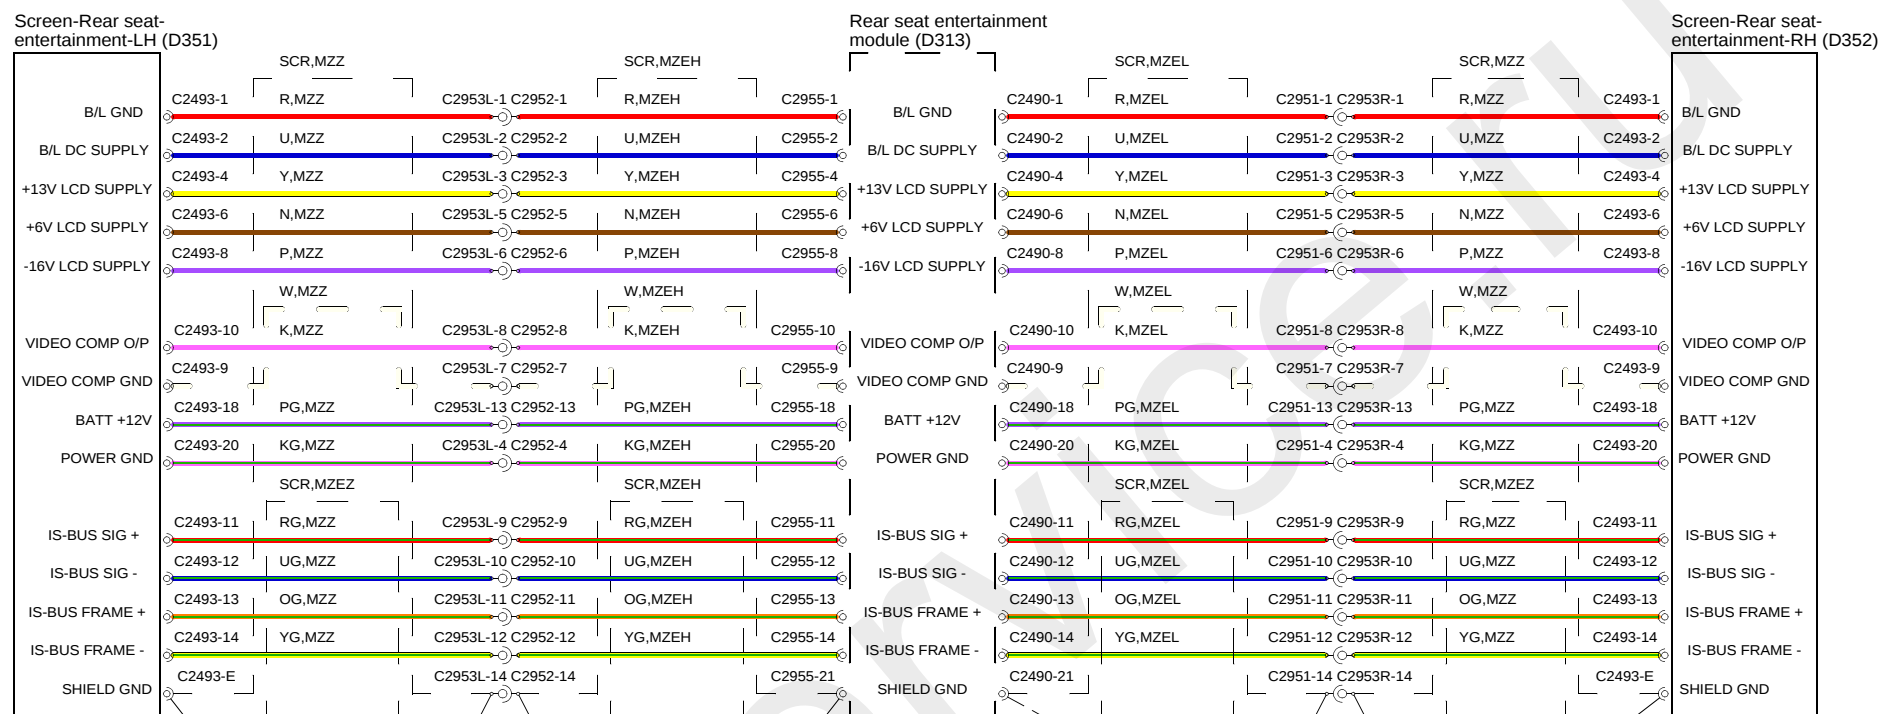


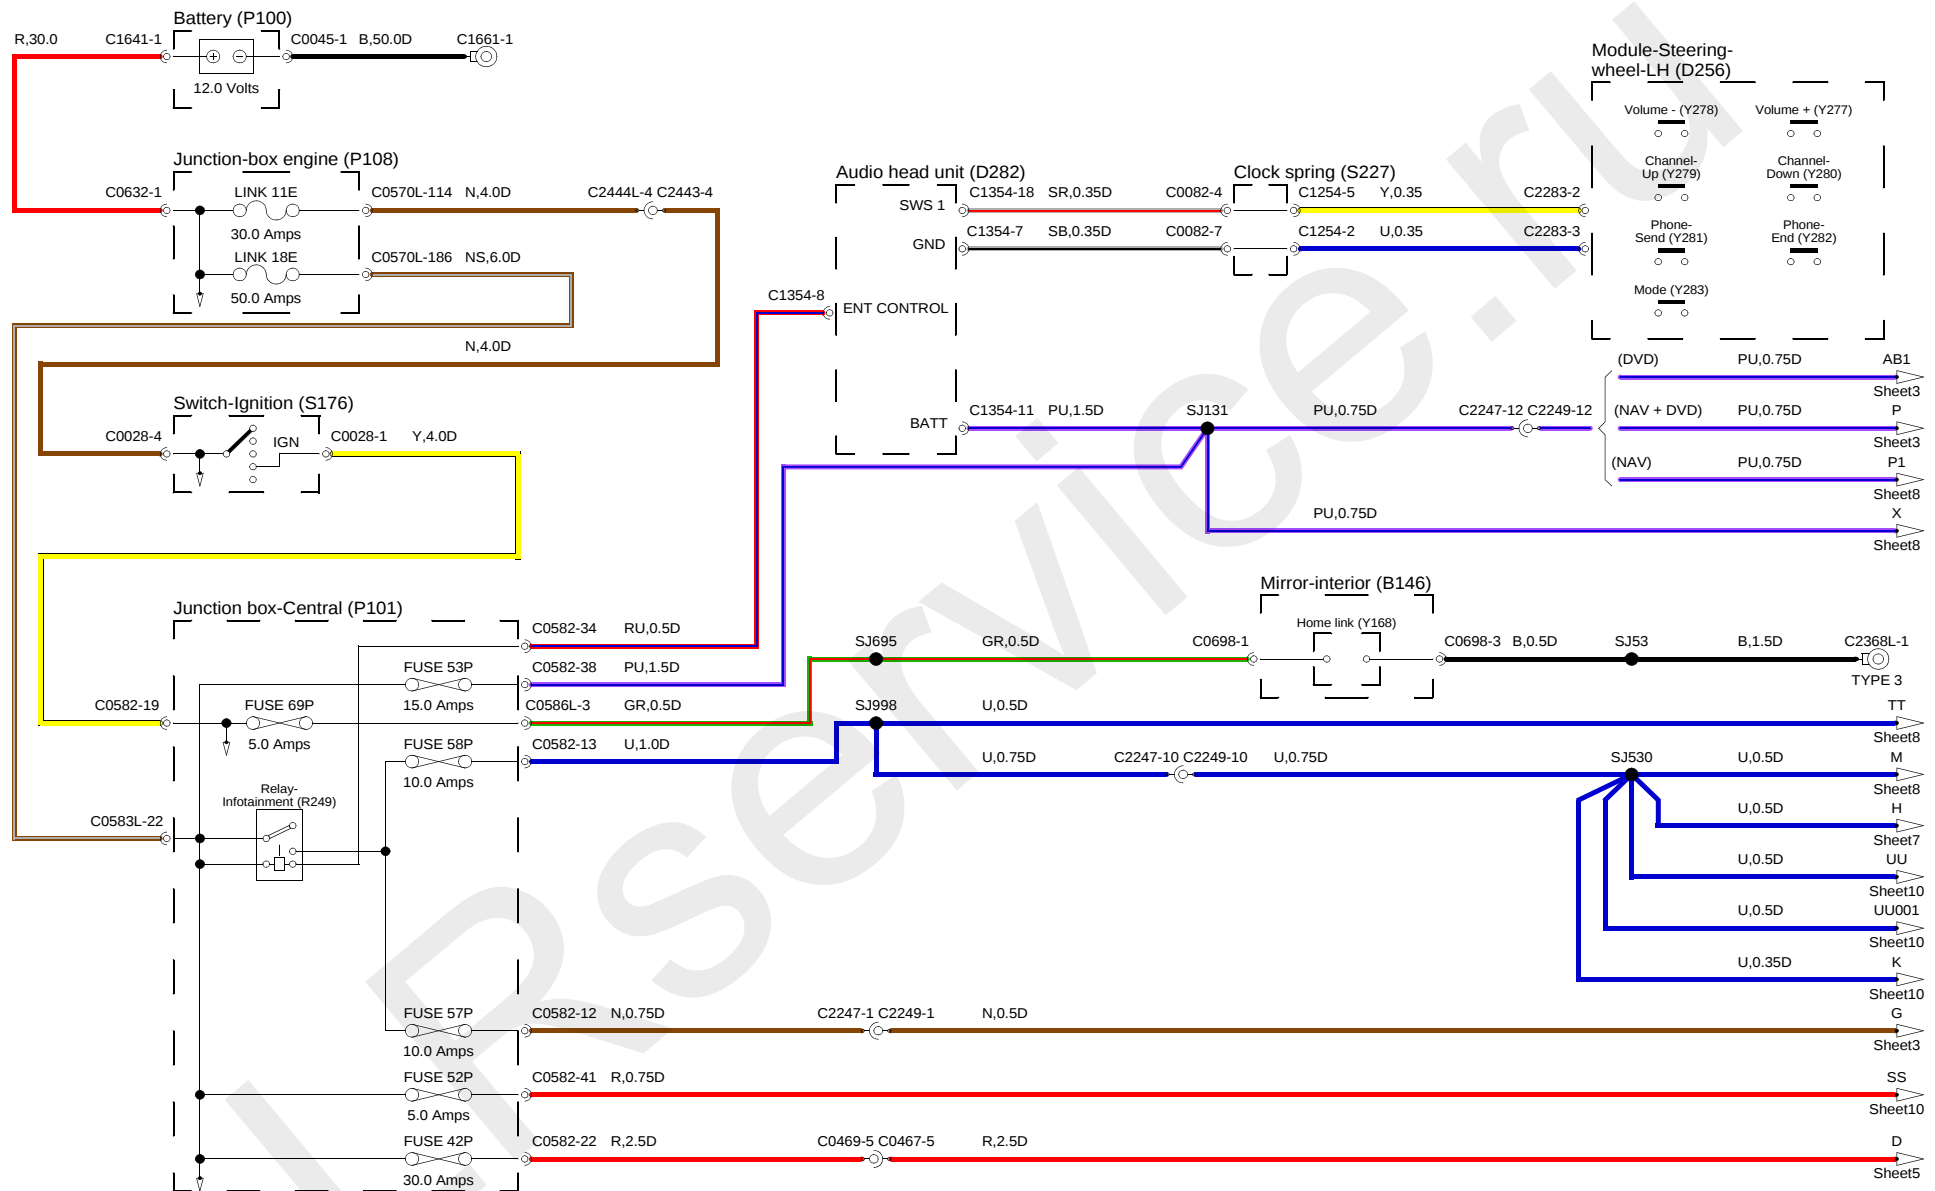


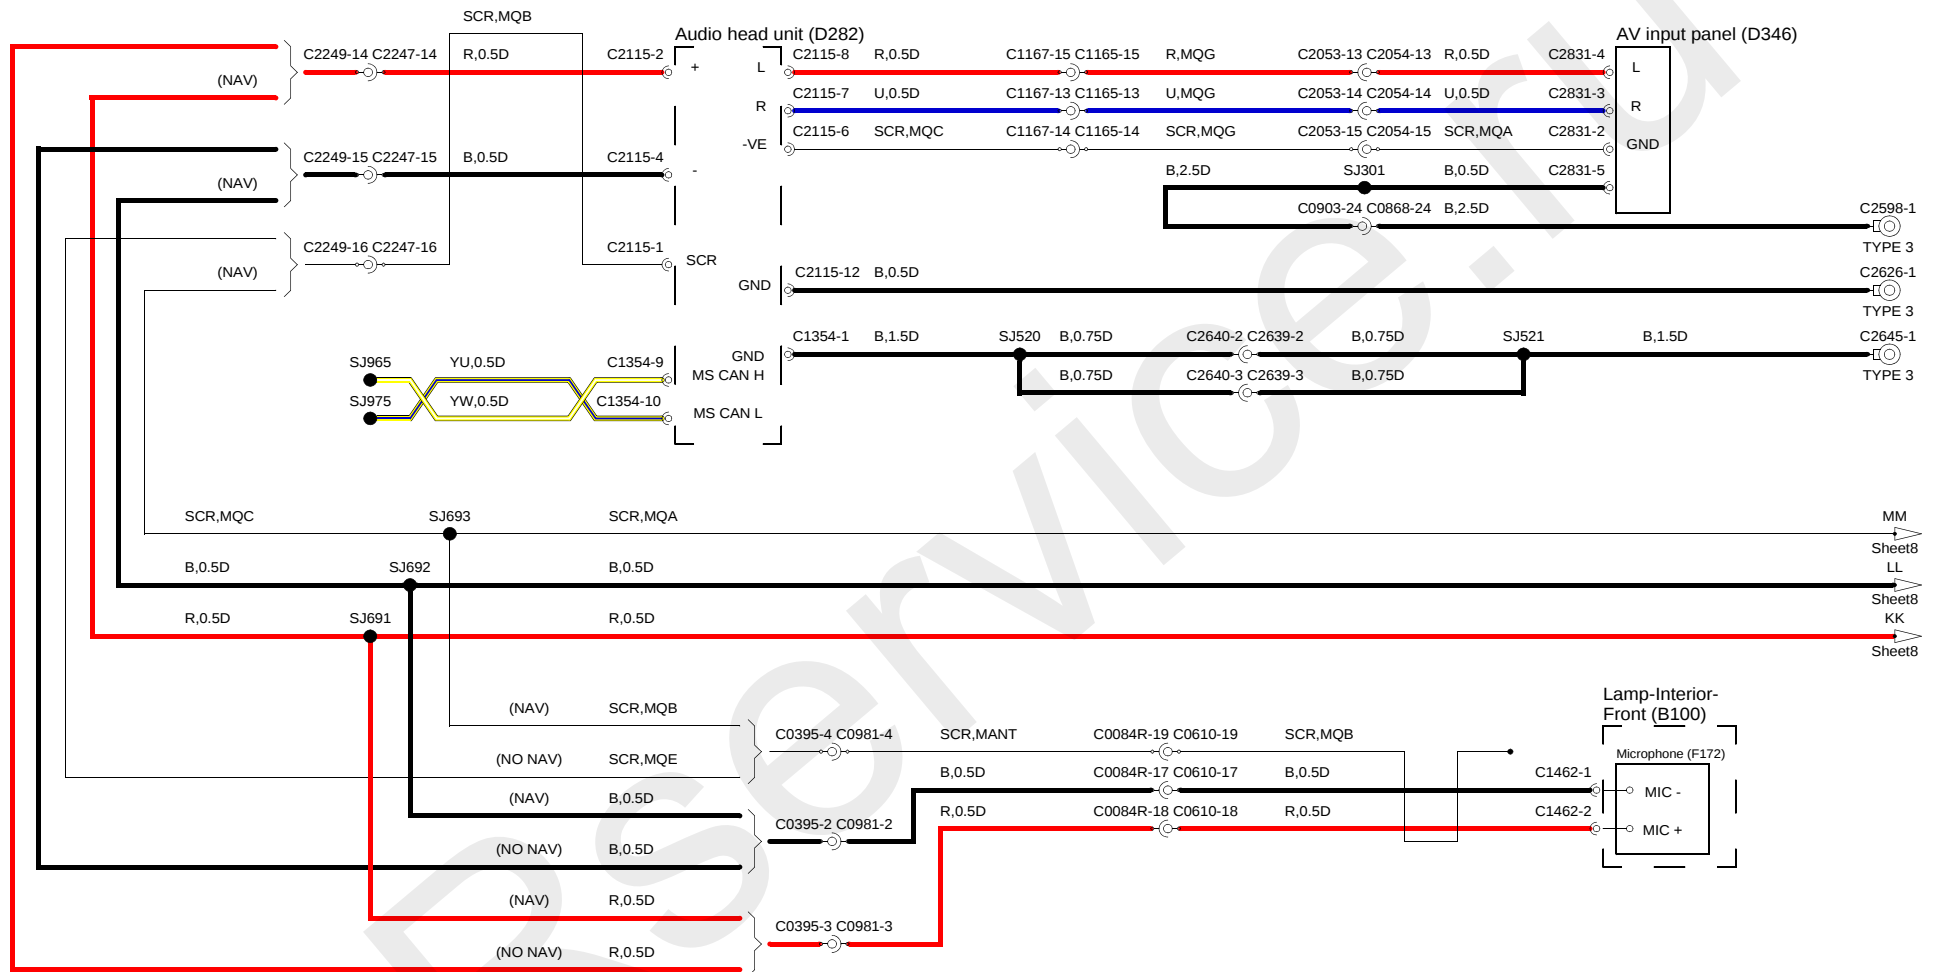


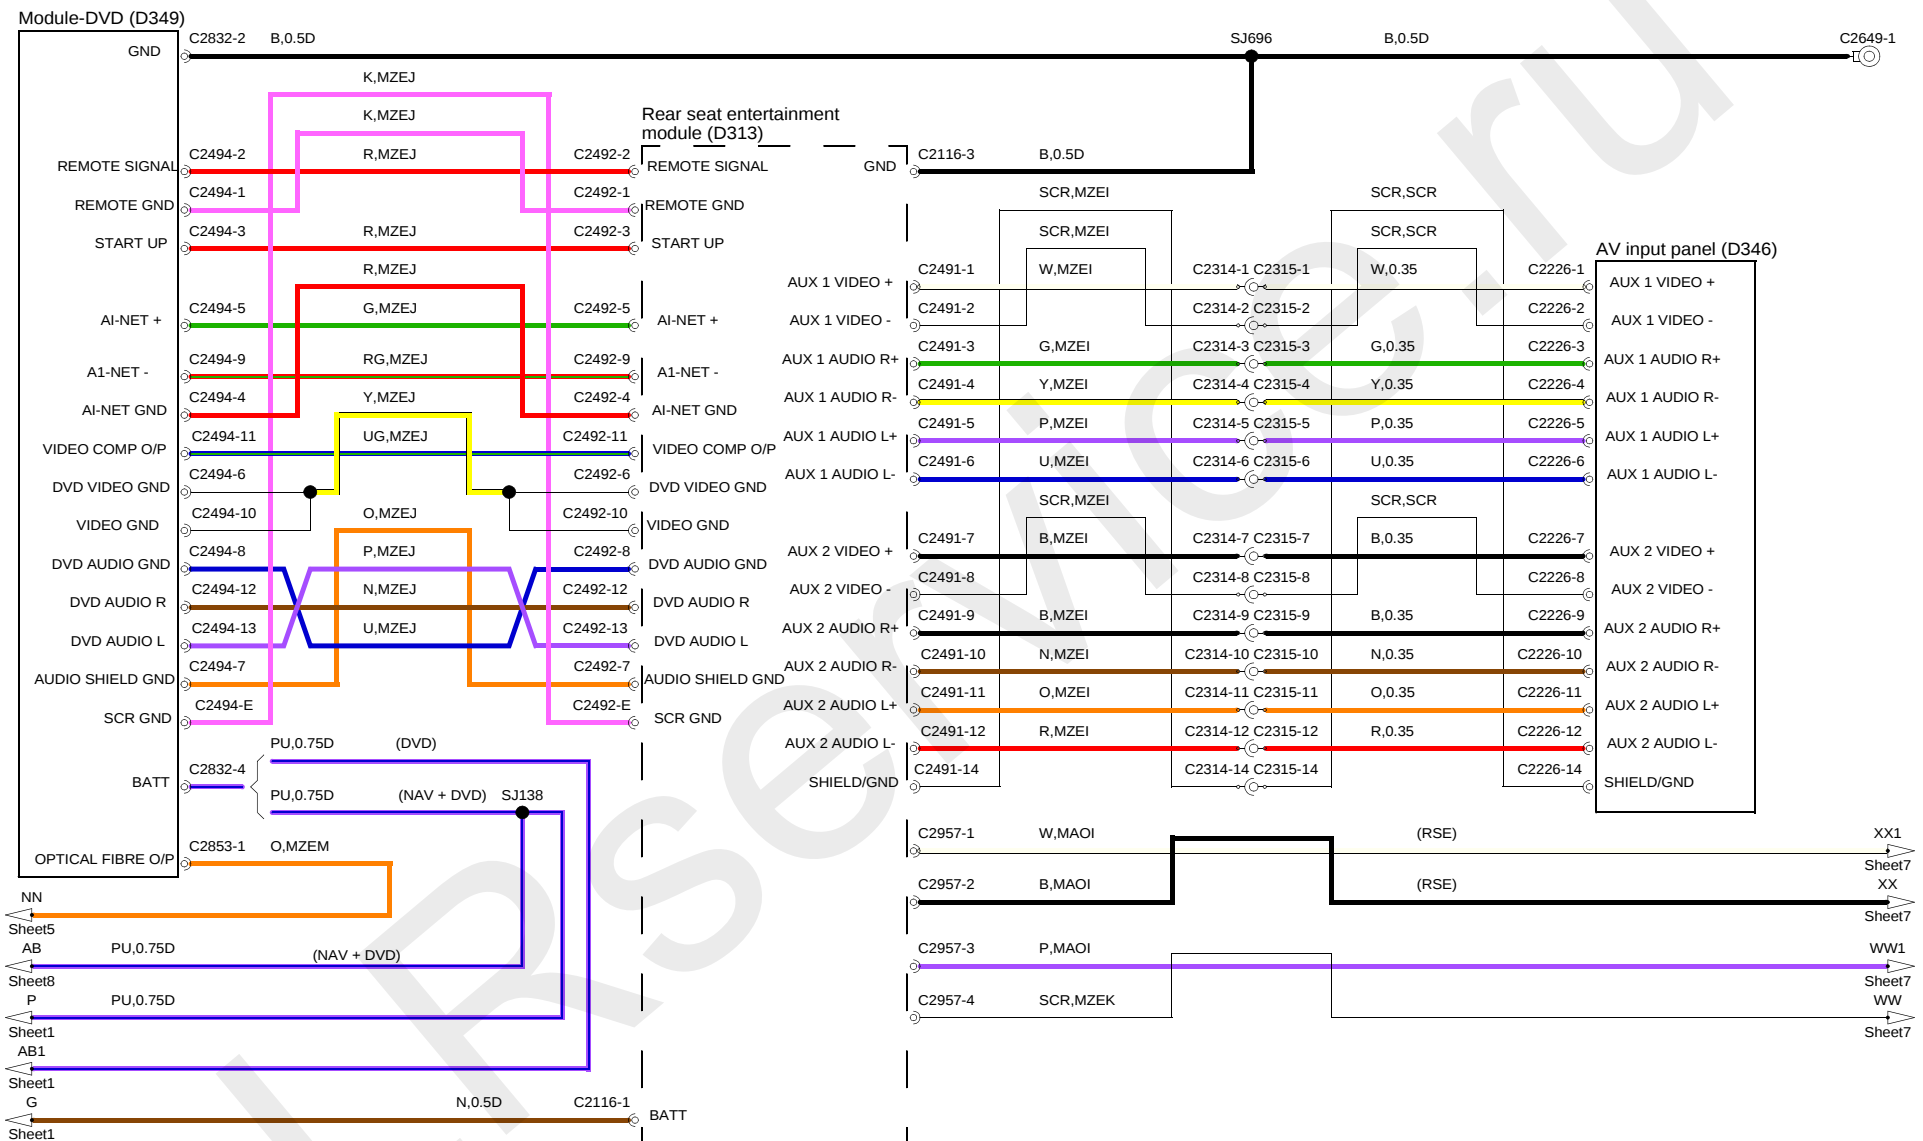


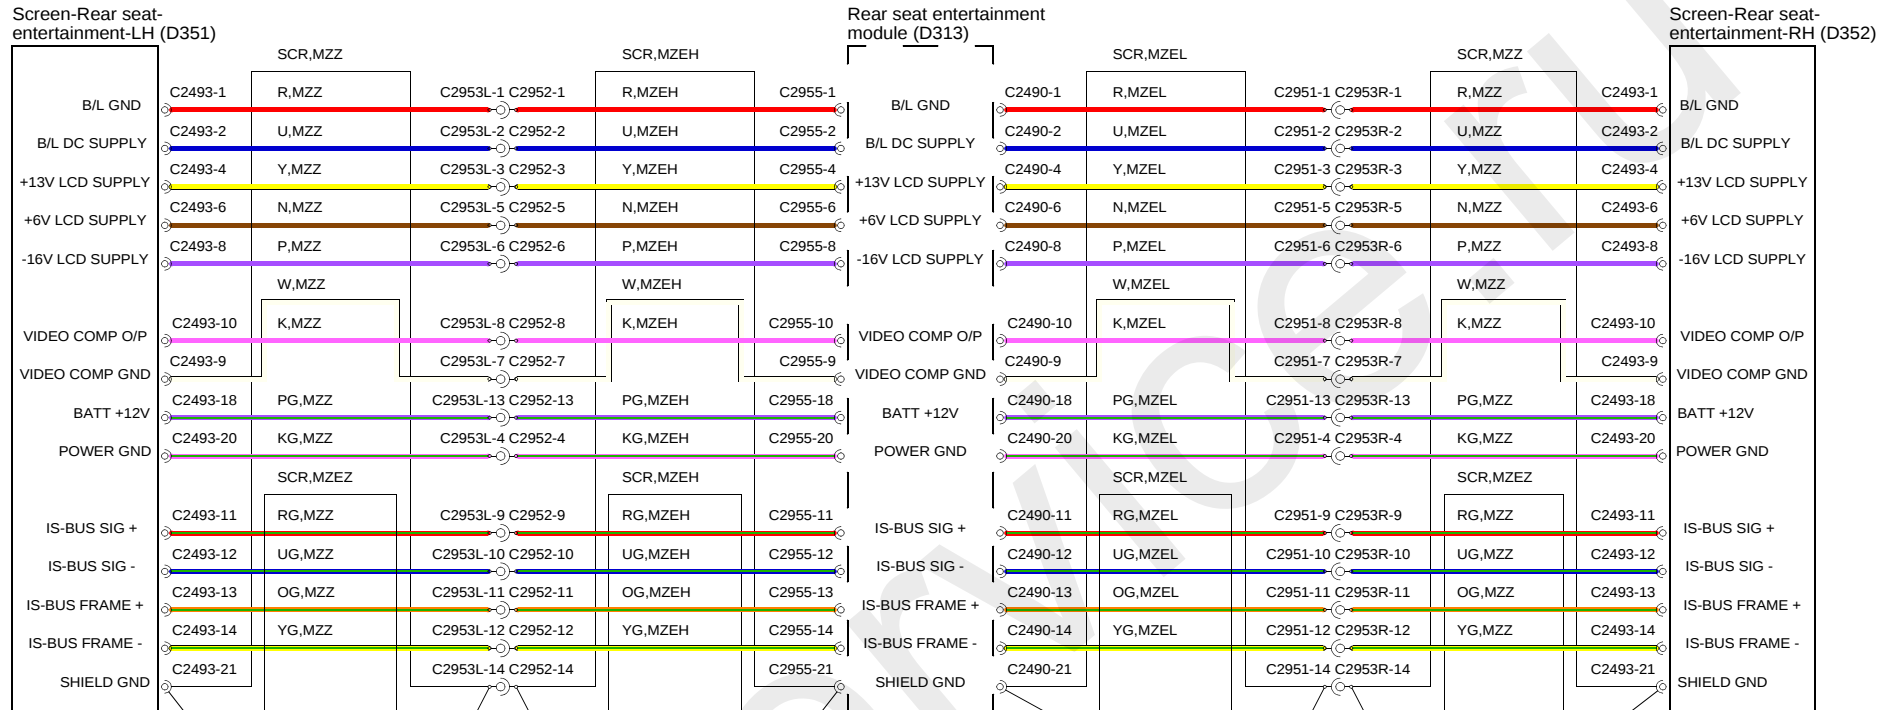


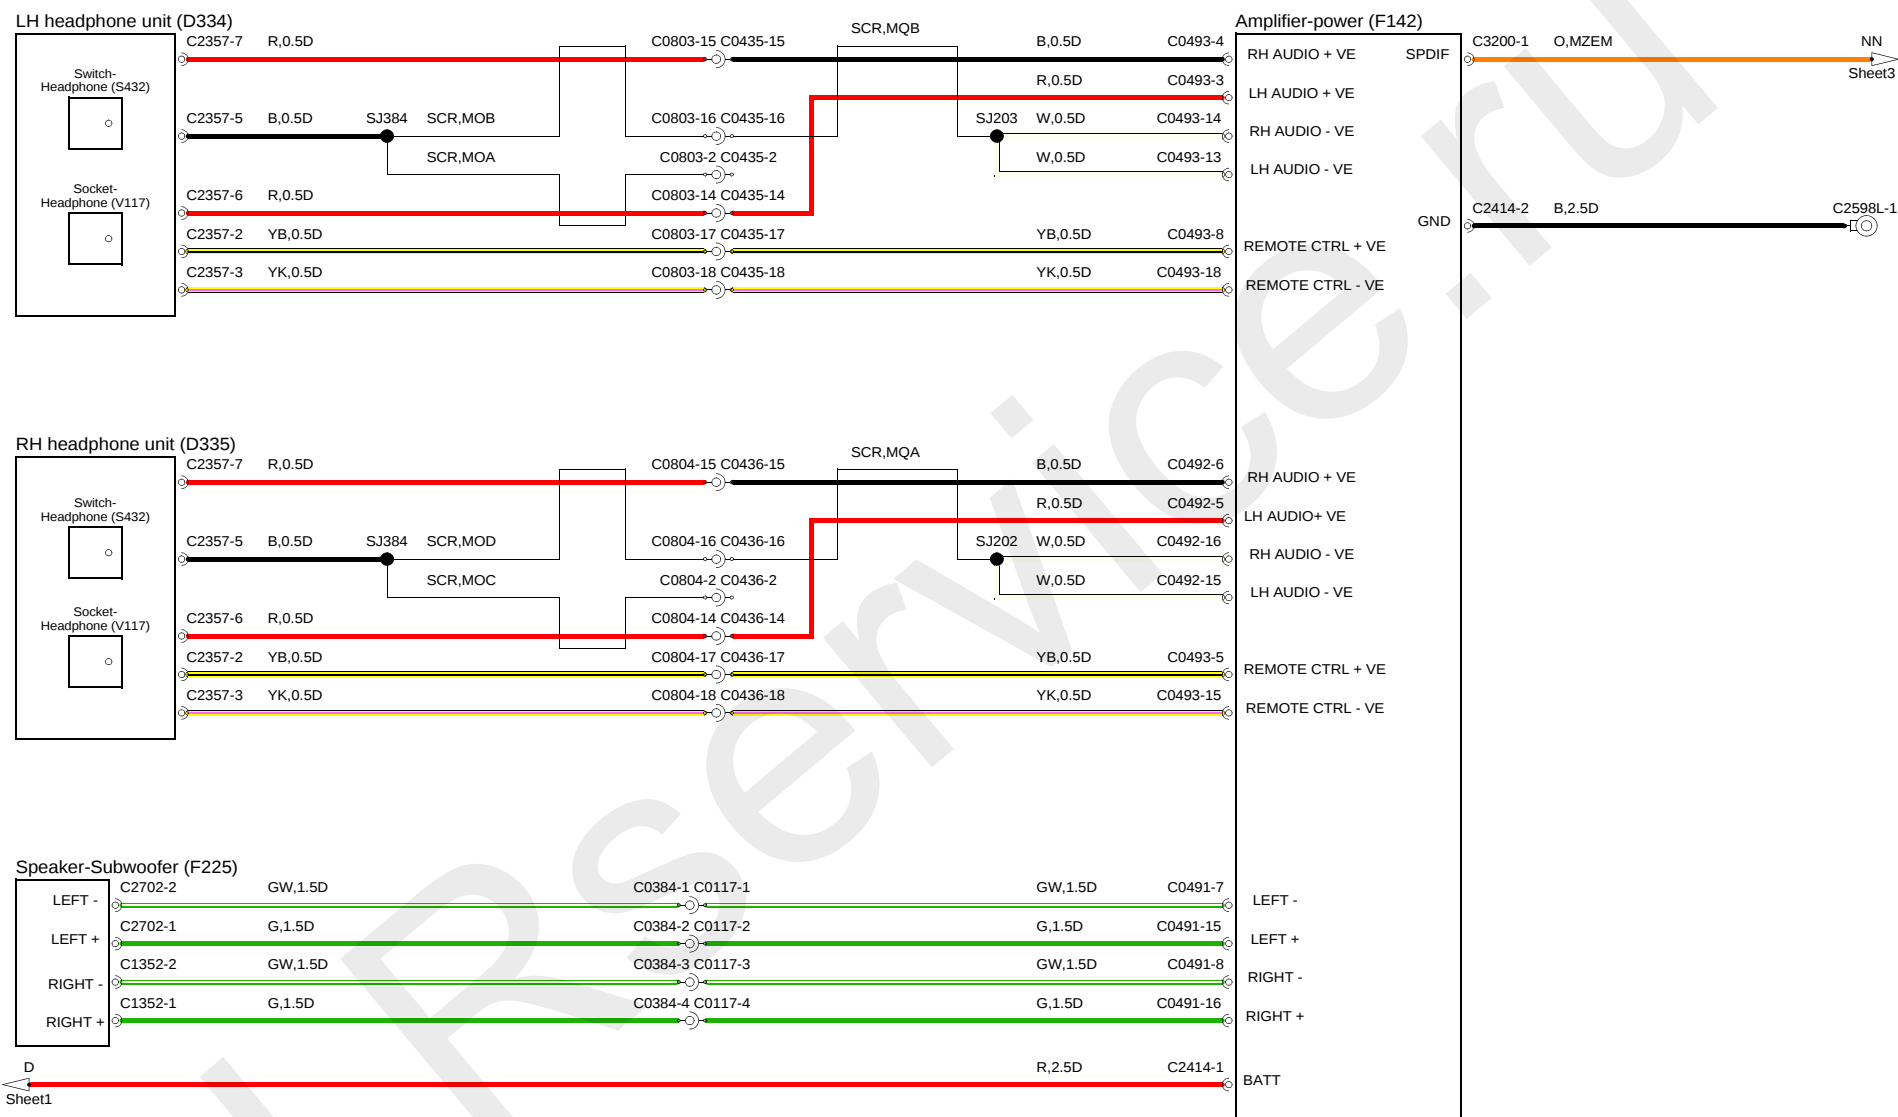


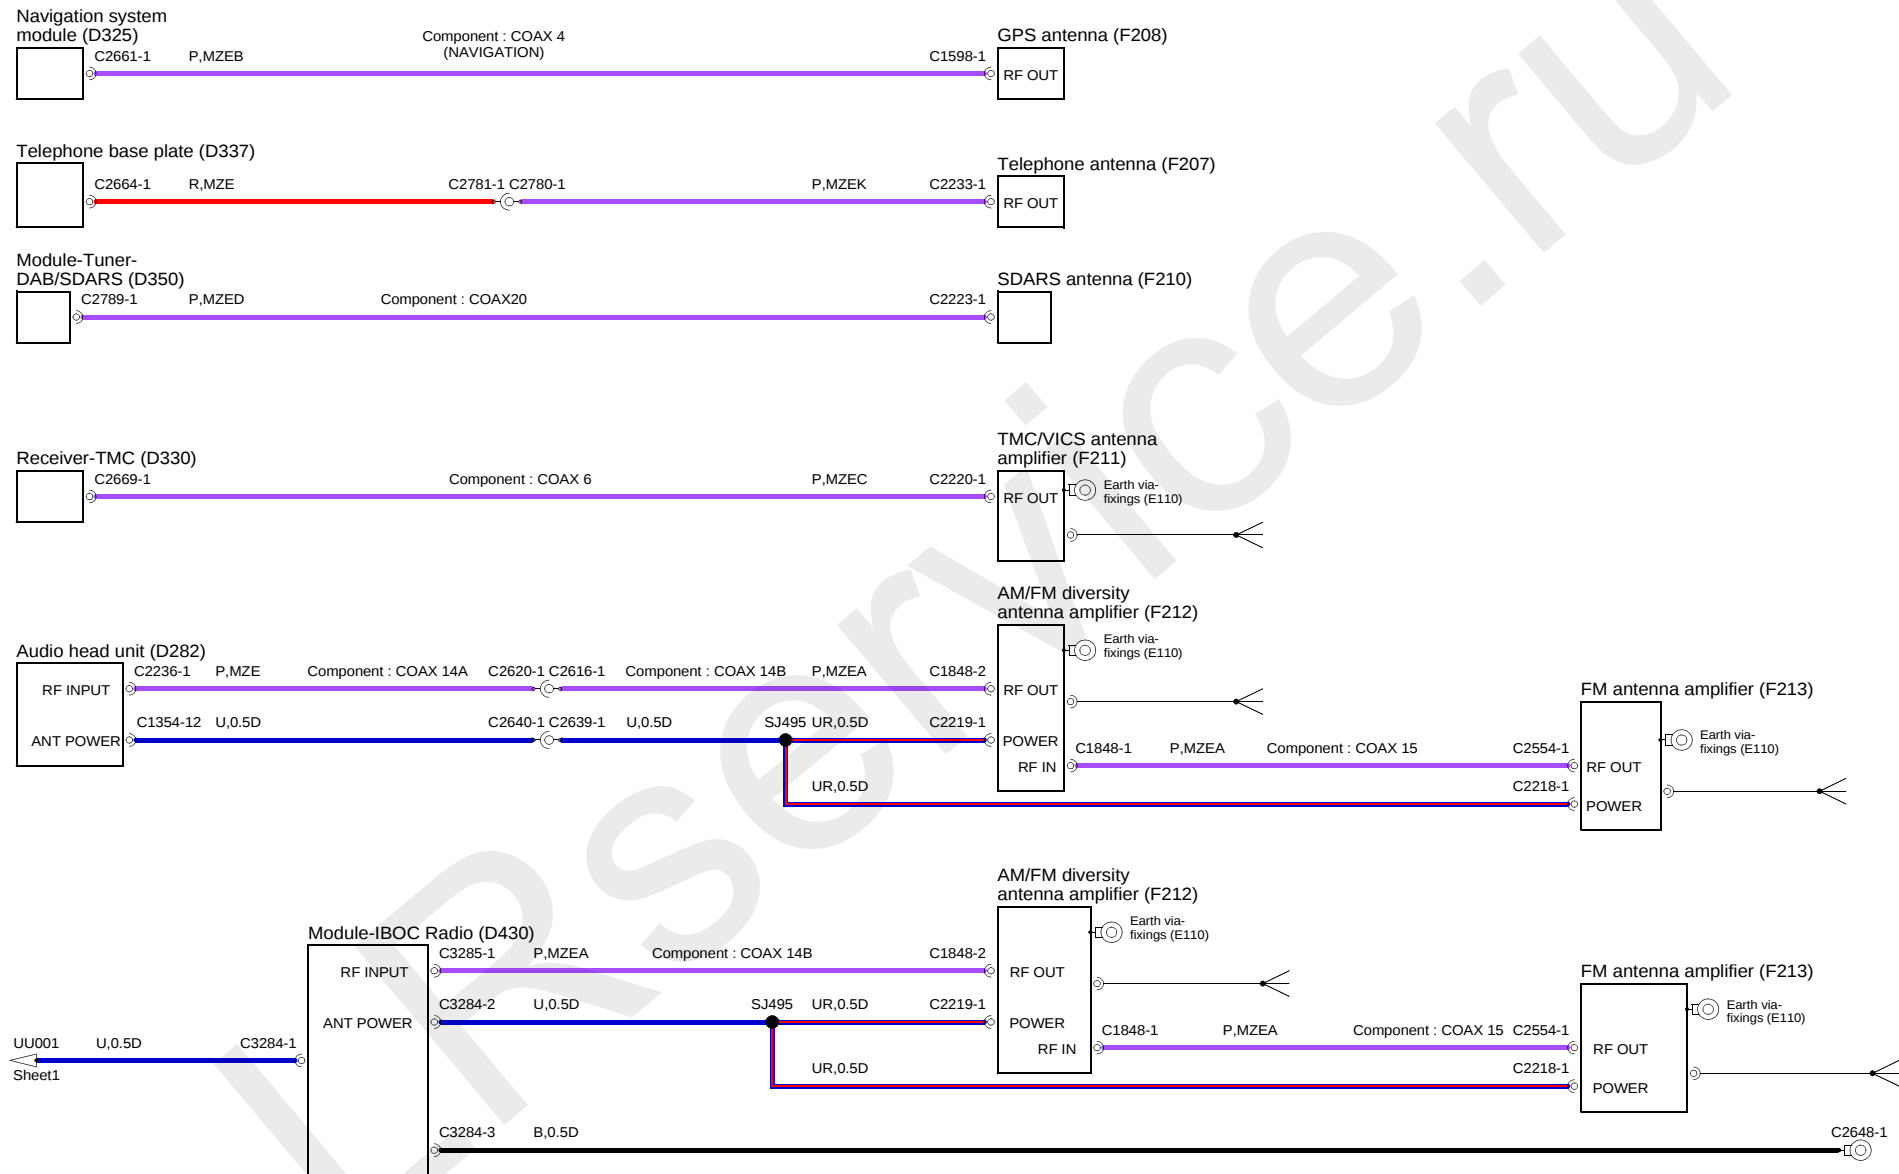


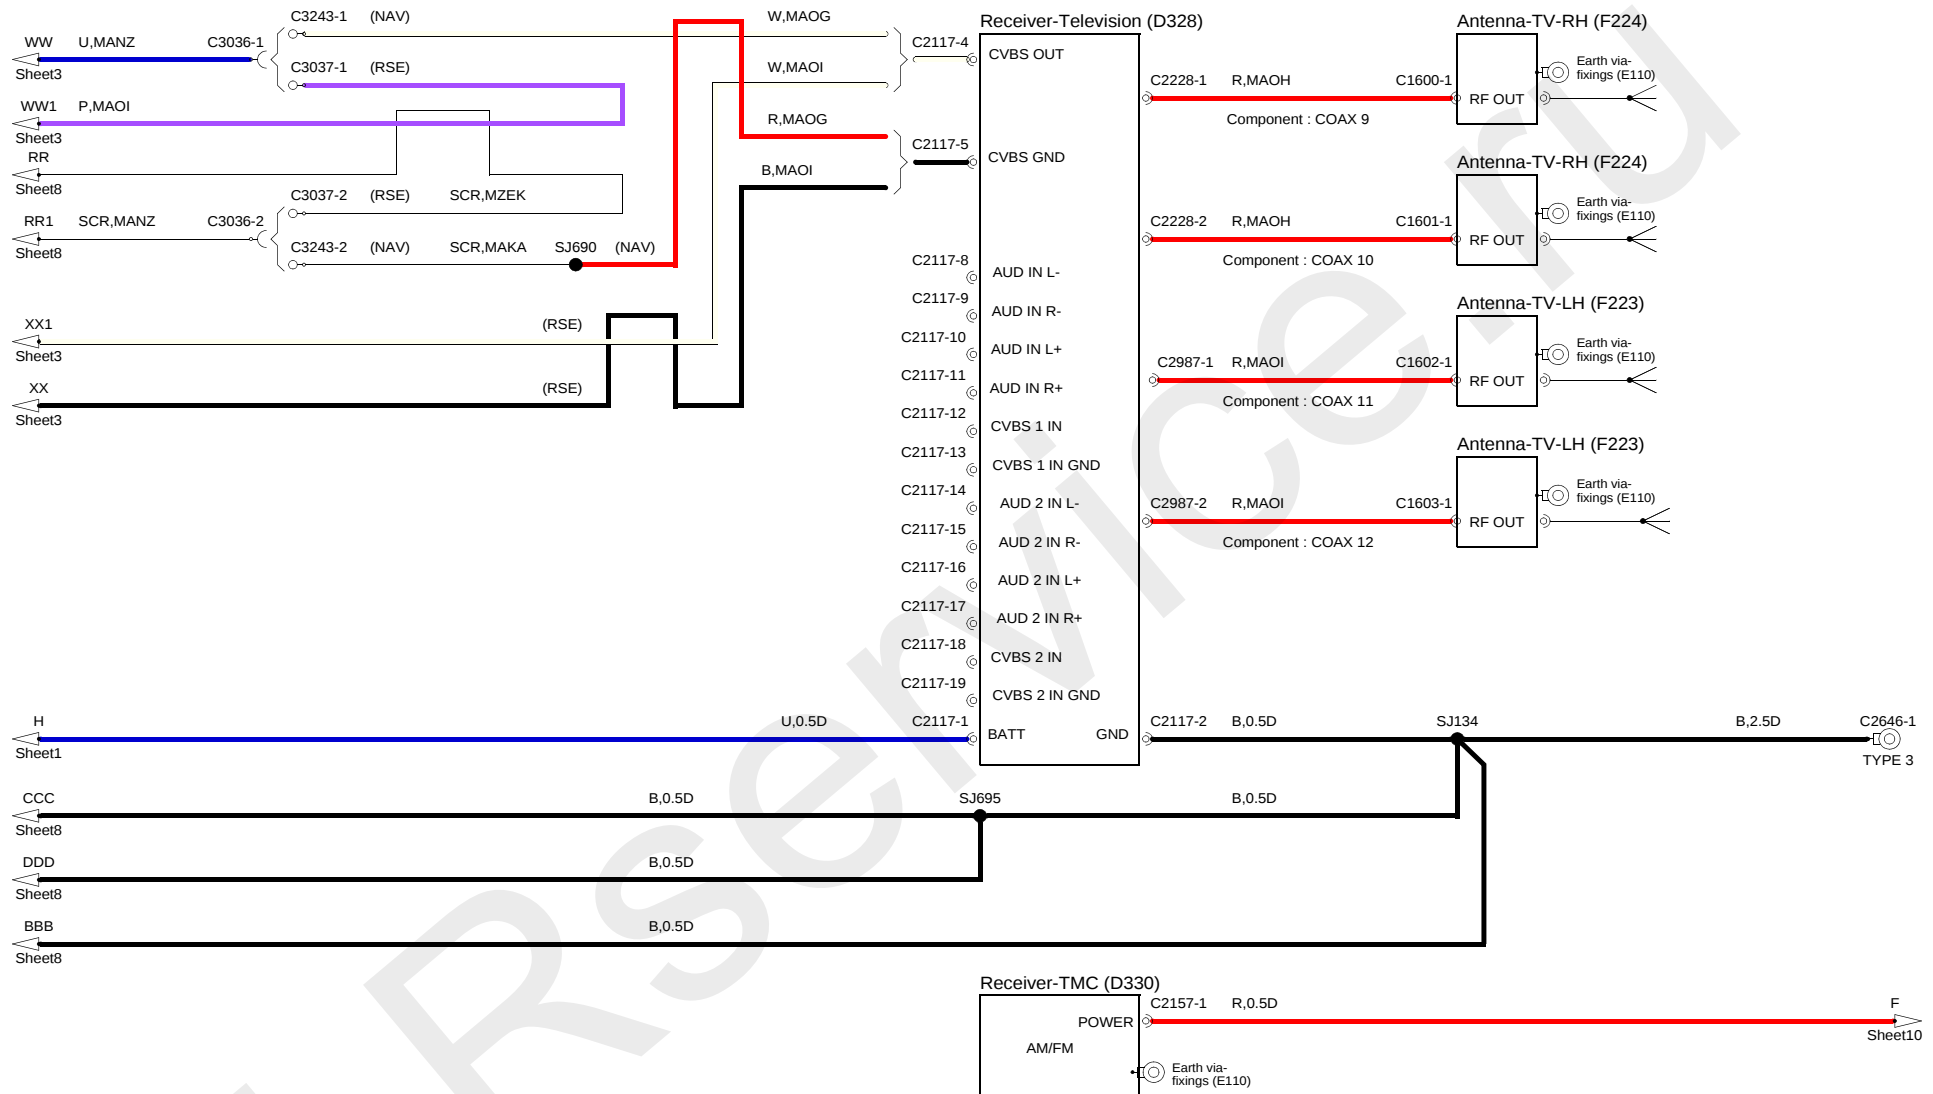


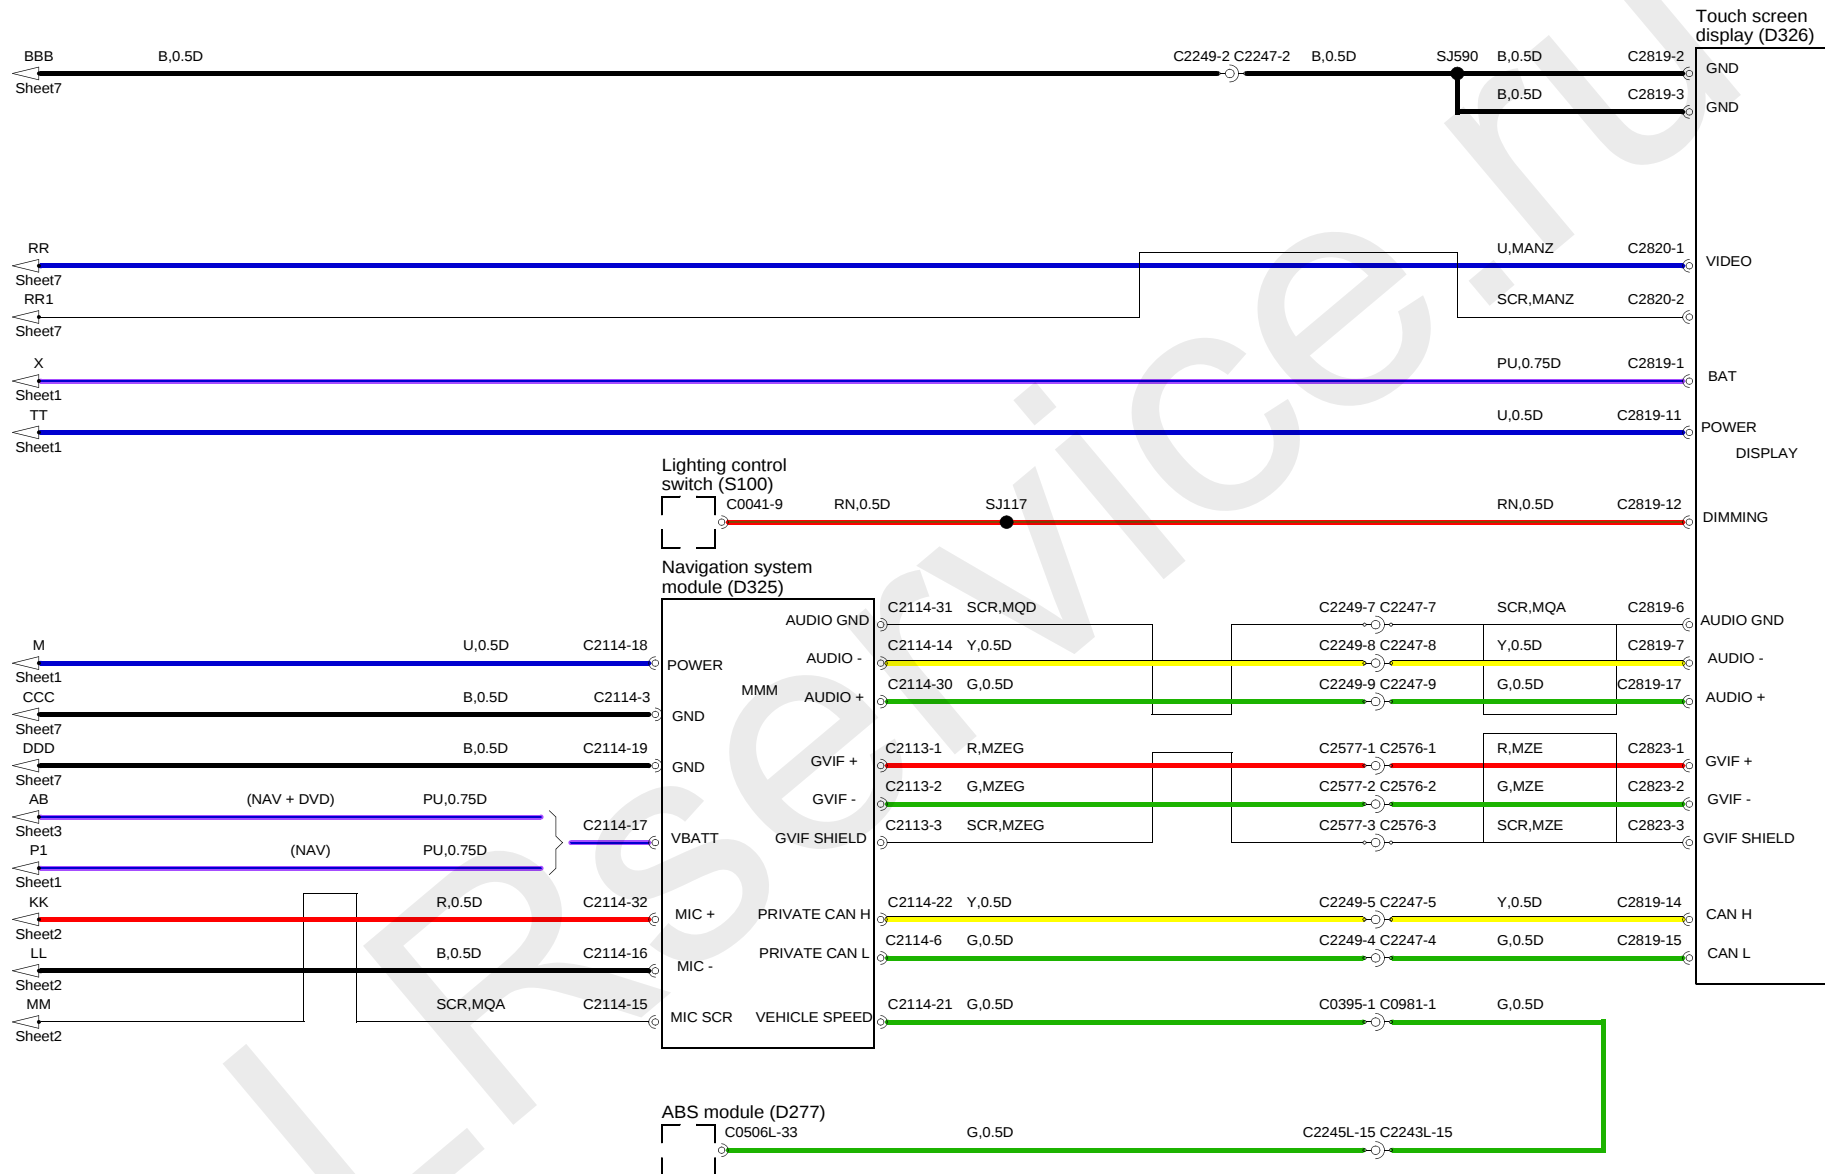


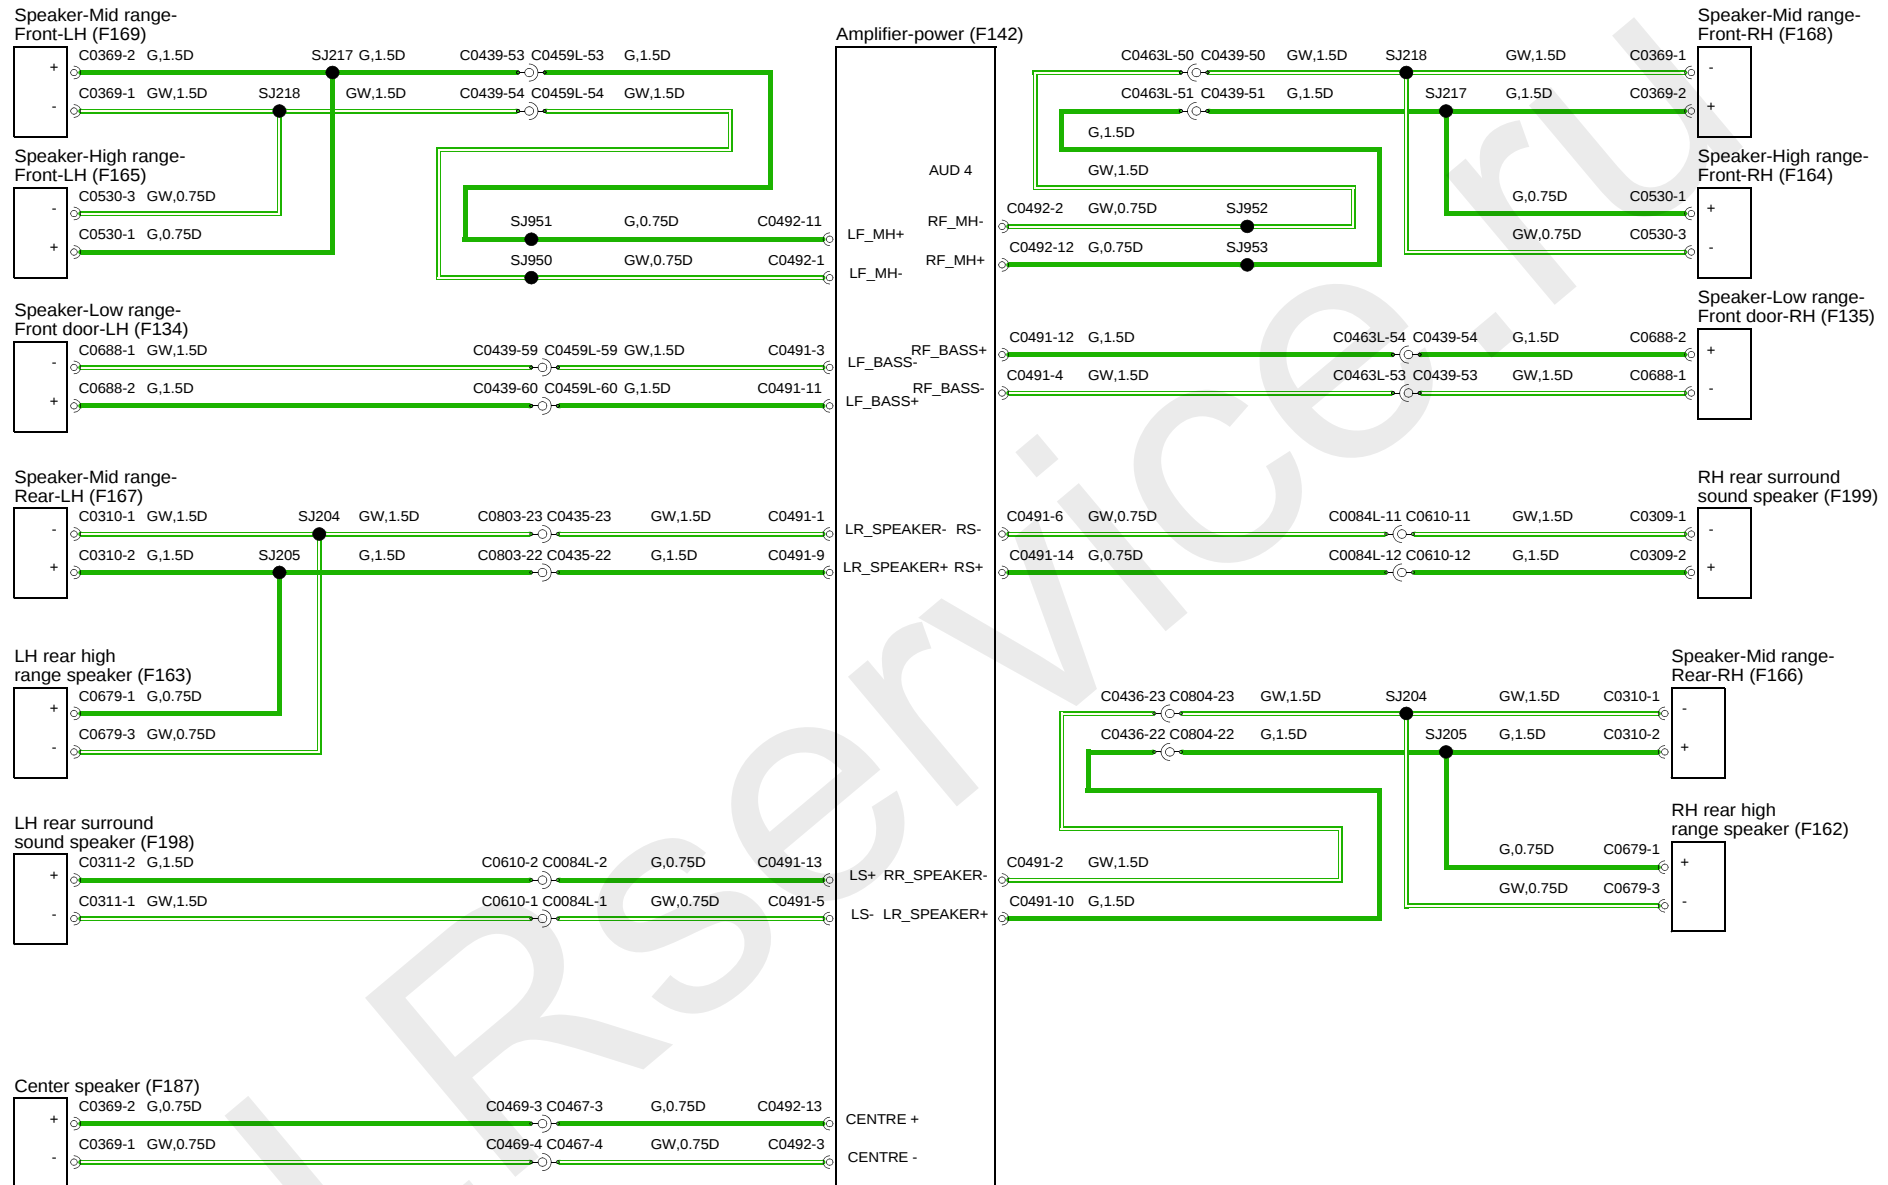

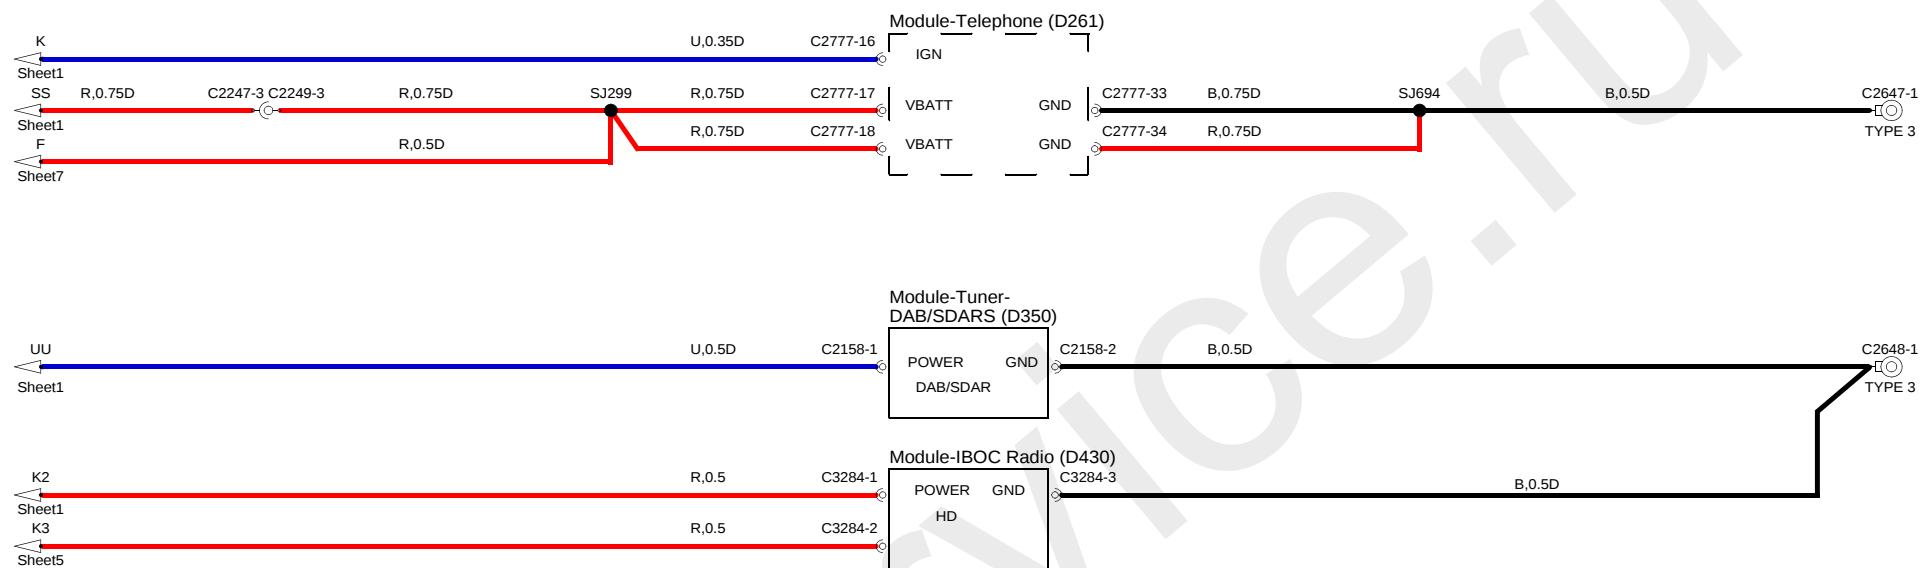


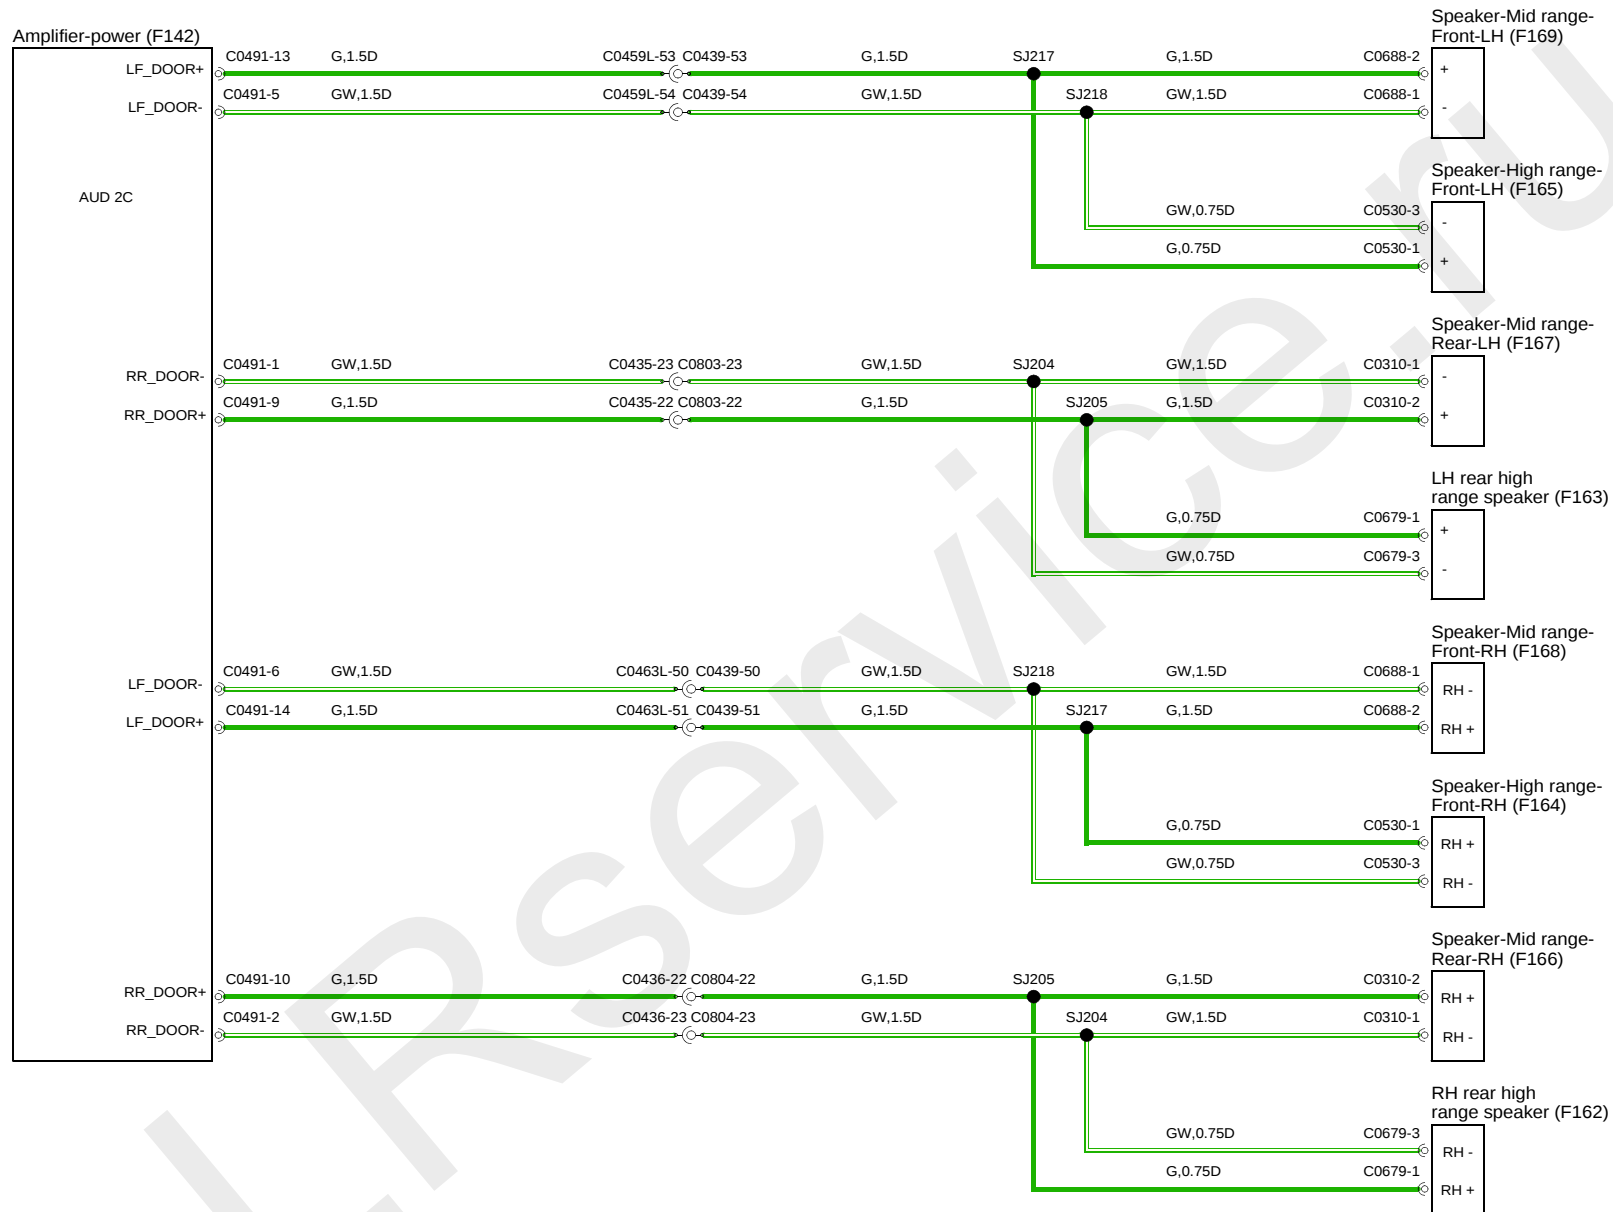


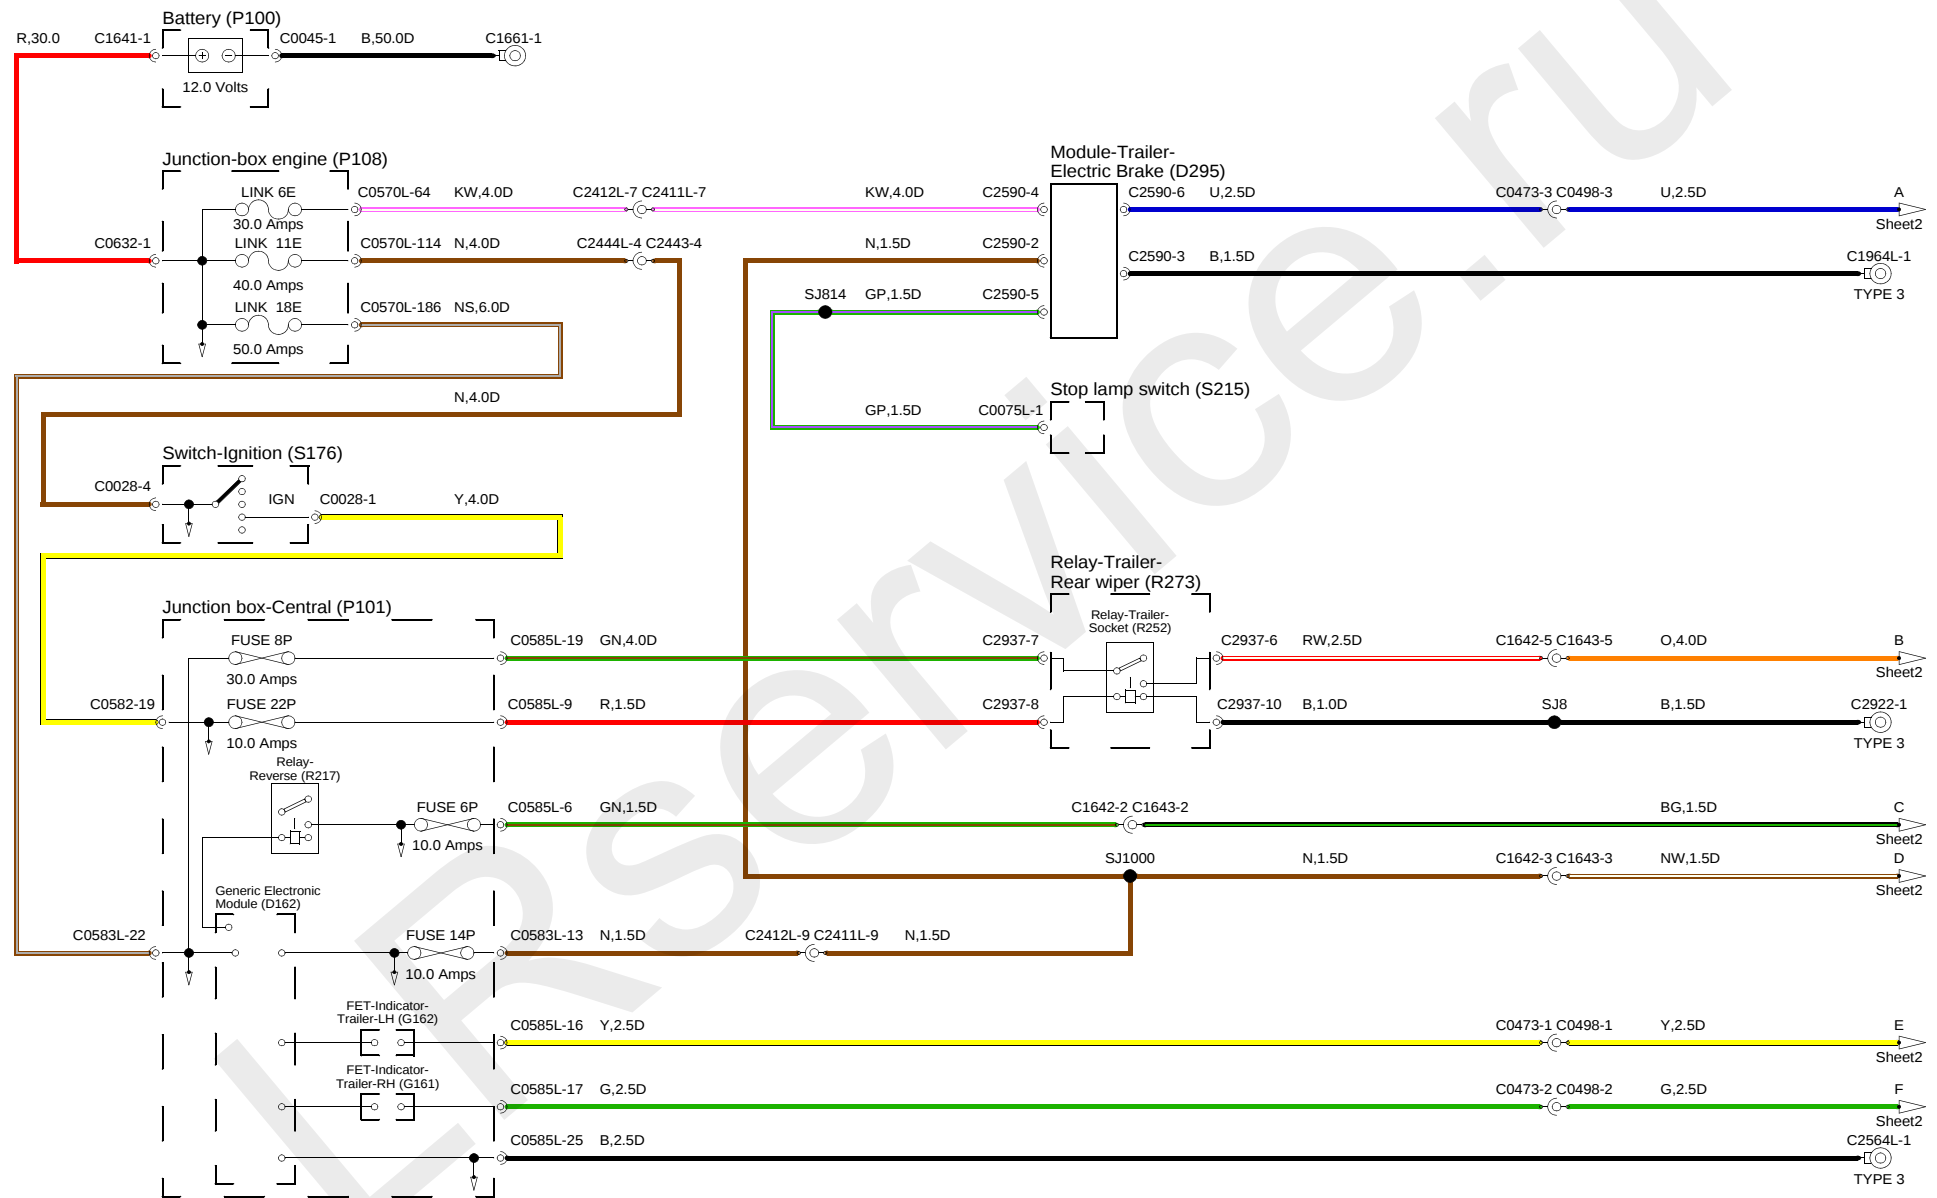


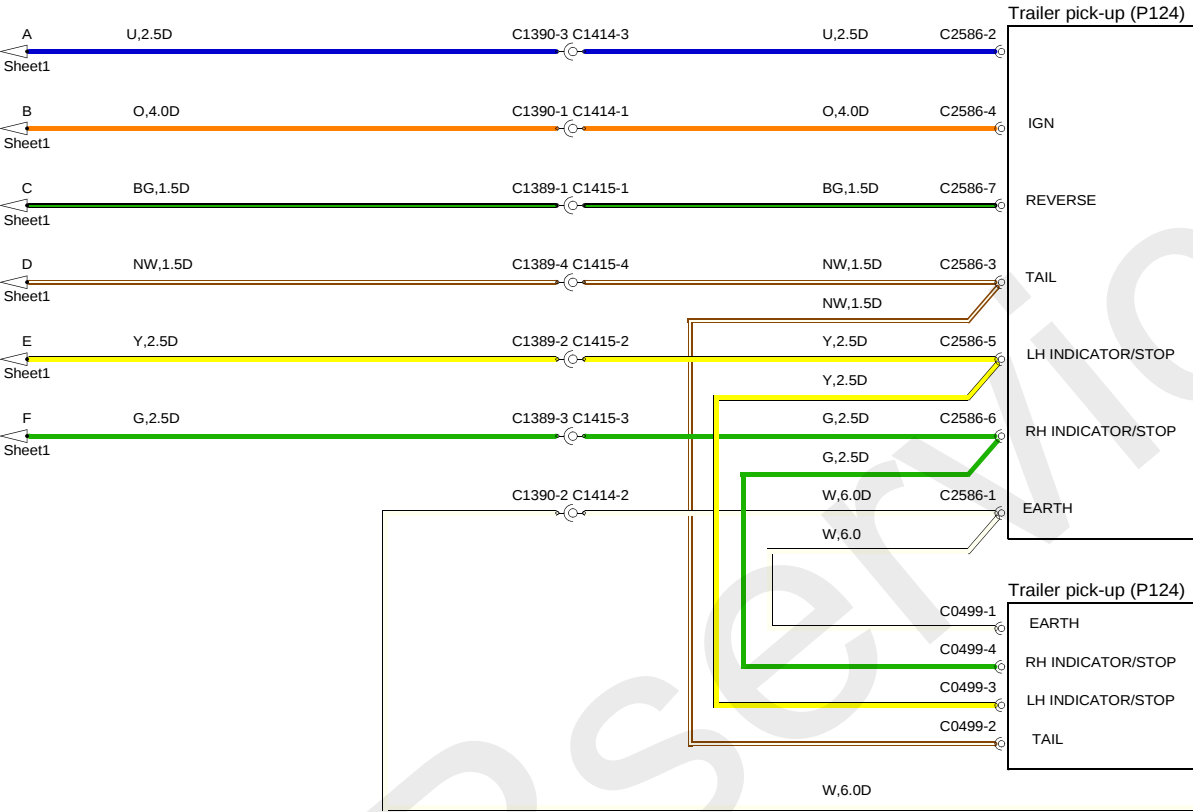



C0565-1
TYPE 3

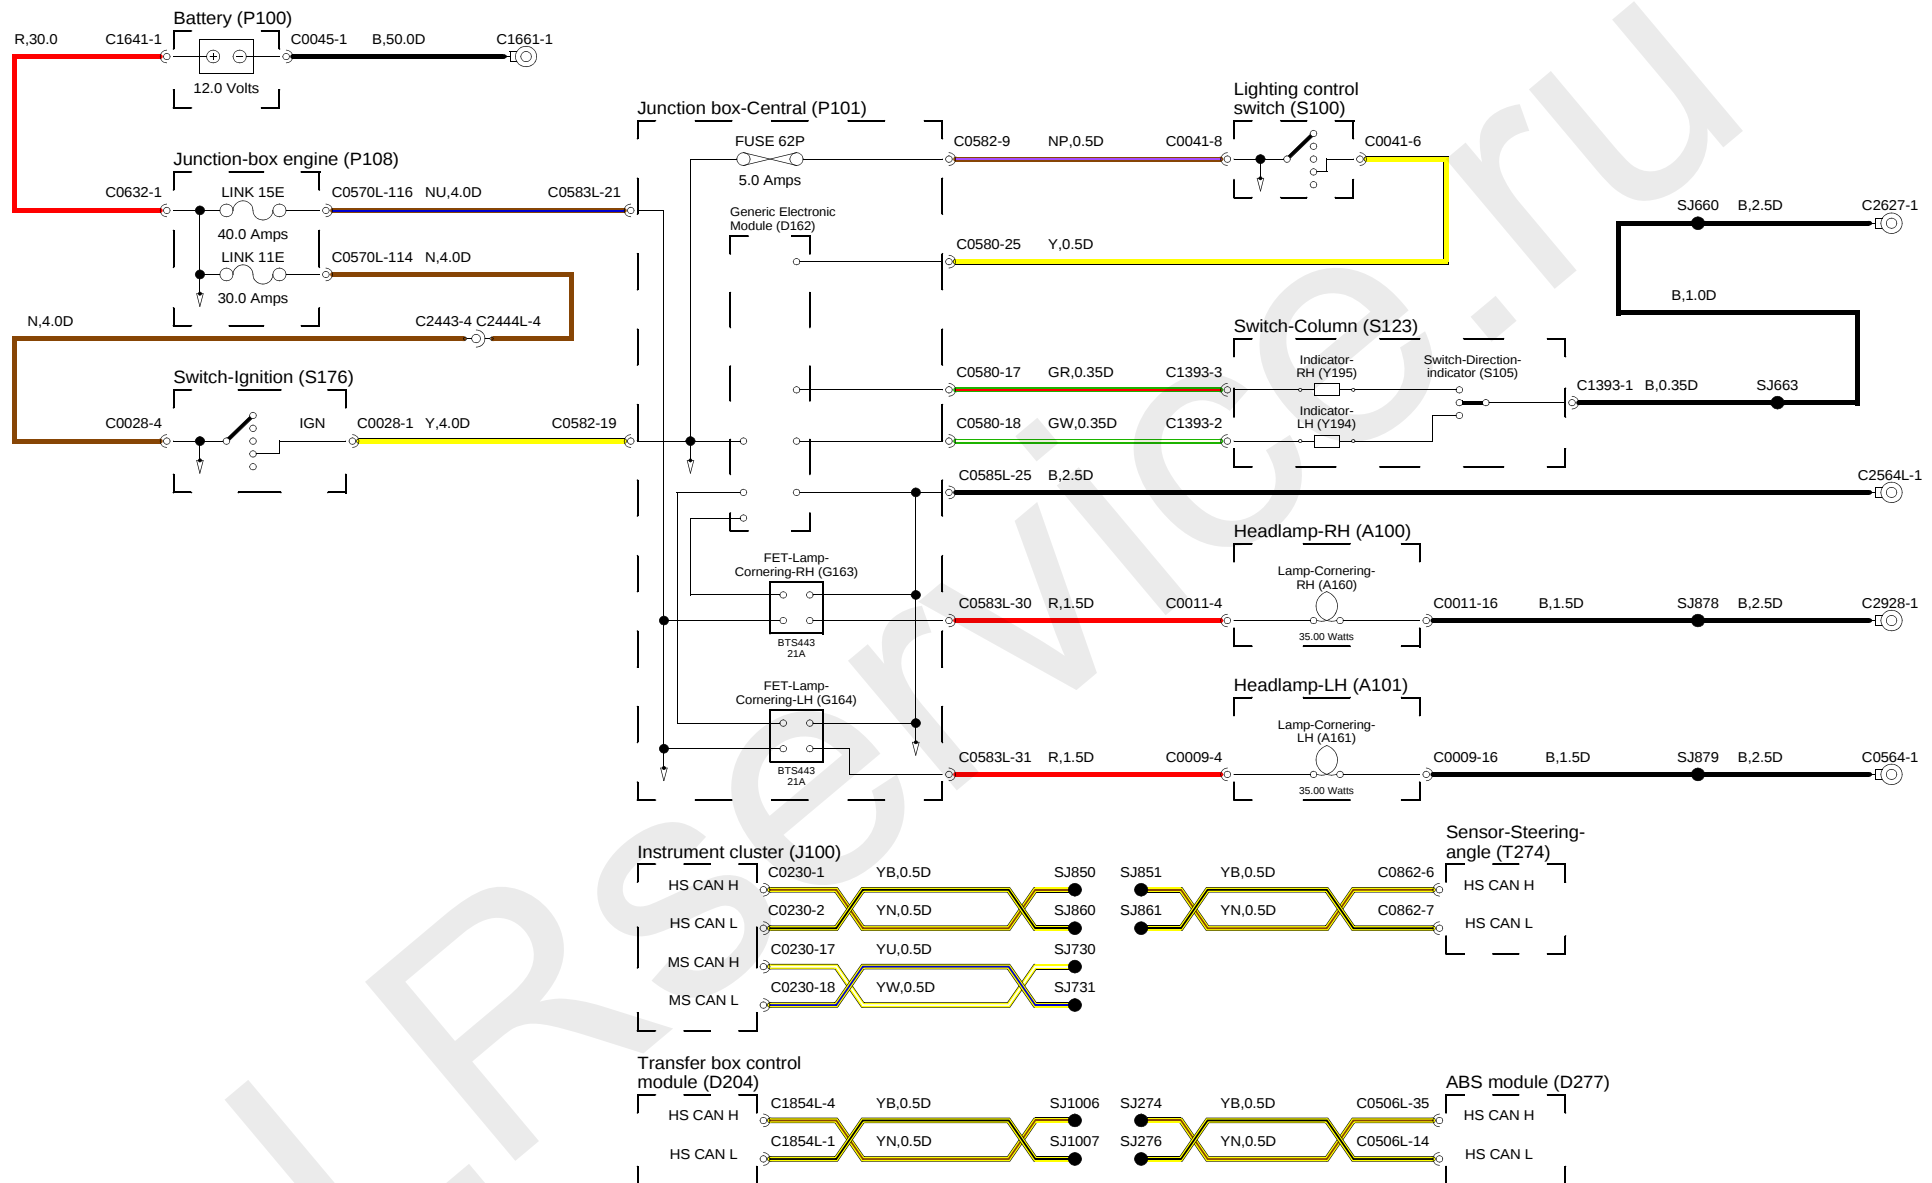


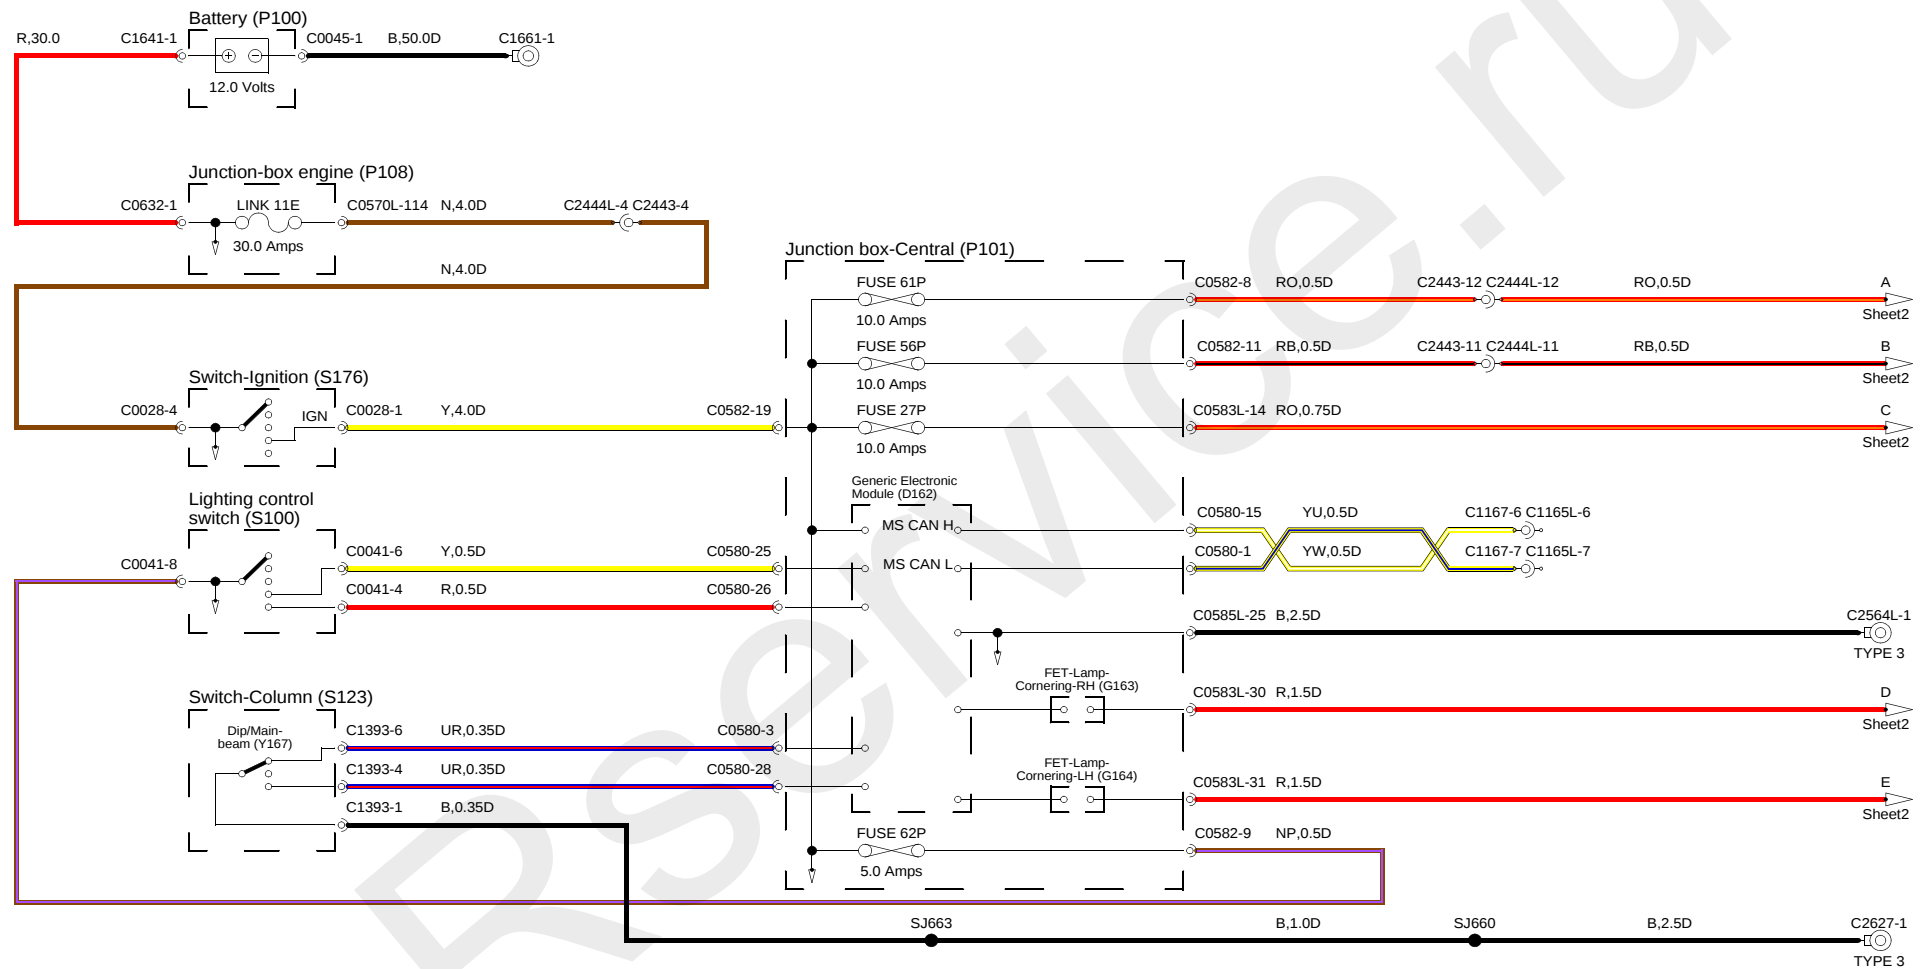


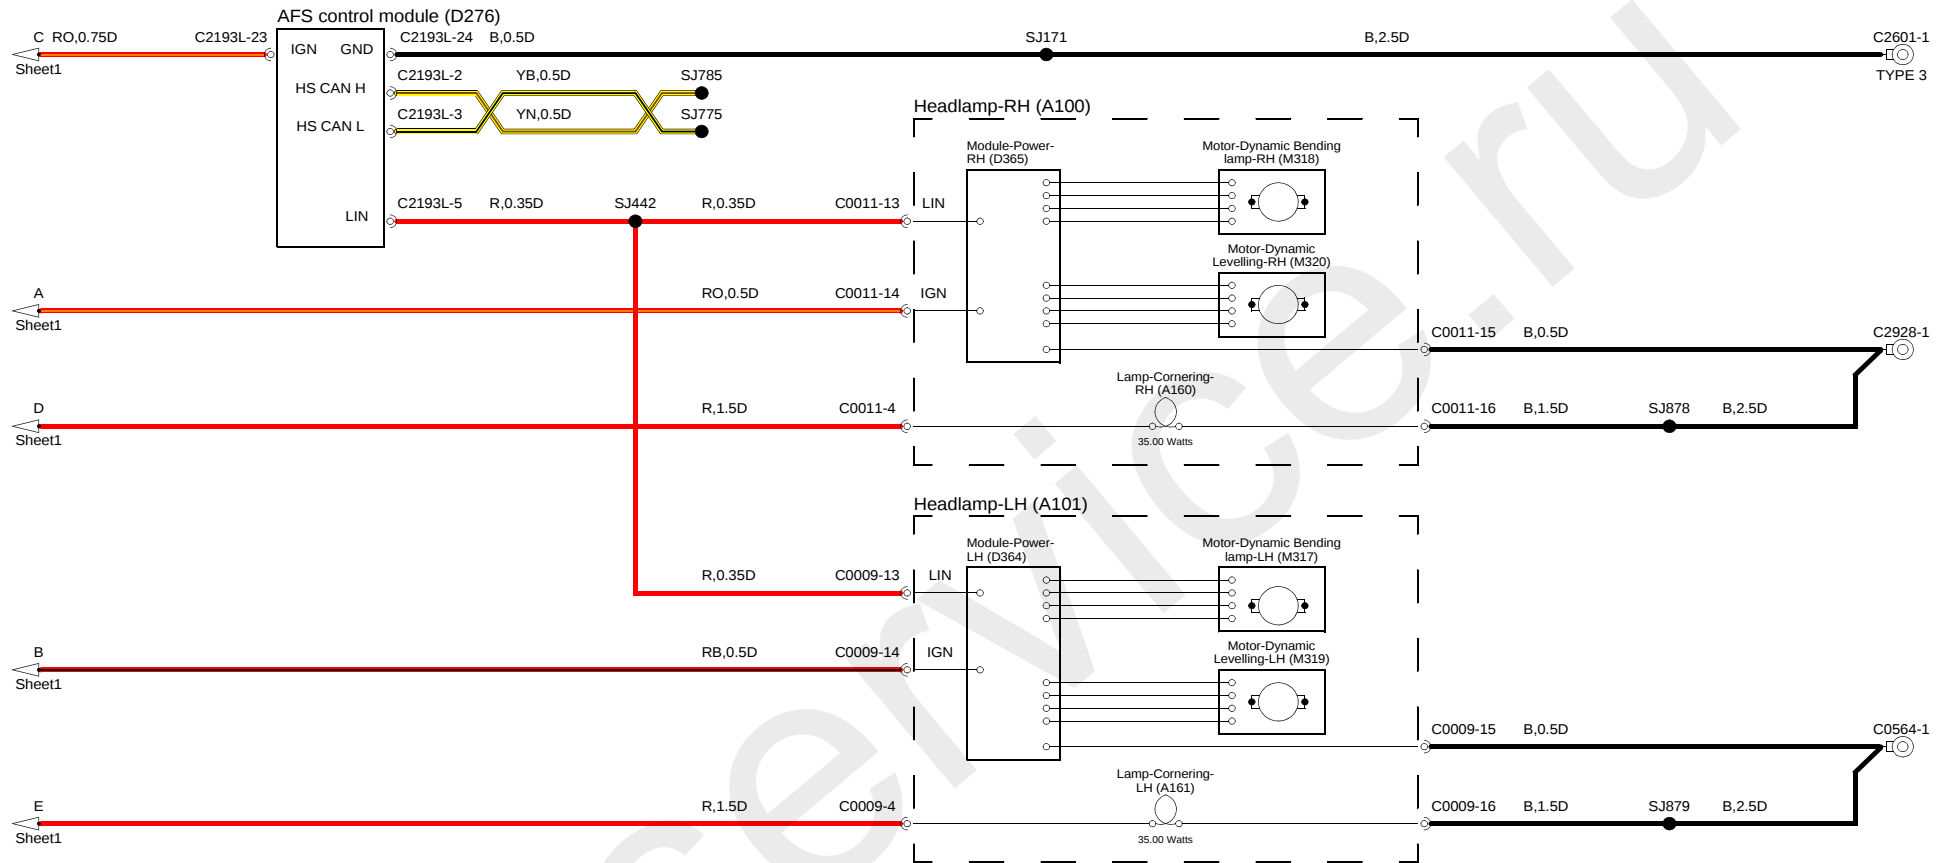



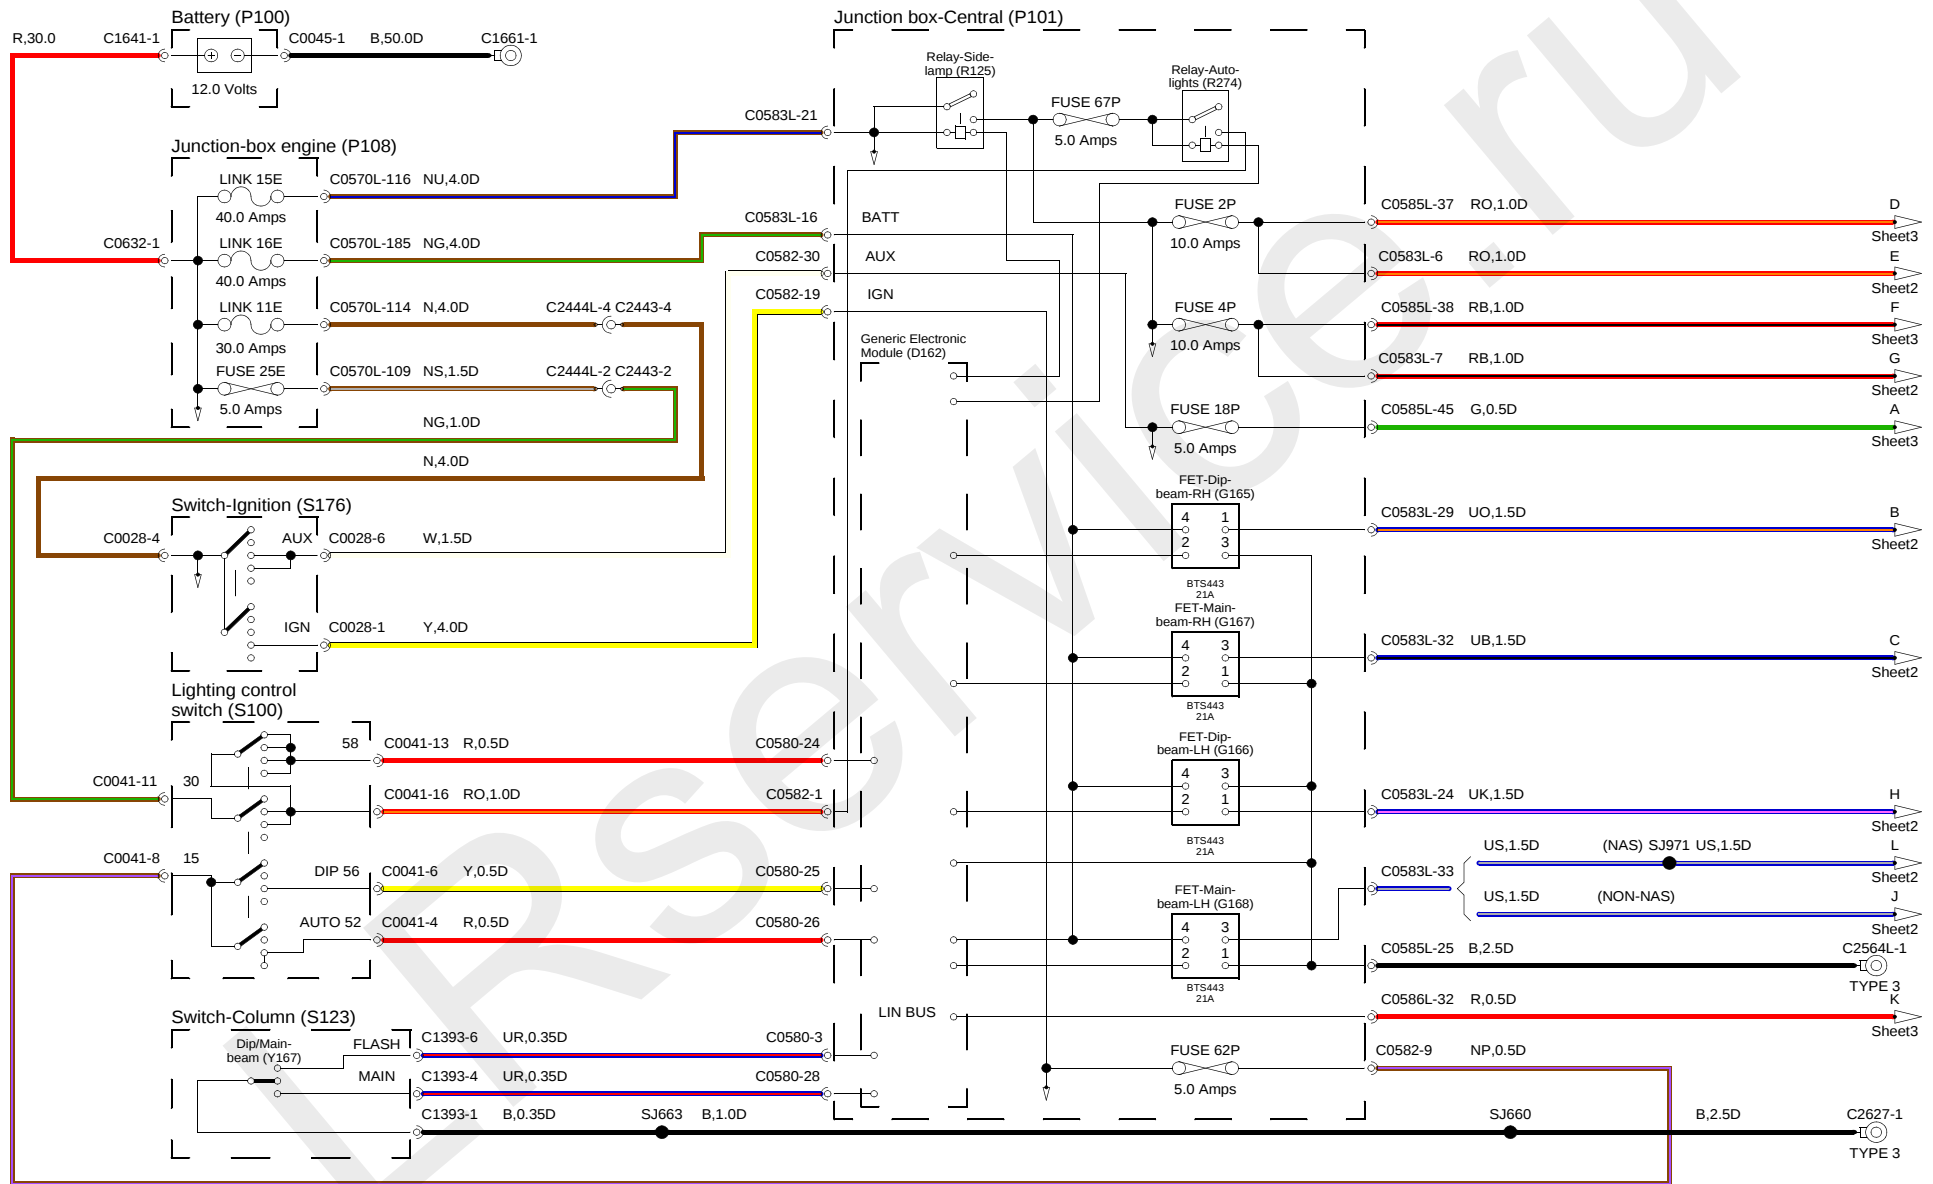


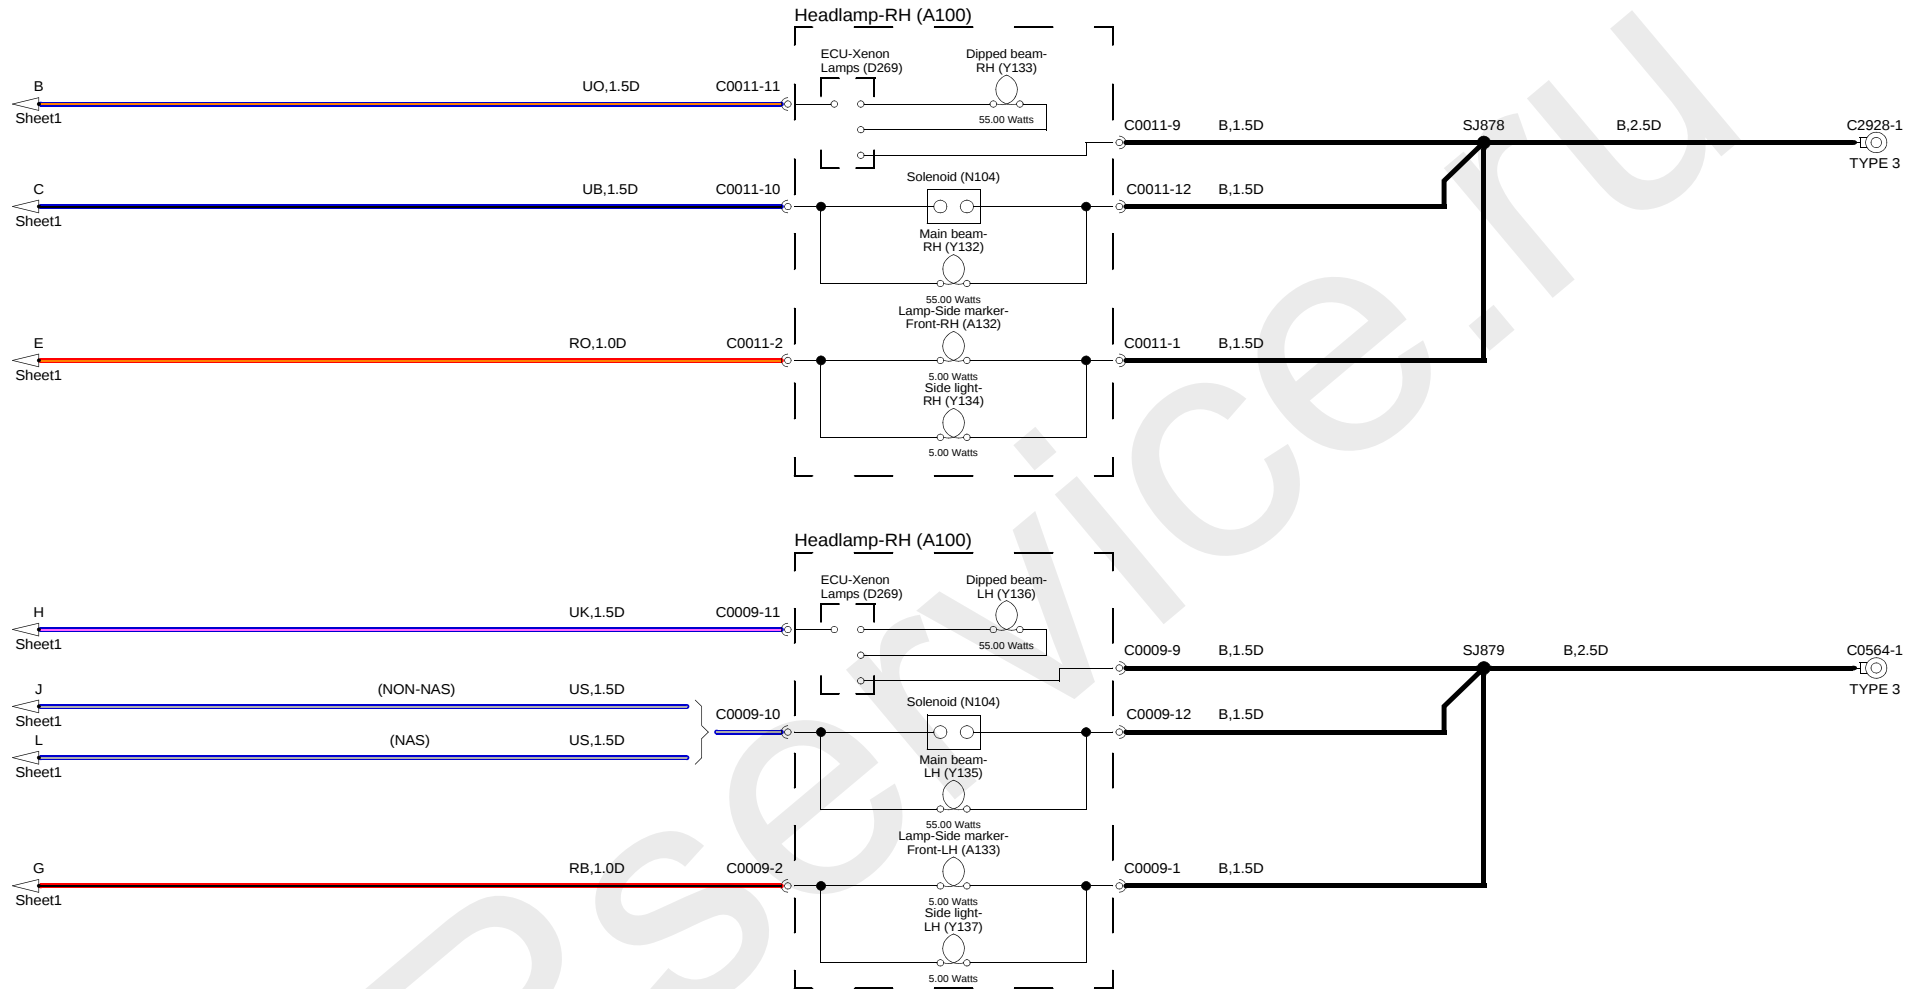


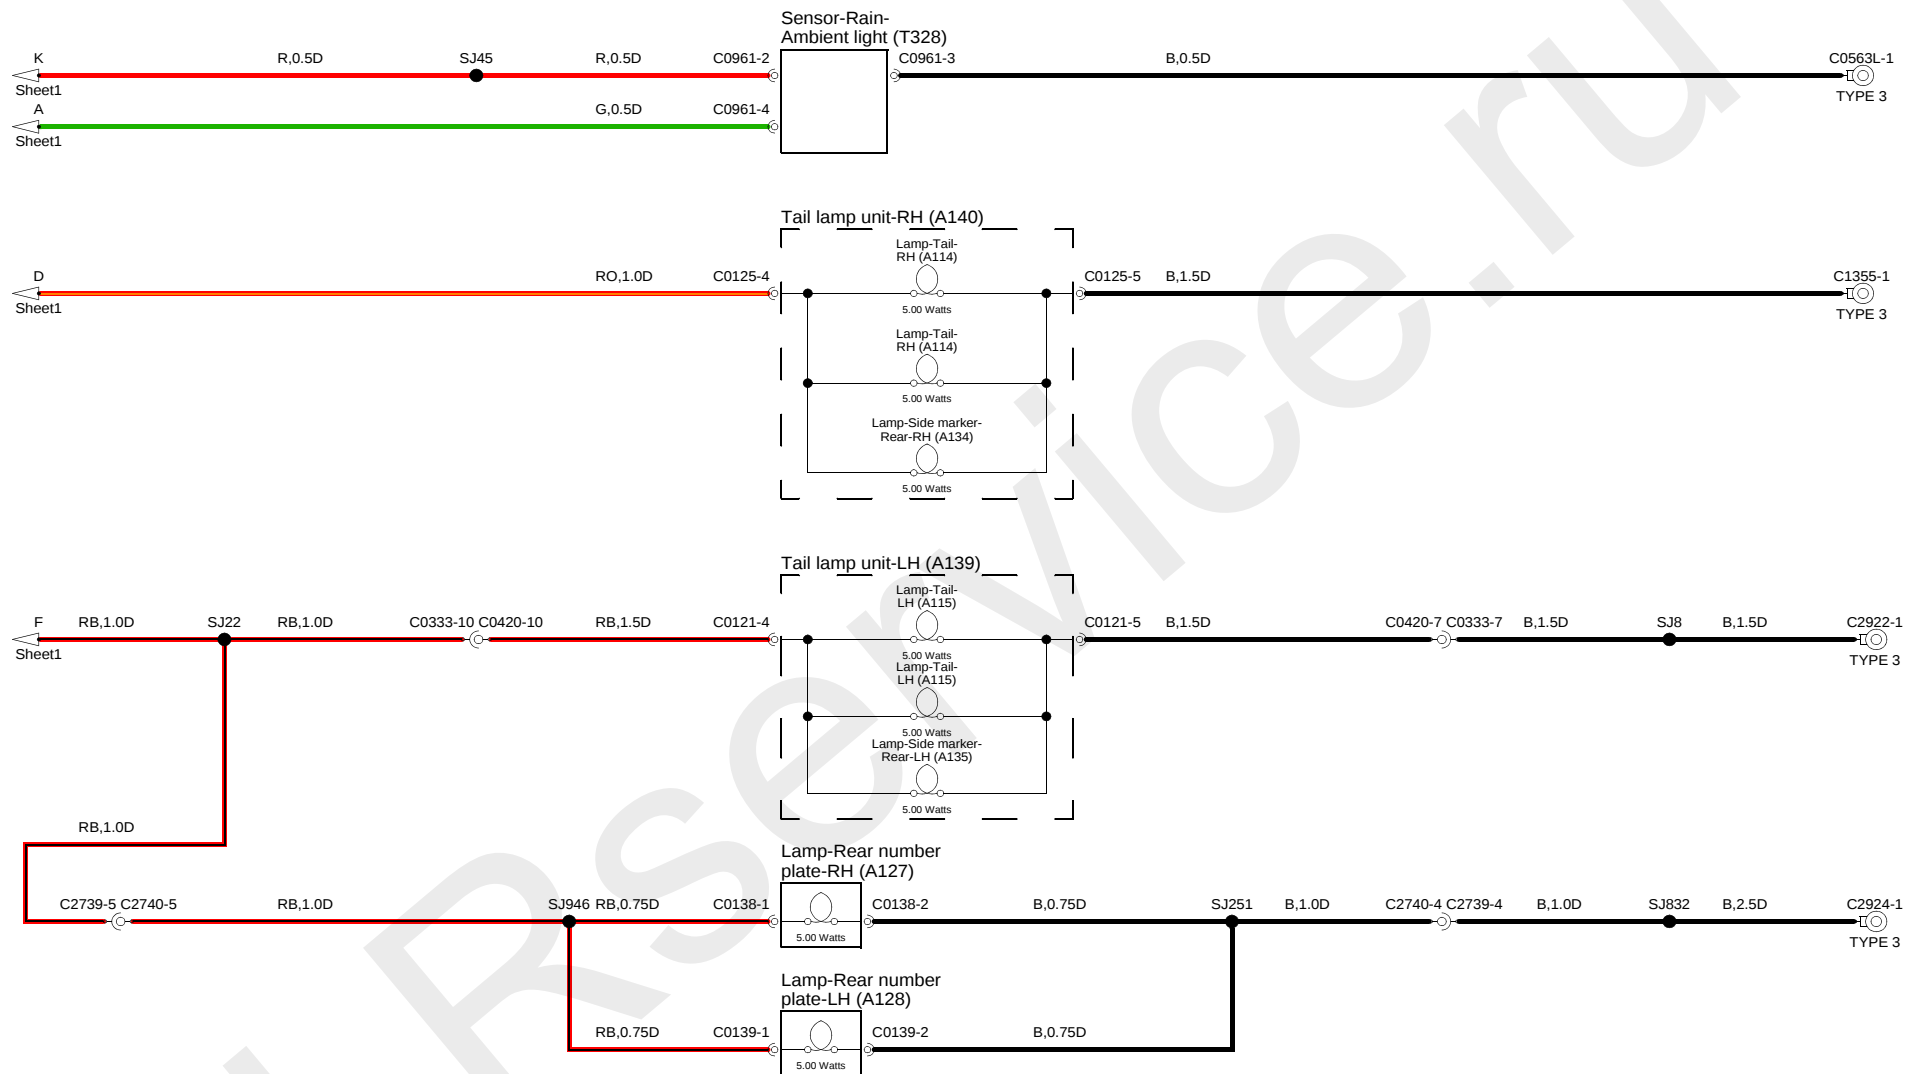


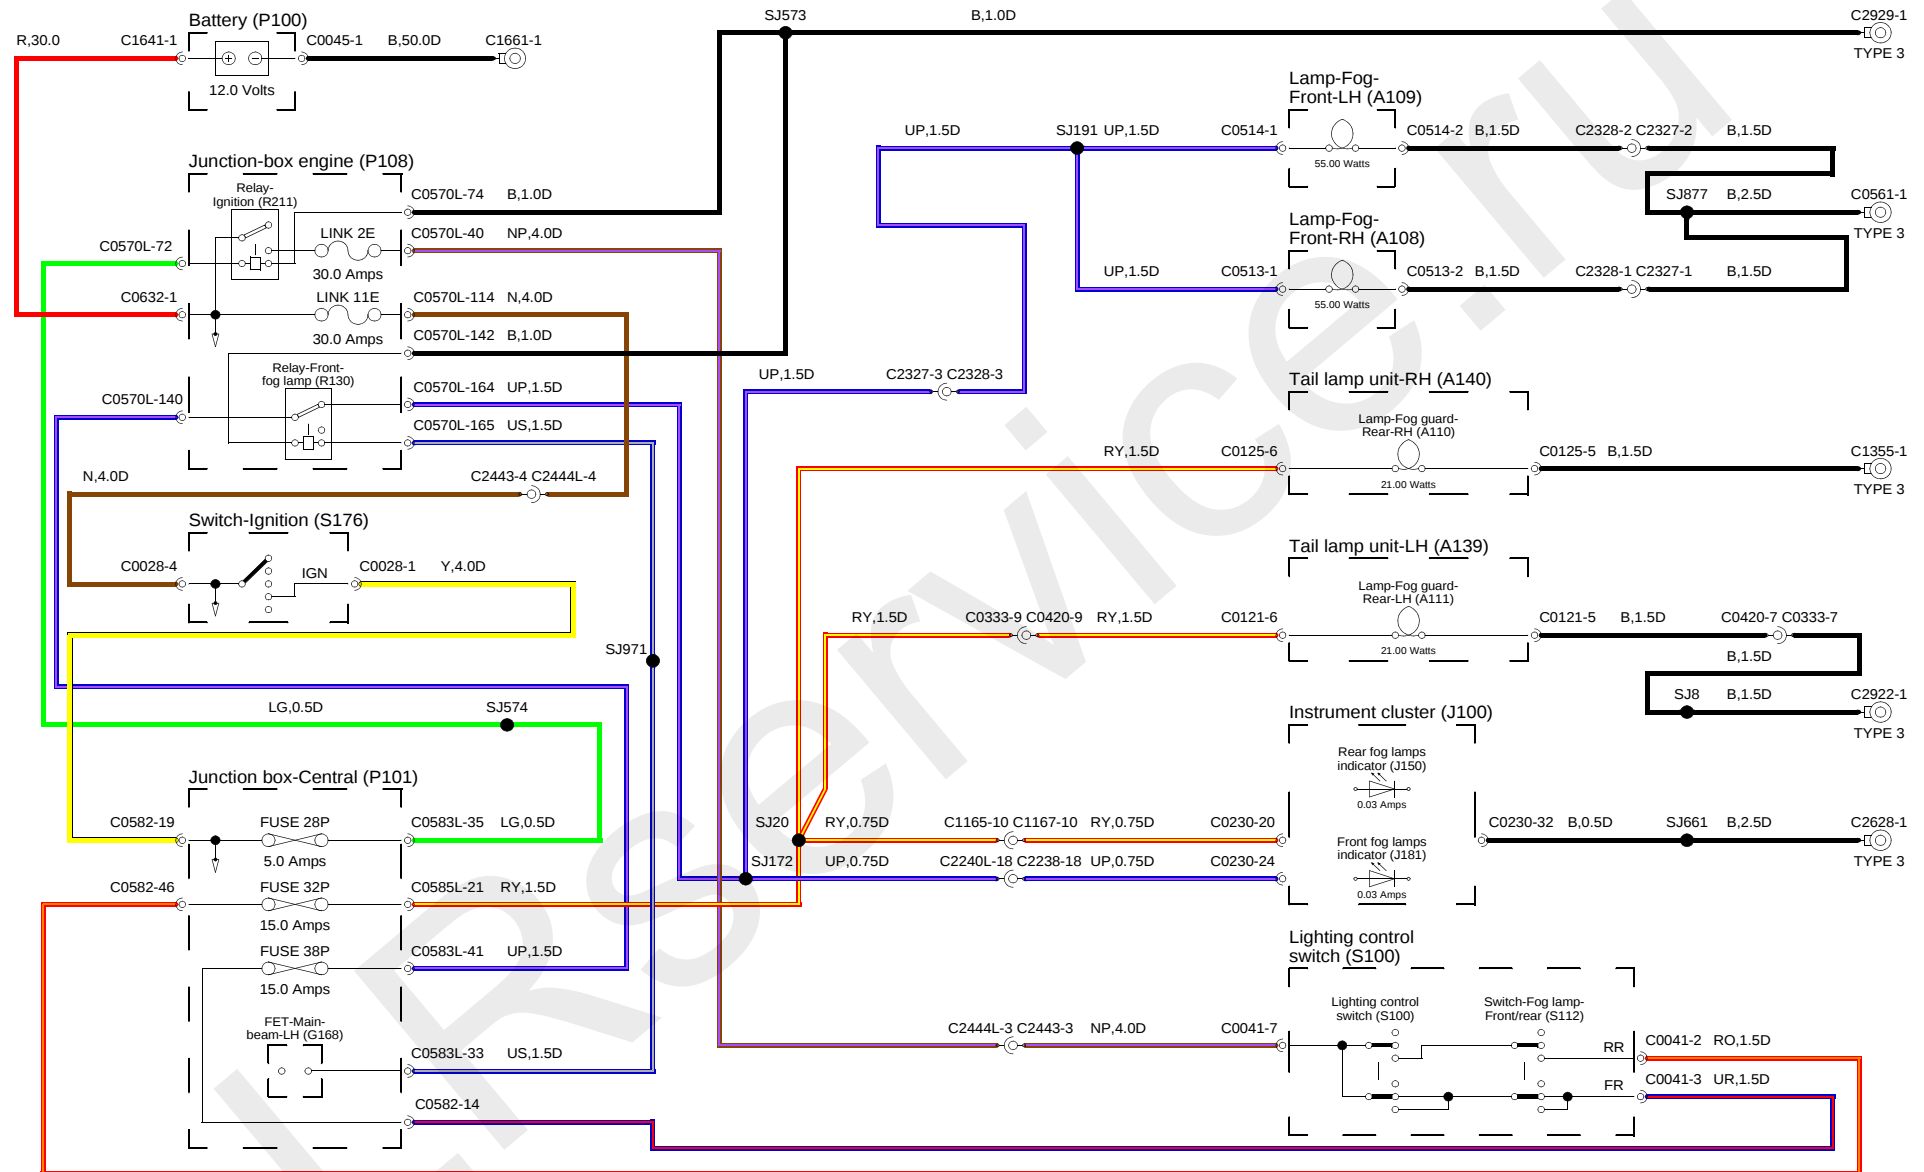


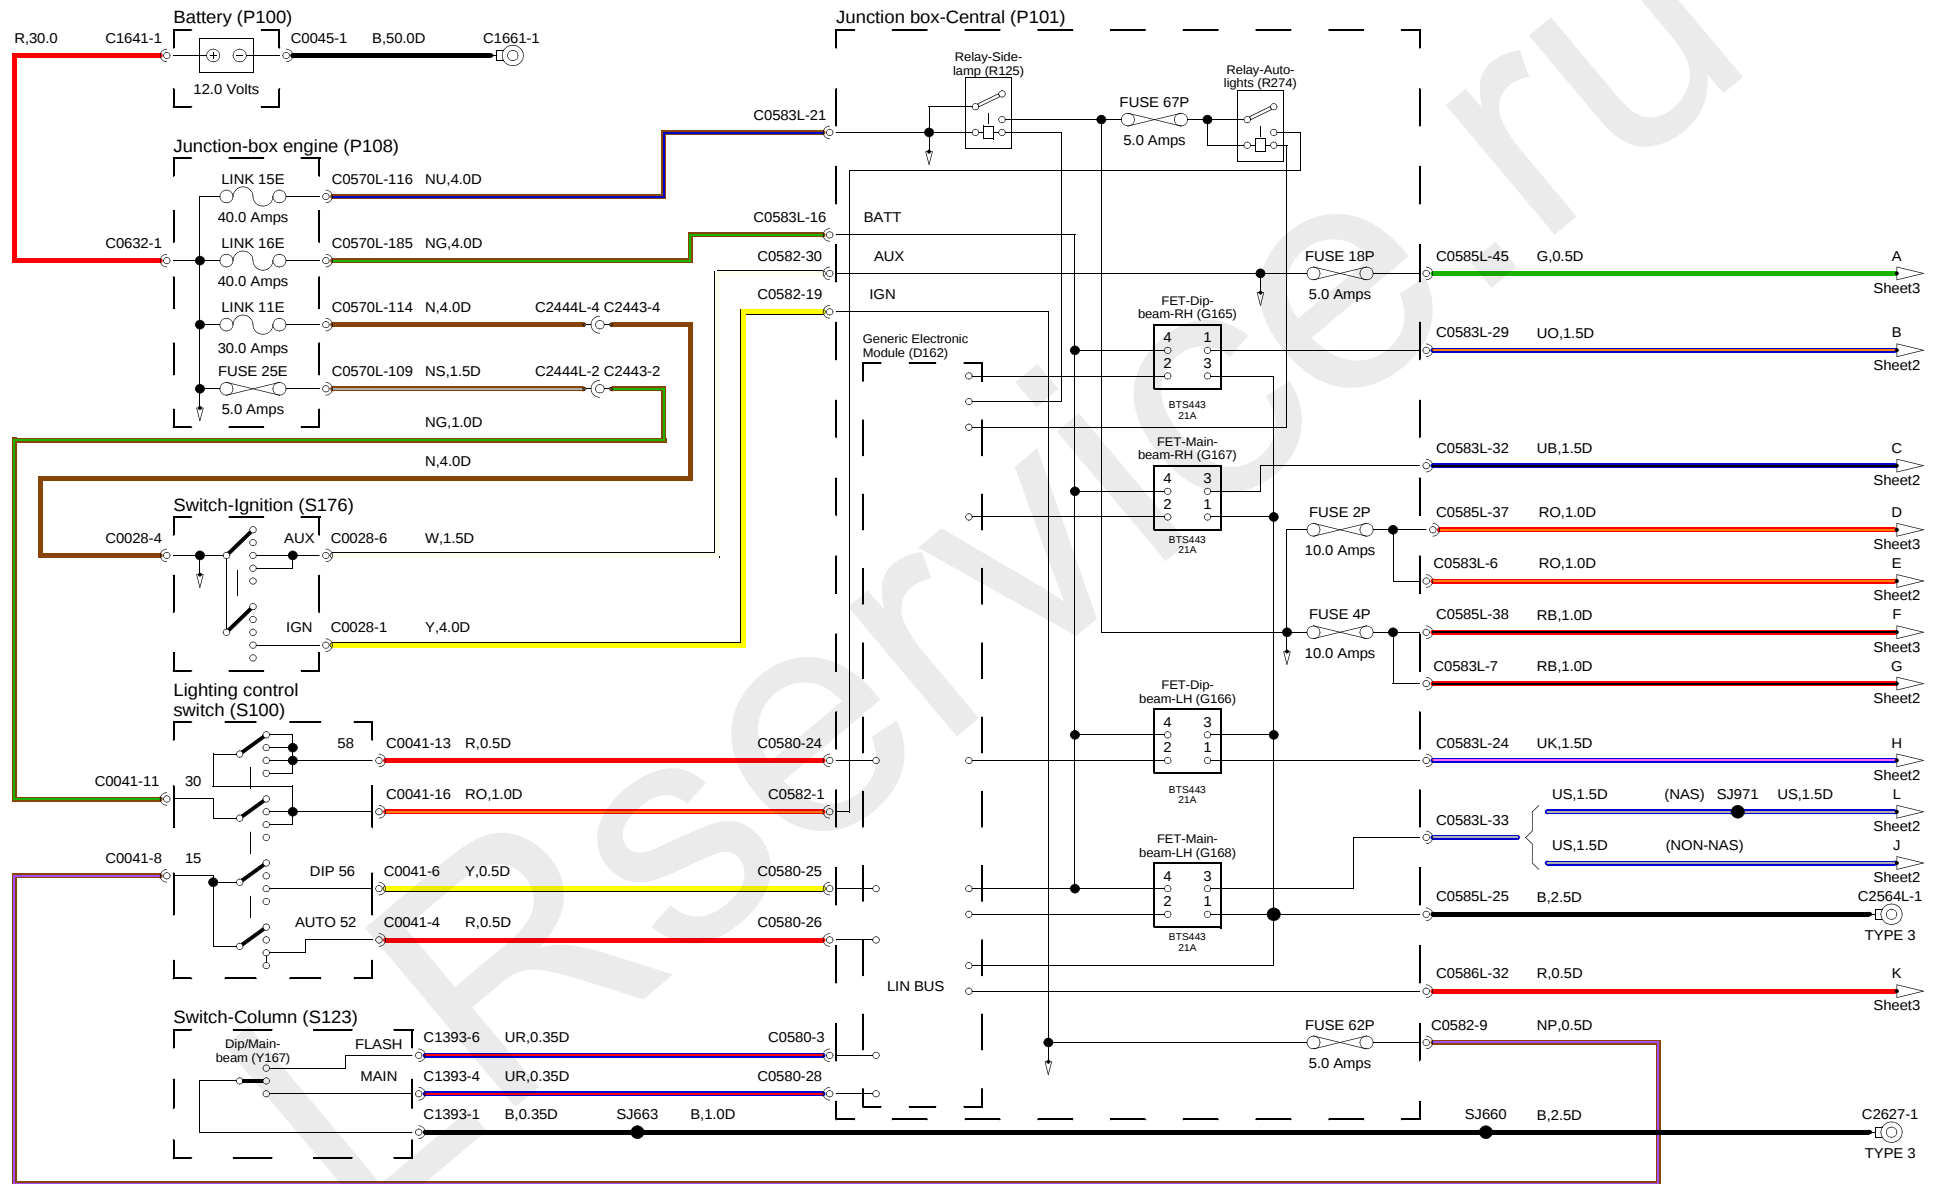


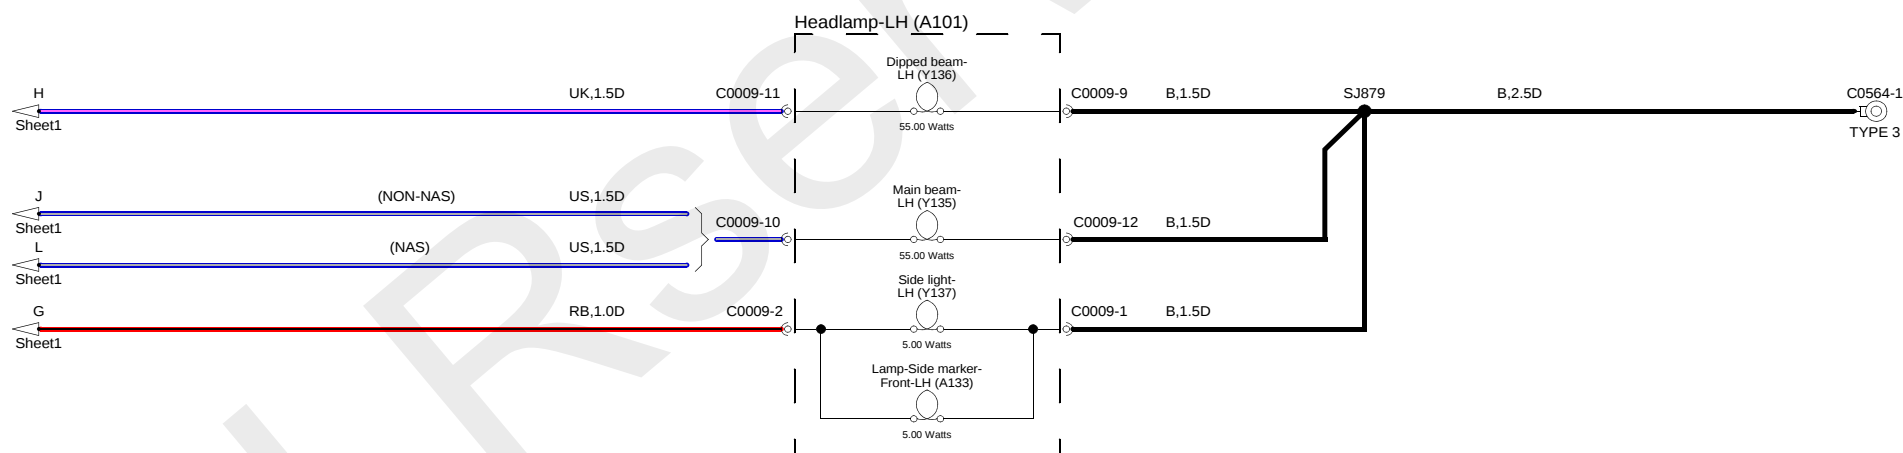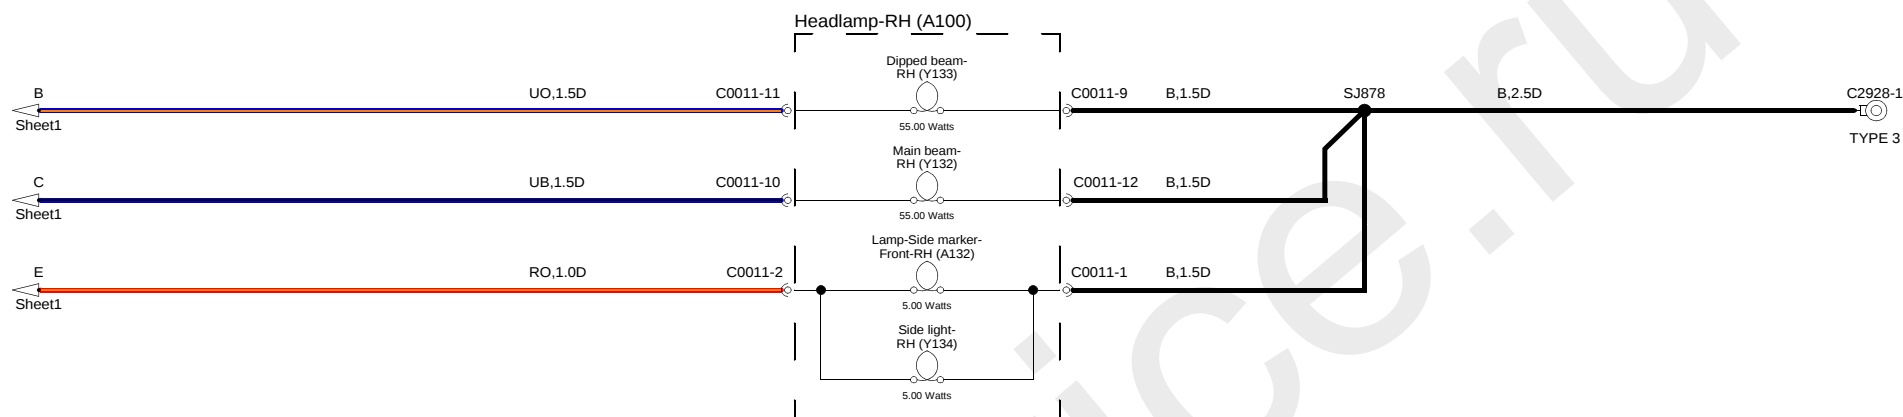


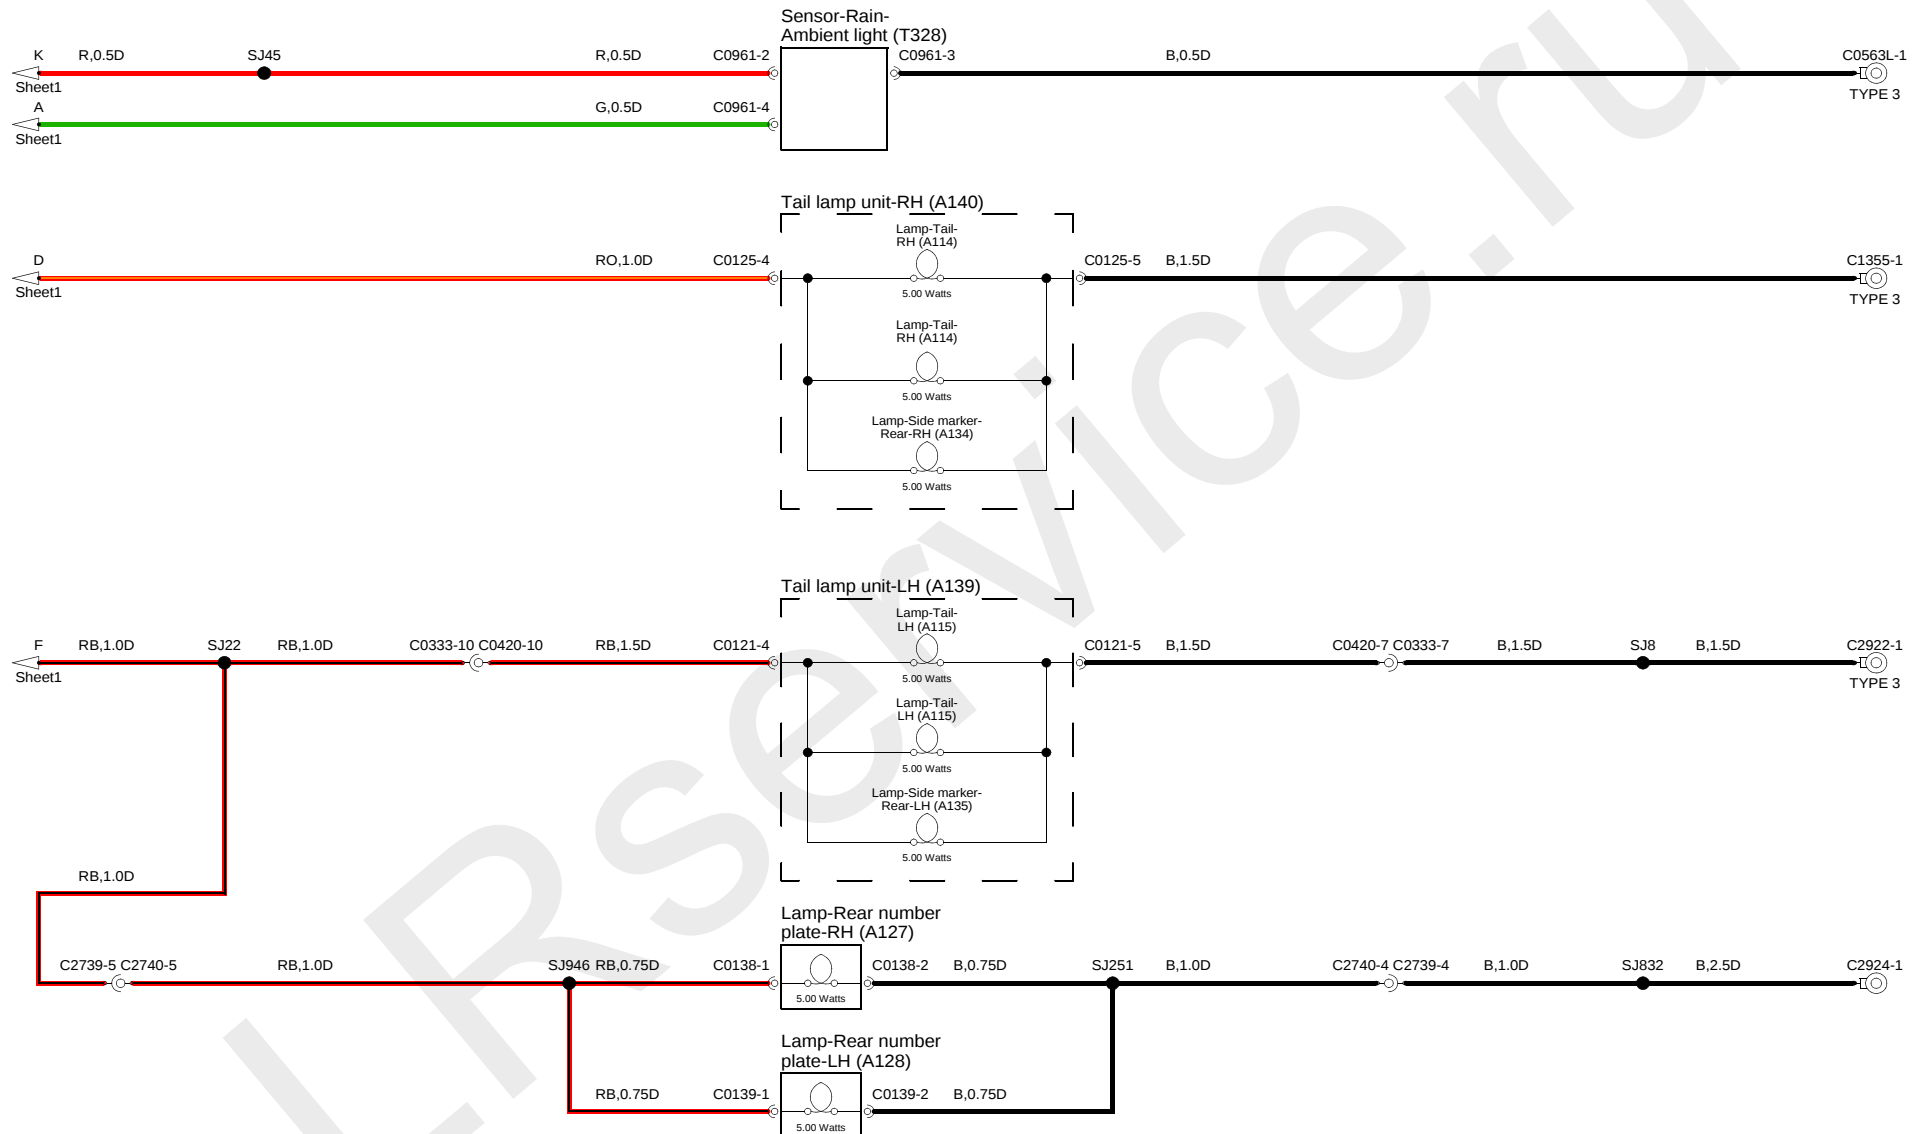


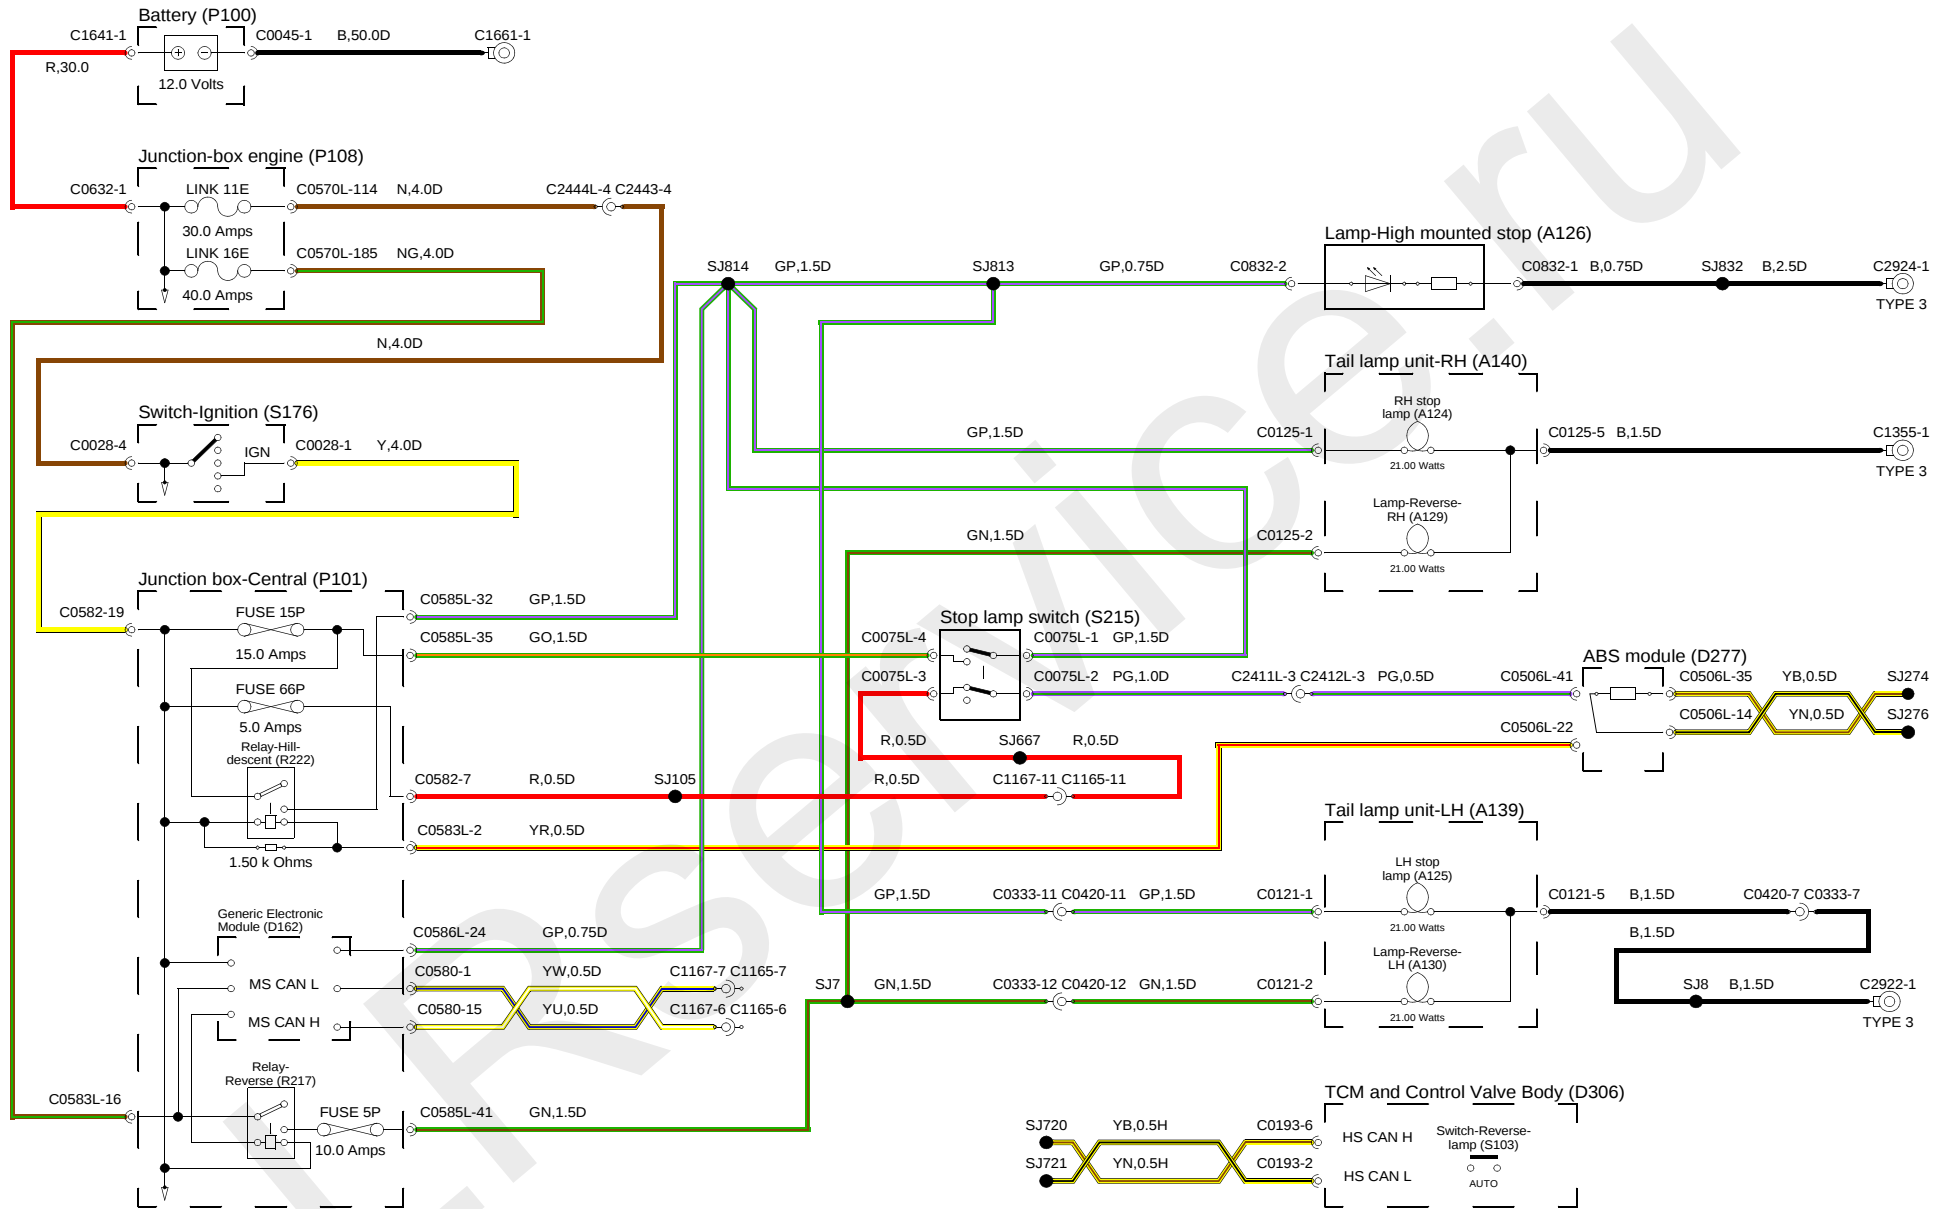


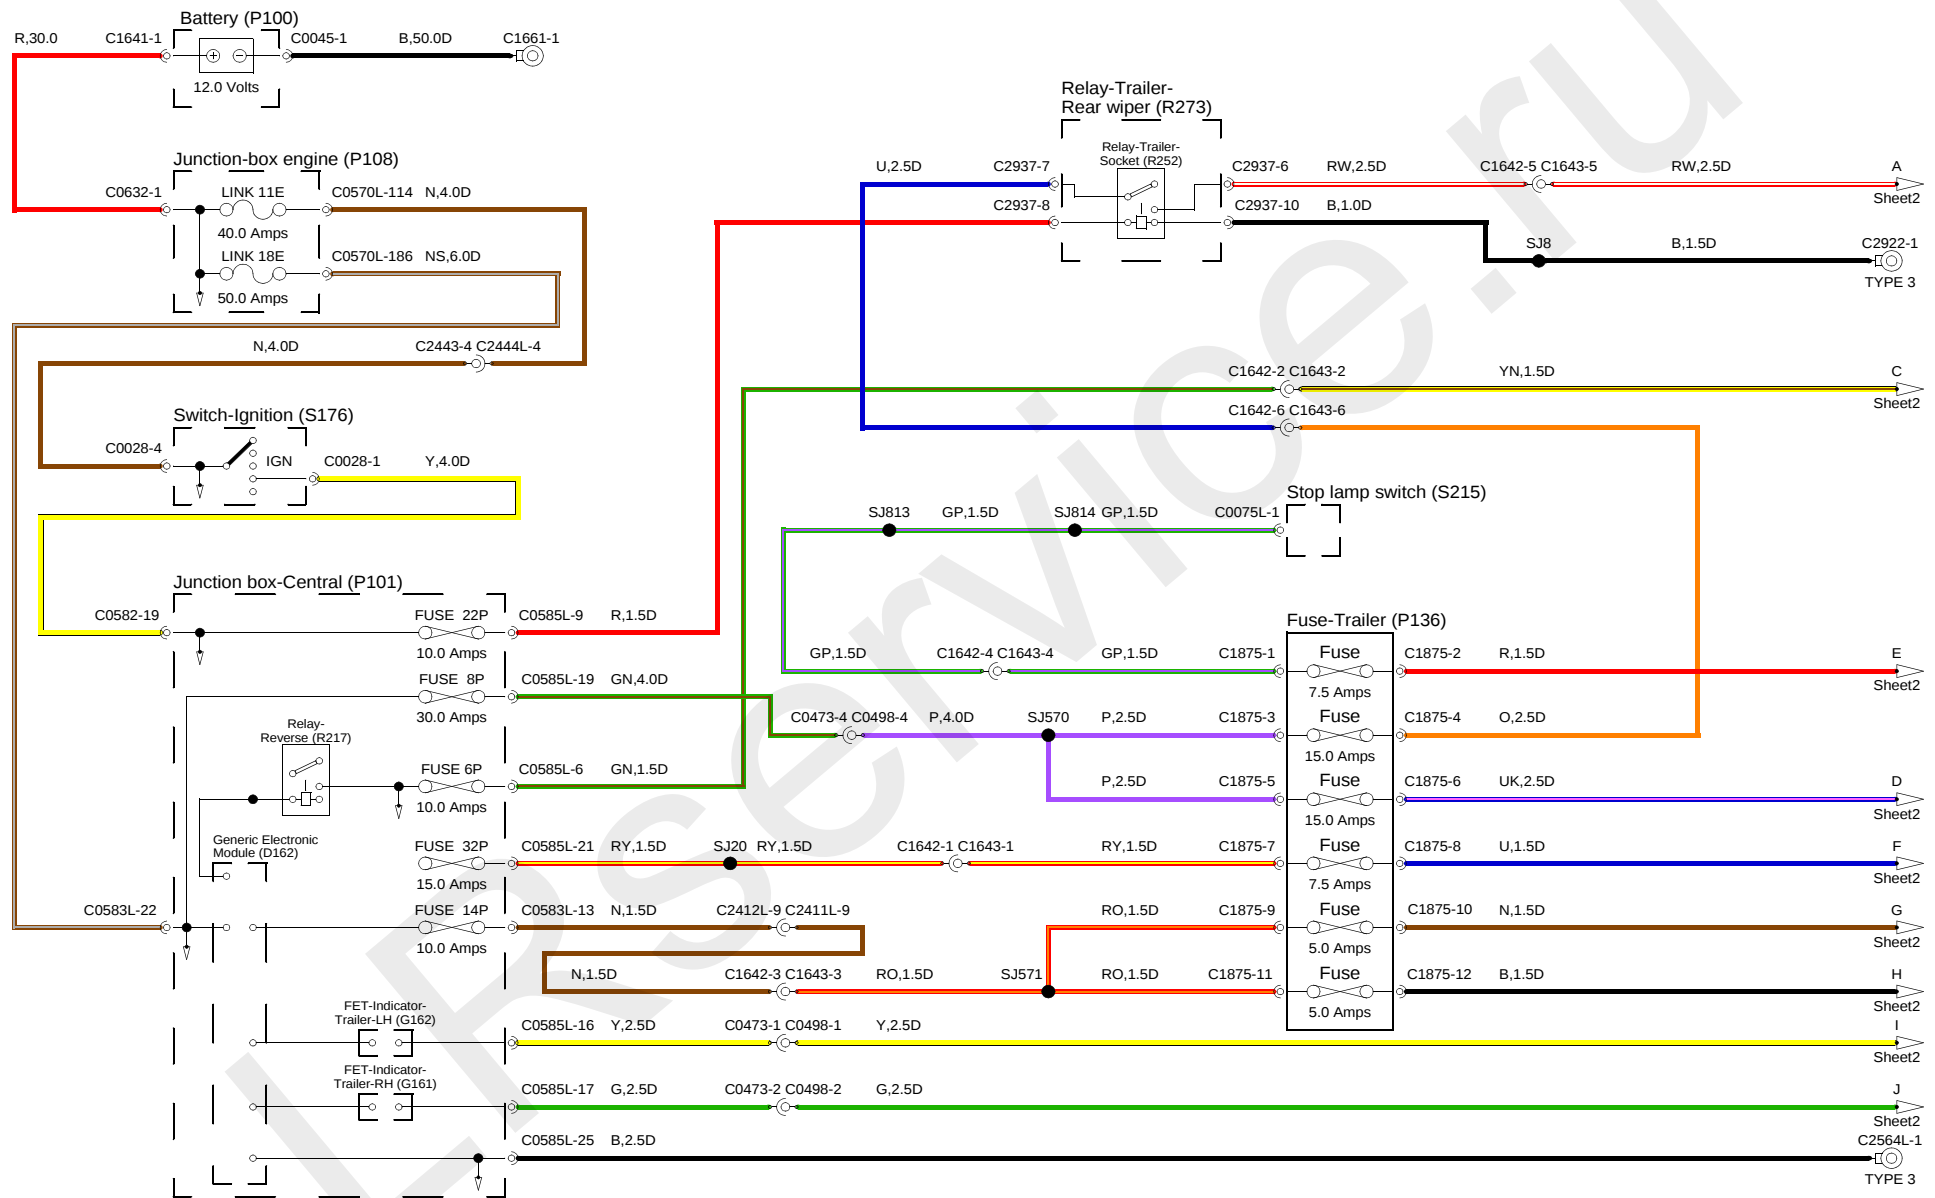


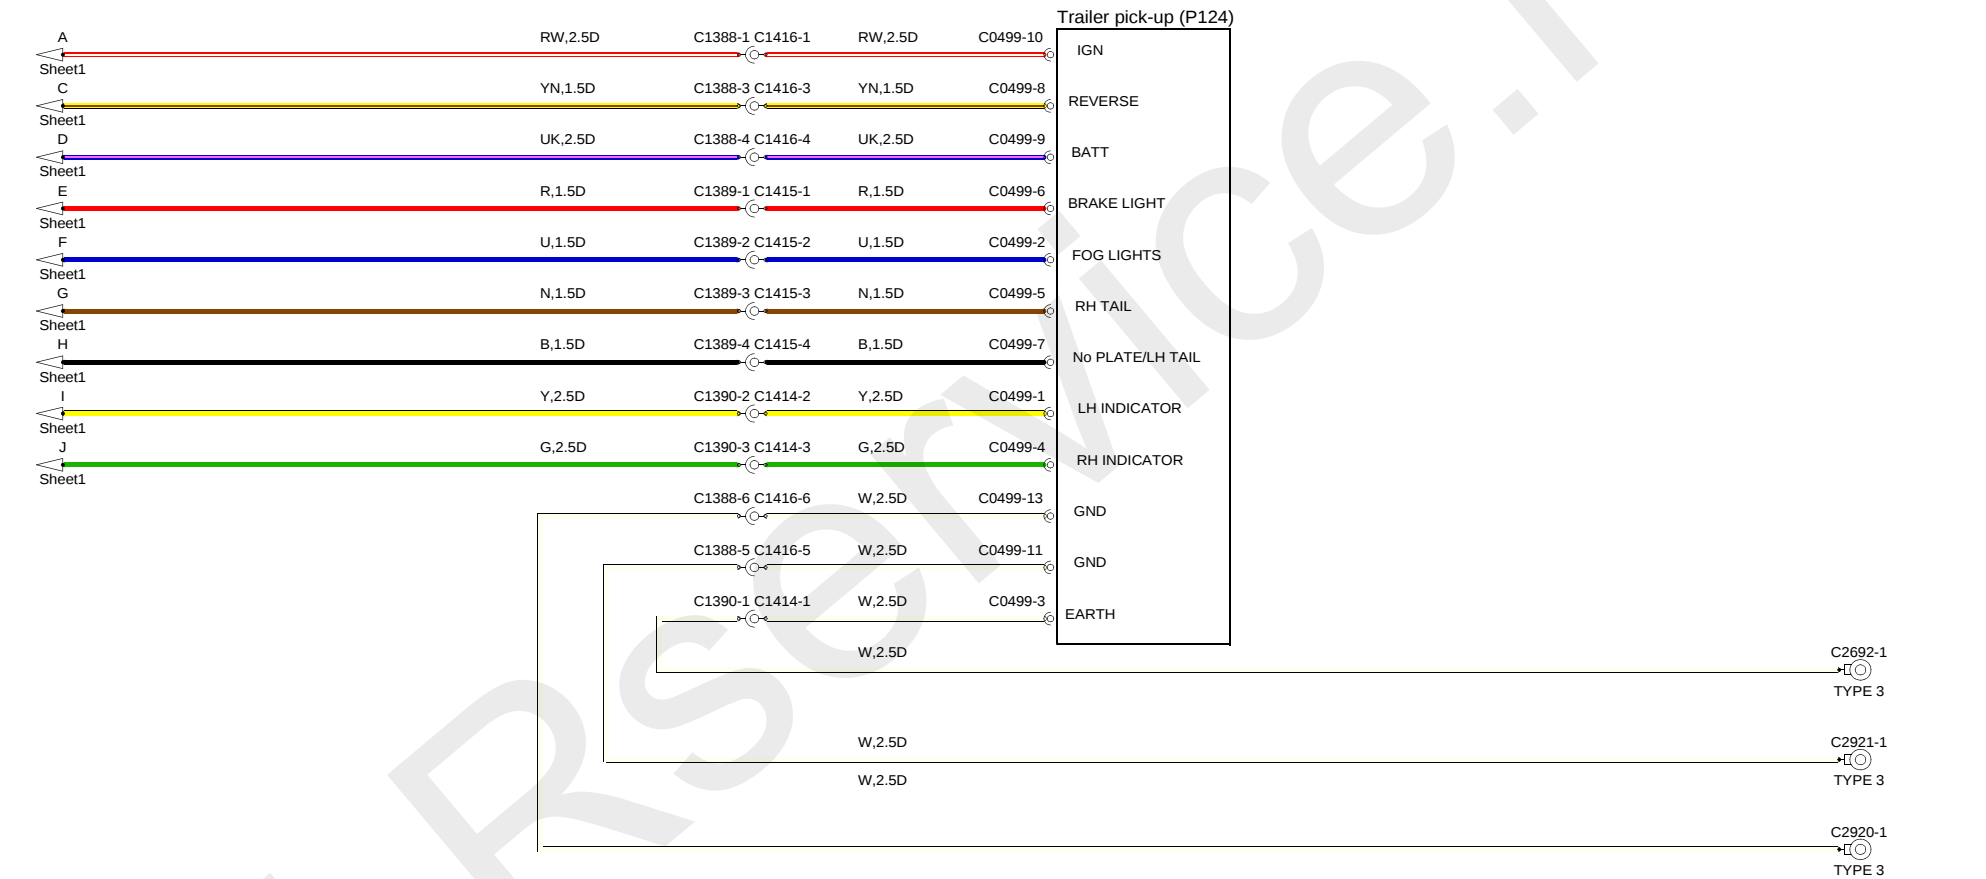


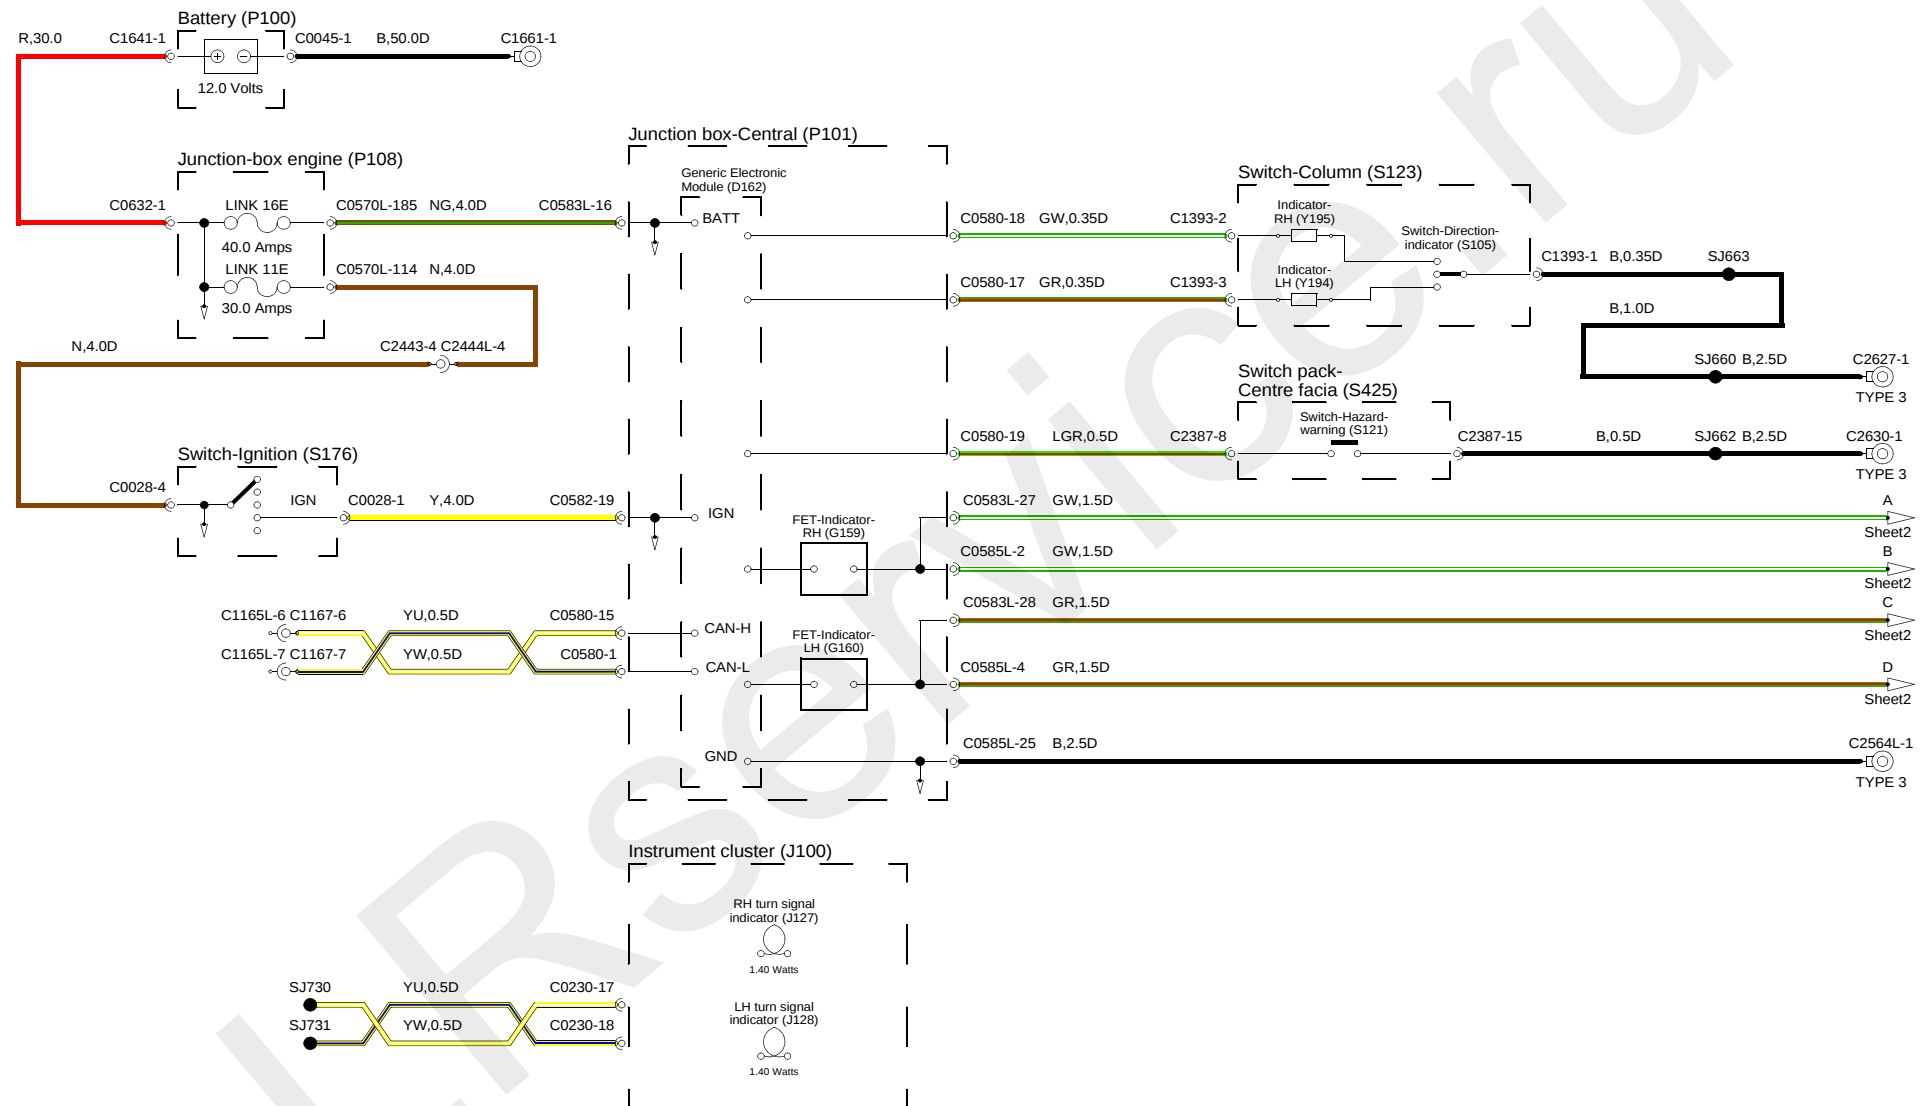


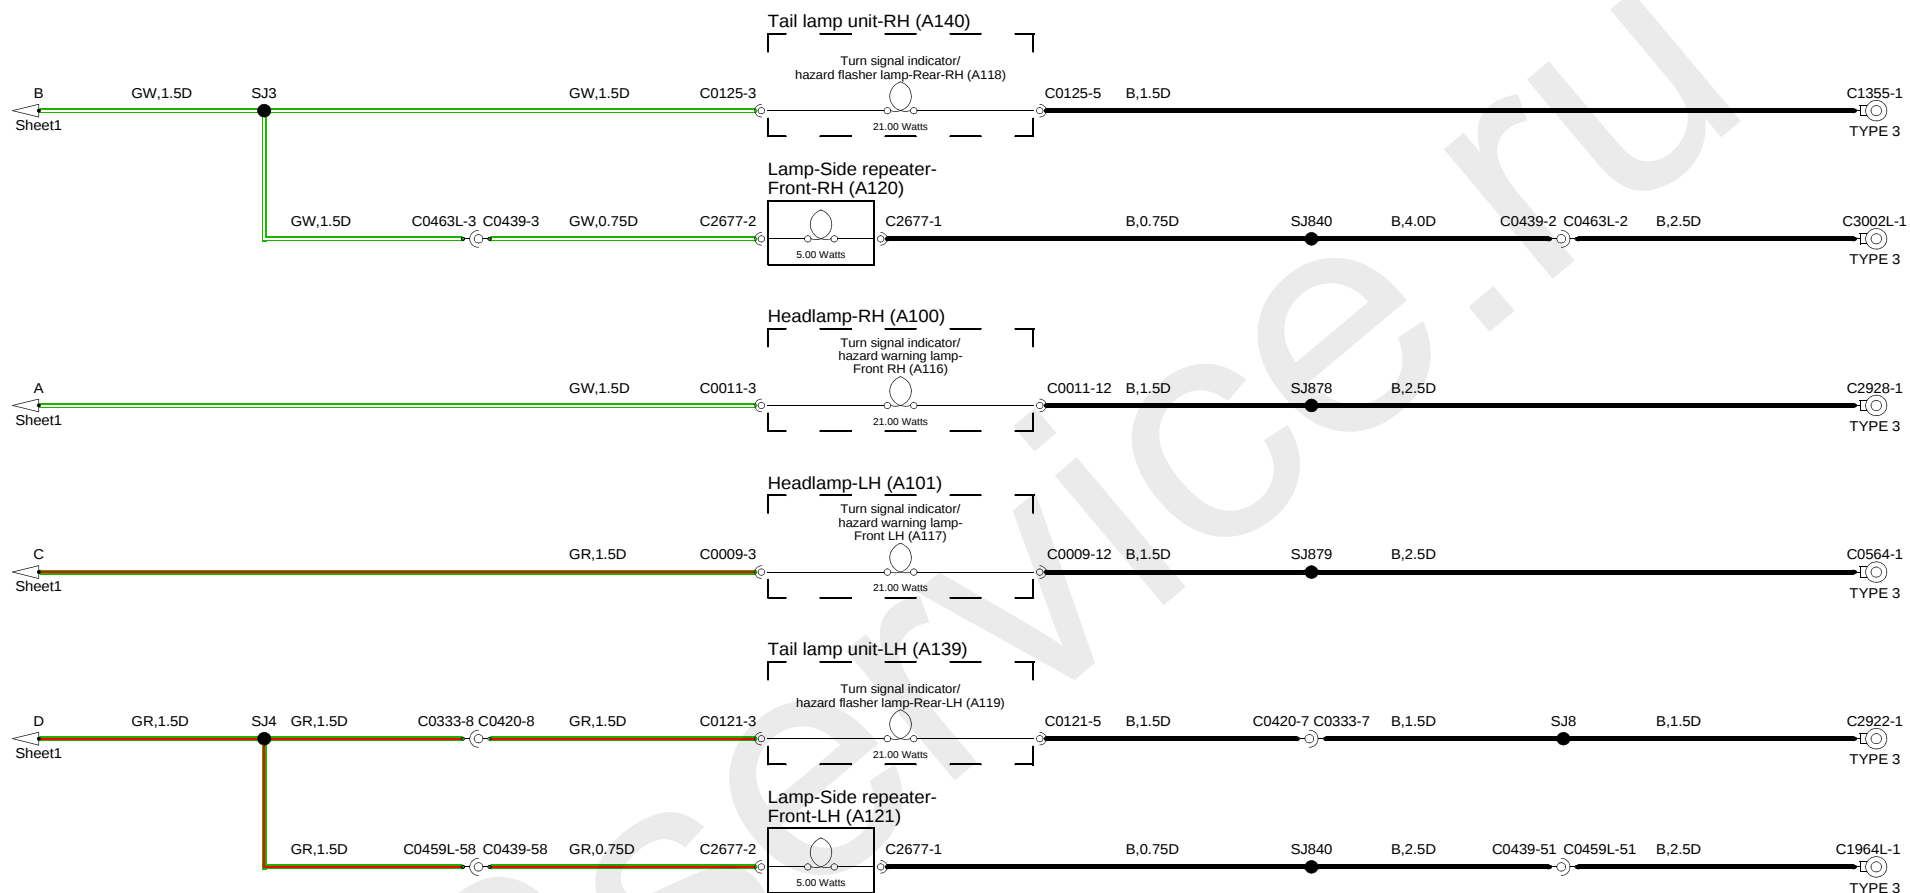




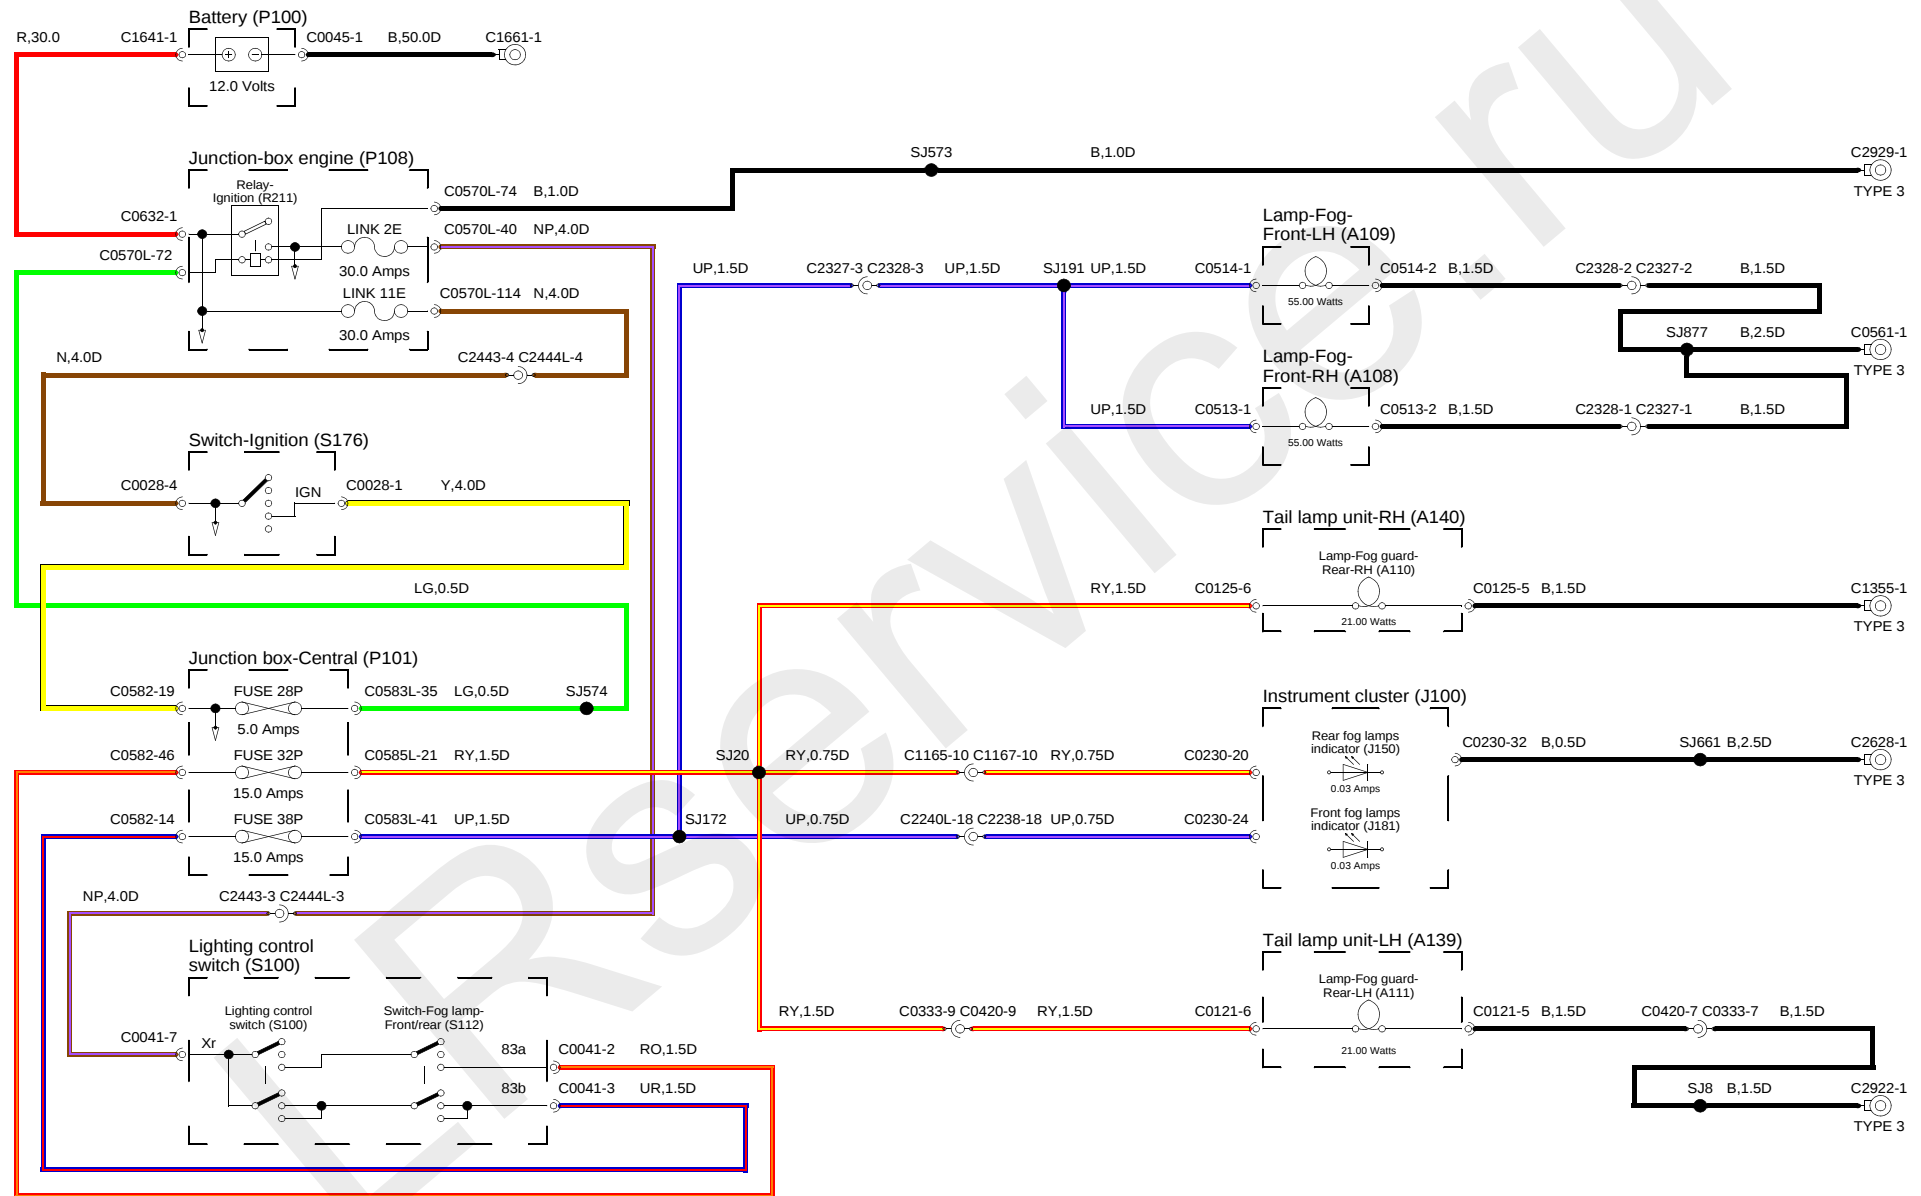


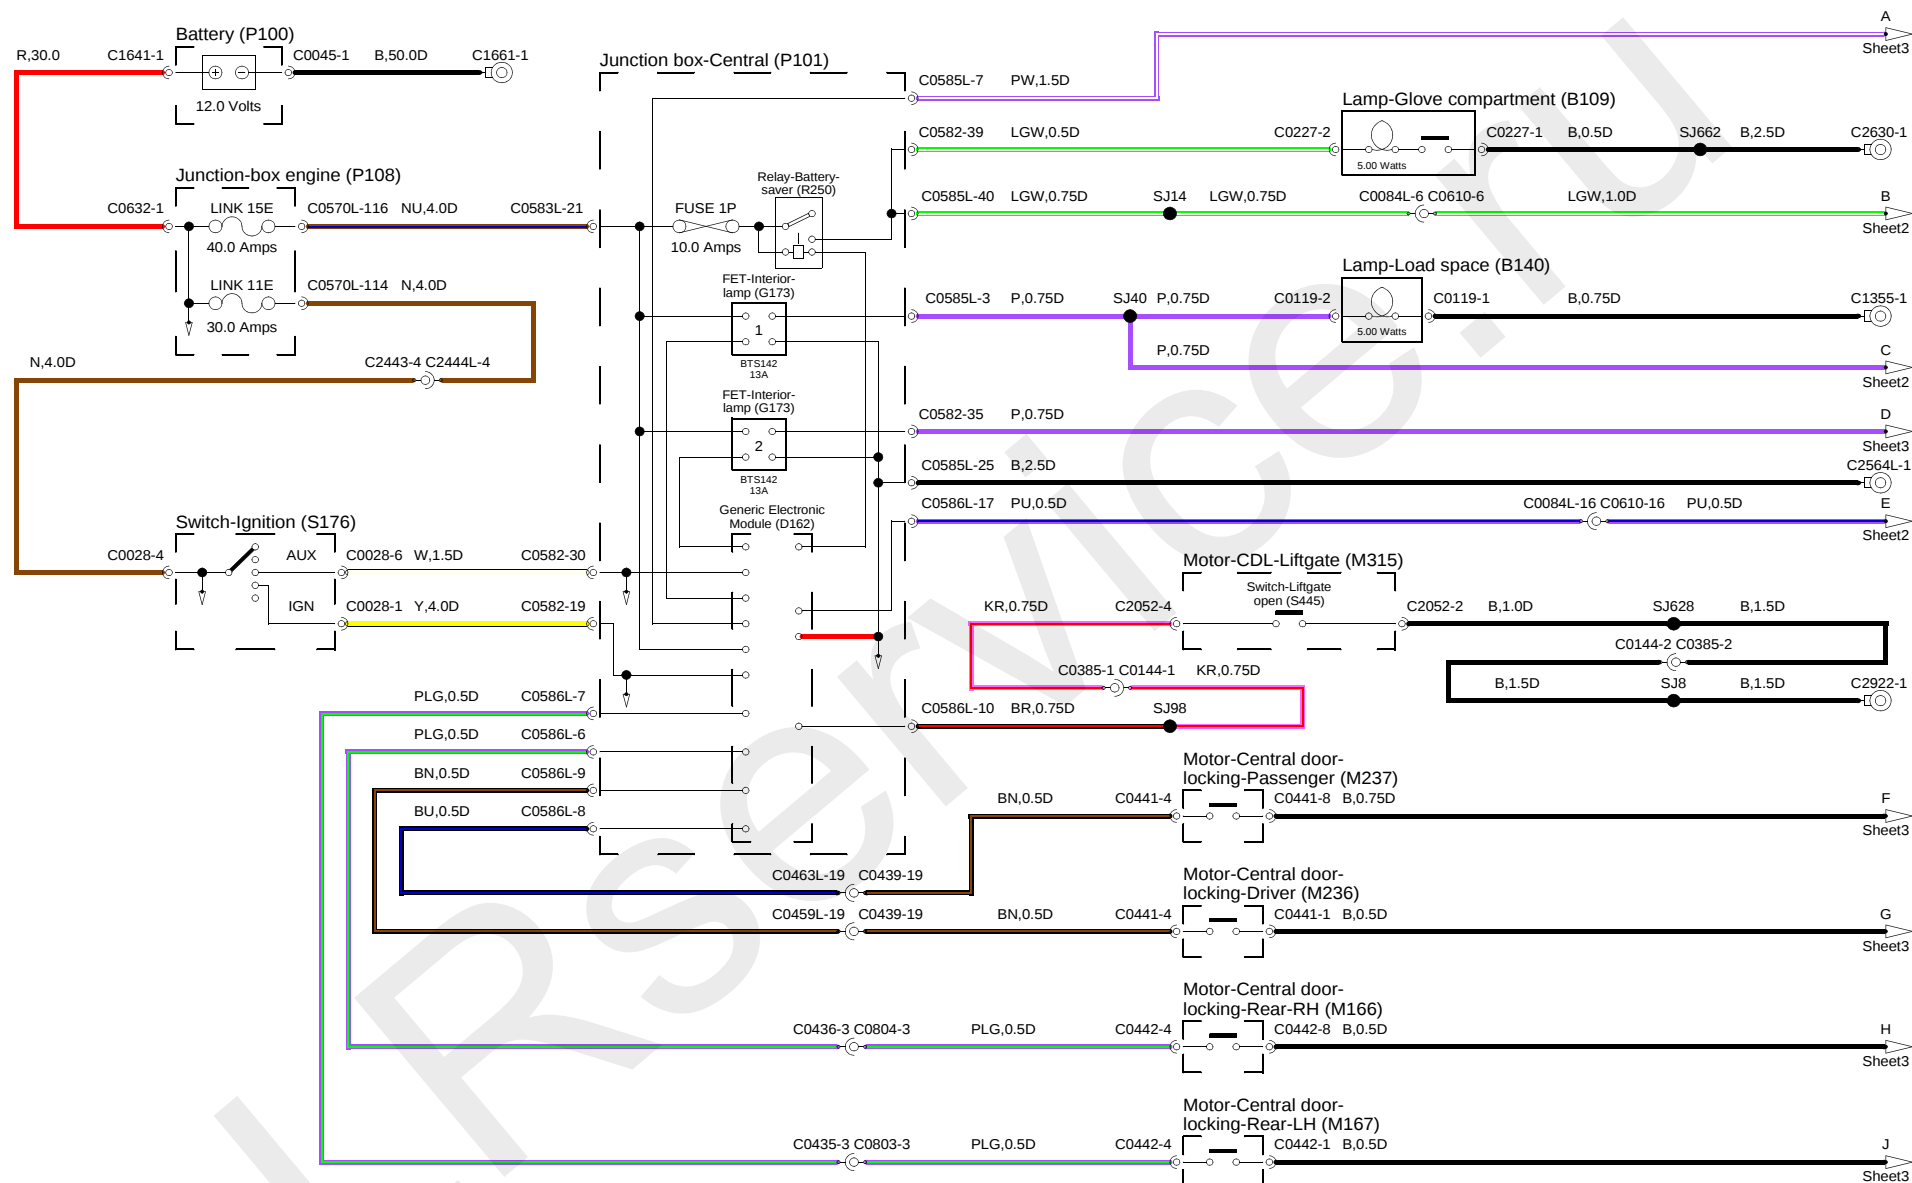


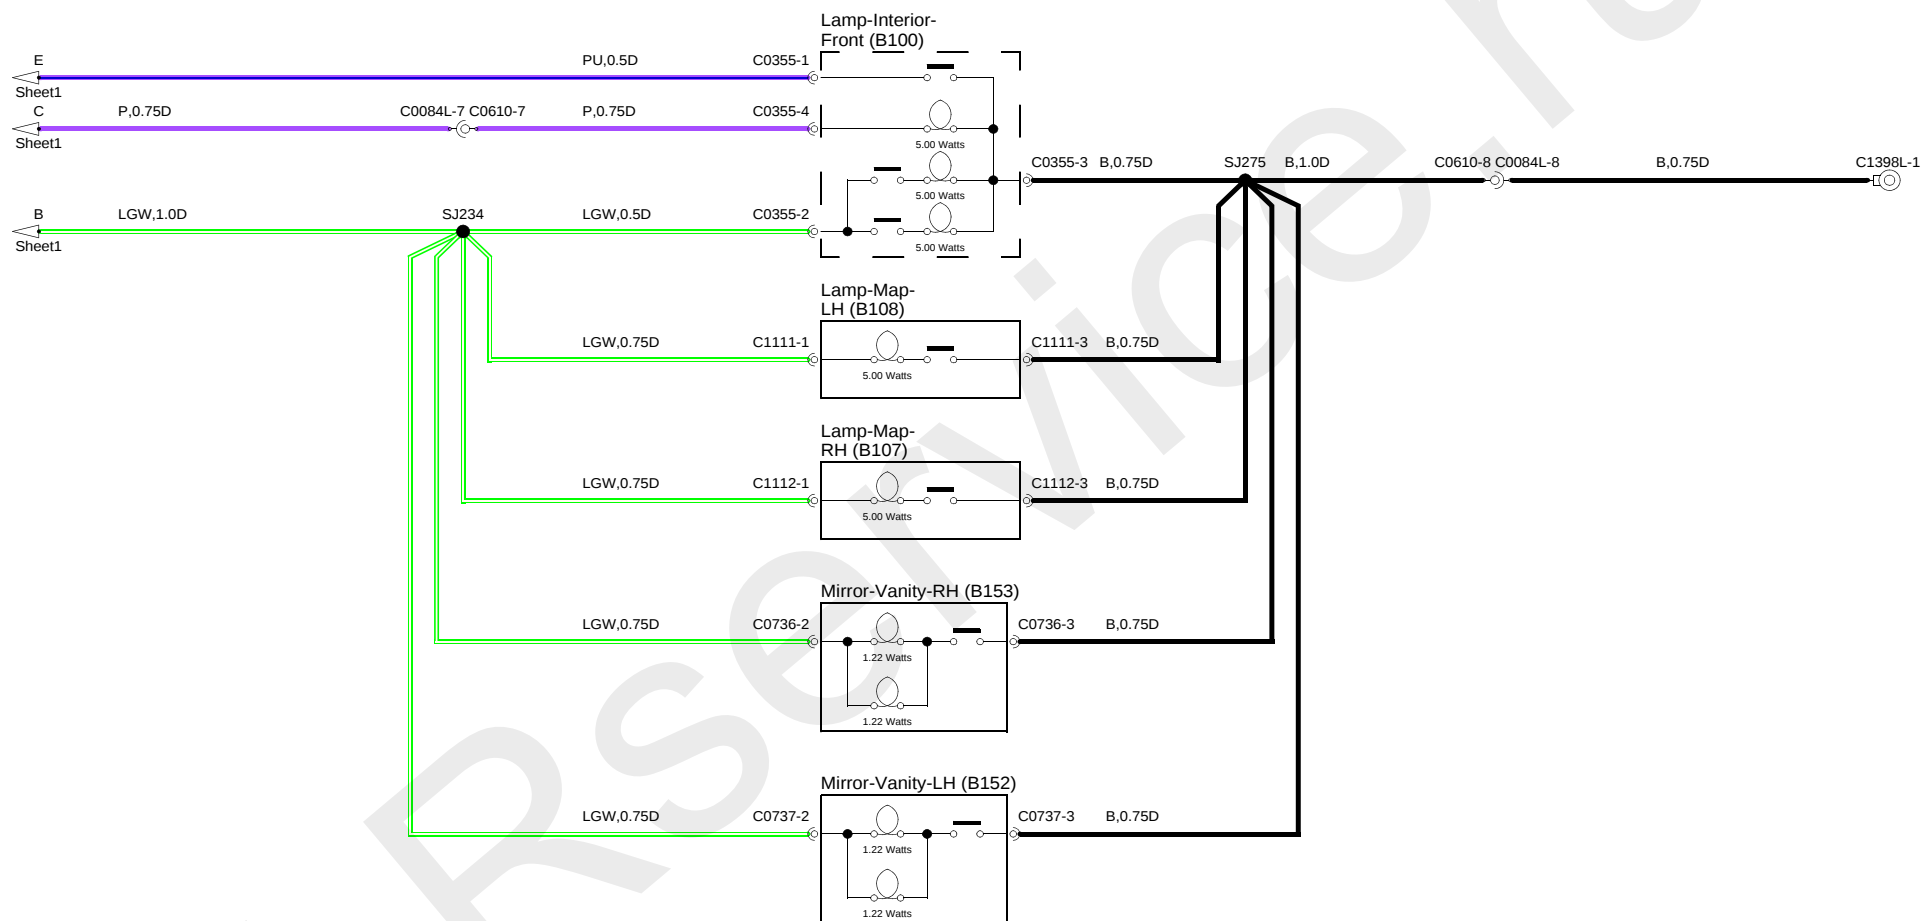



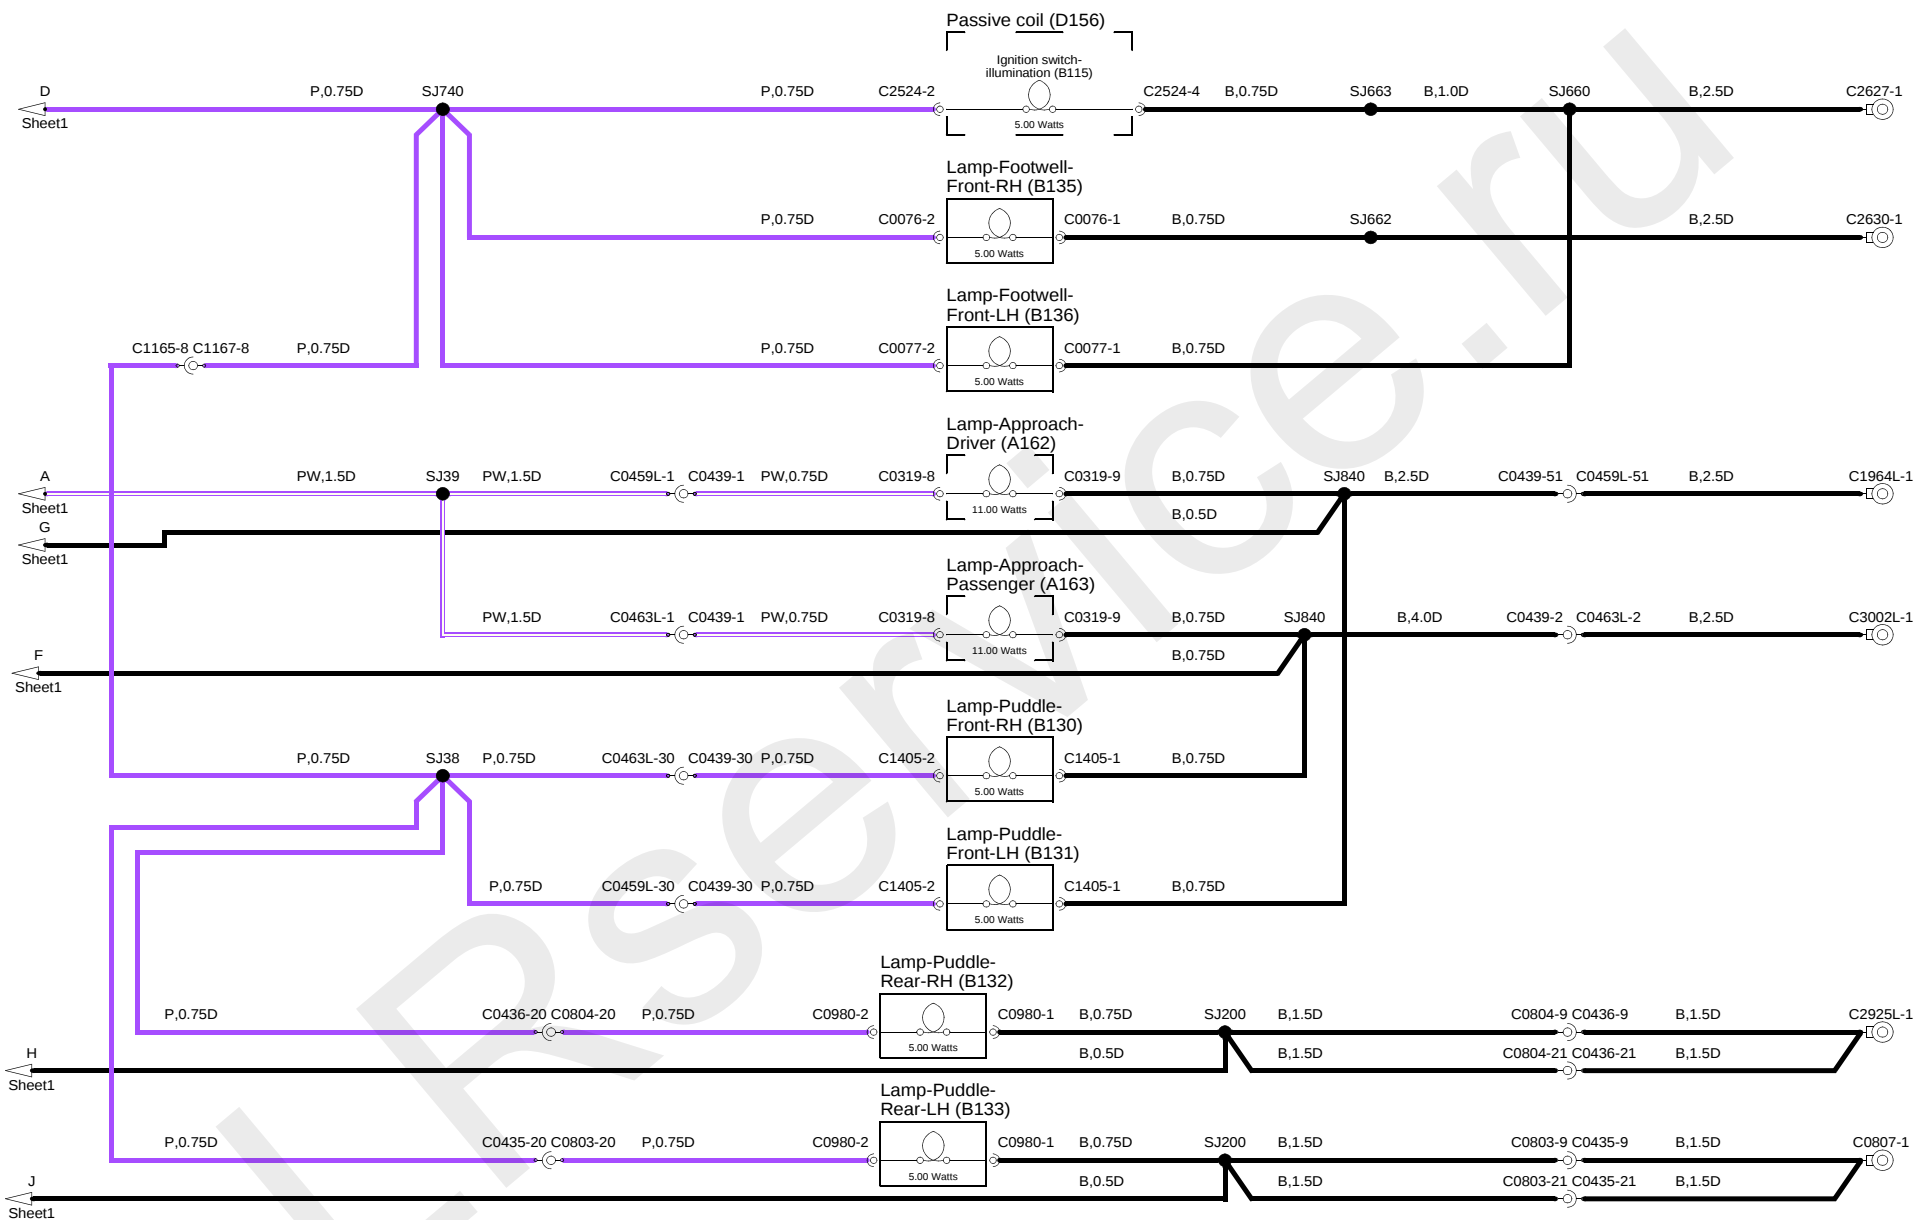


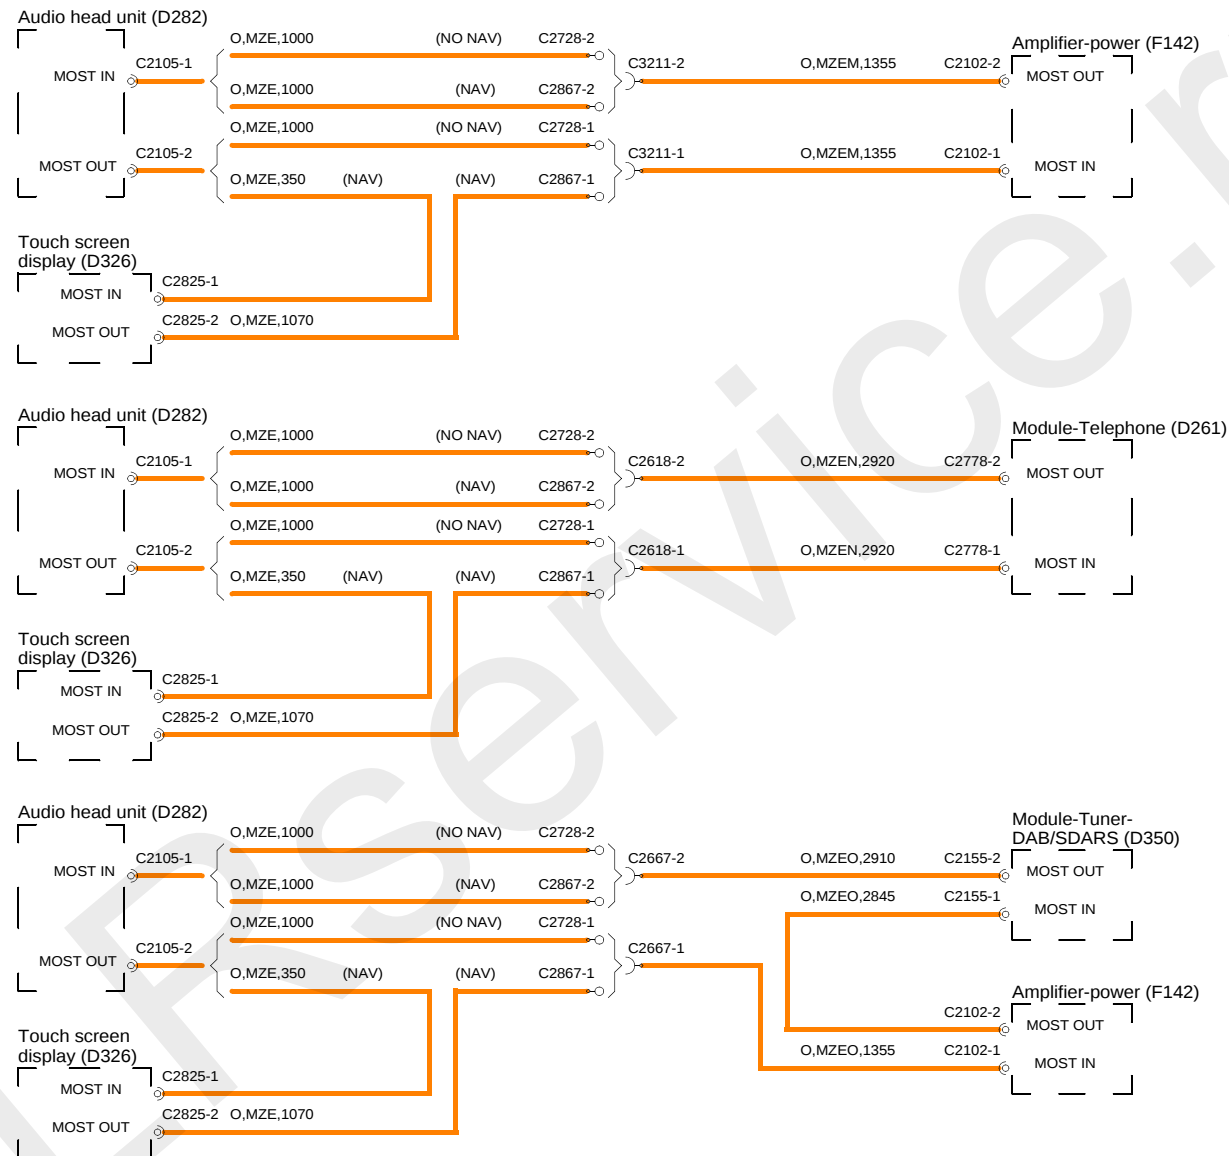


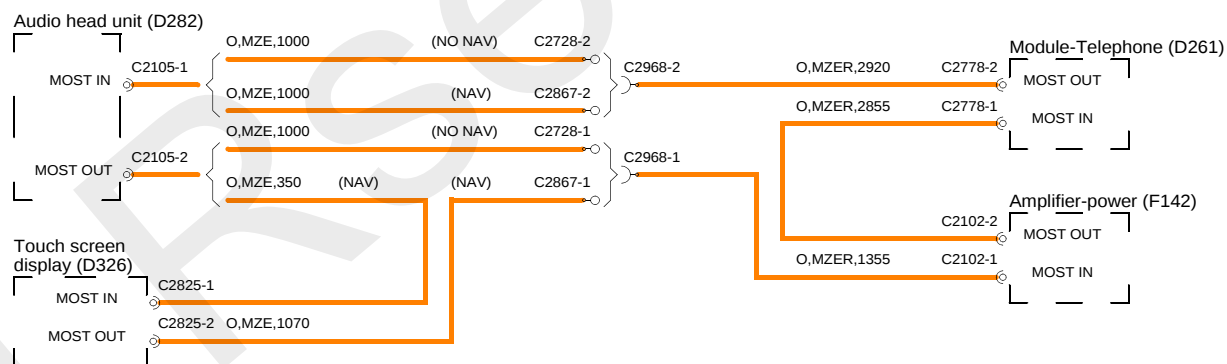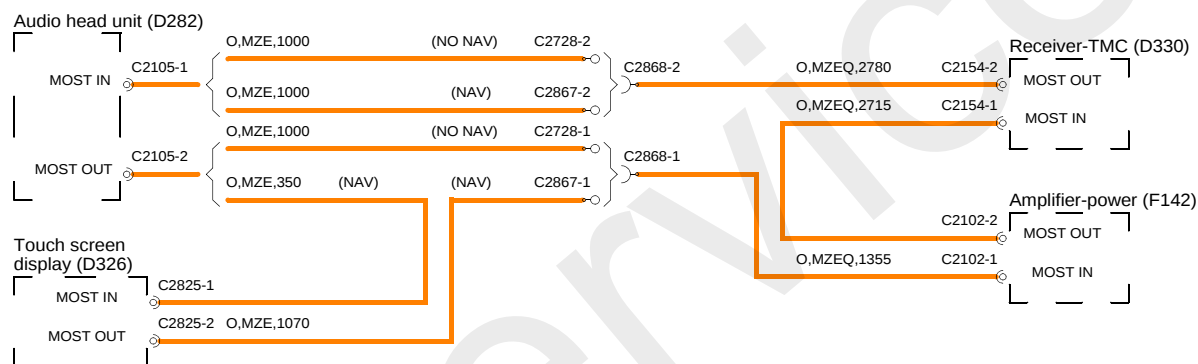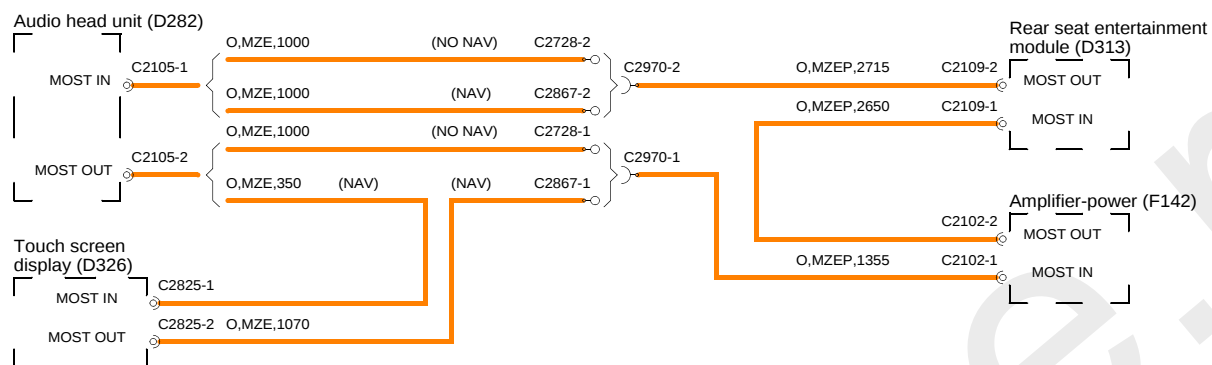


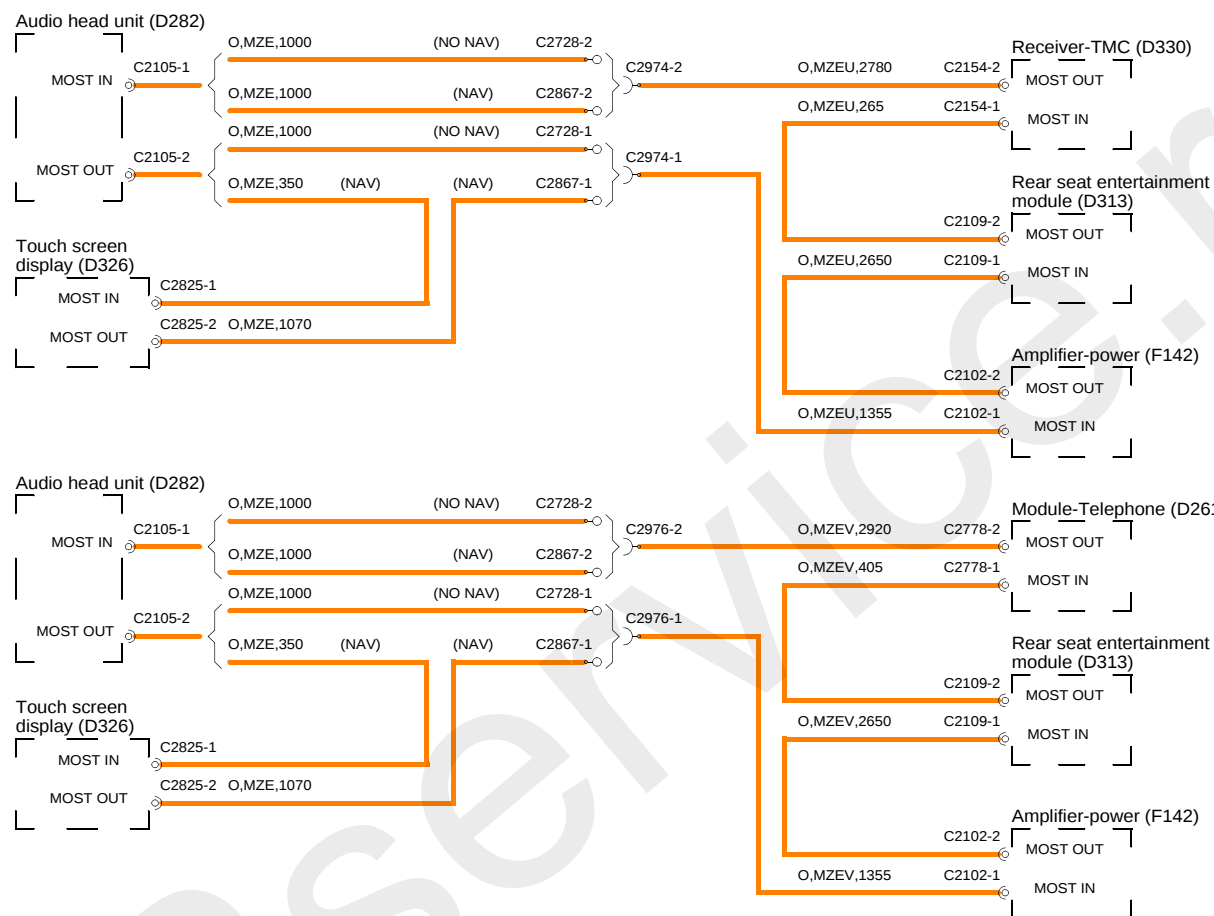


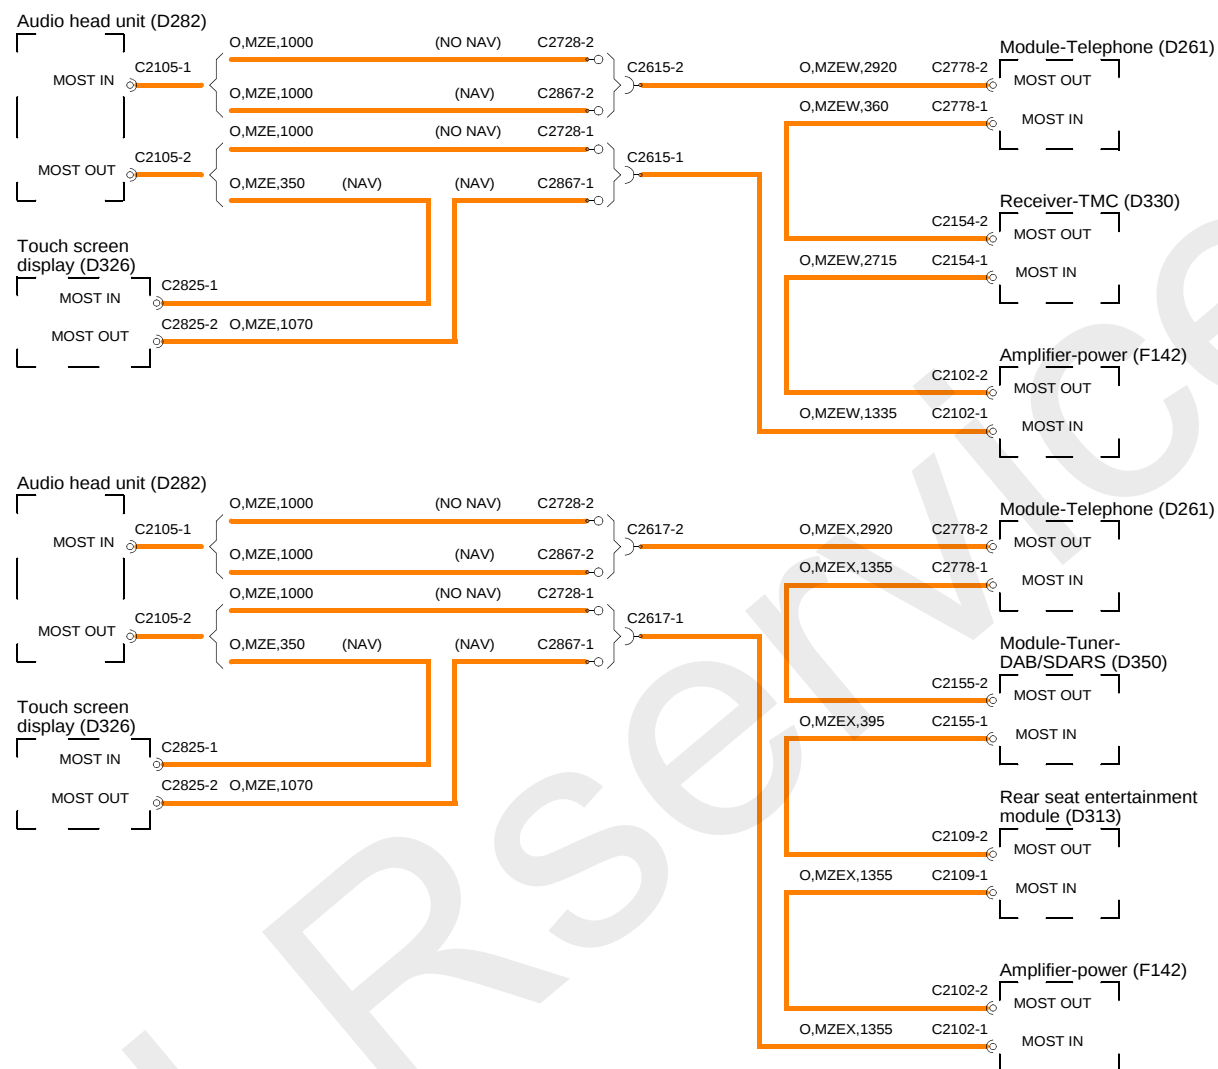


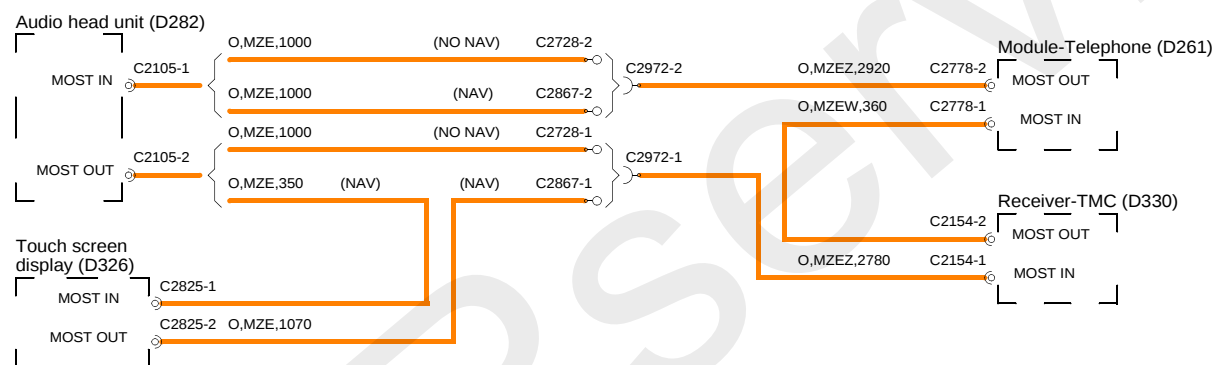
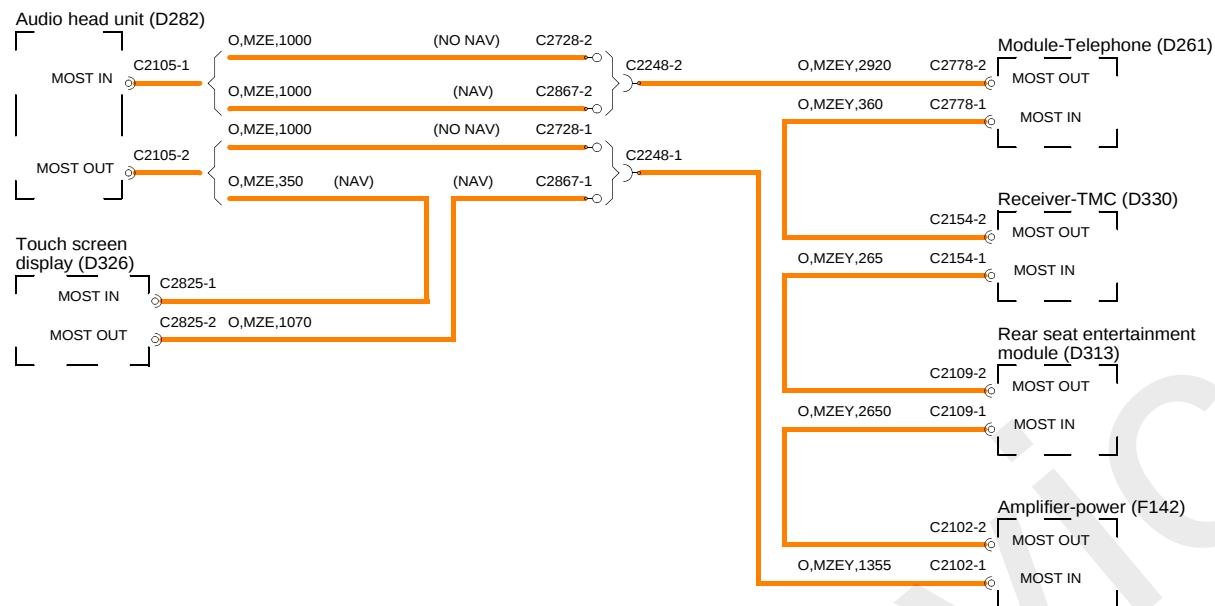


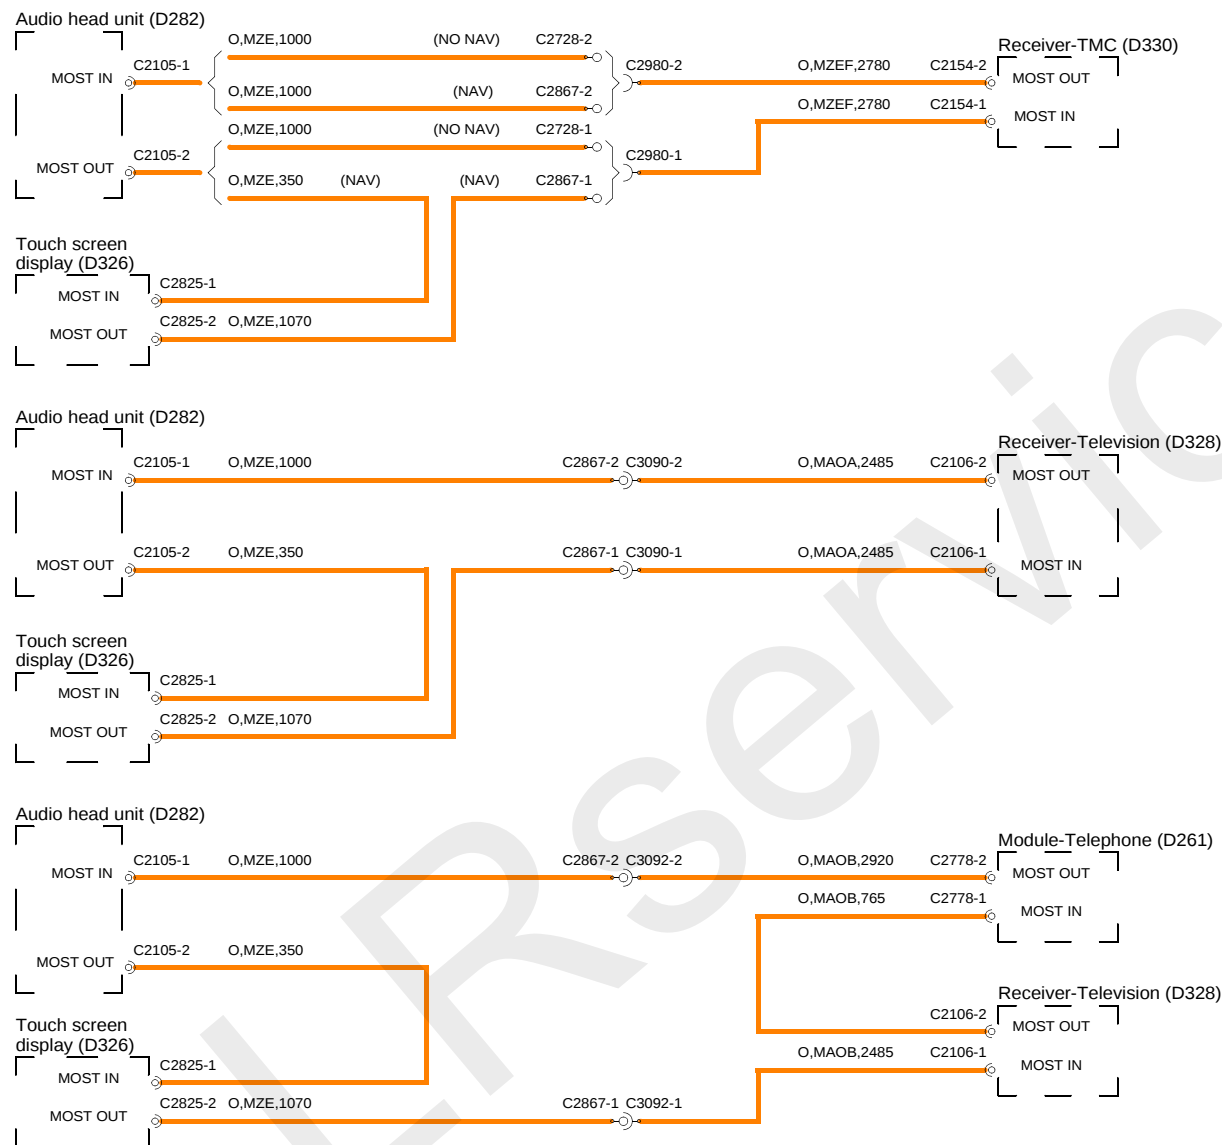


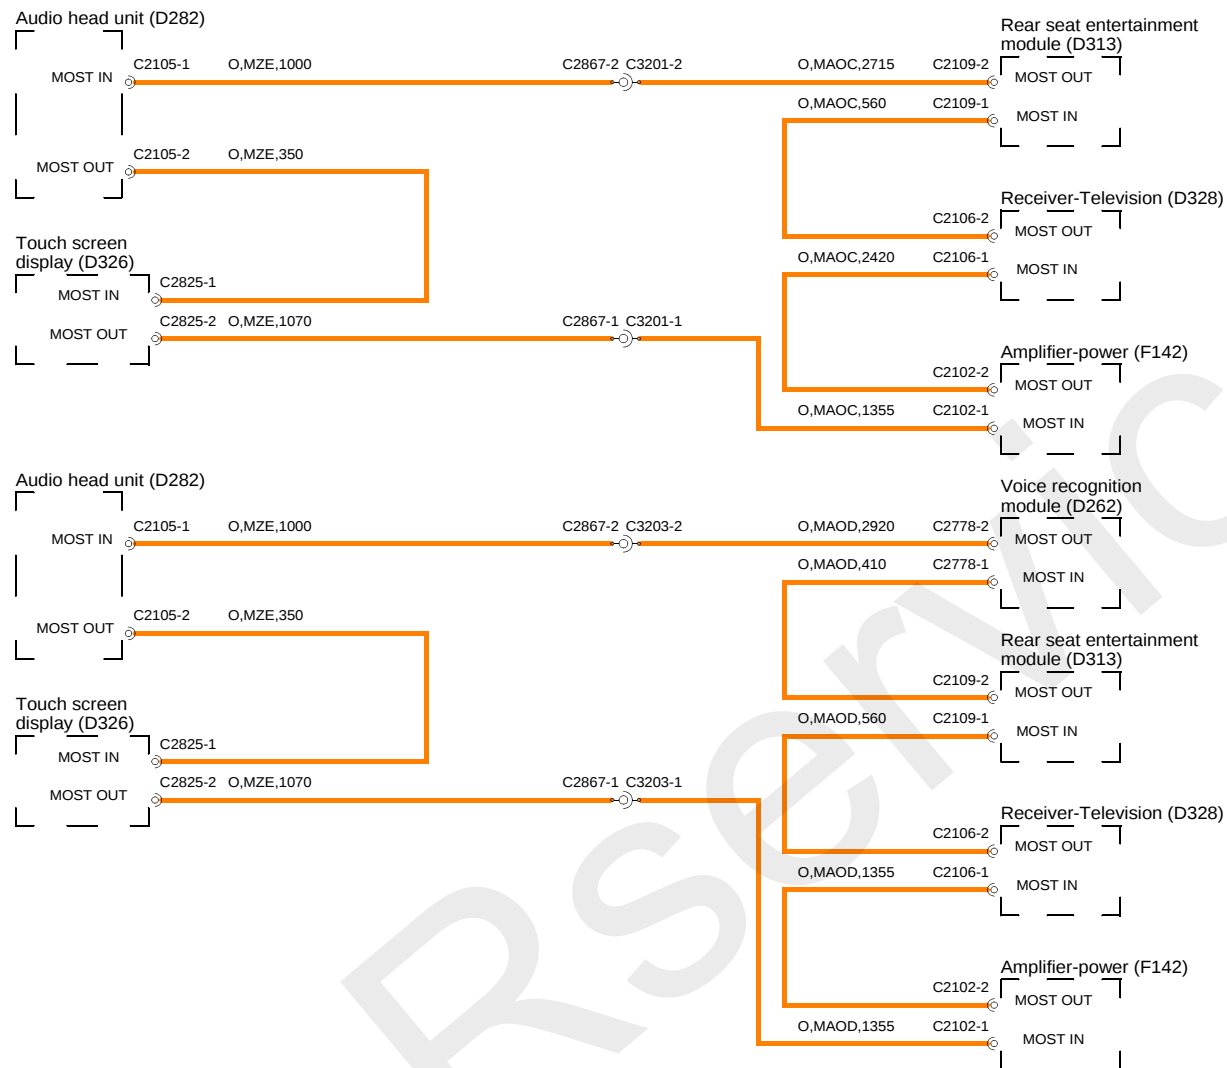



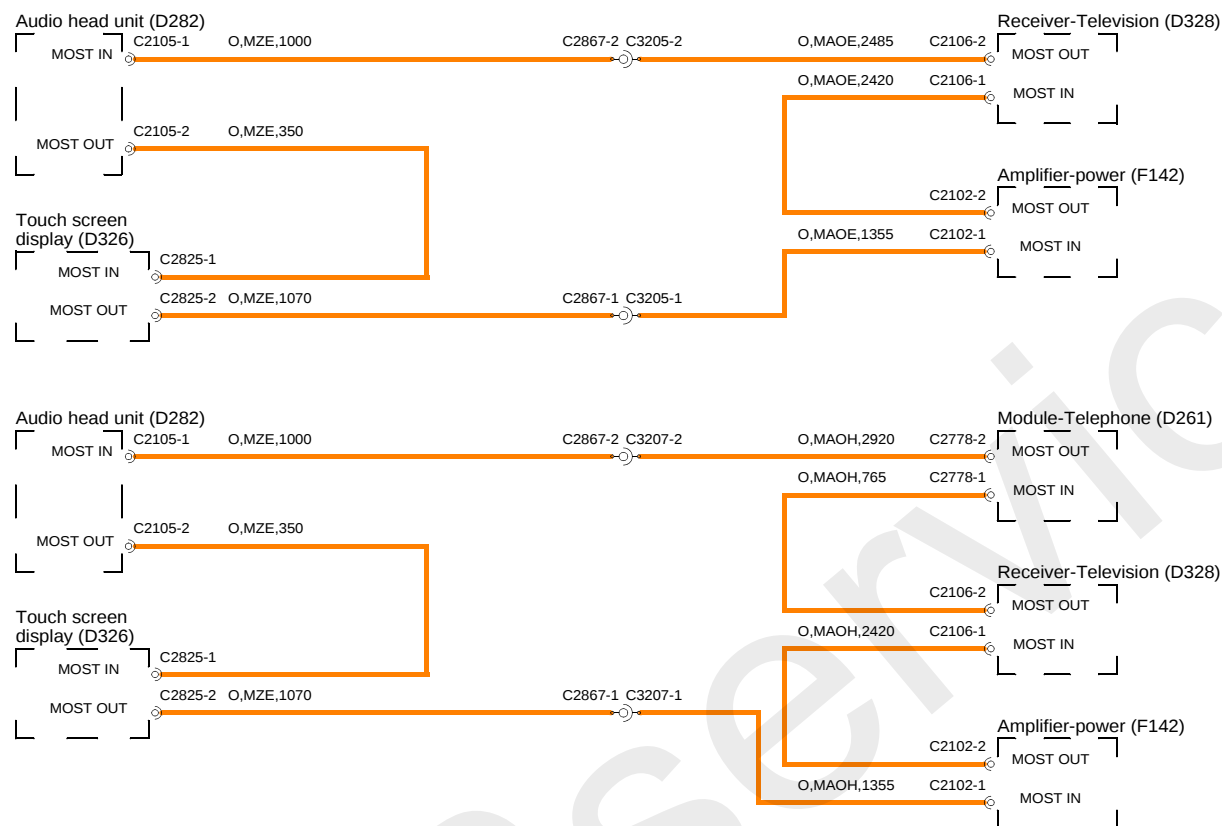


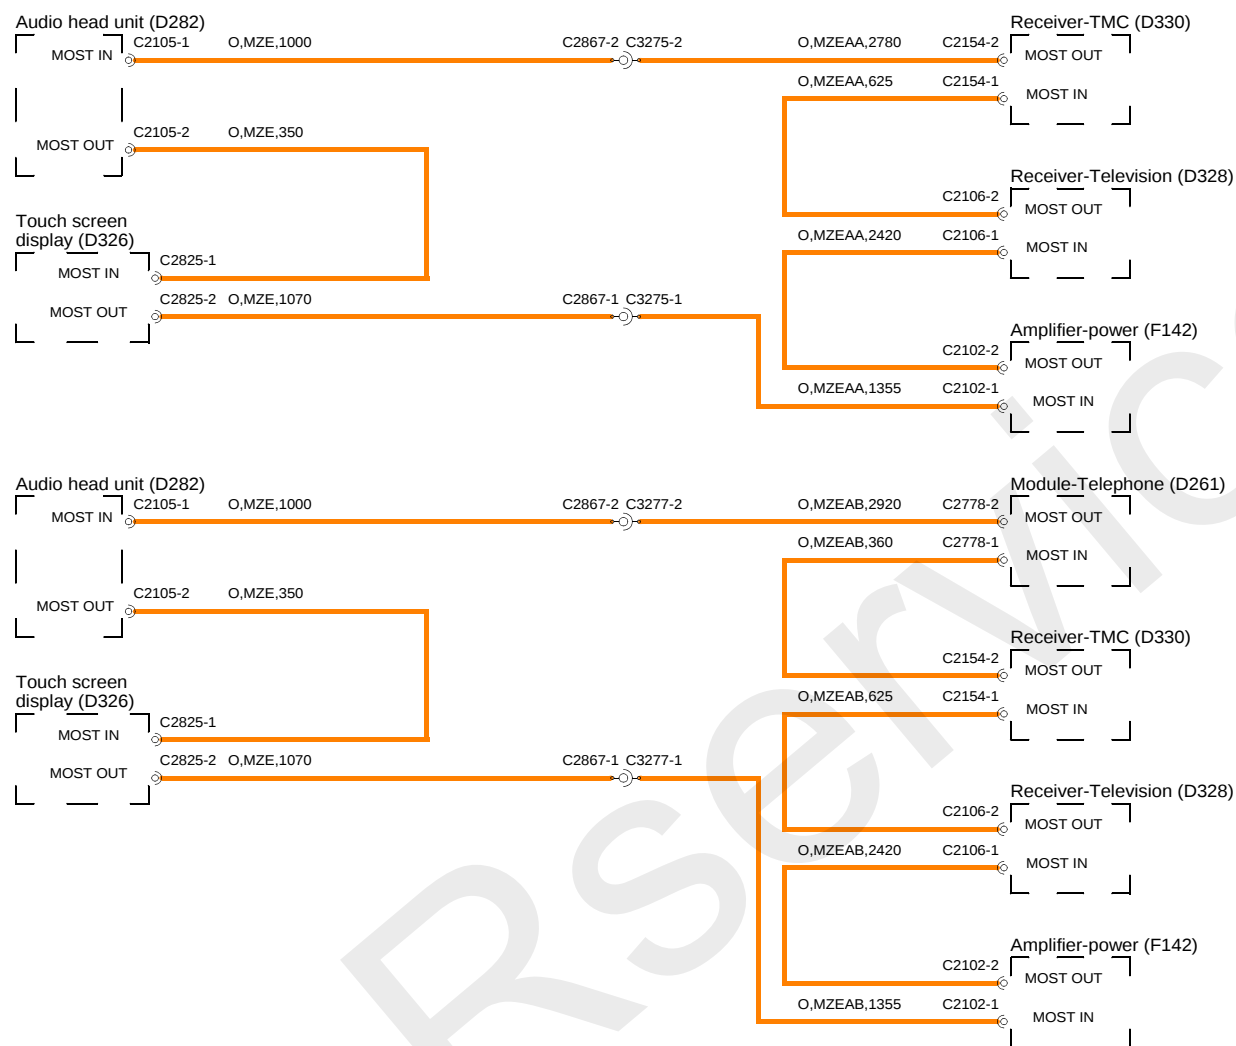


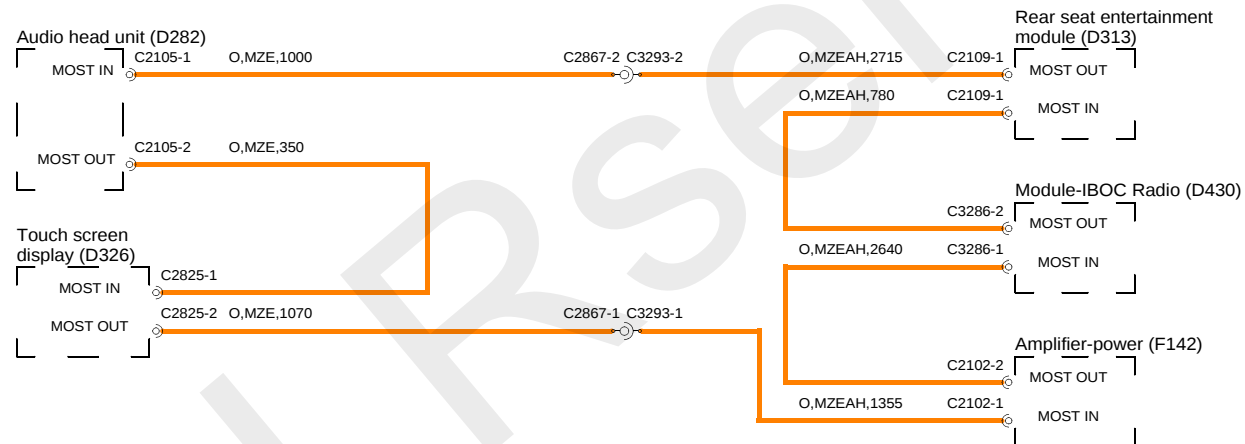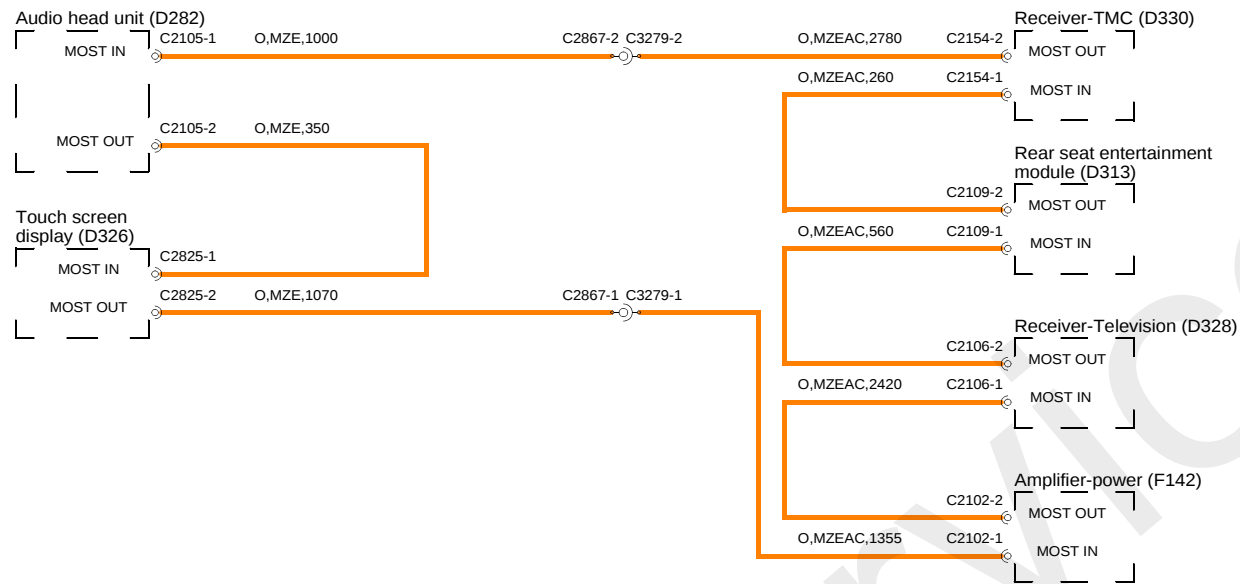


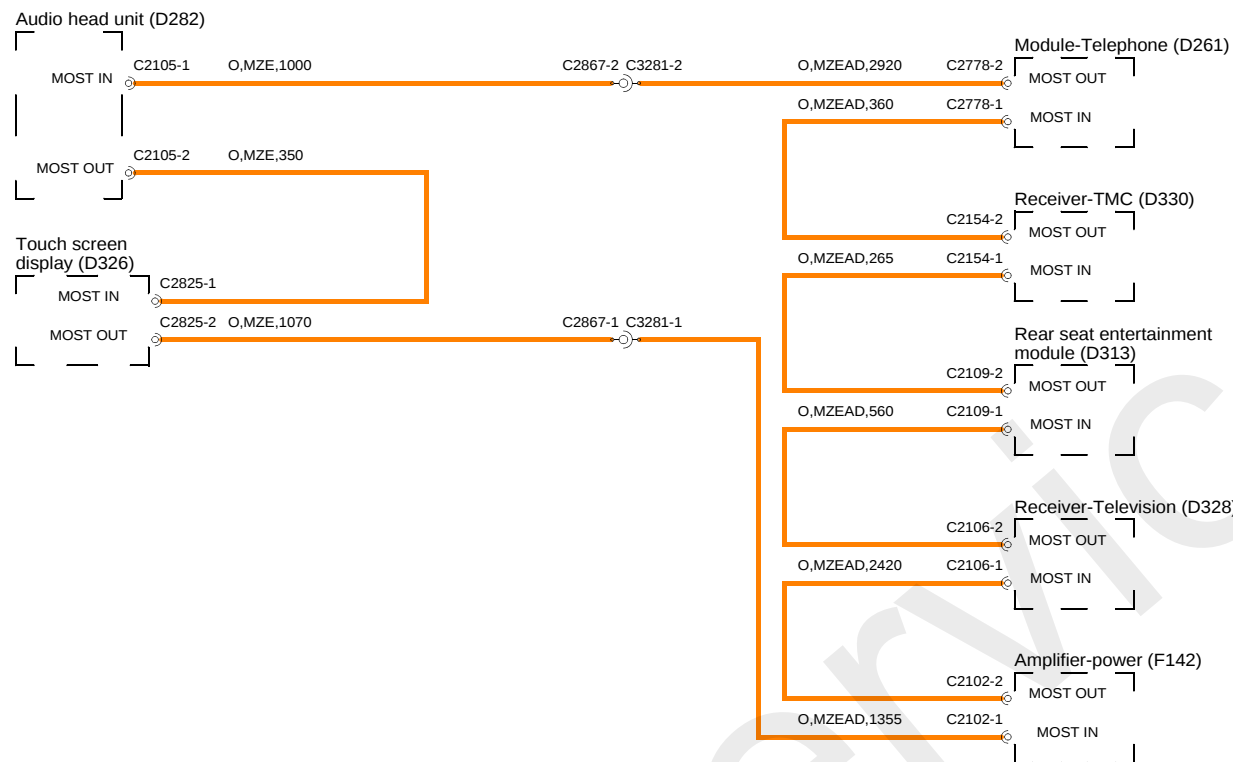


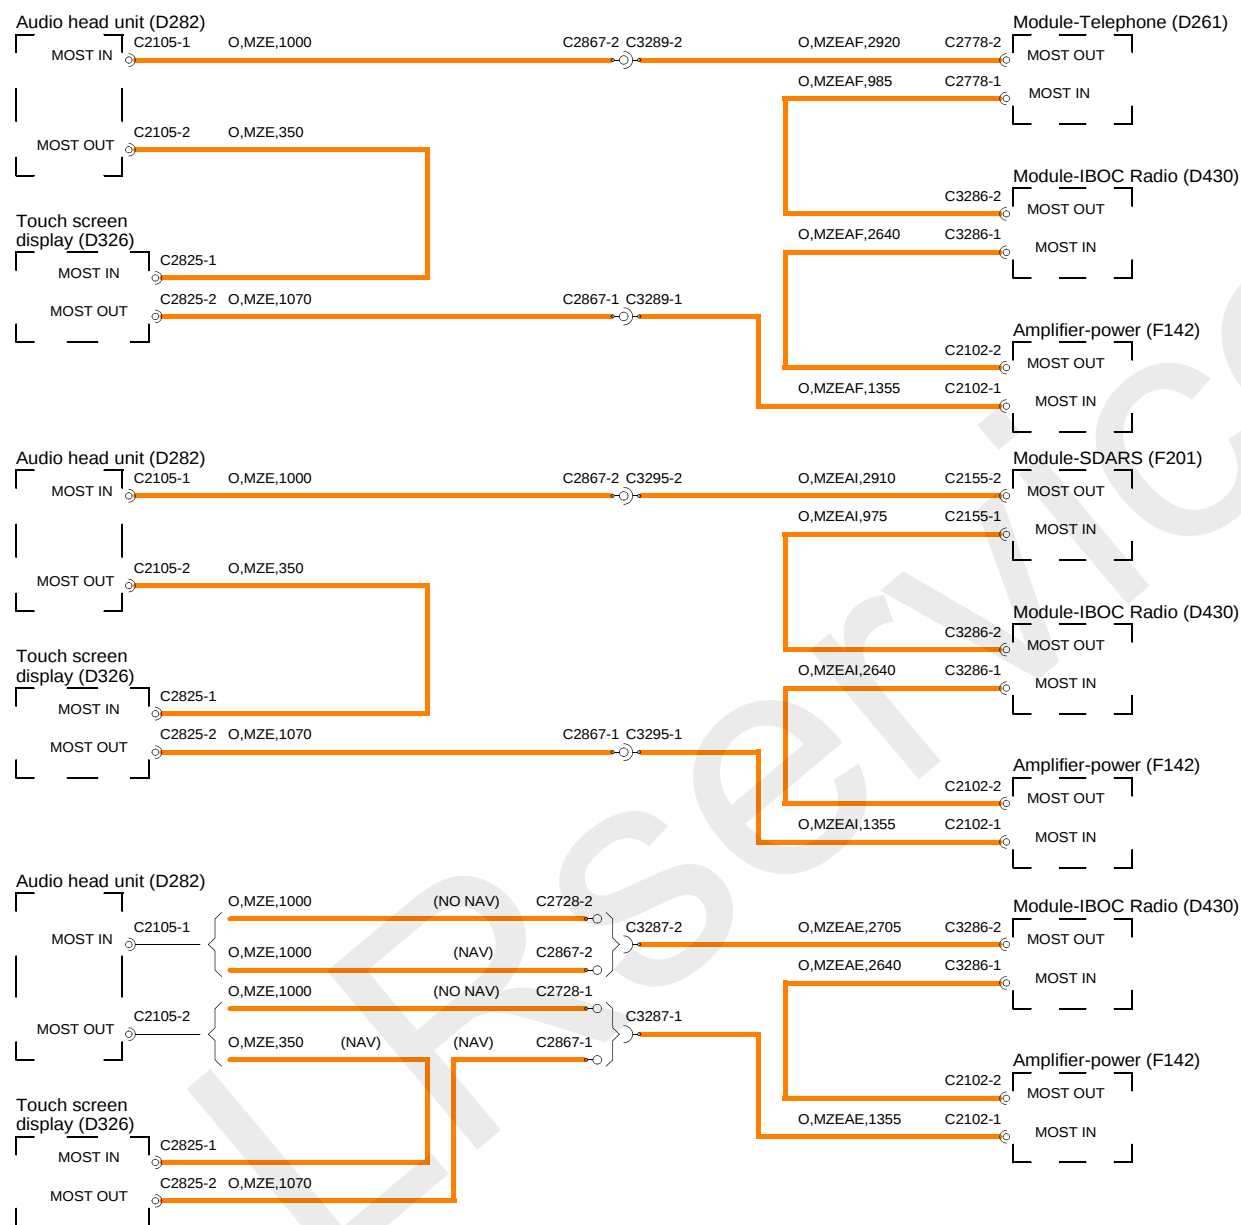

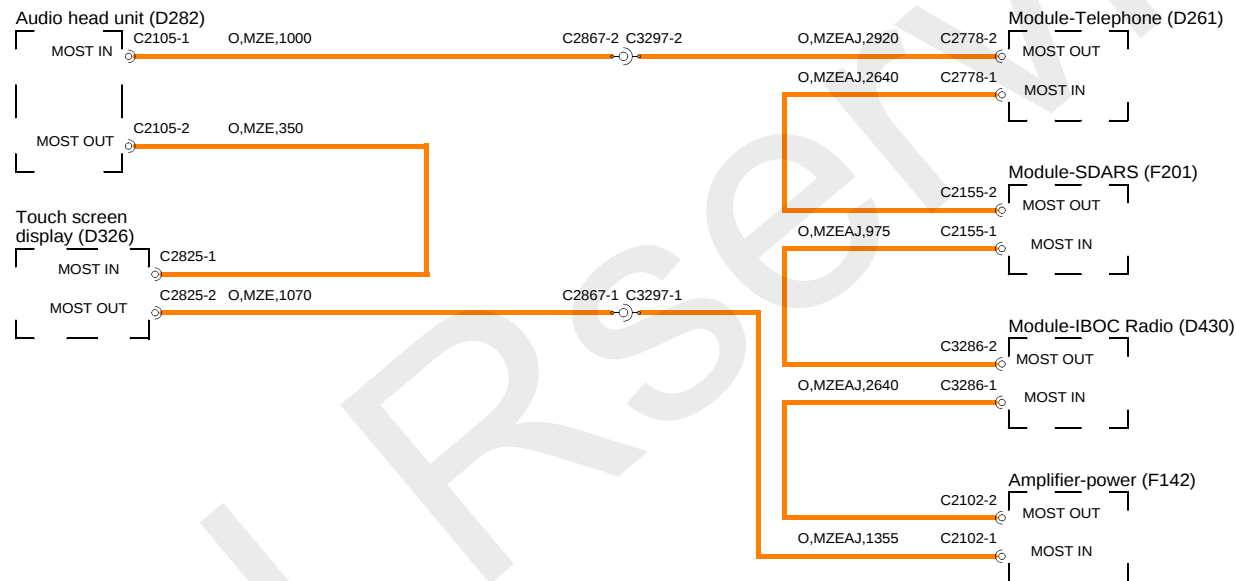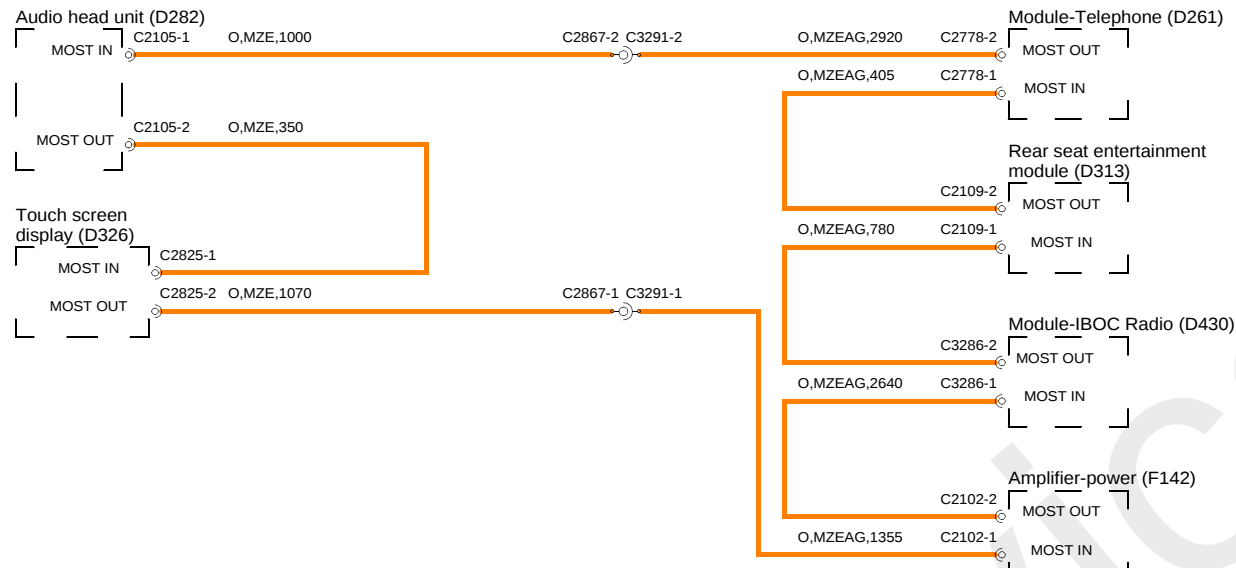


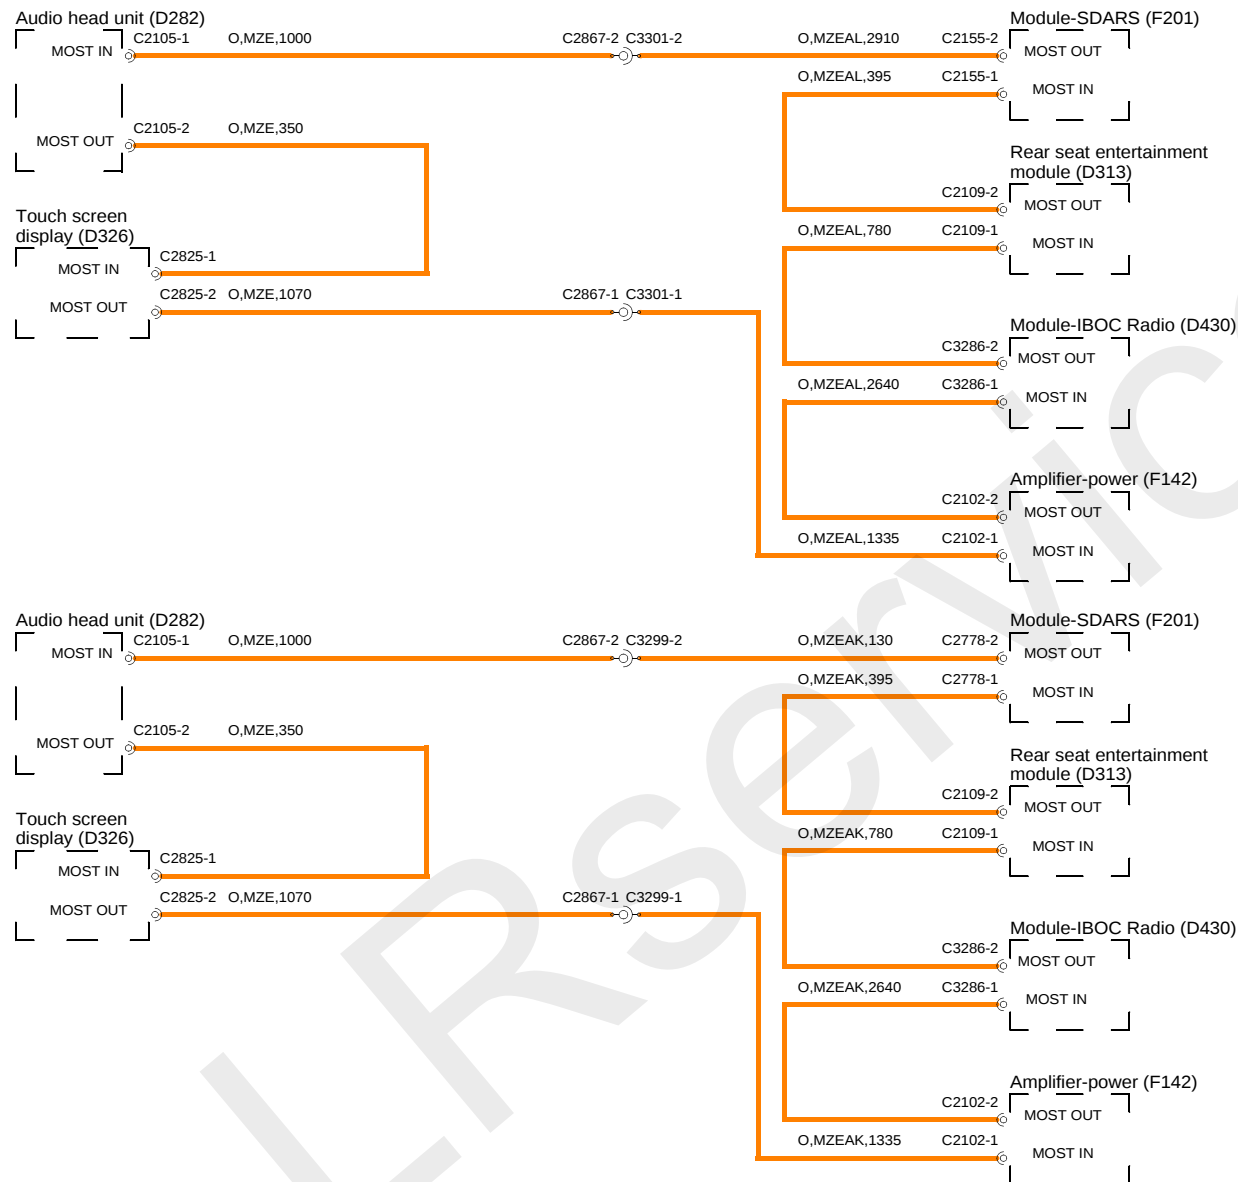


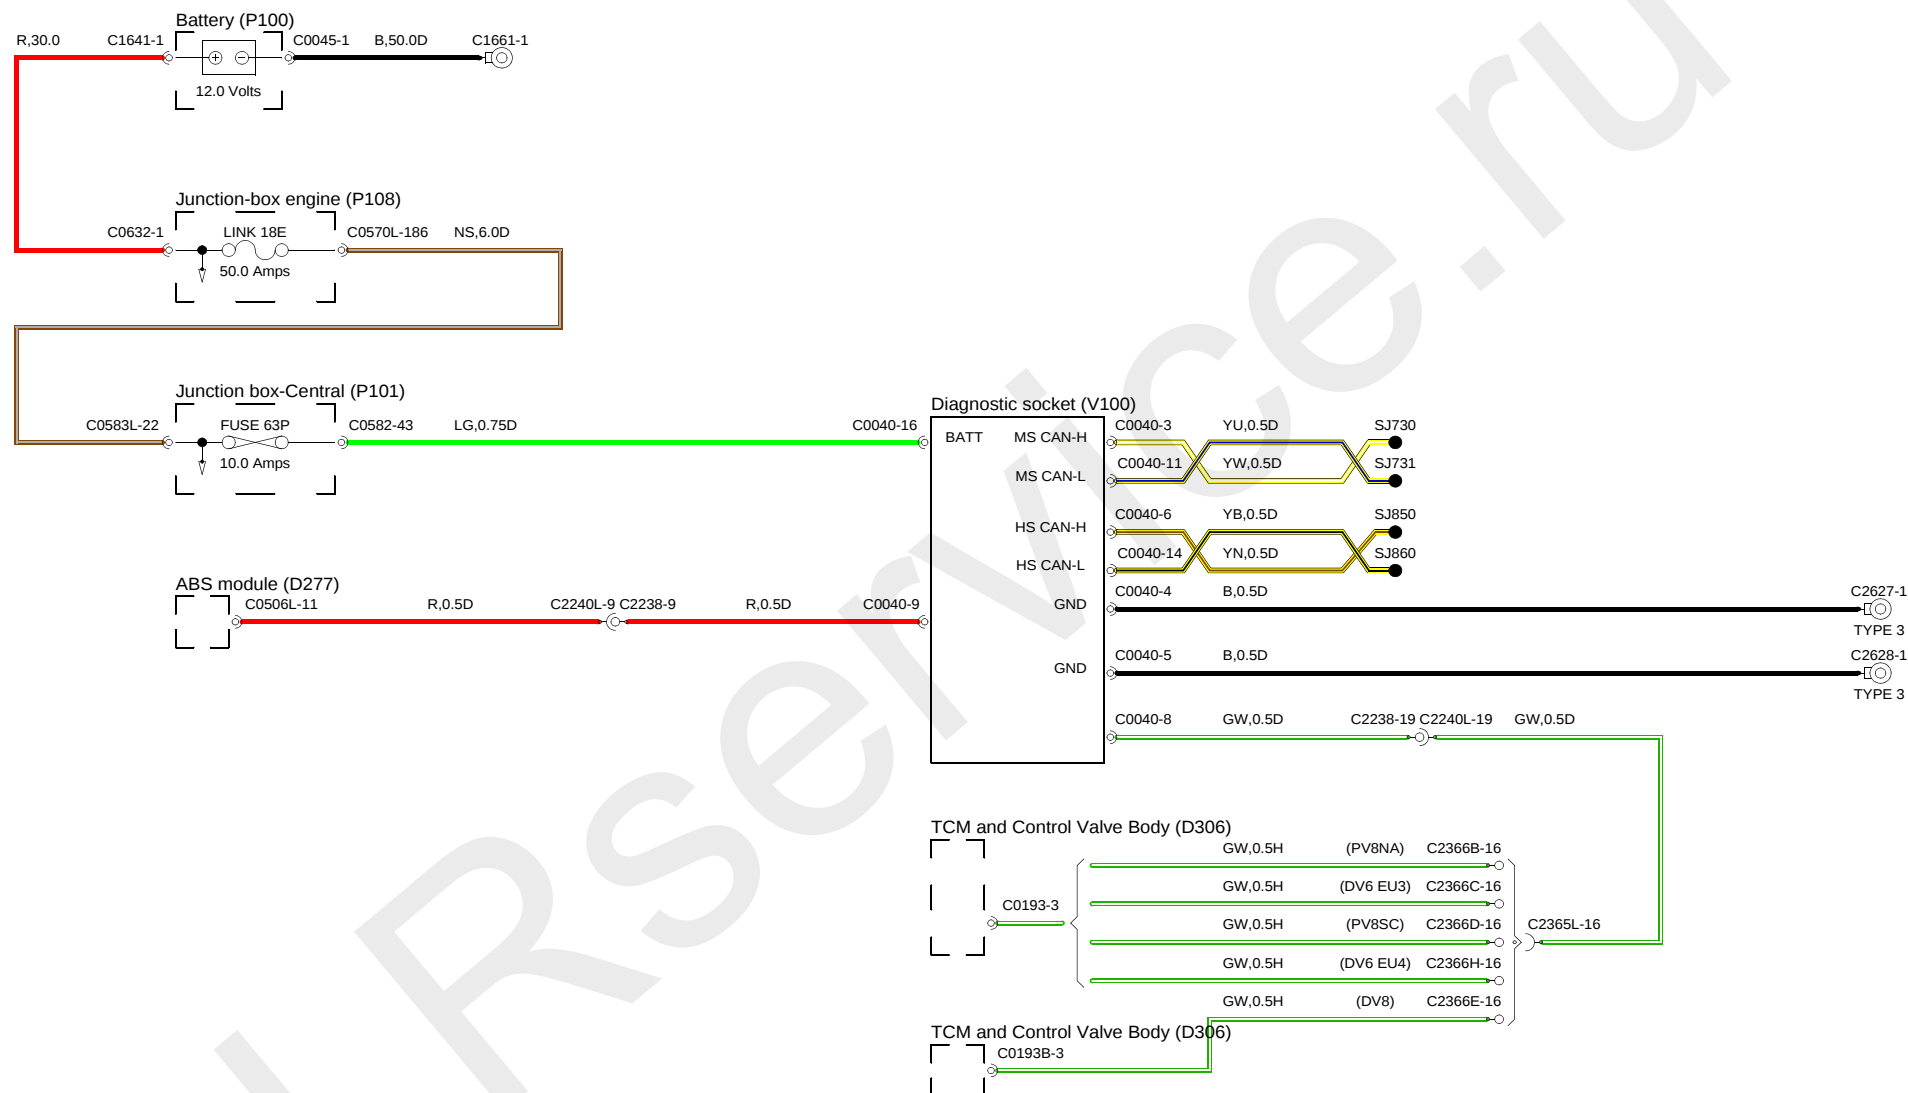

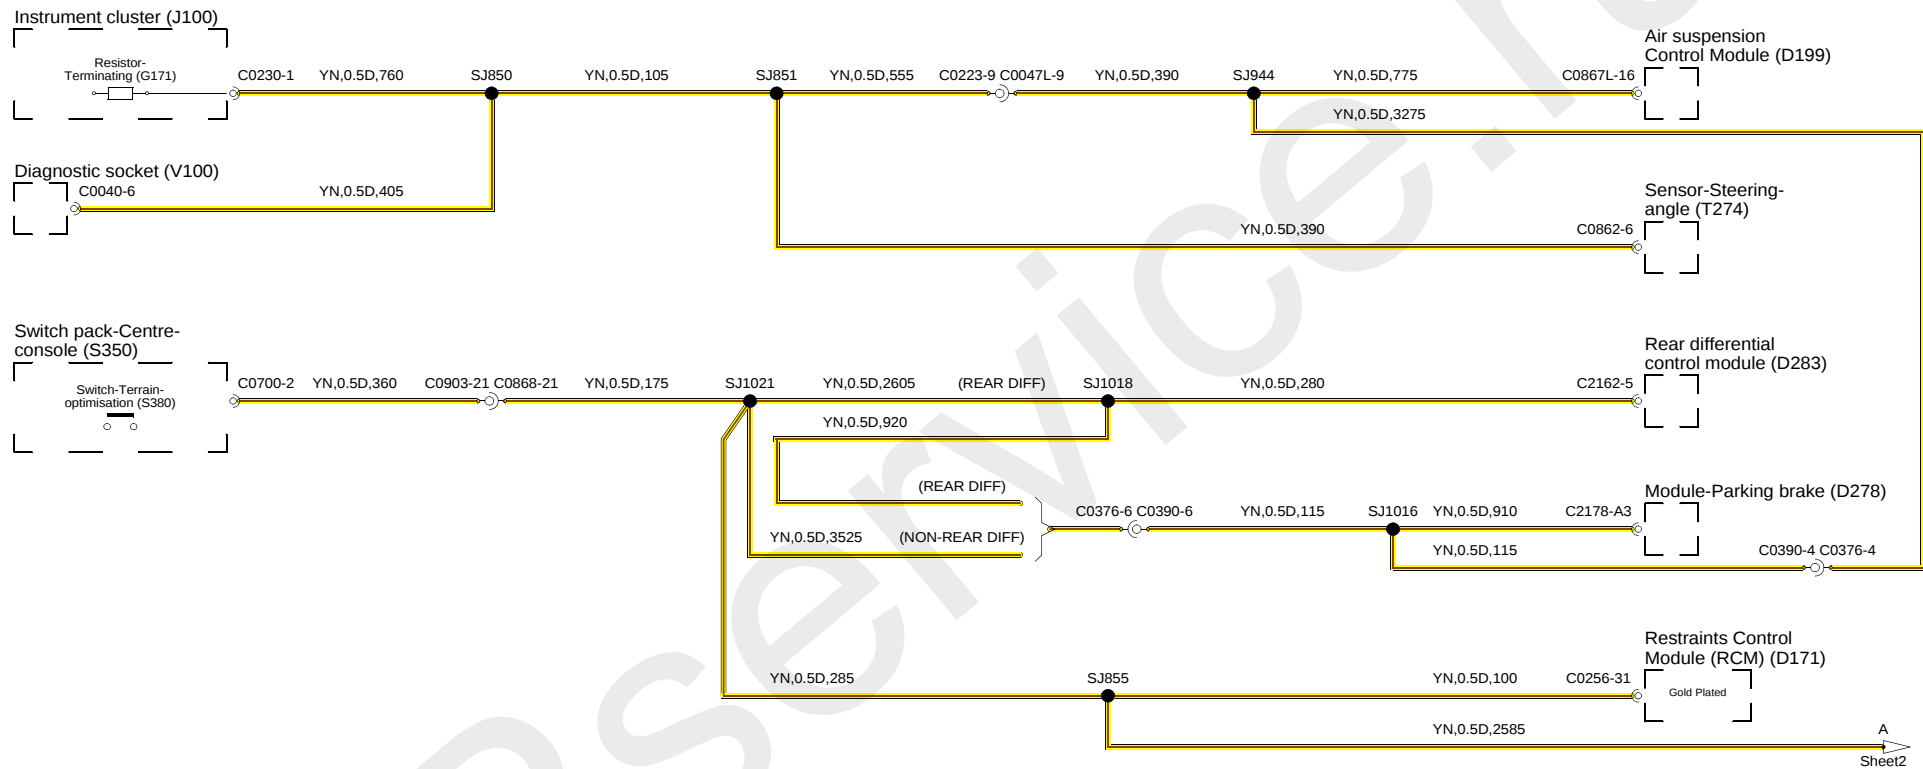


HS CAN_H

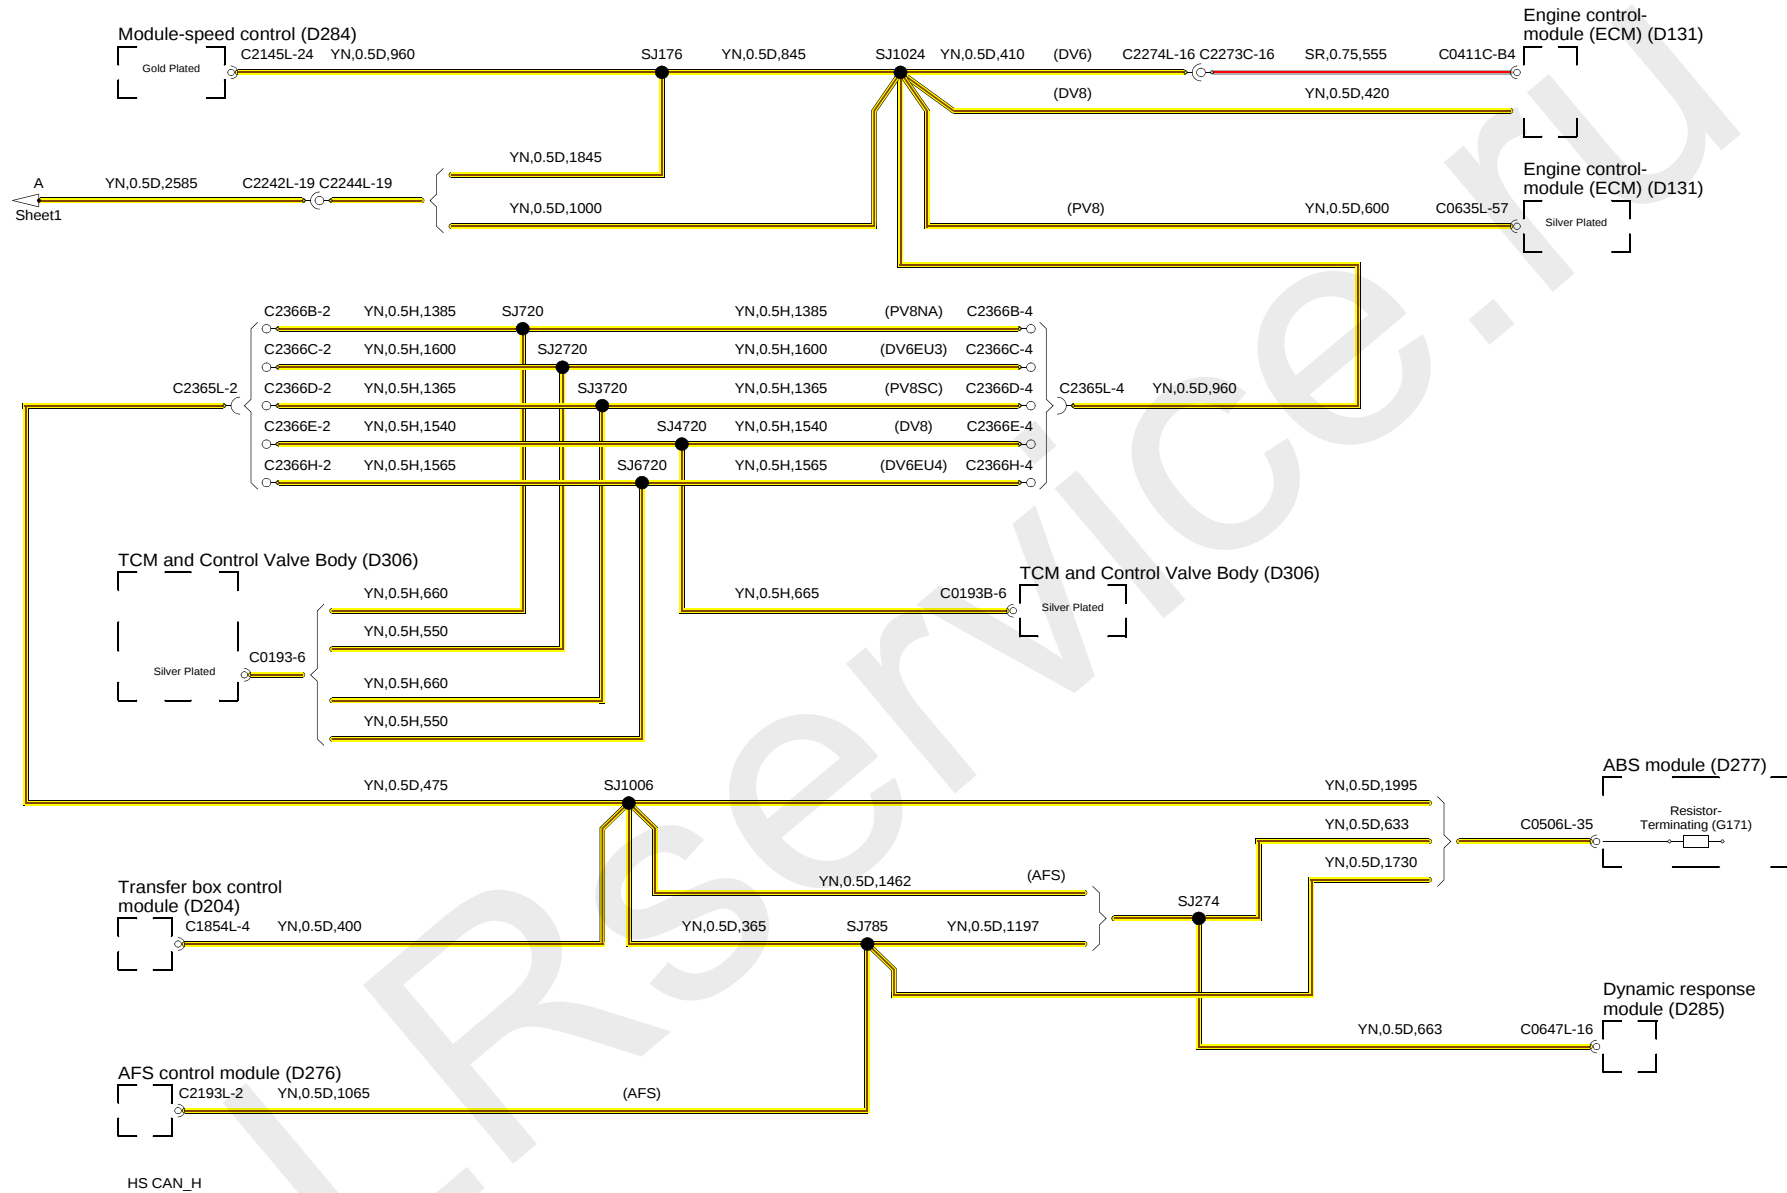


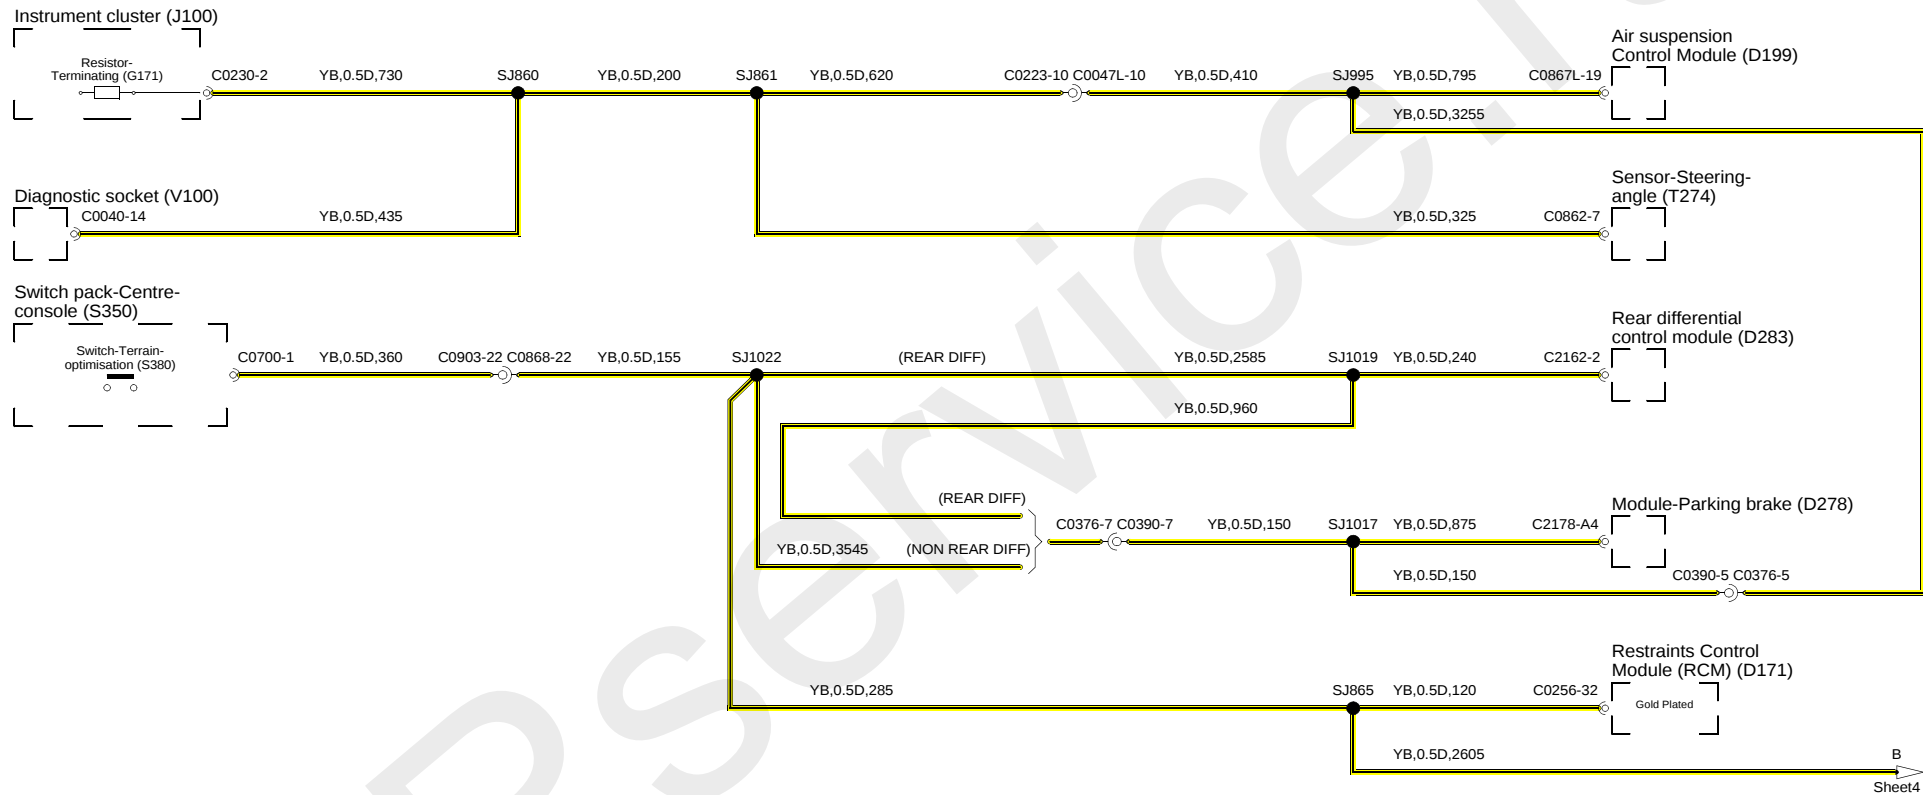



B
Sheet4


HS CAN_L

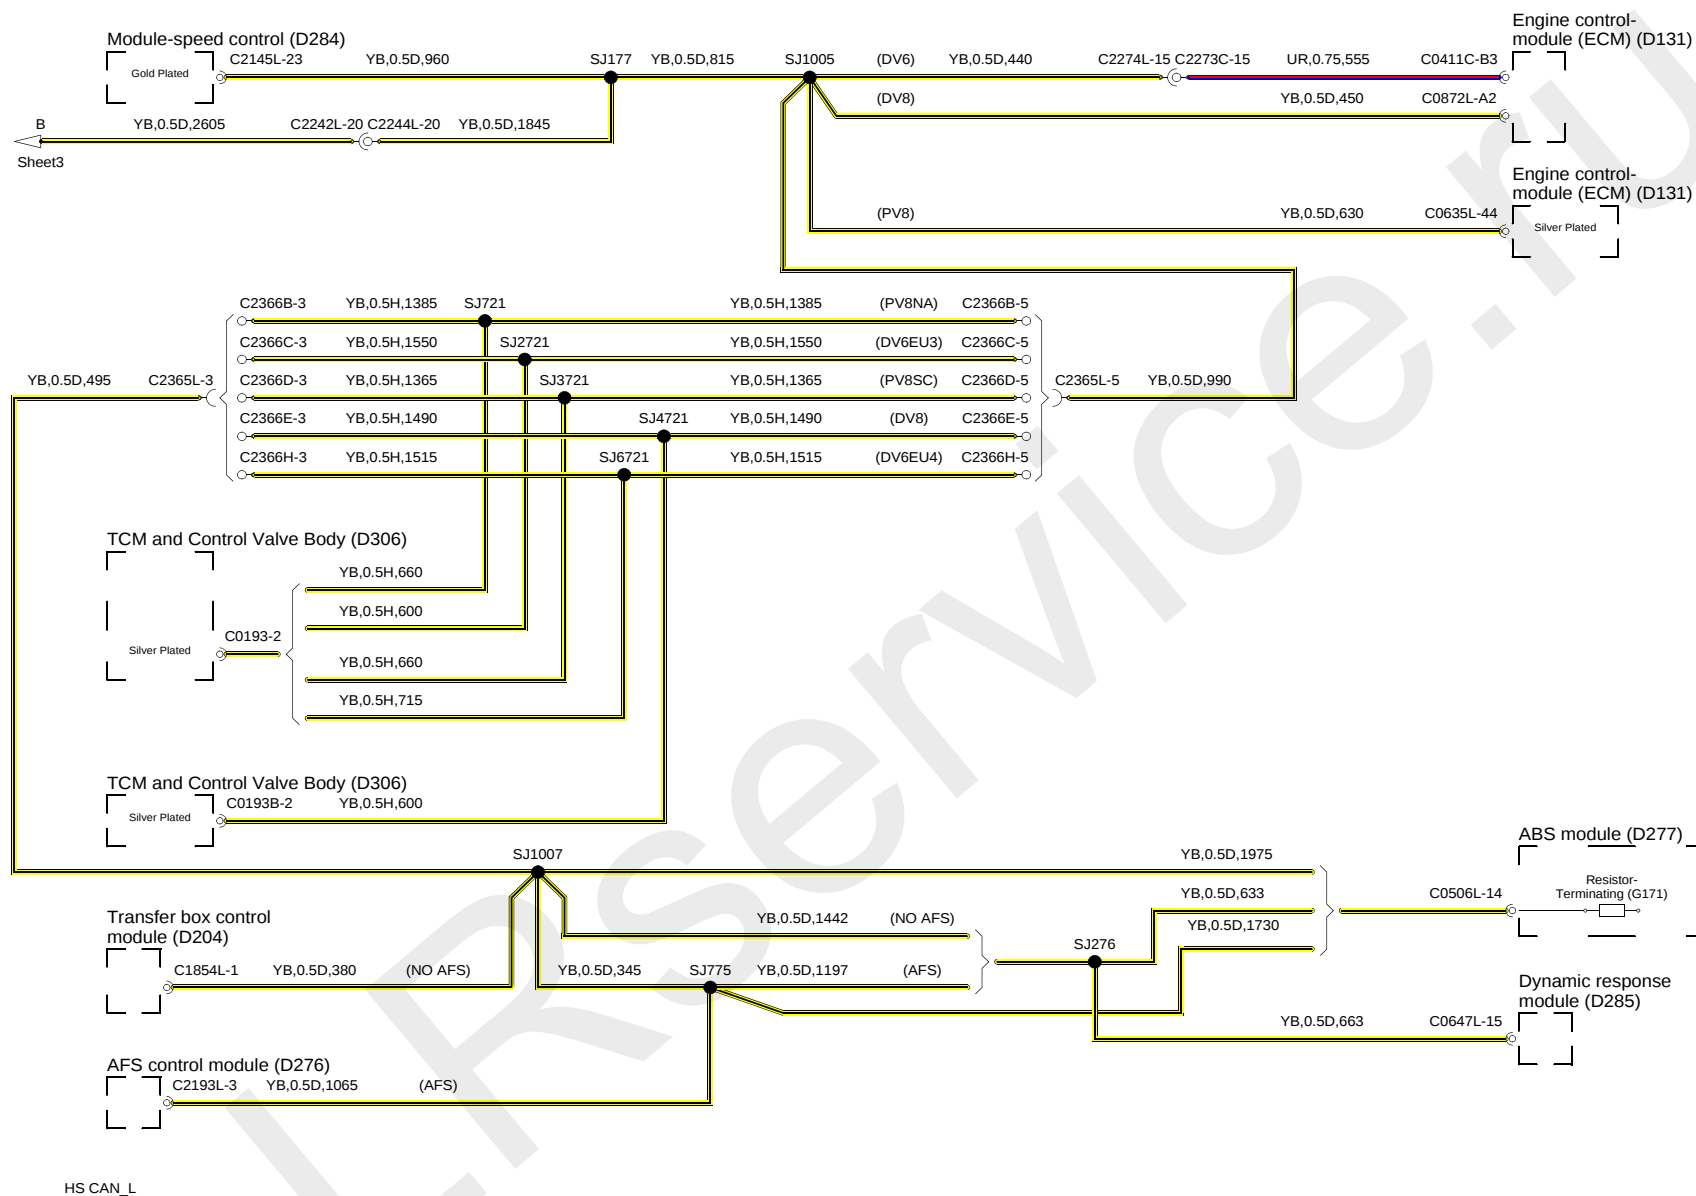


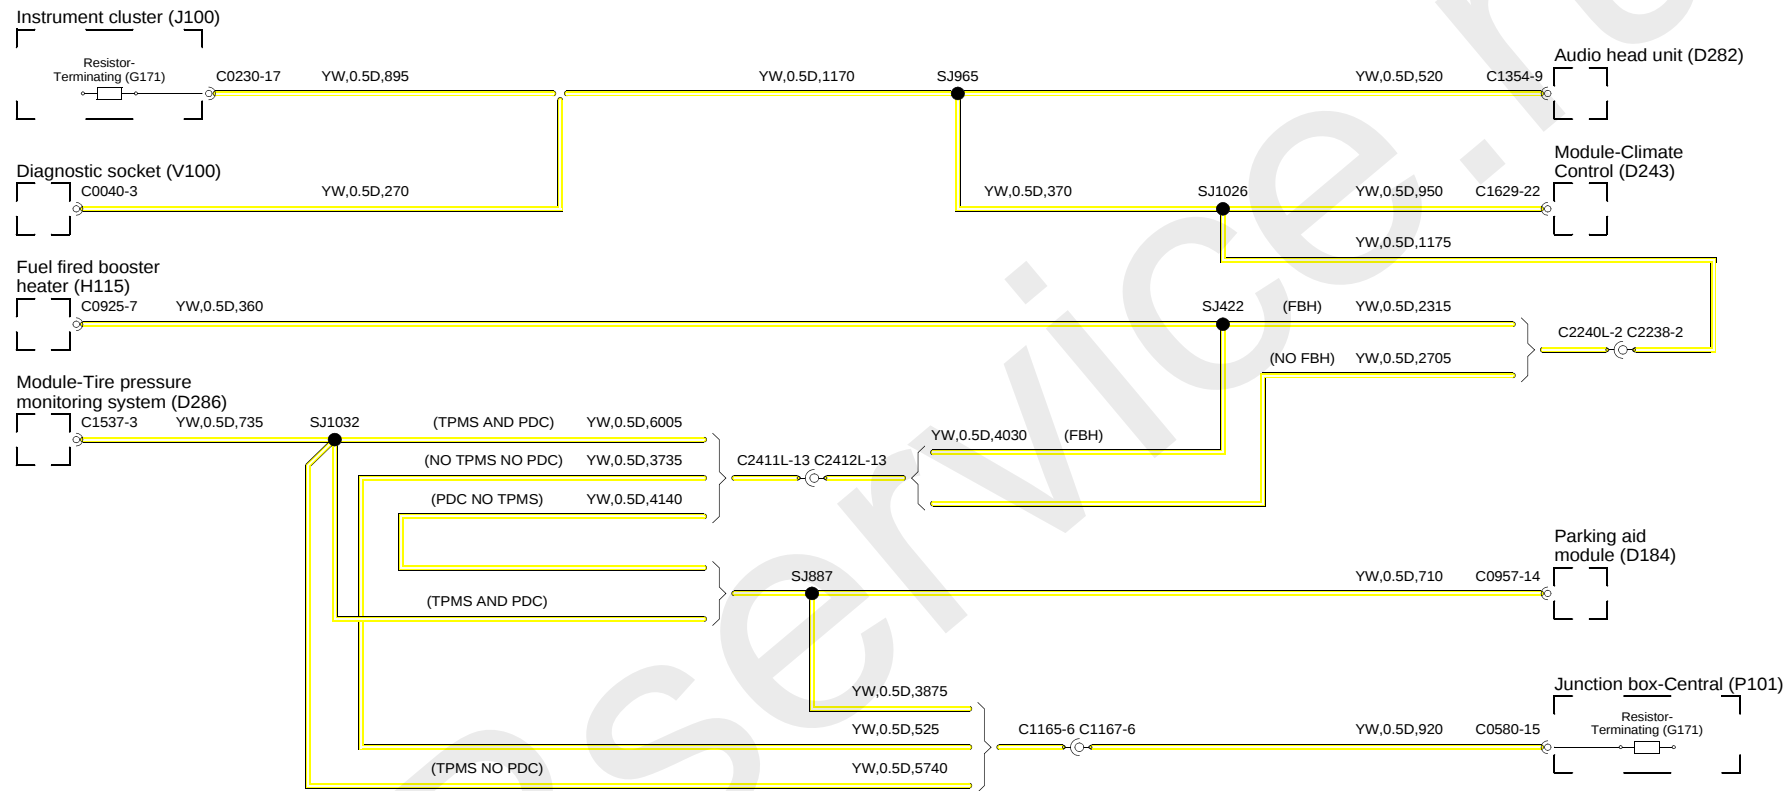


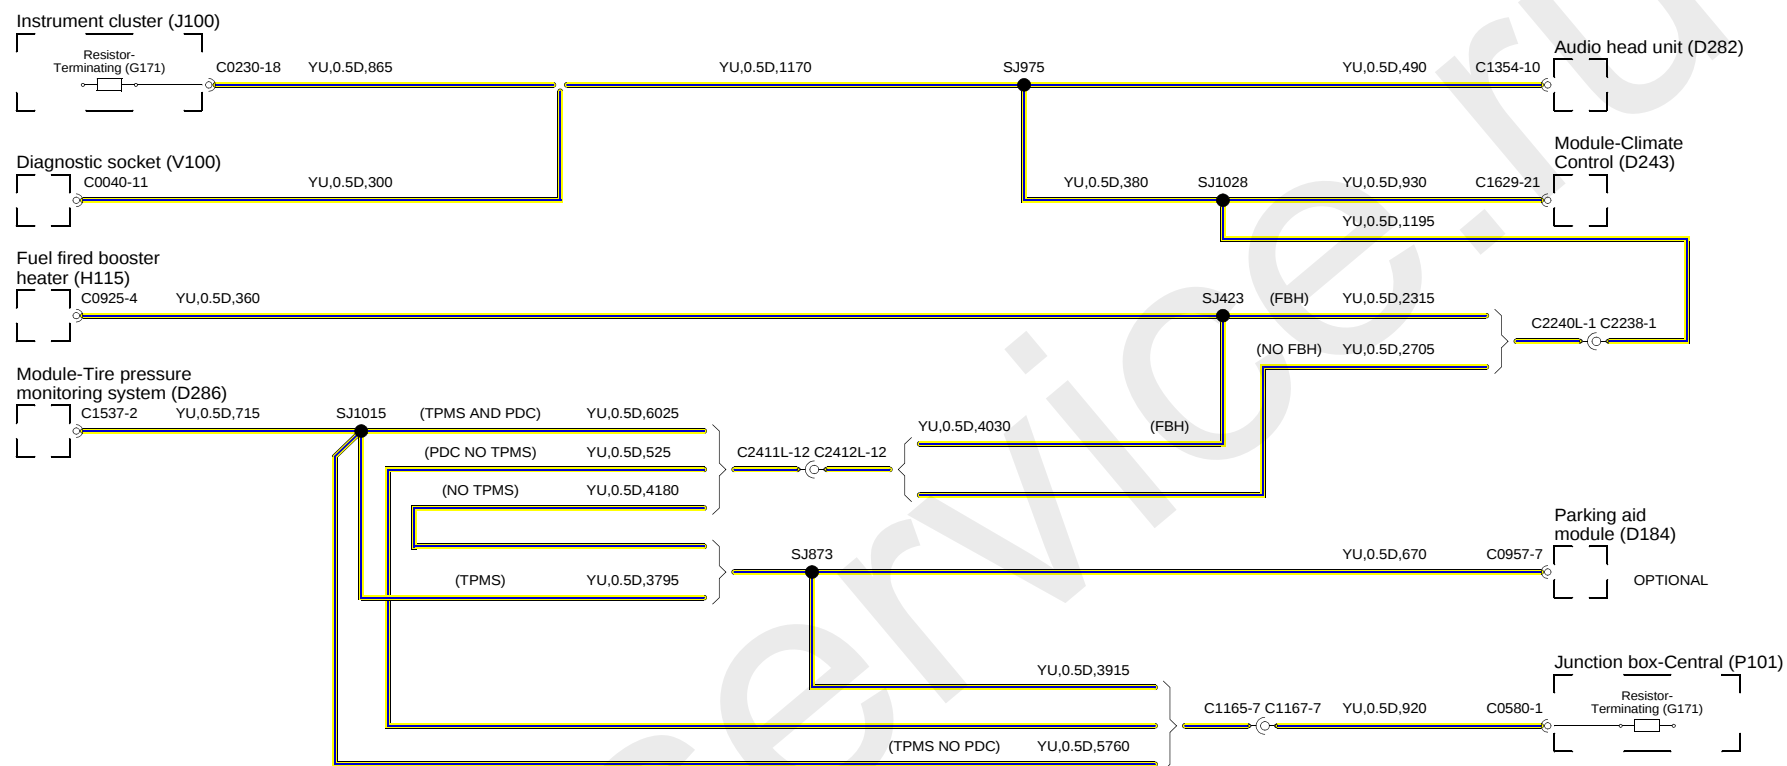


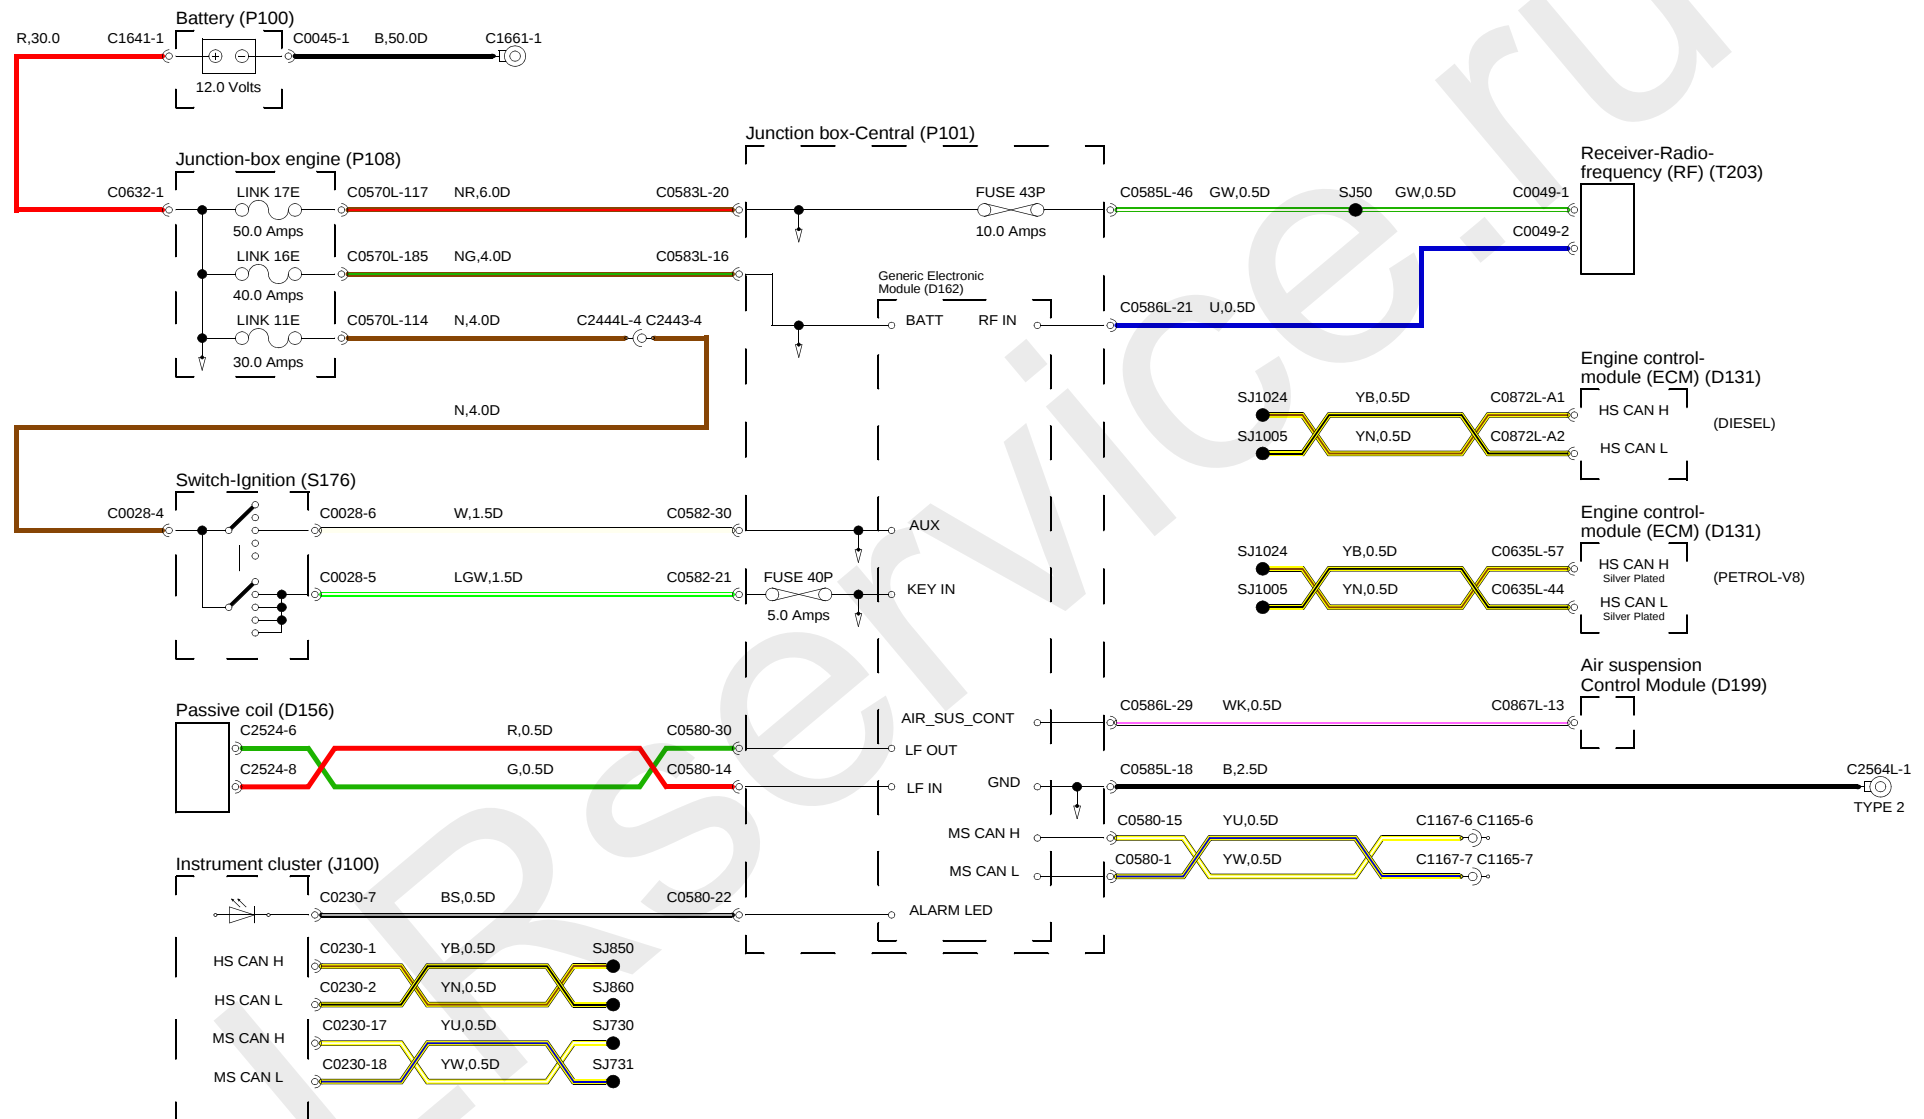


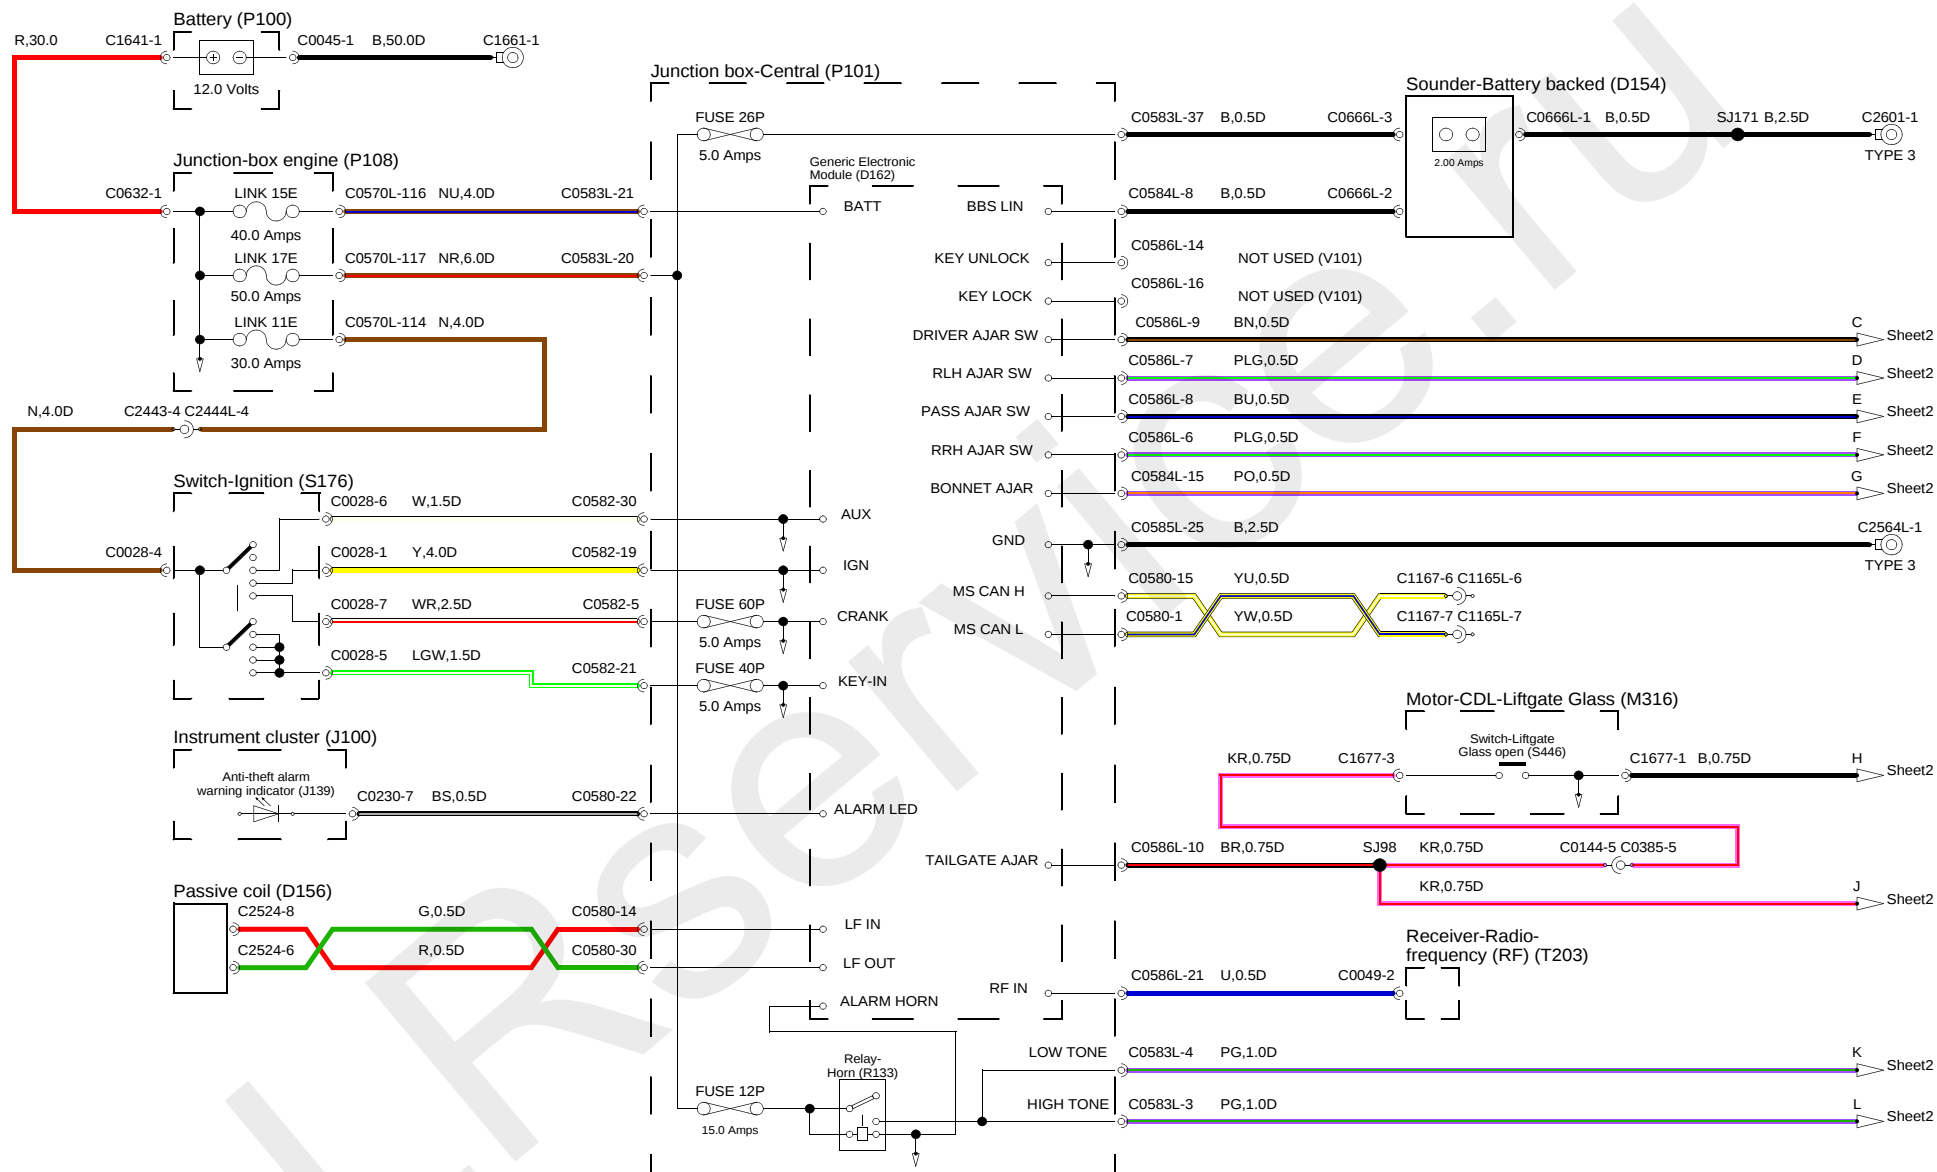


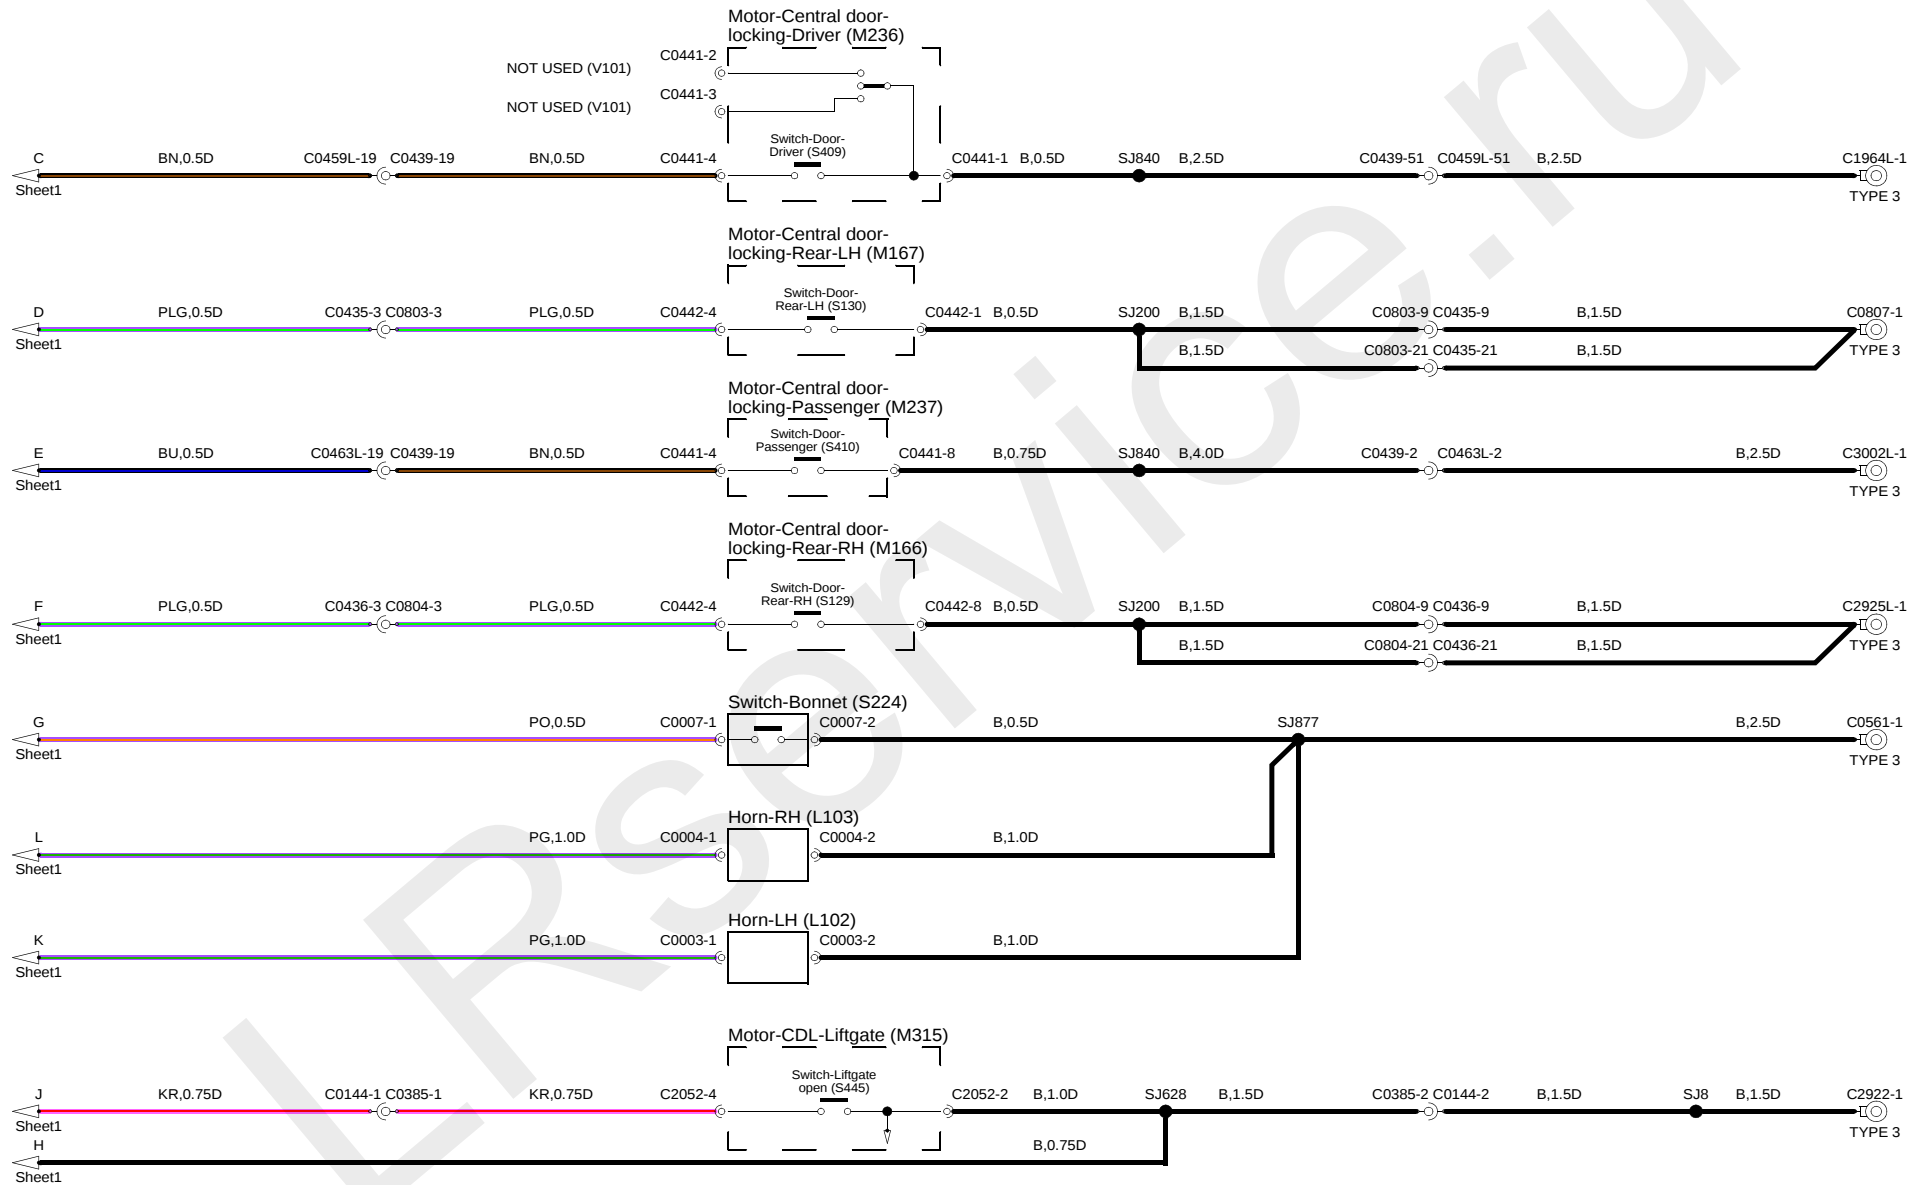


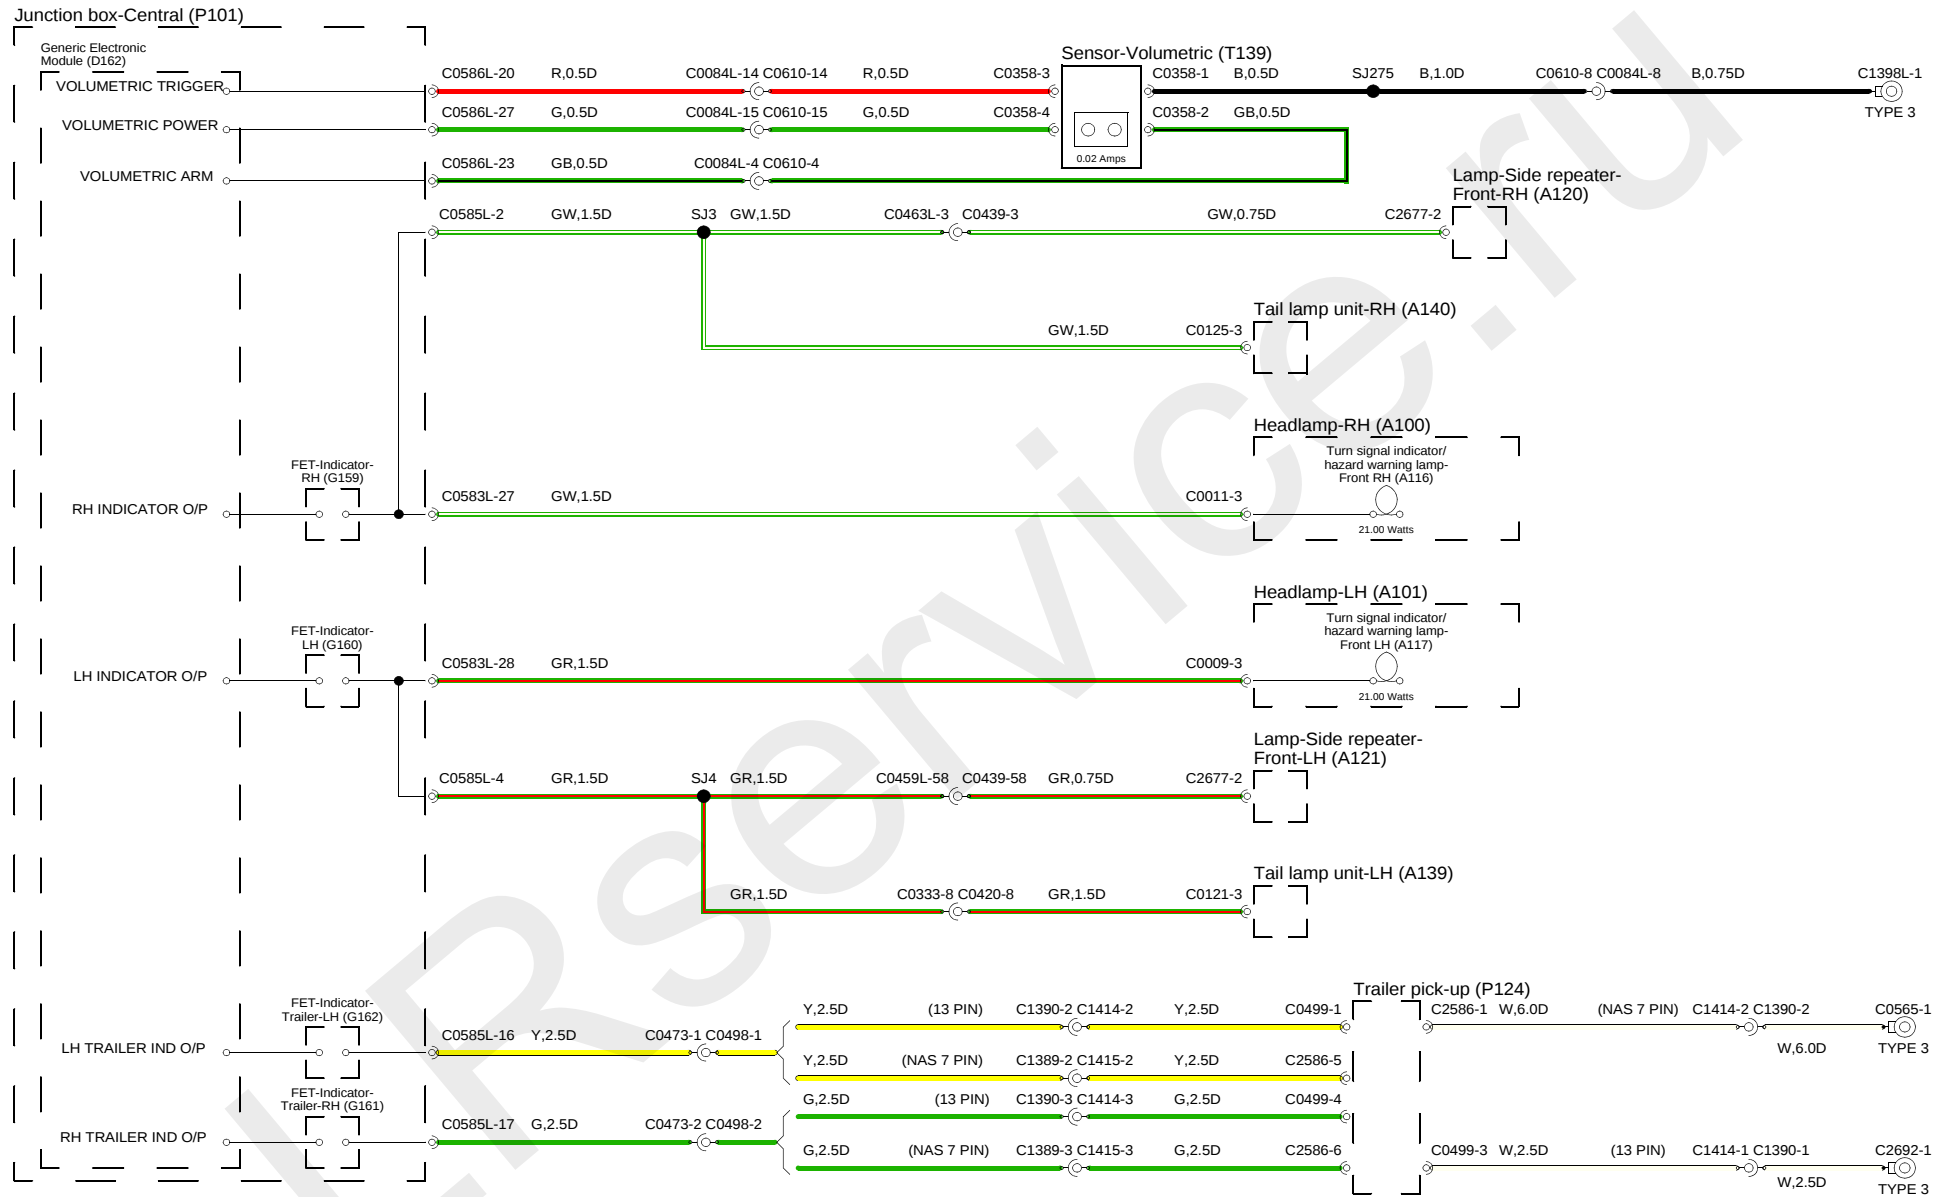


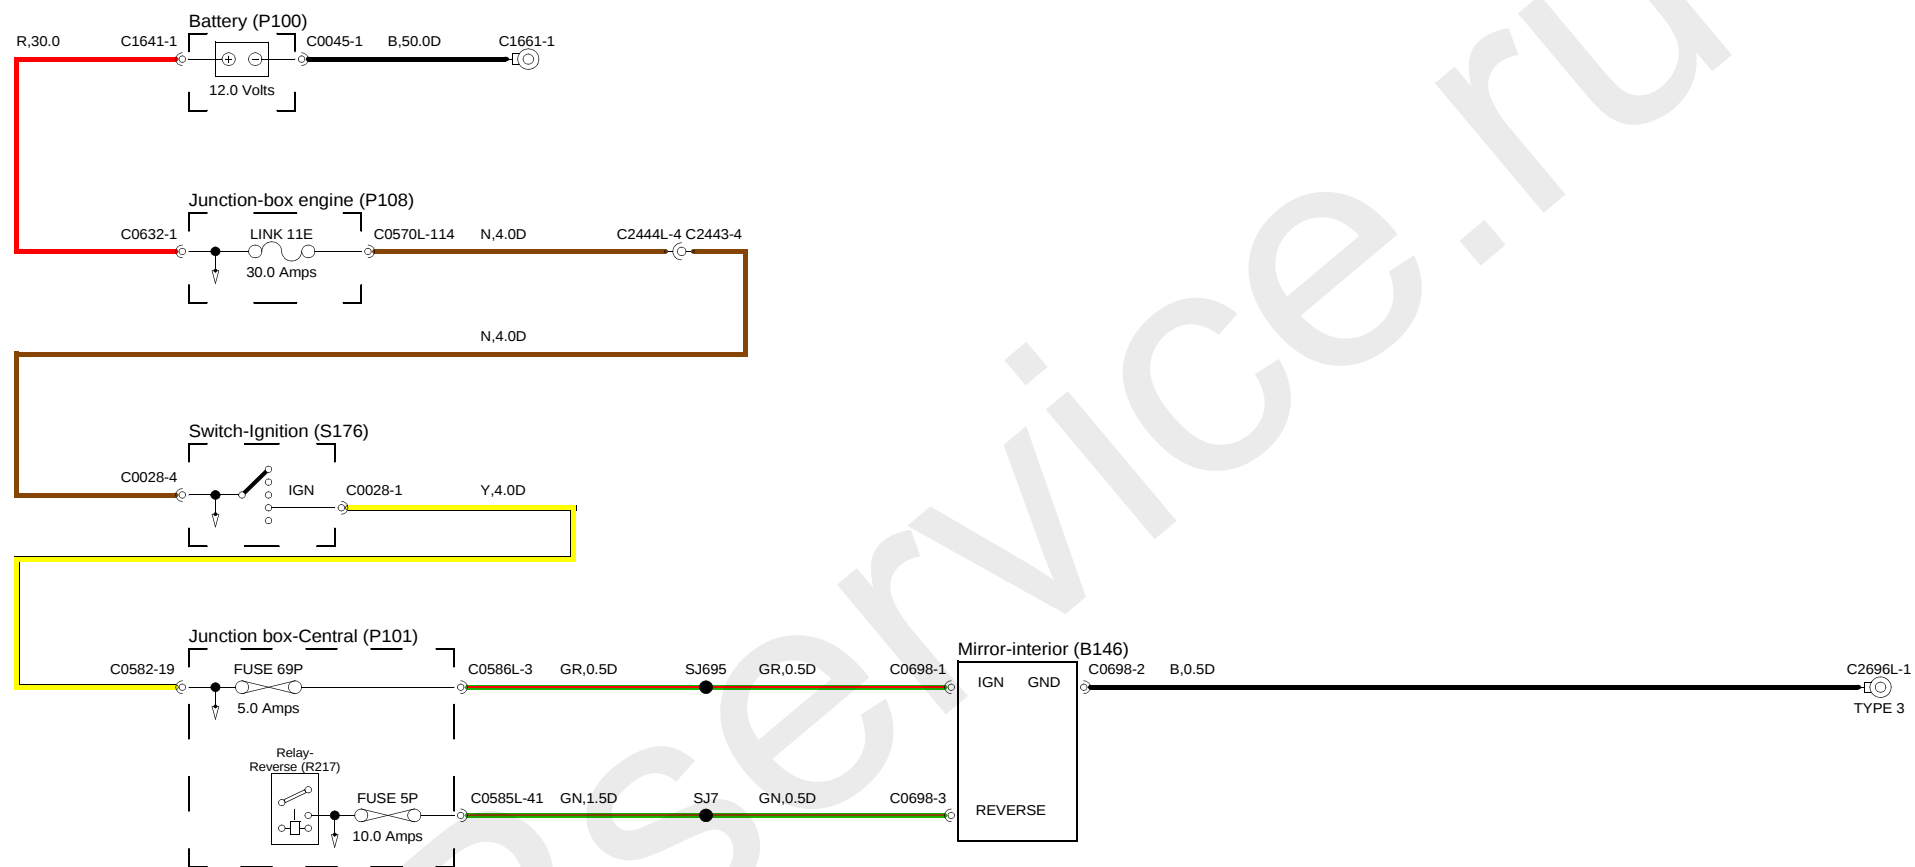


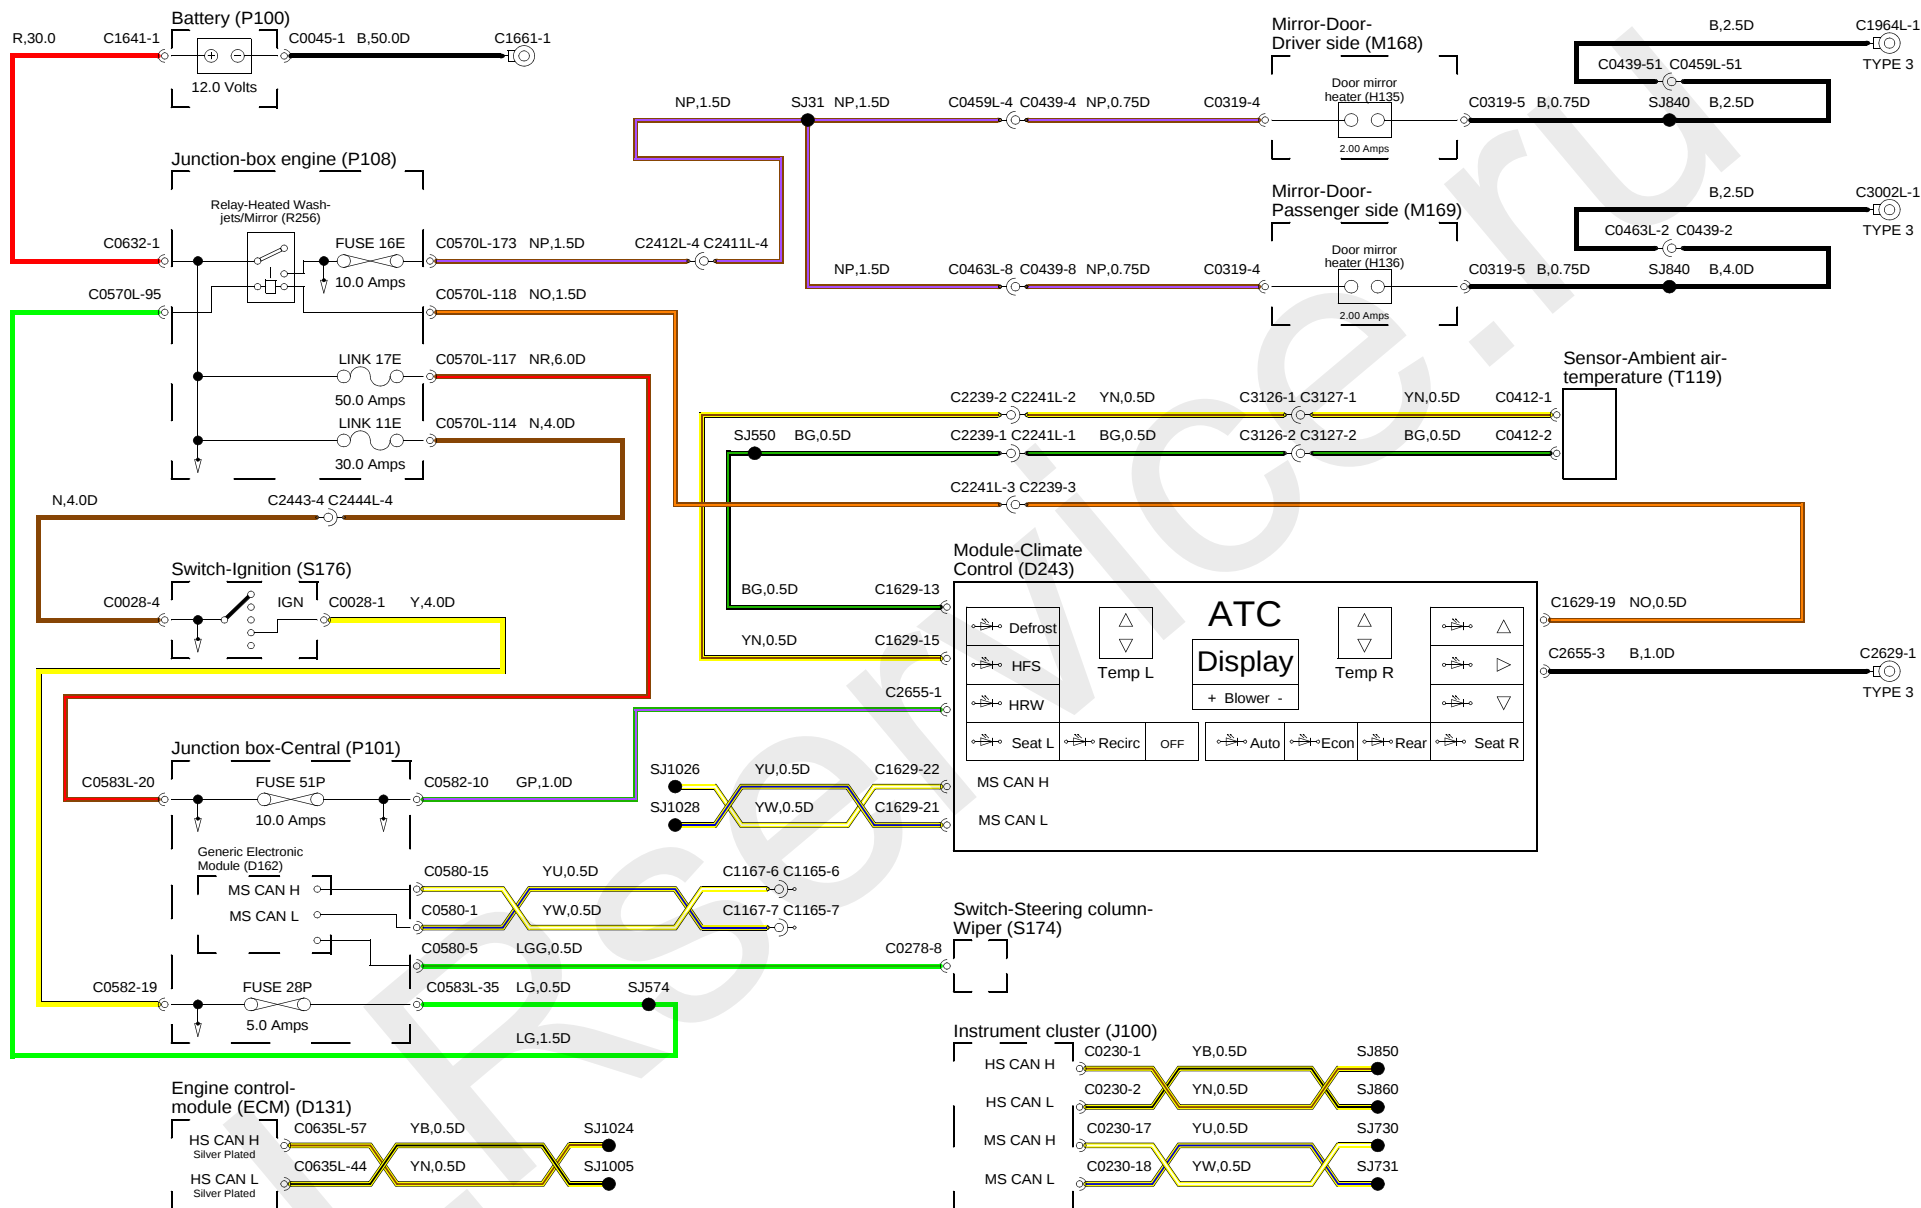


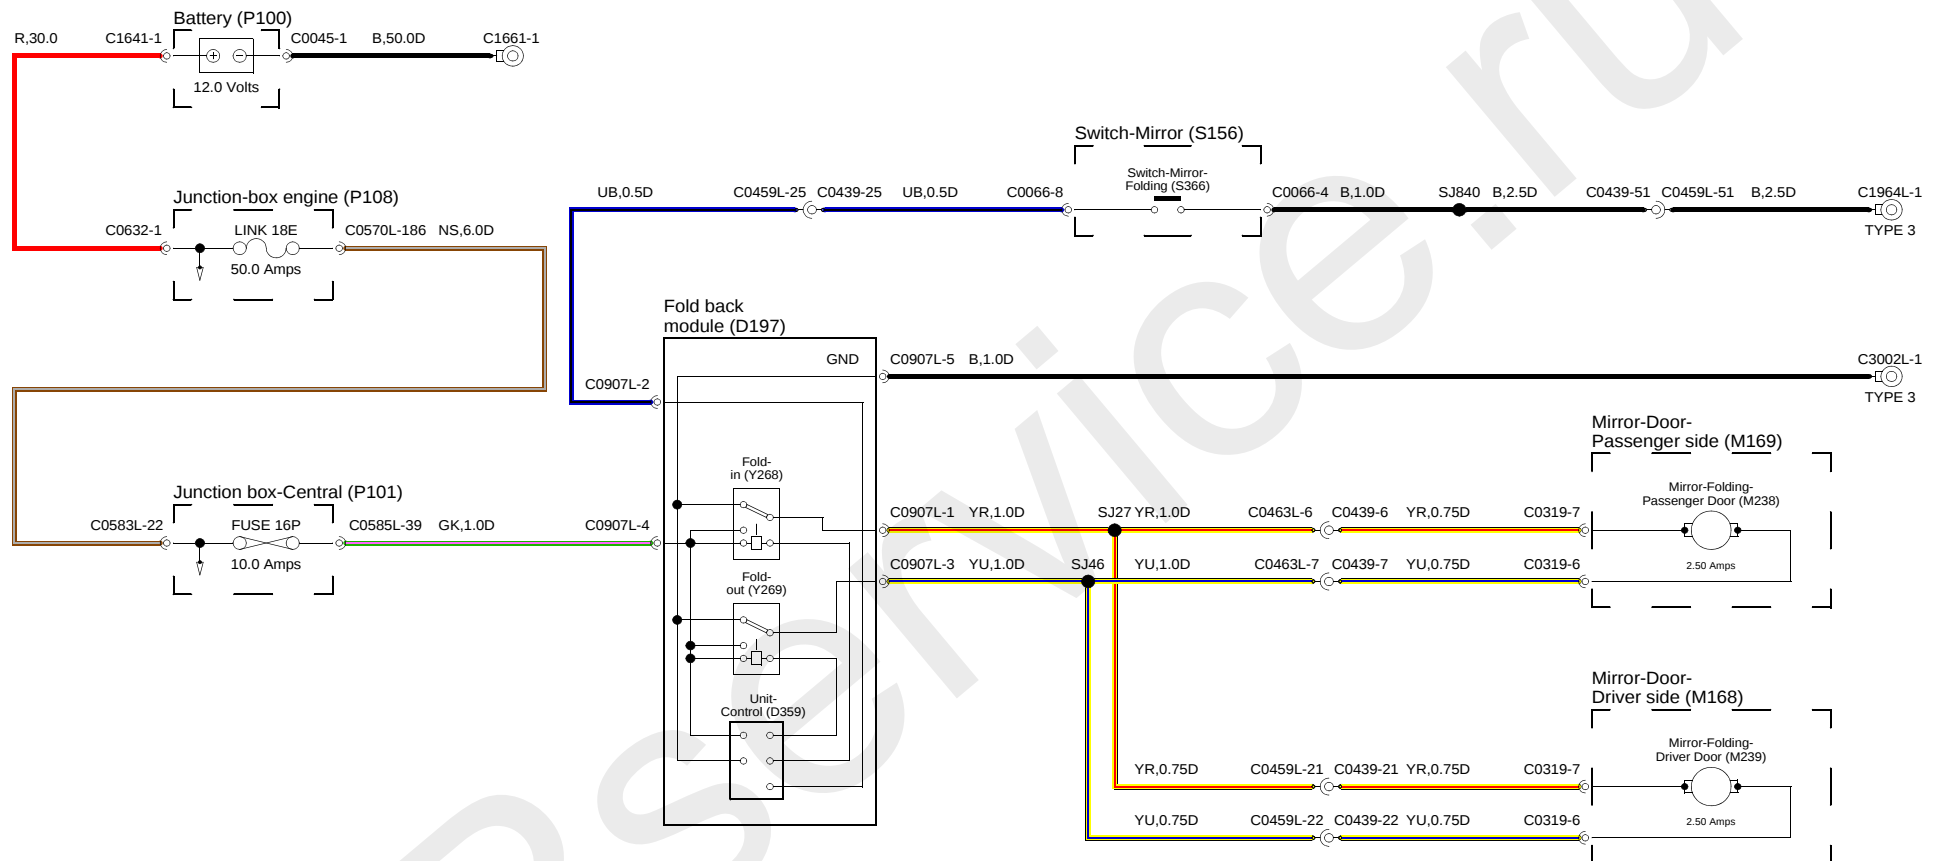


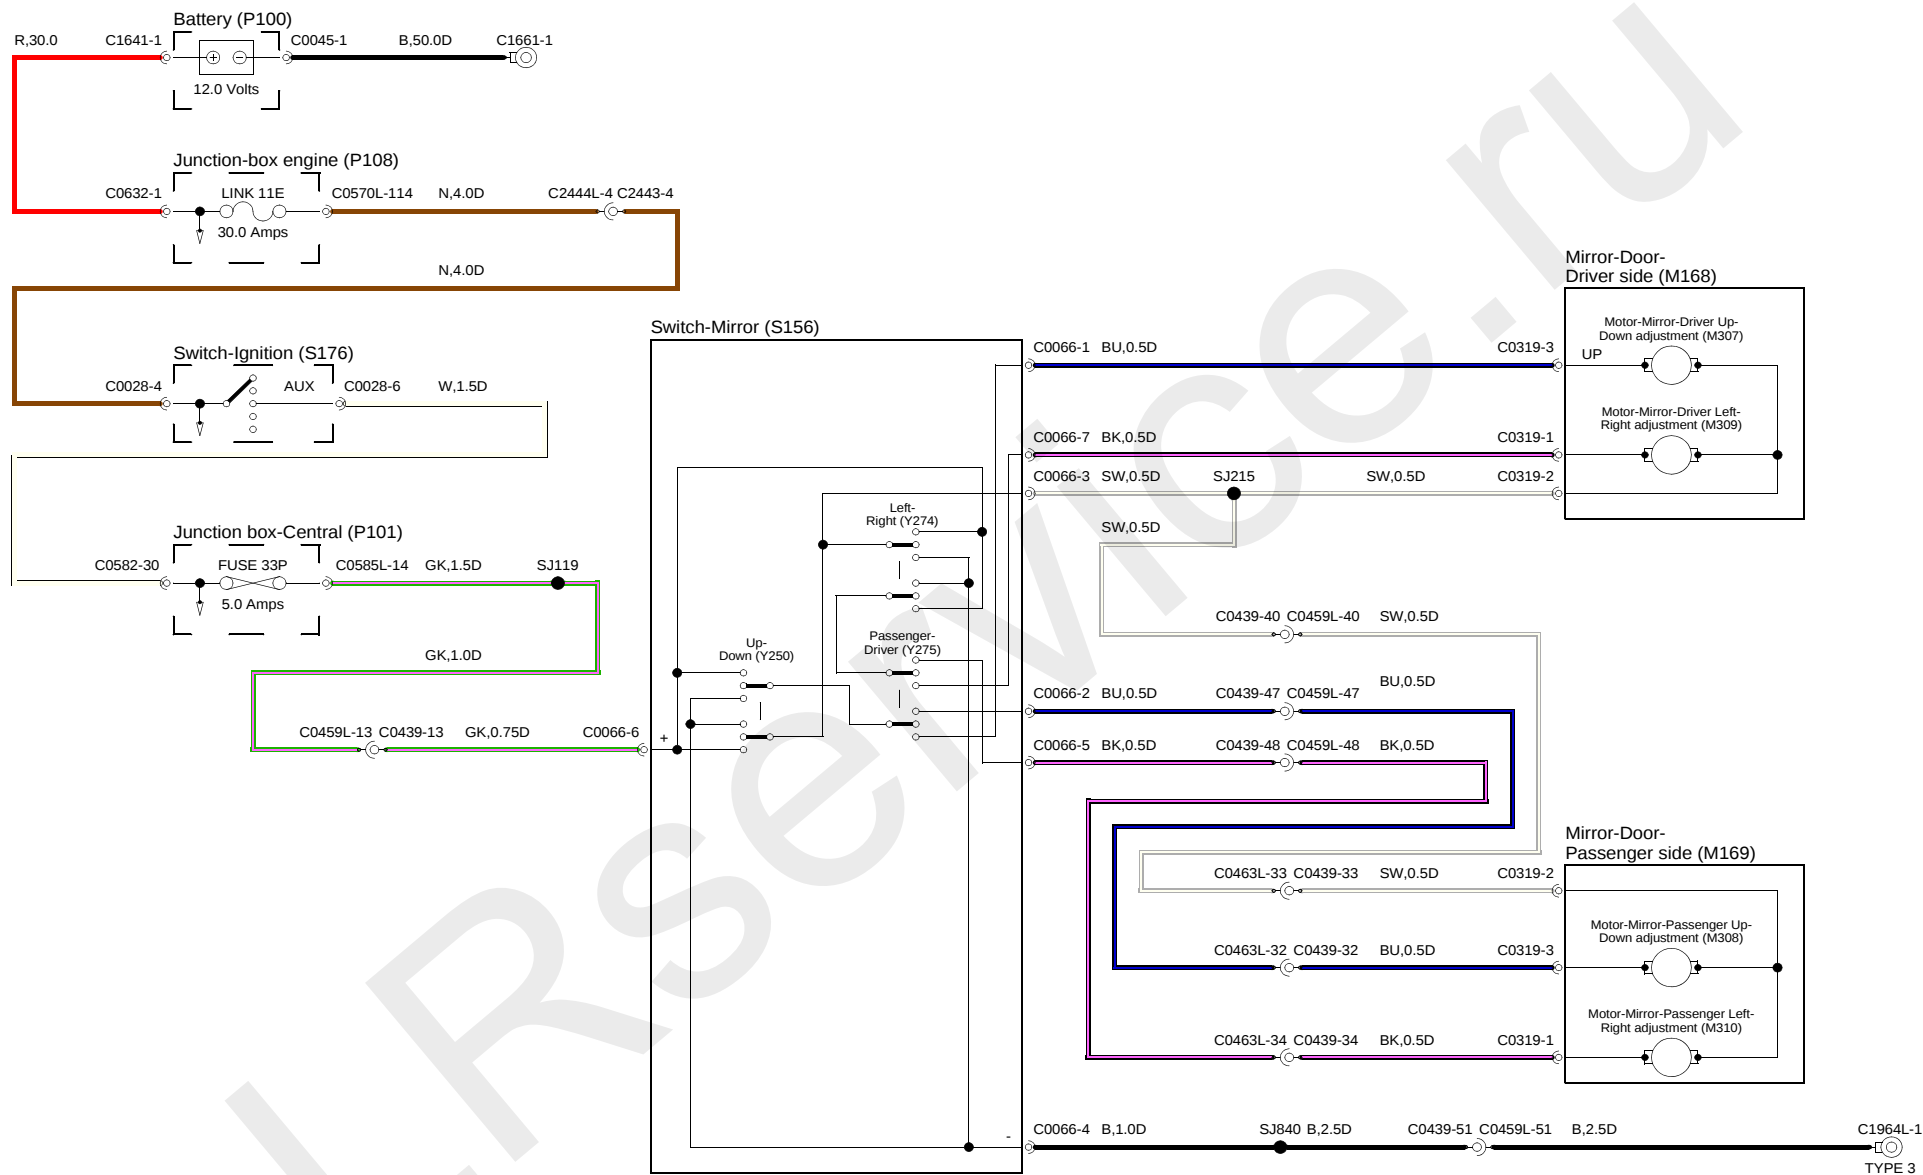


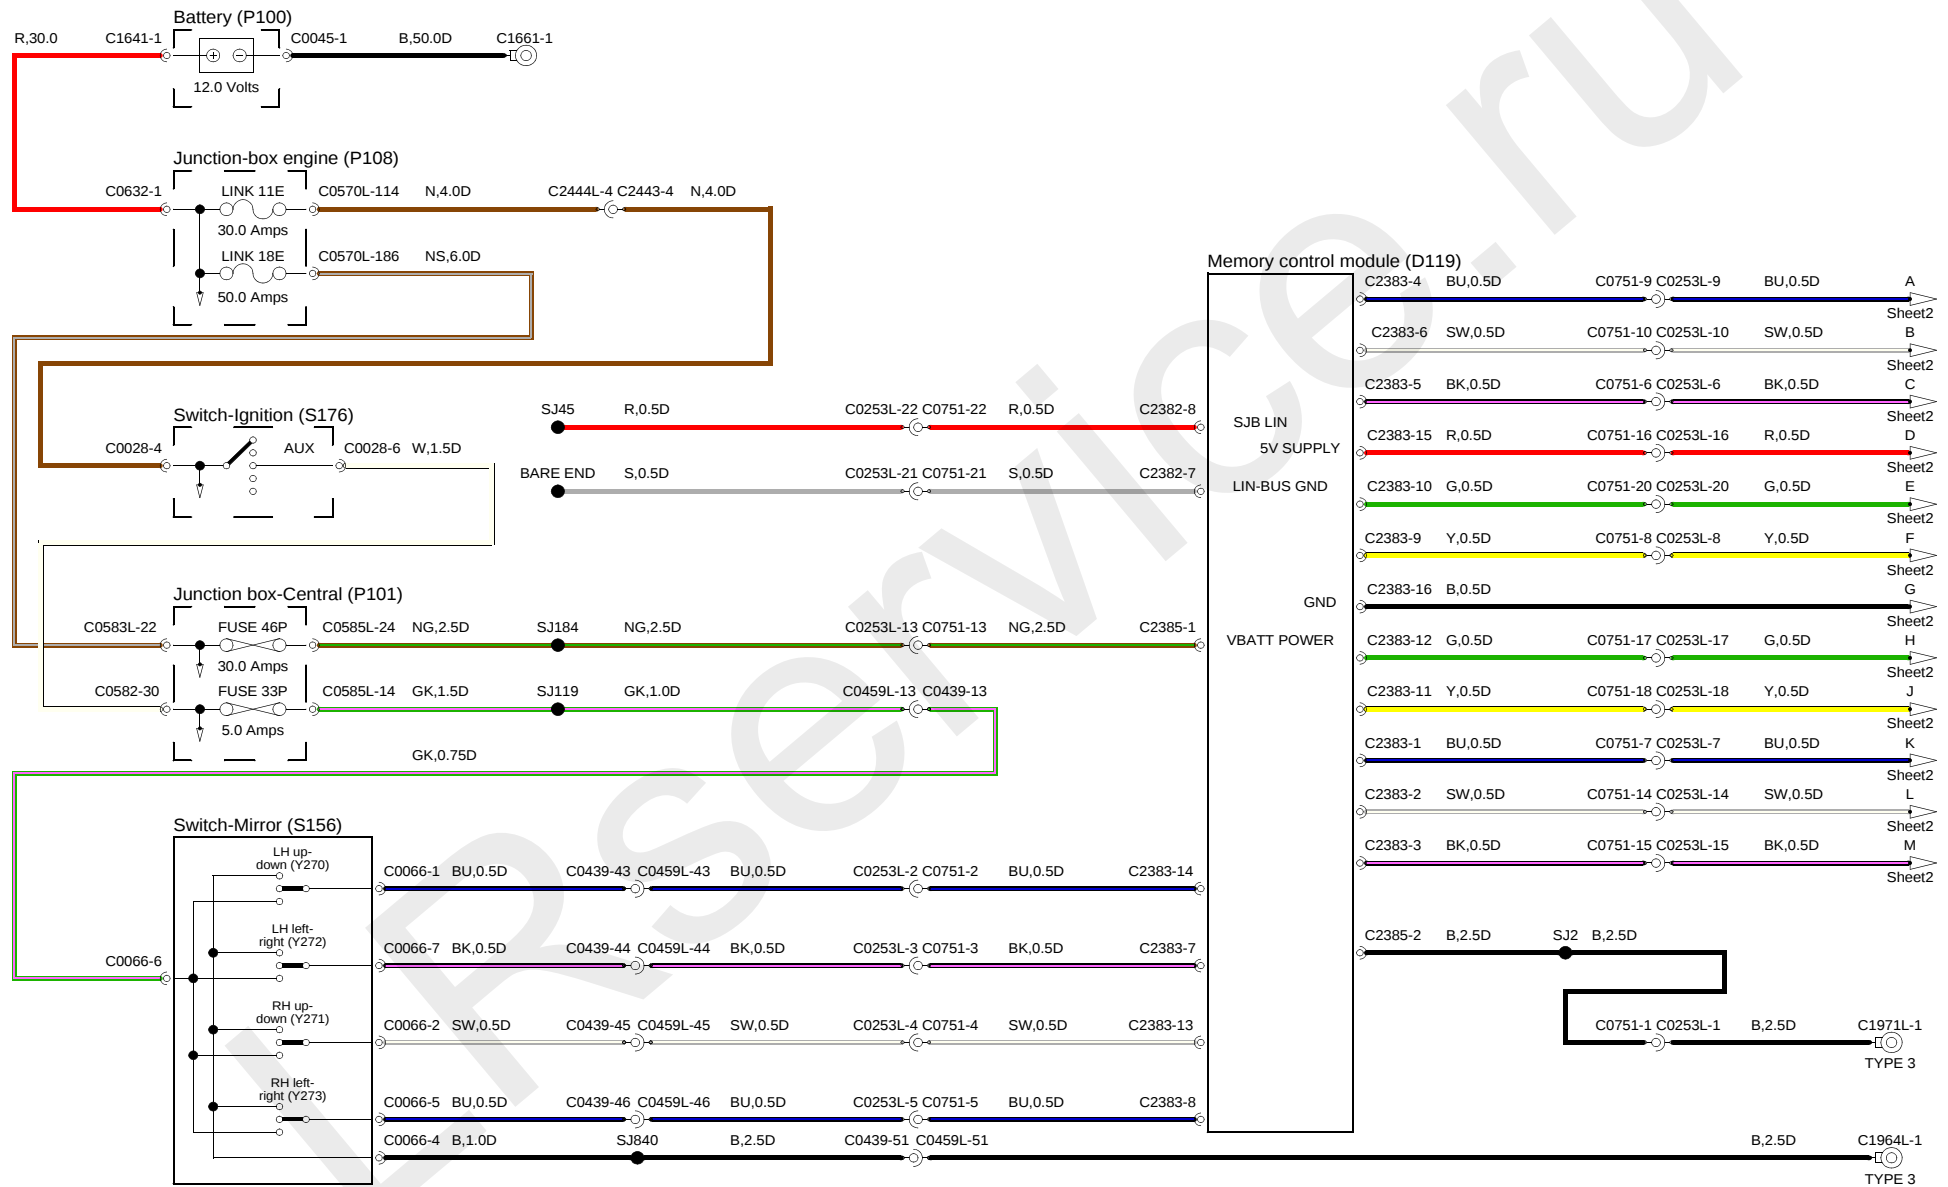


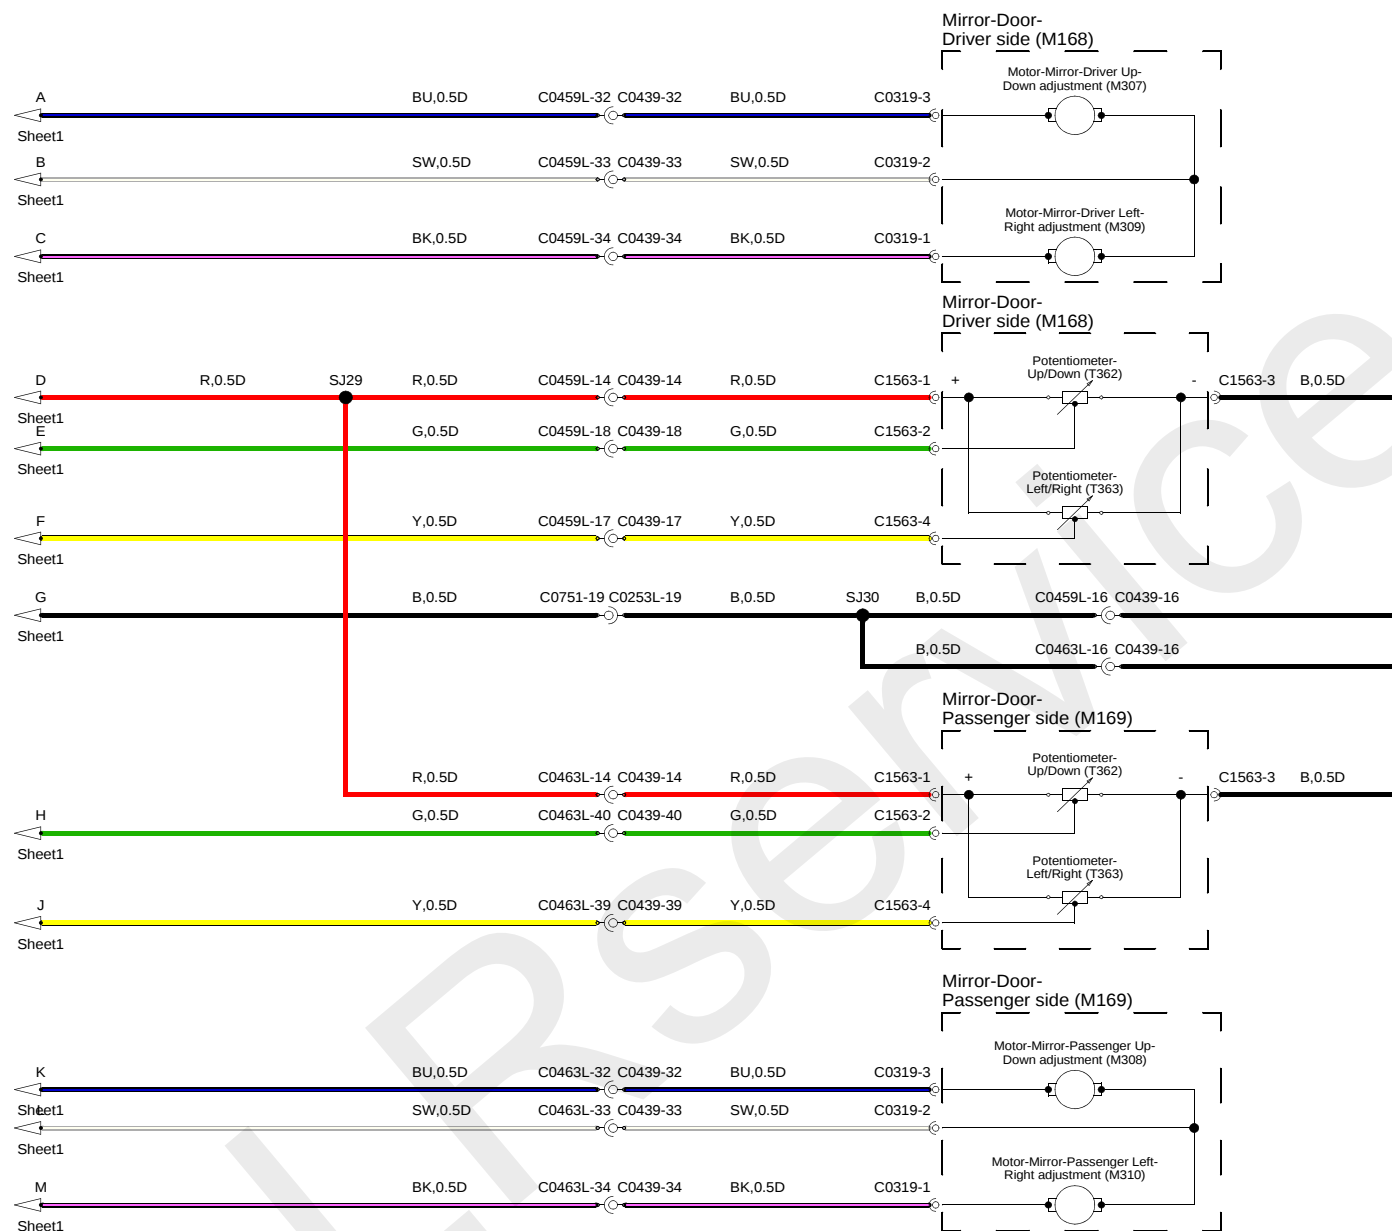



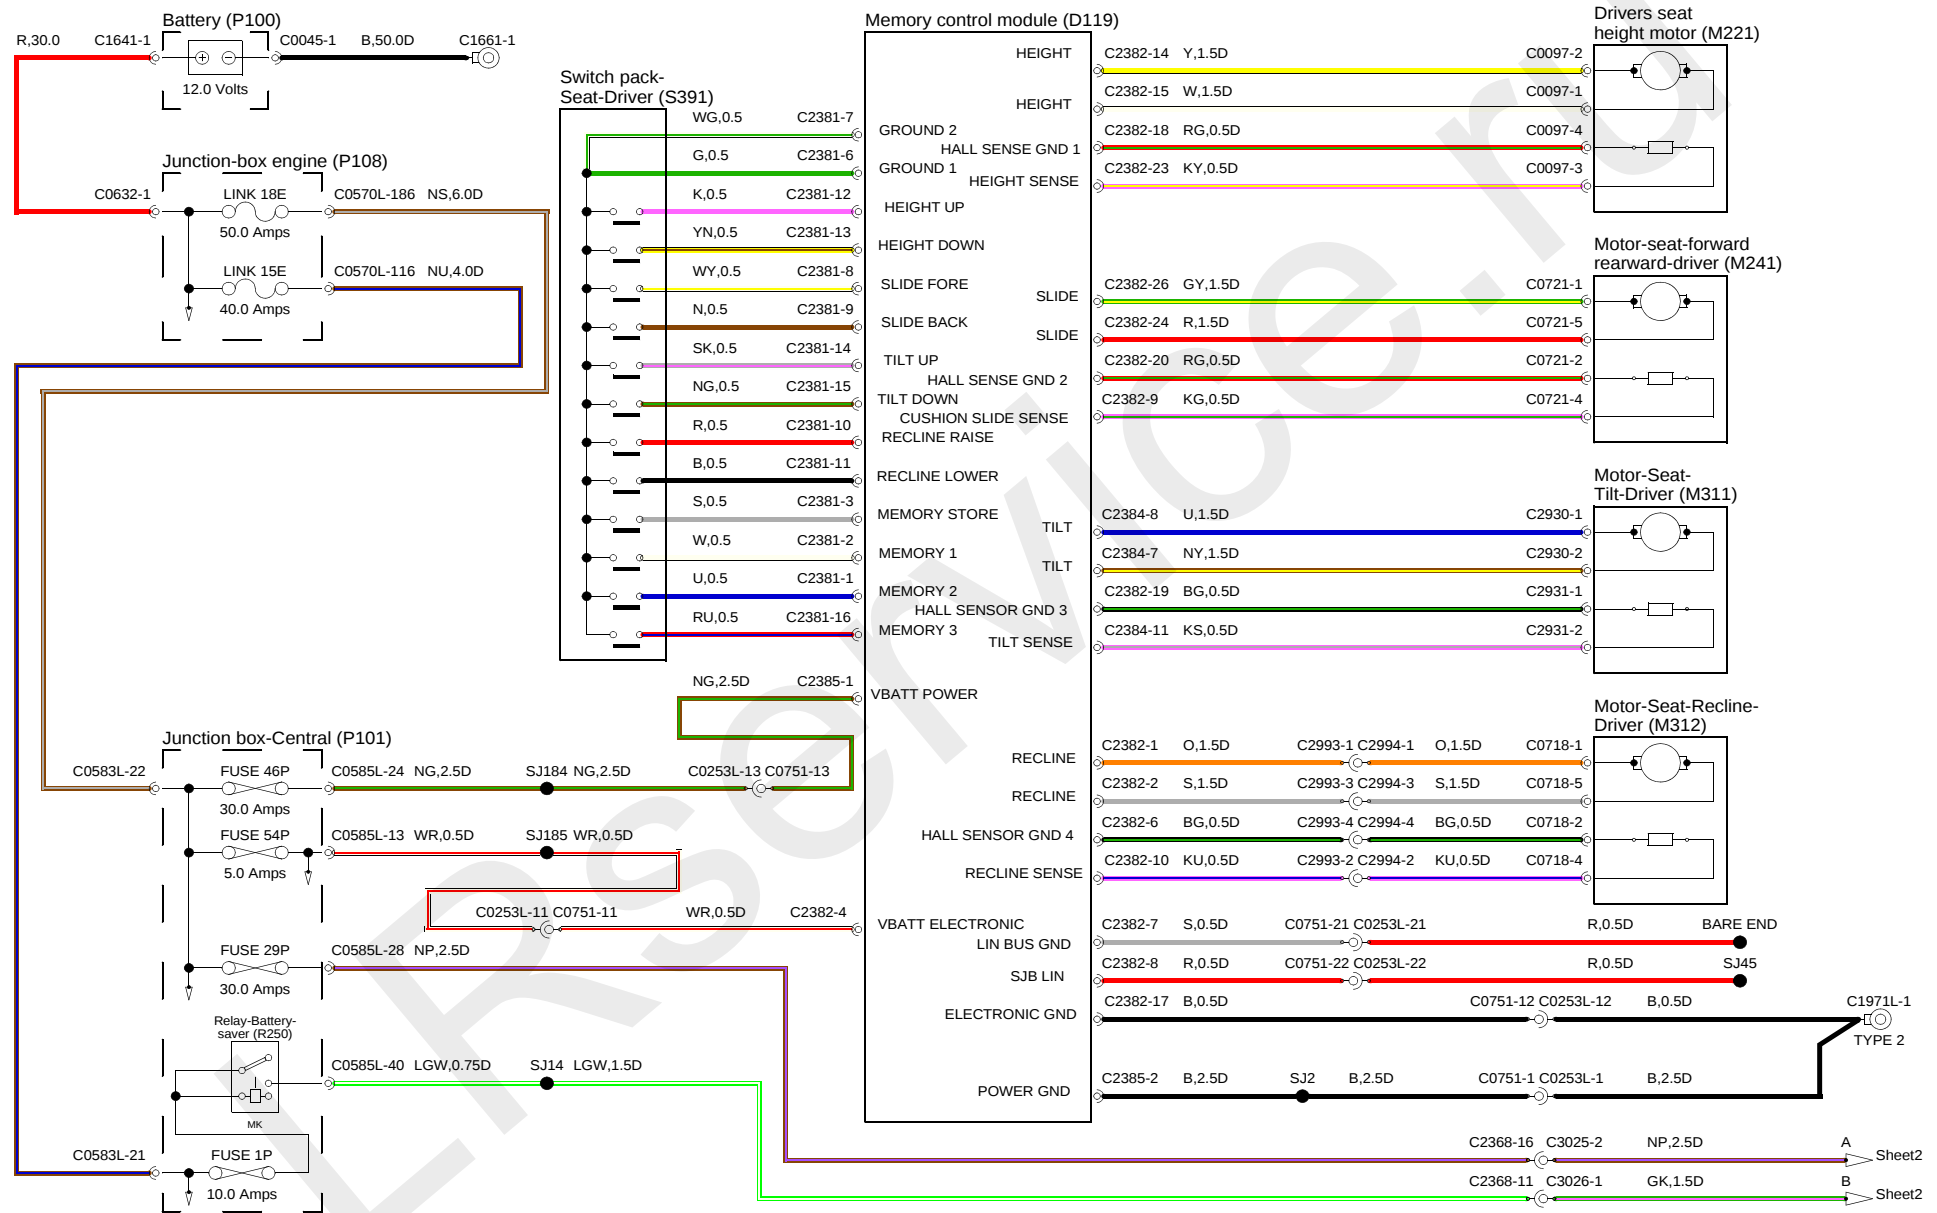


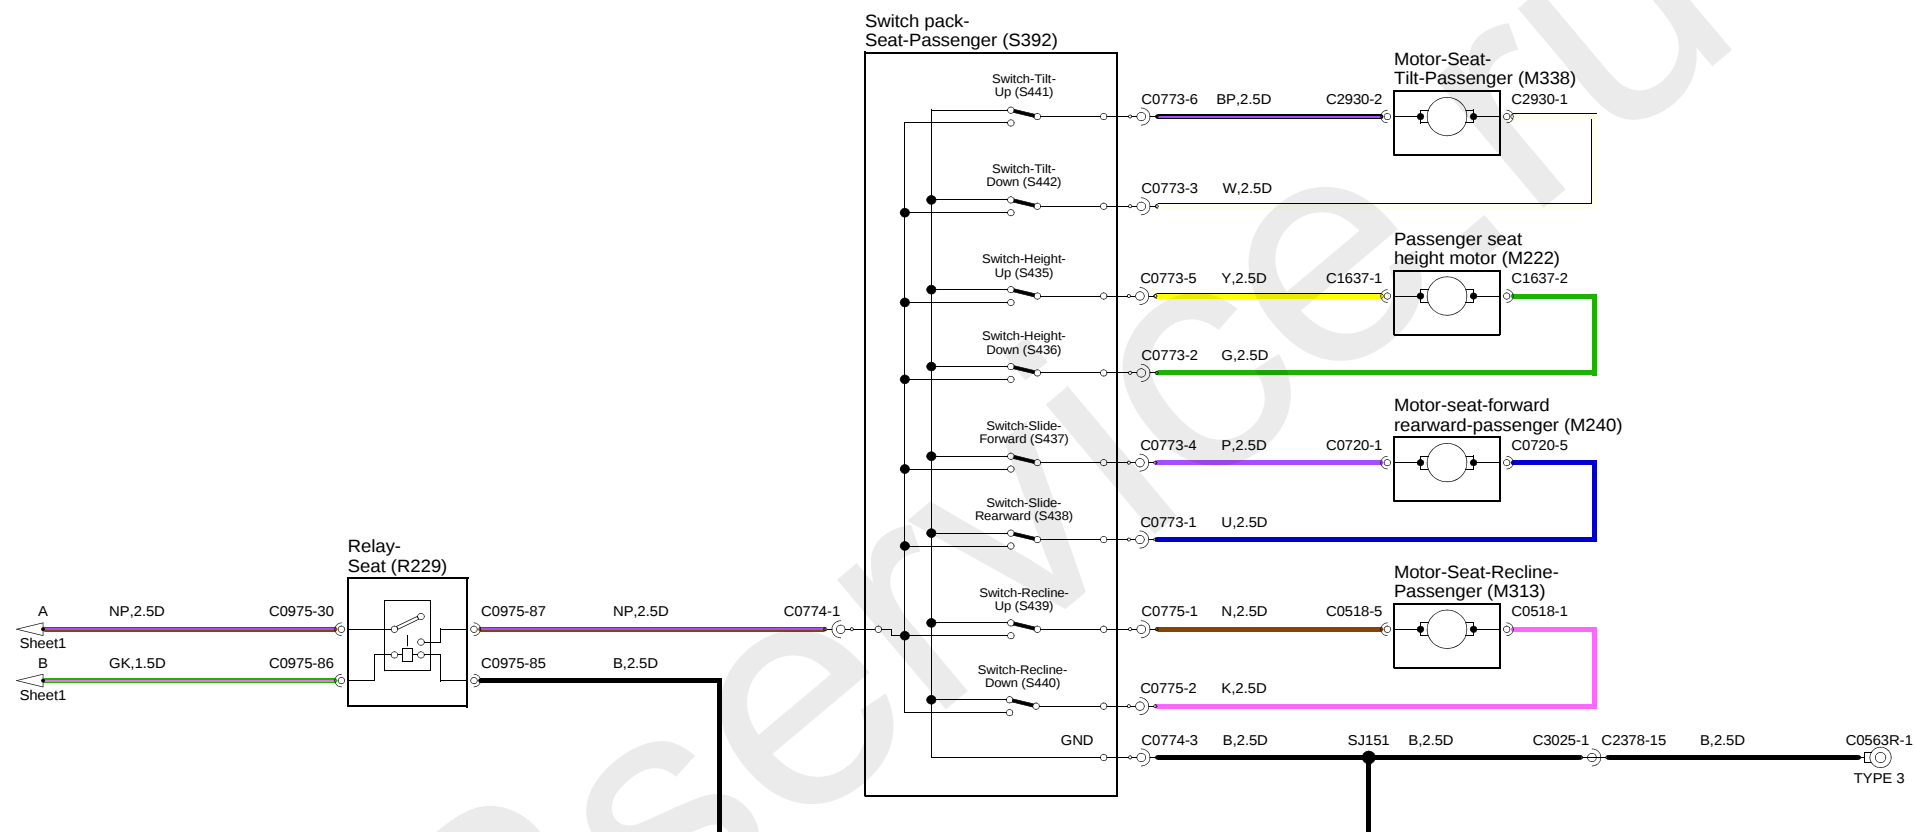


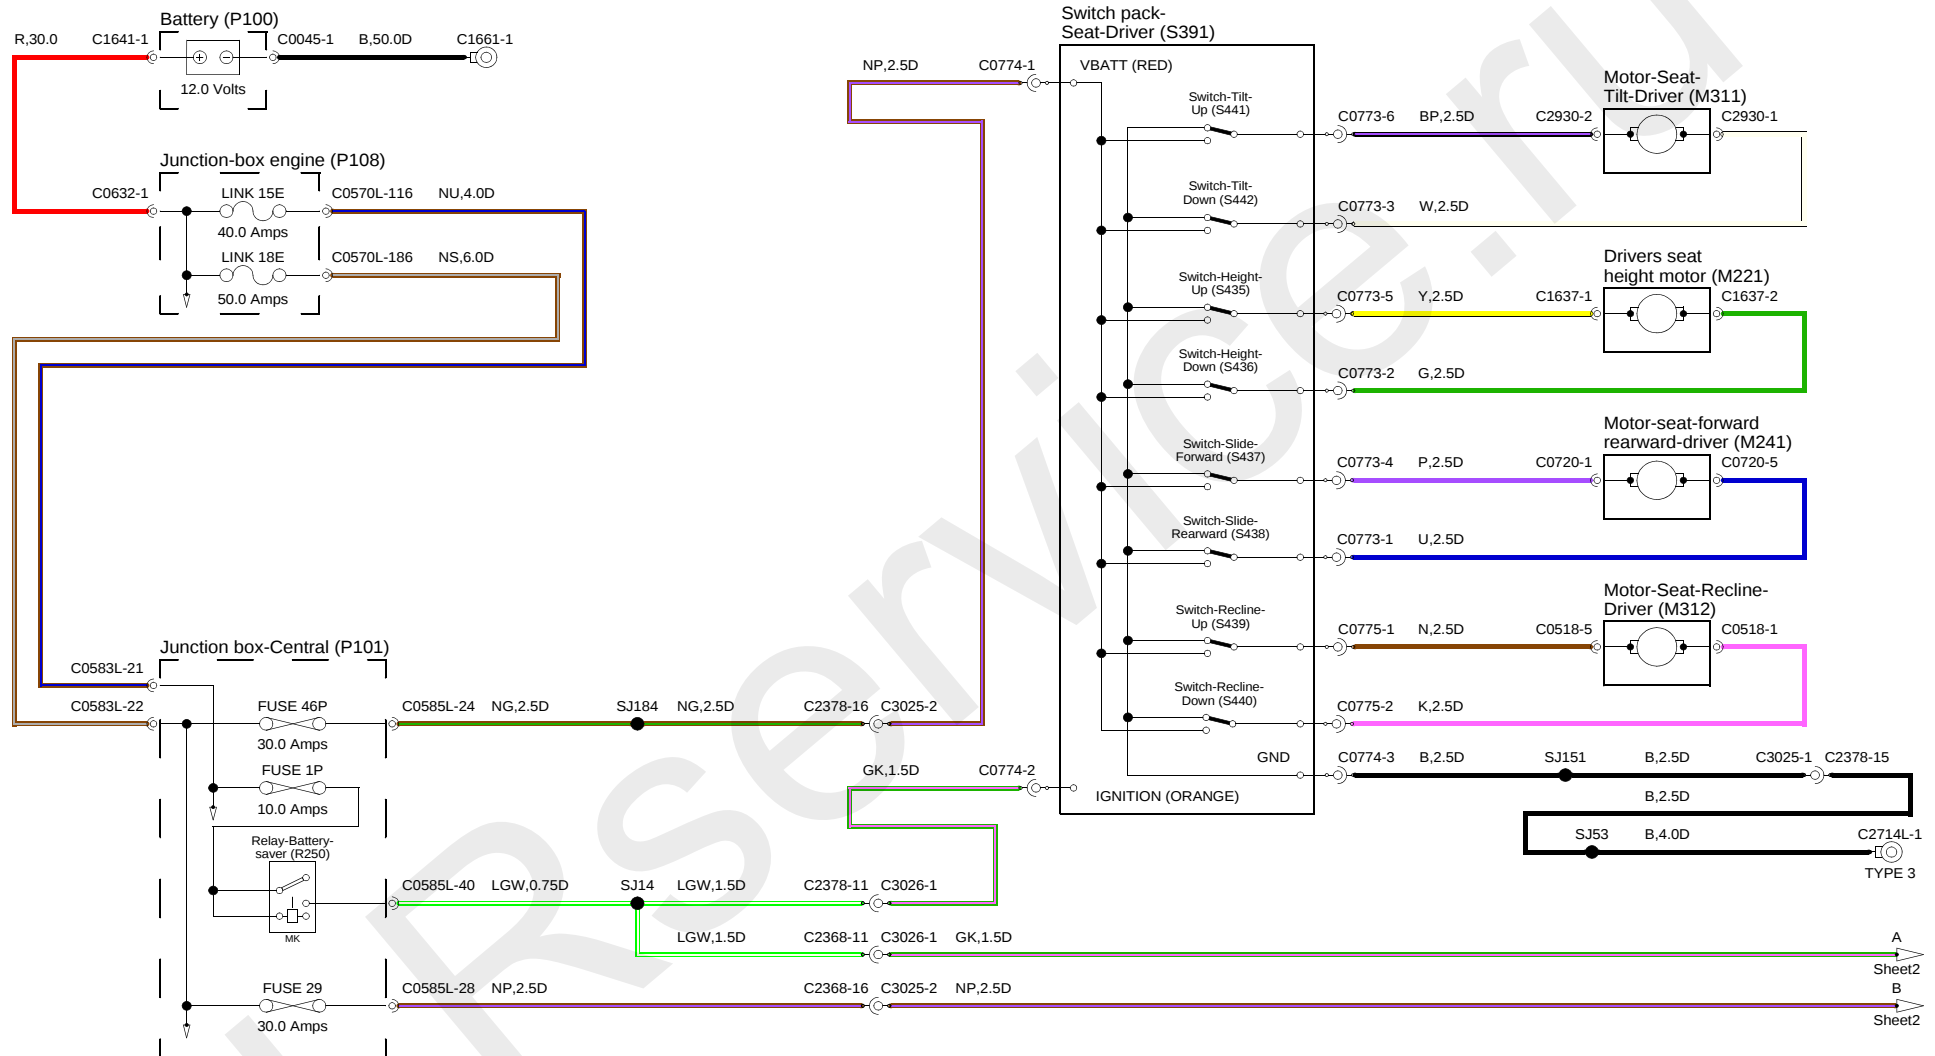


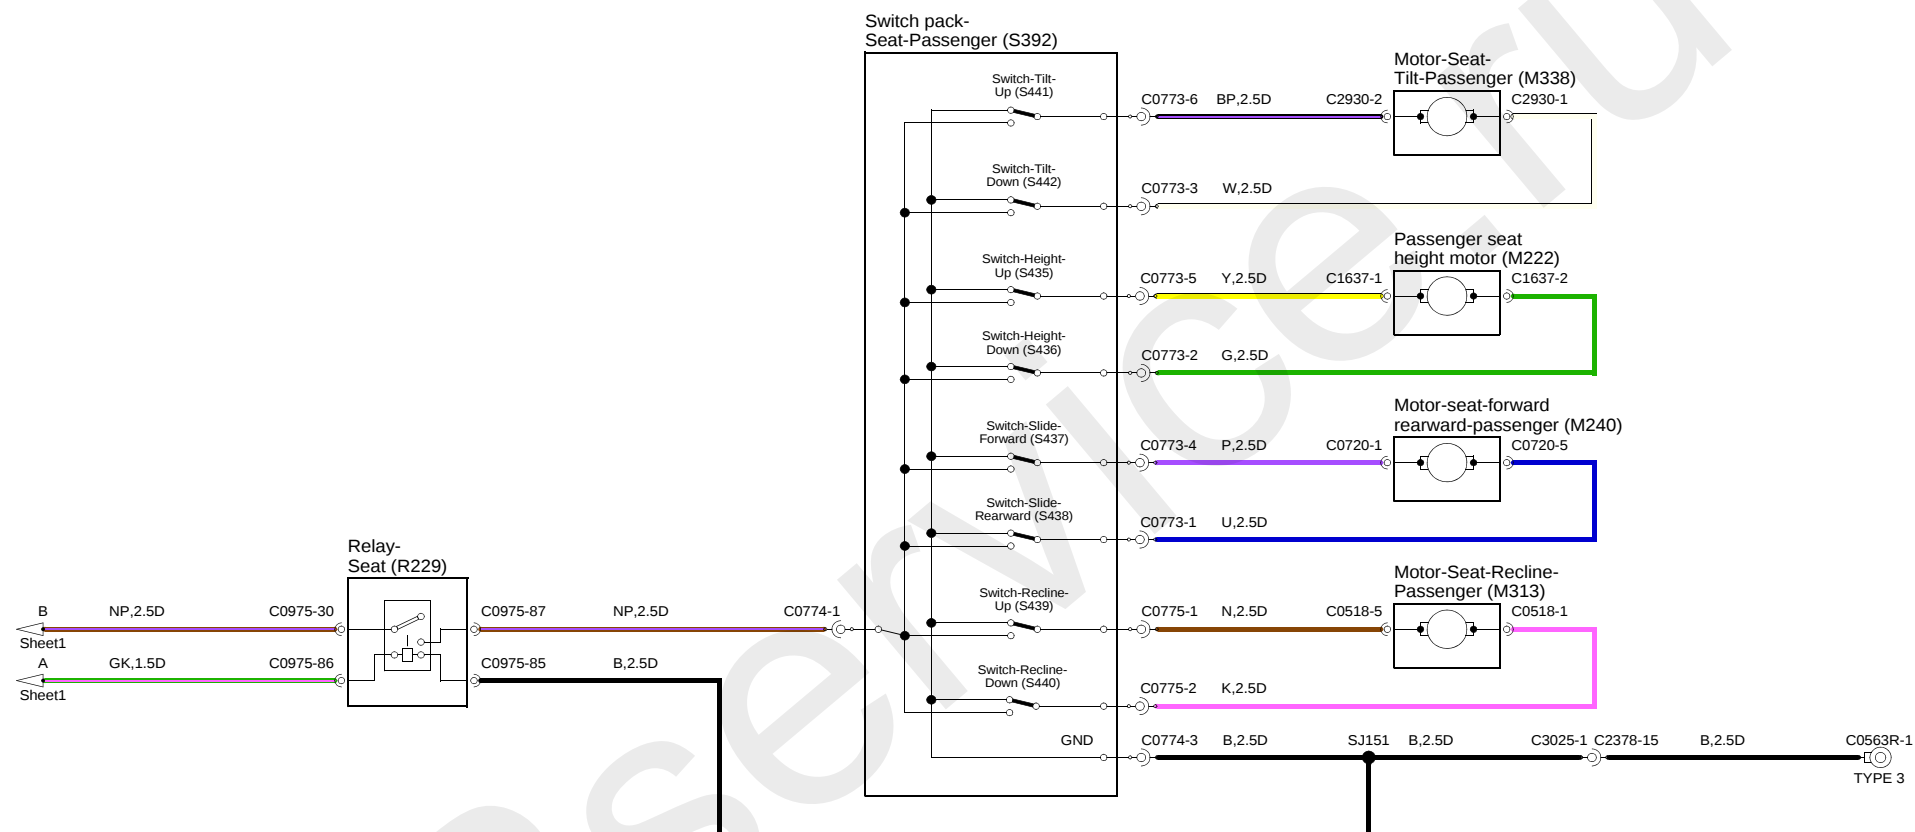


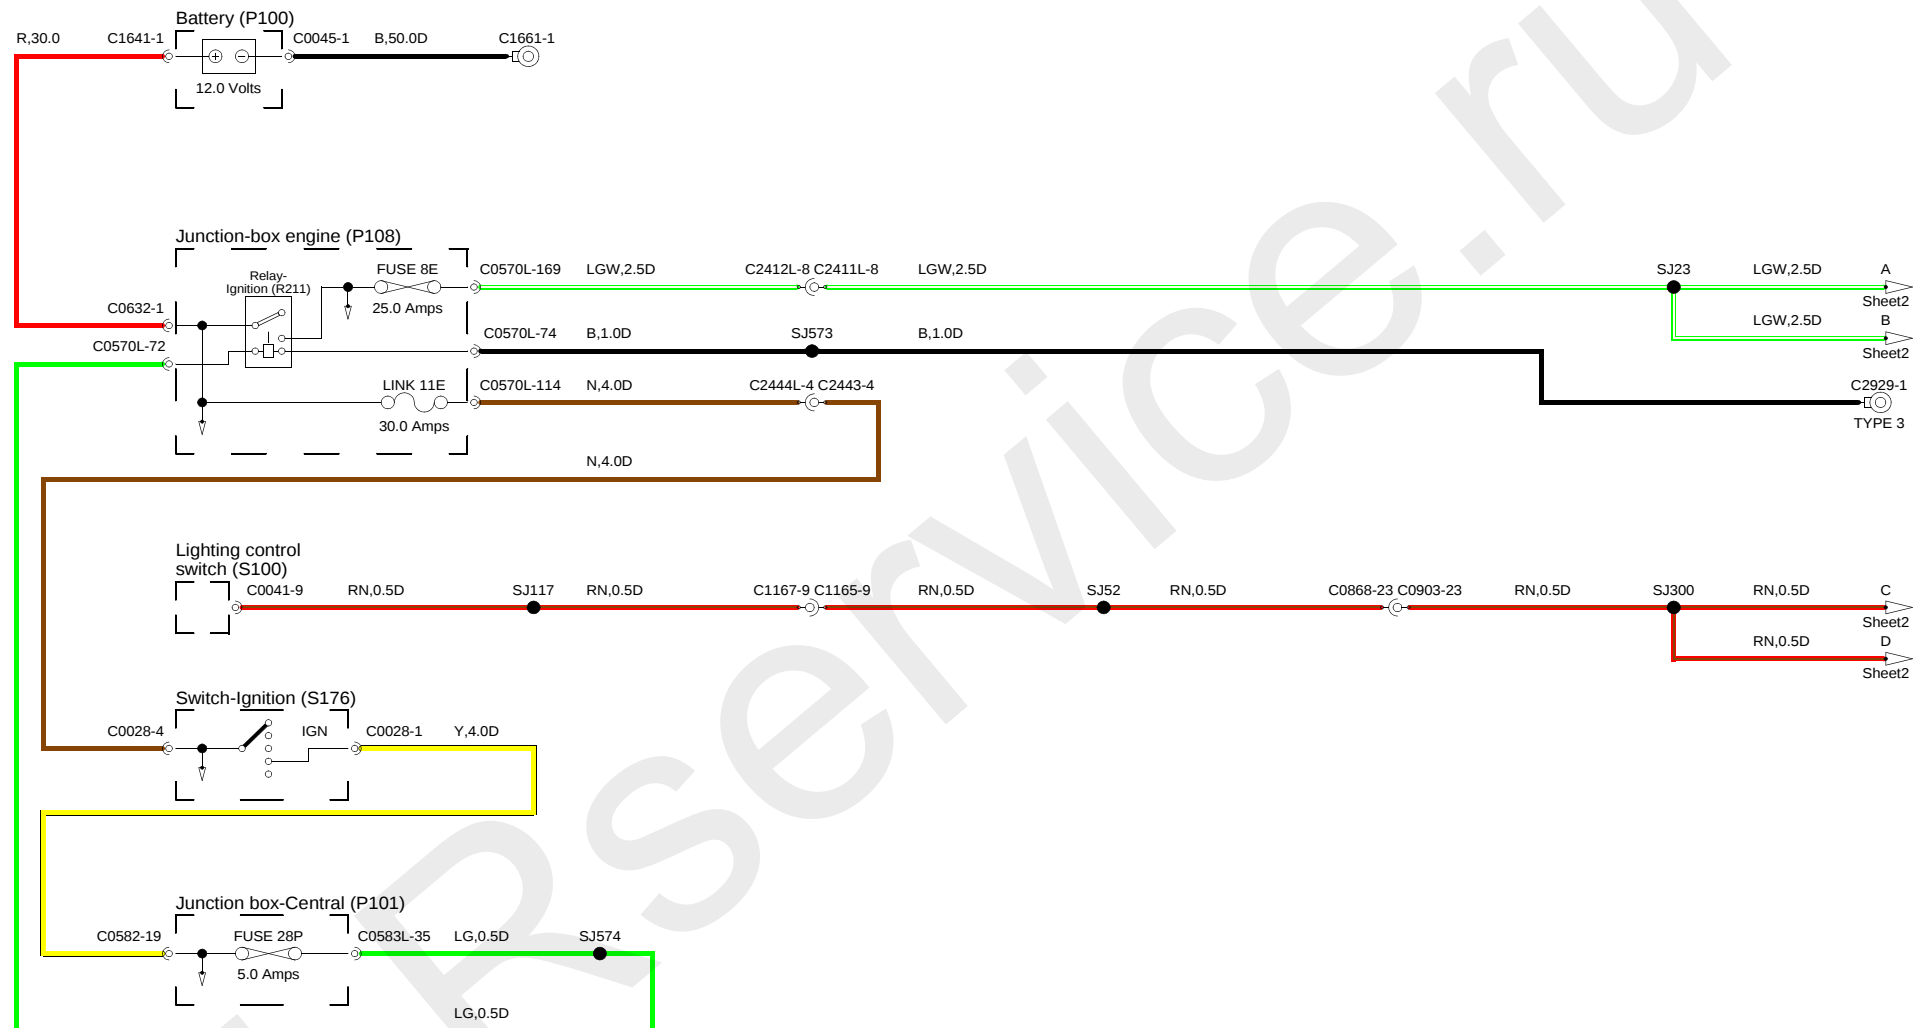


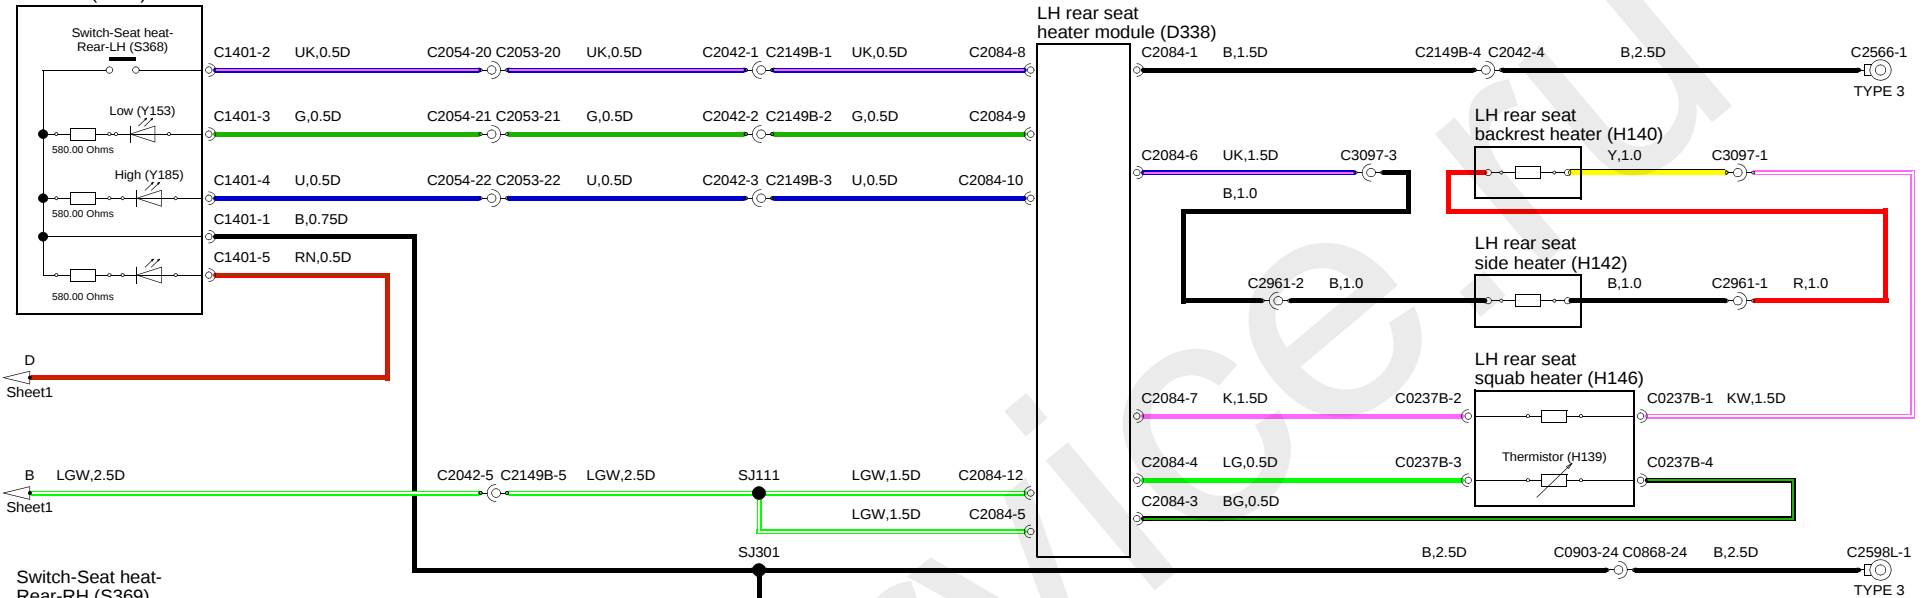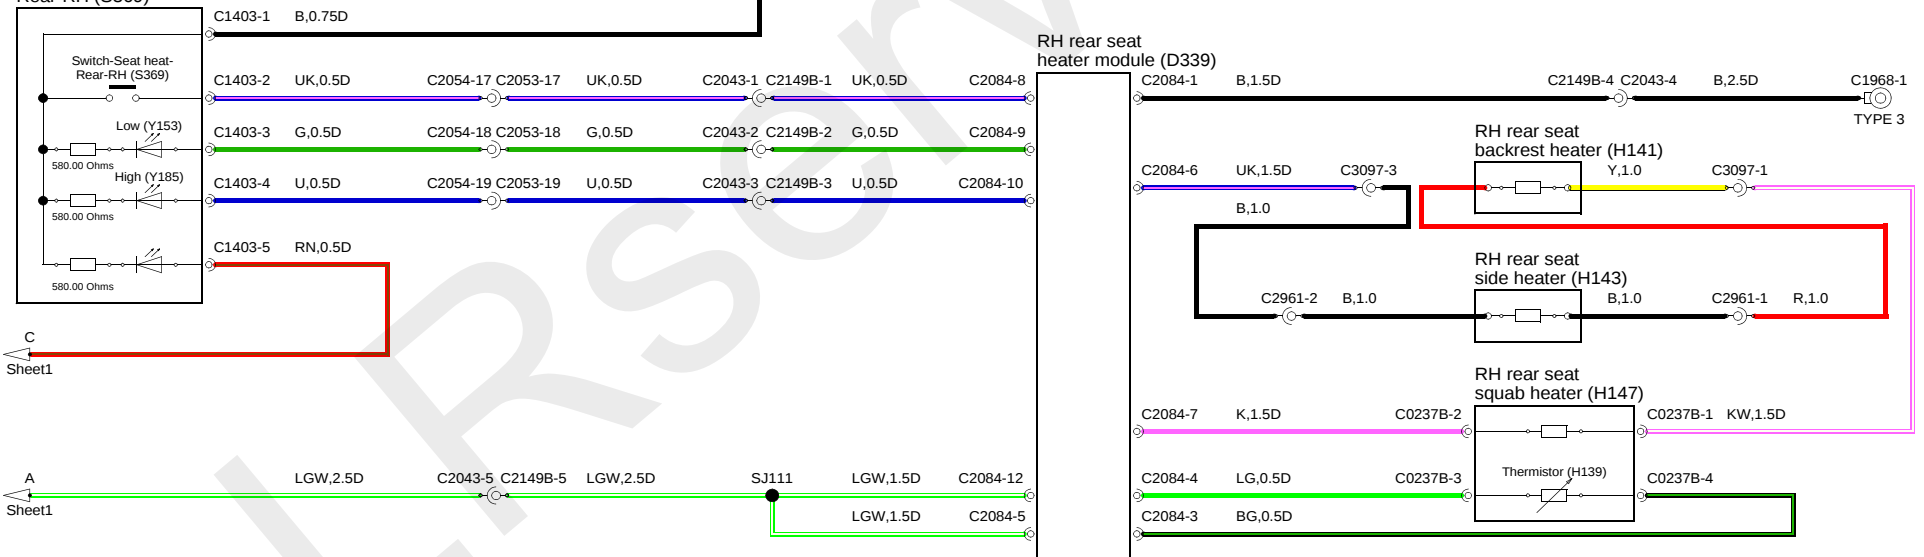
Switch-Seat heat-
Rear-LH (S368)Switch-Seat heat-
Rear-RH (S369)

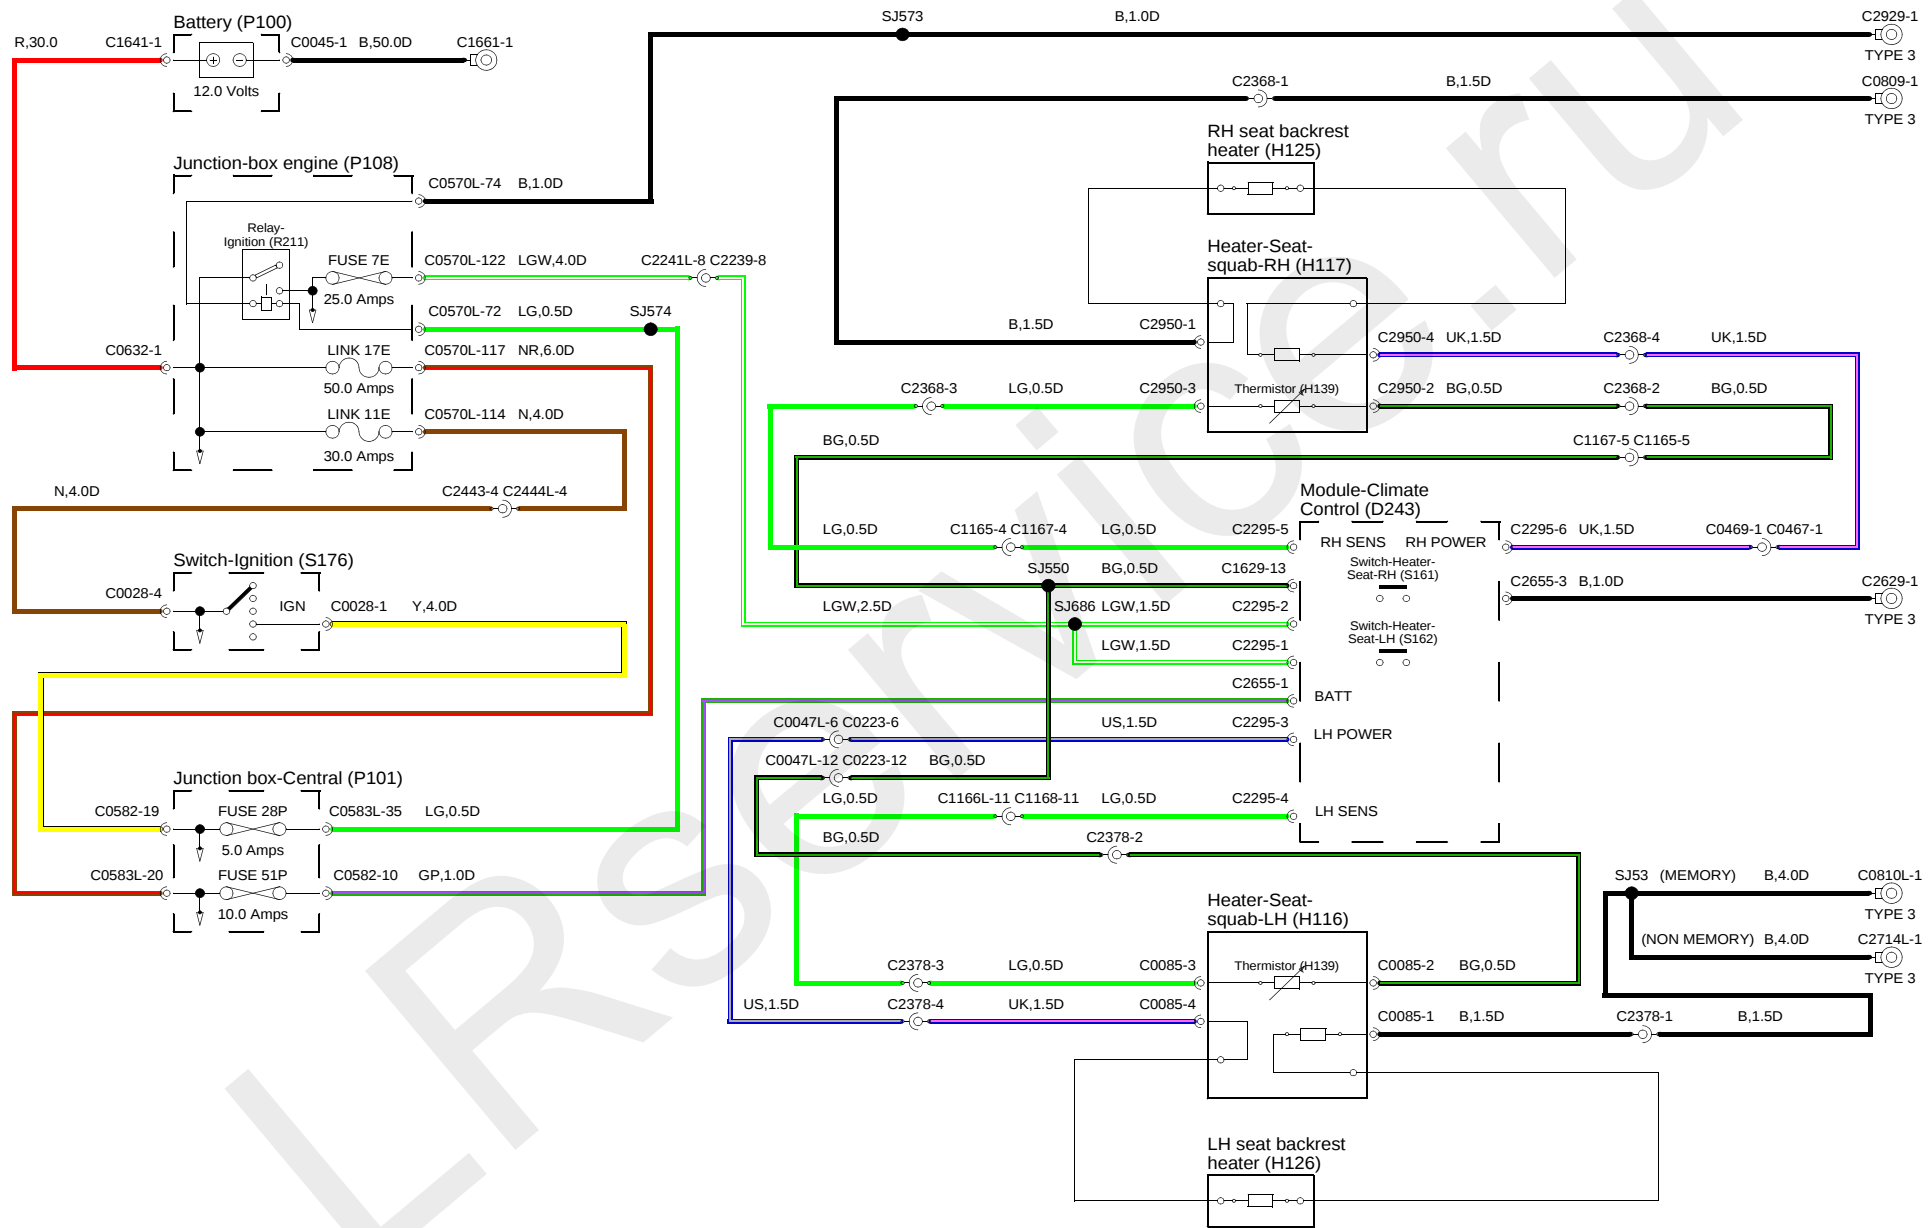


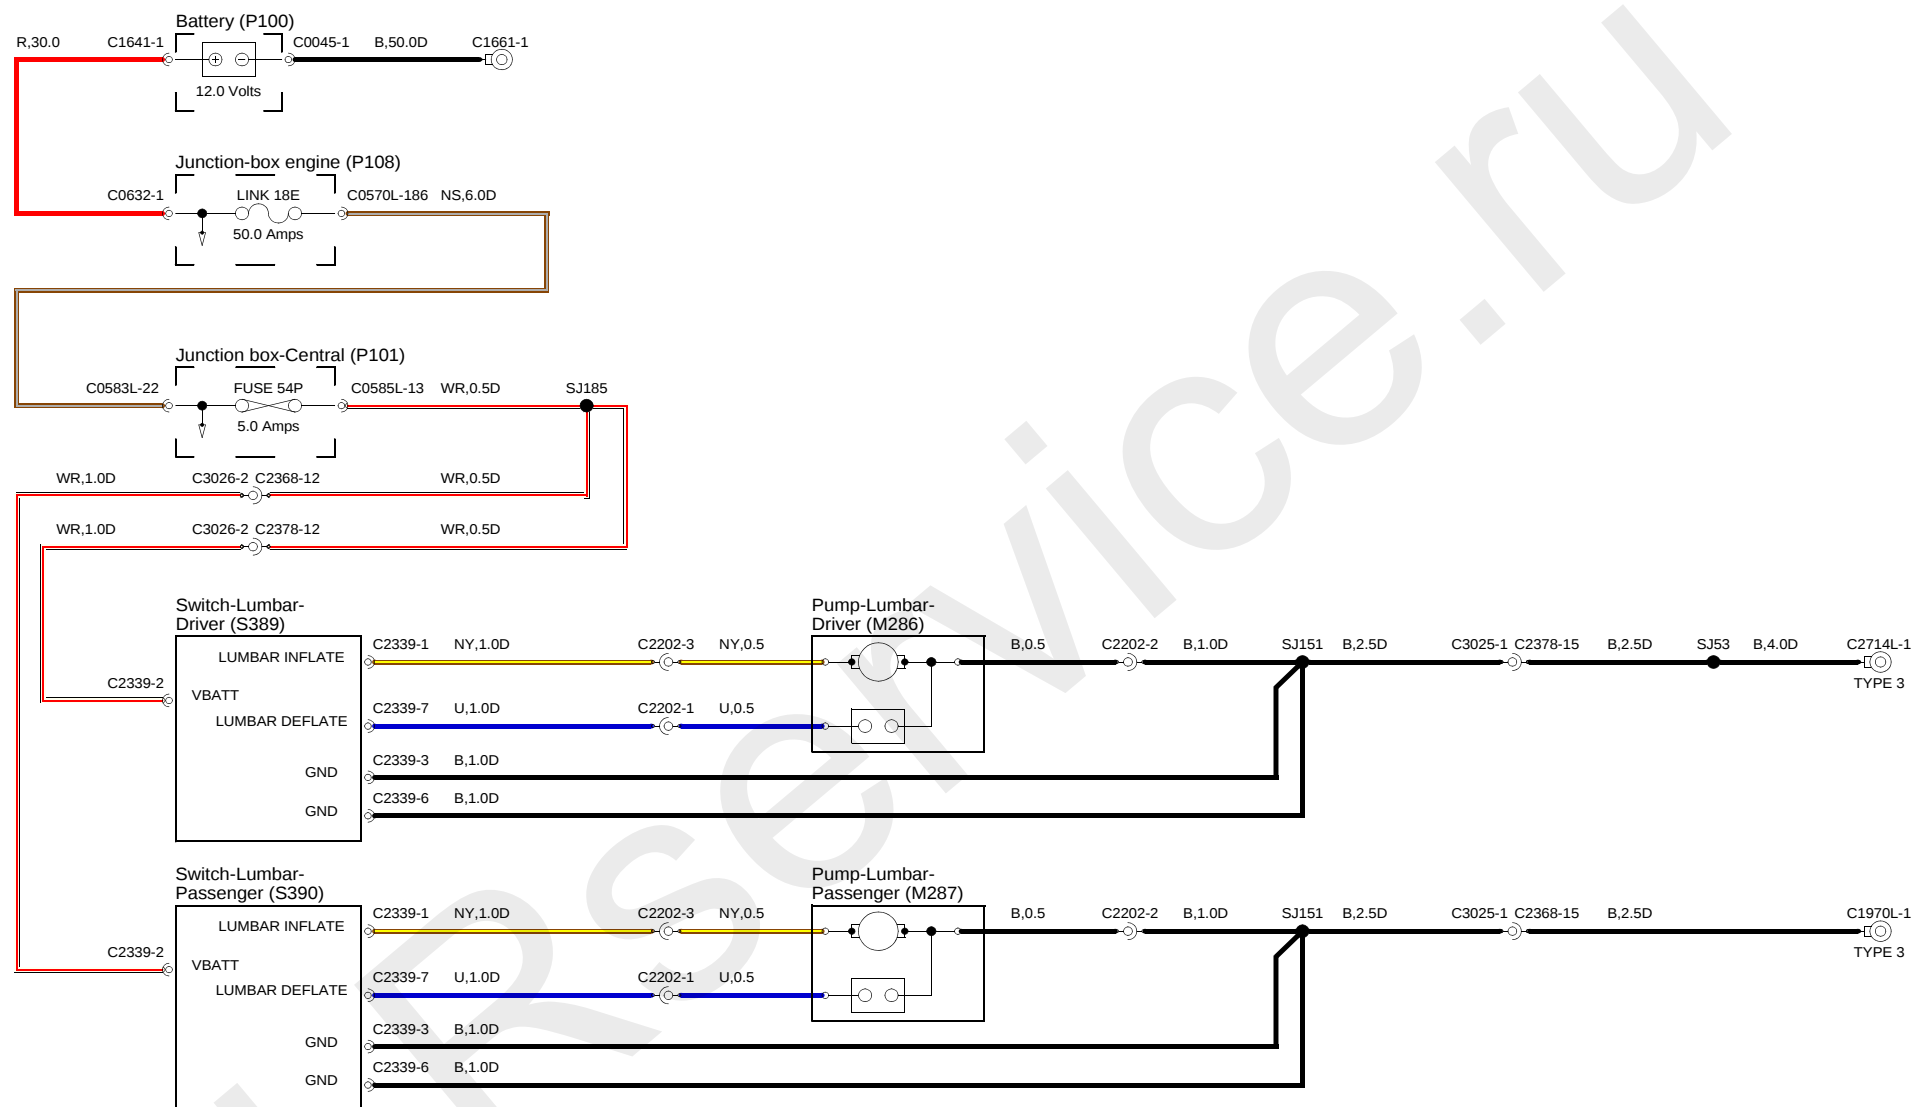

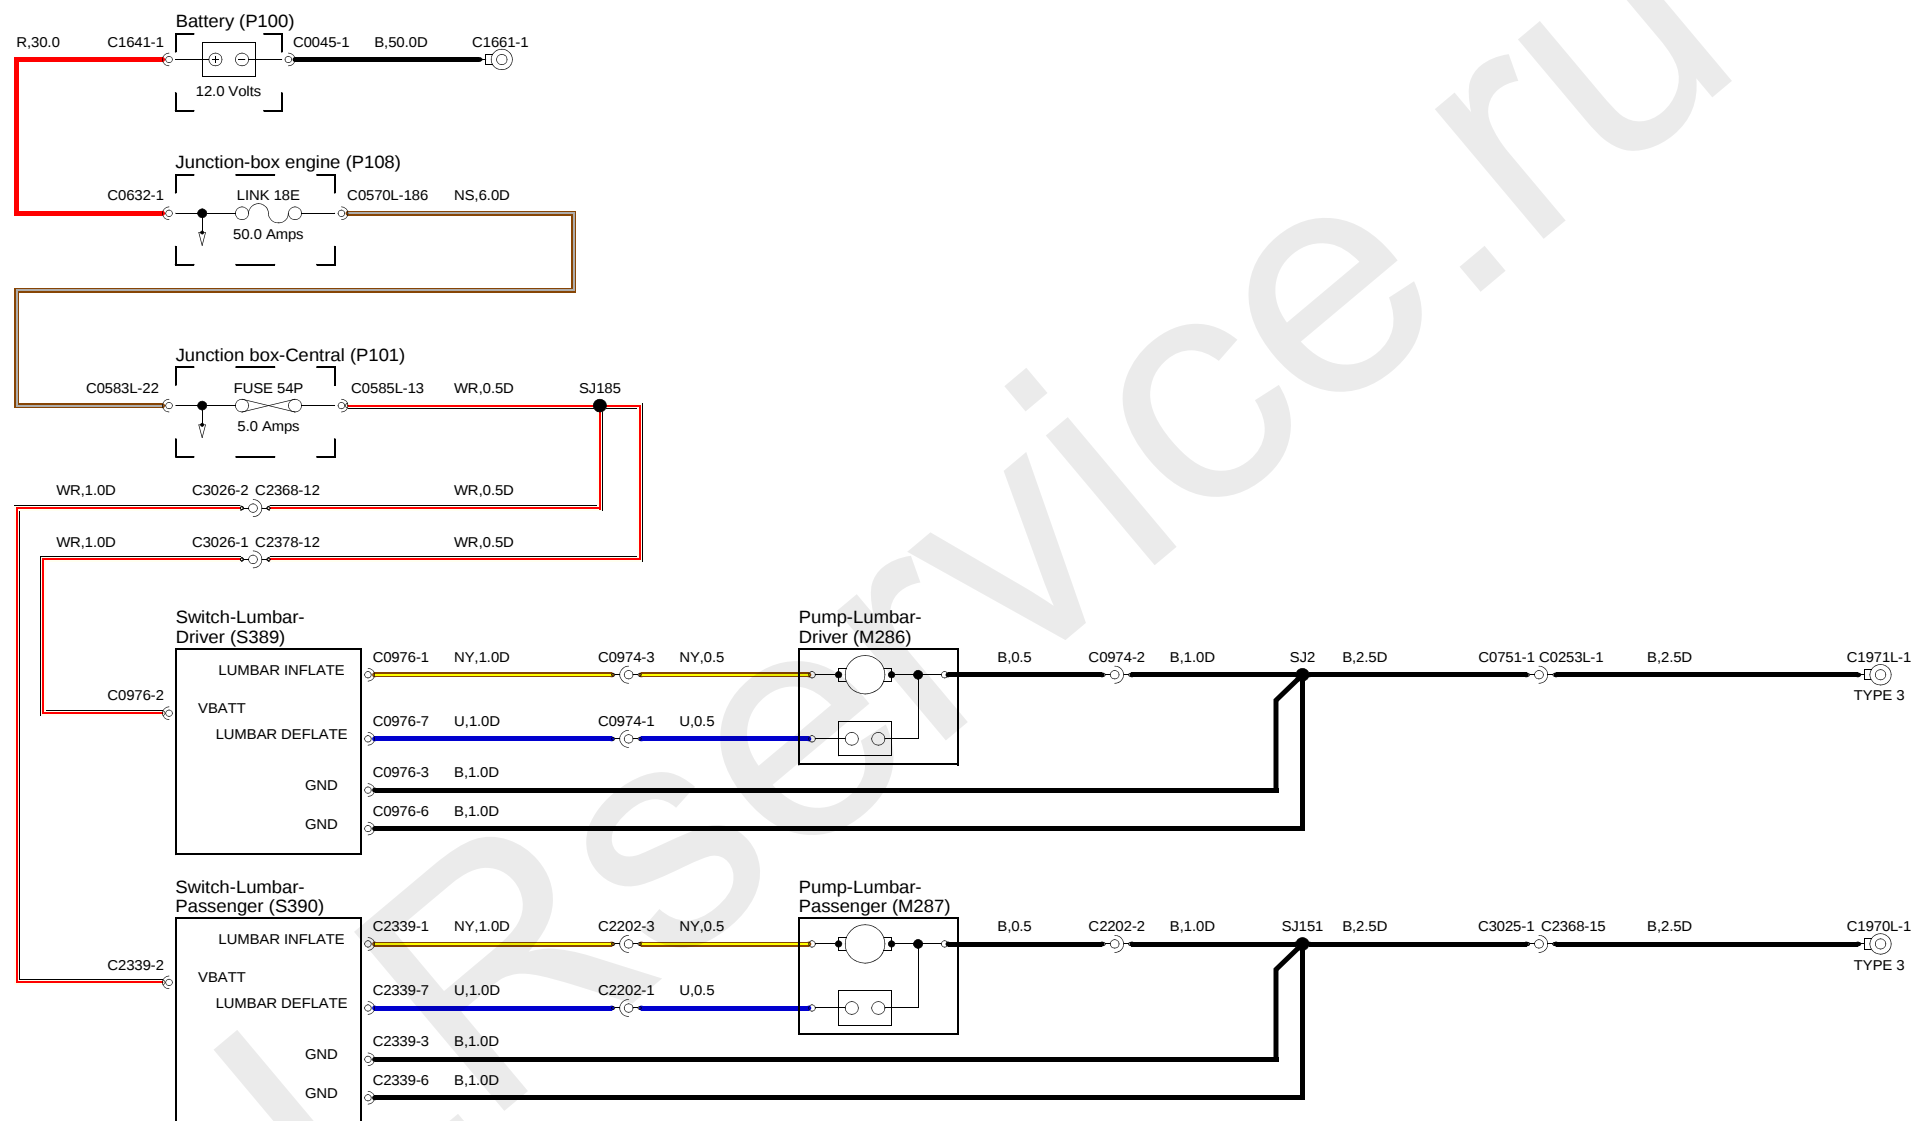


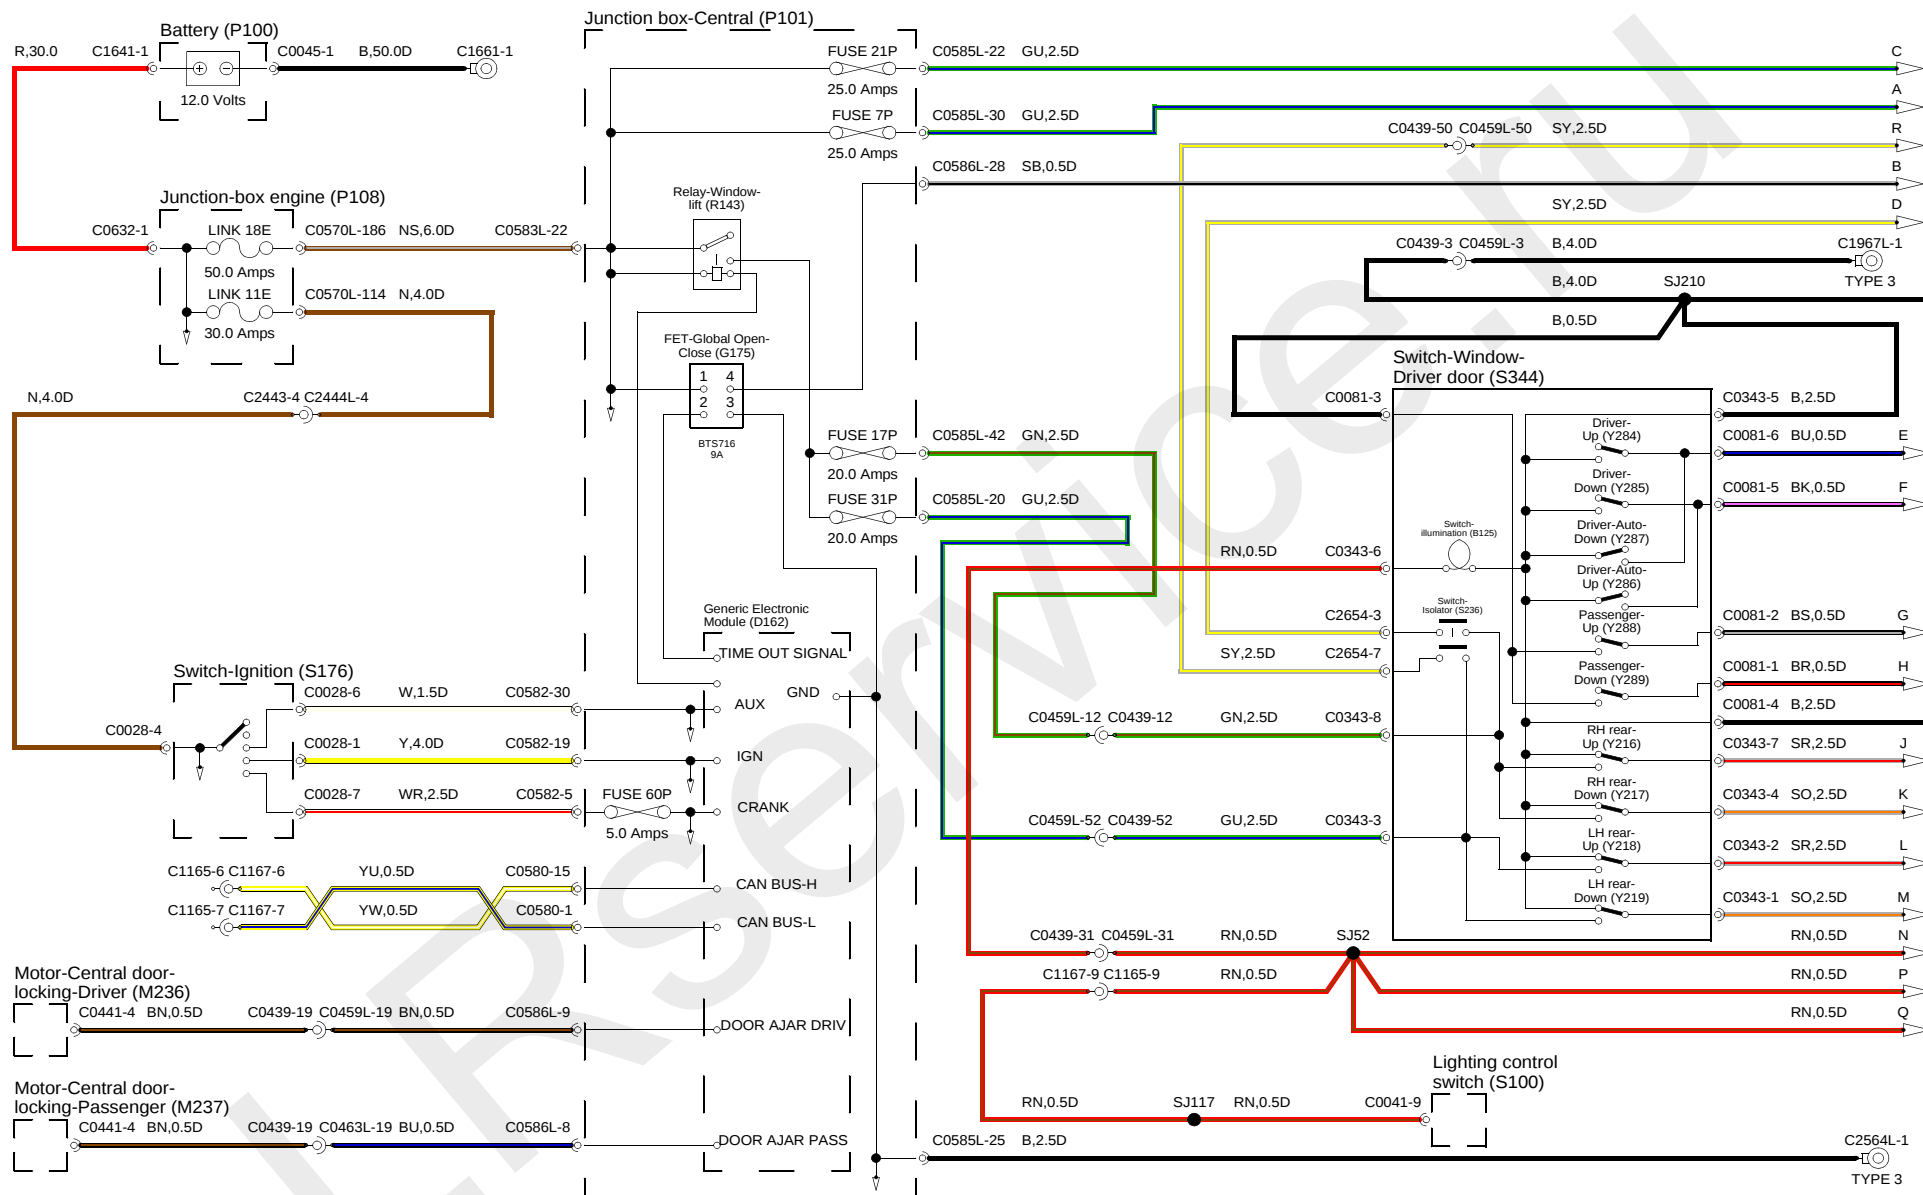


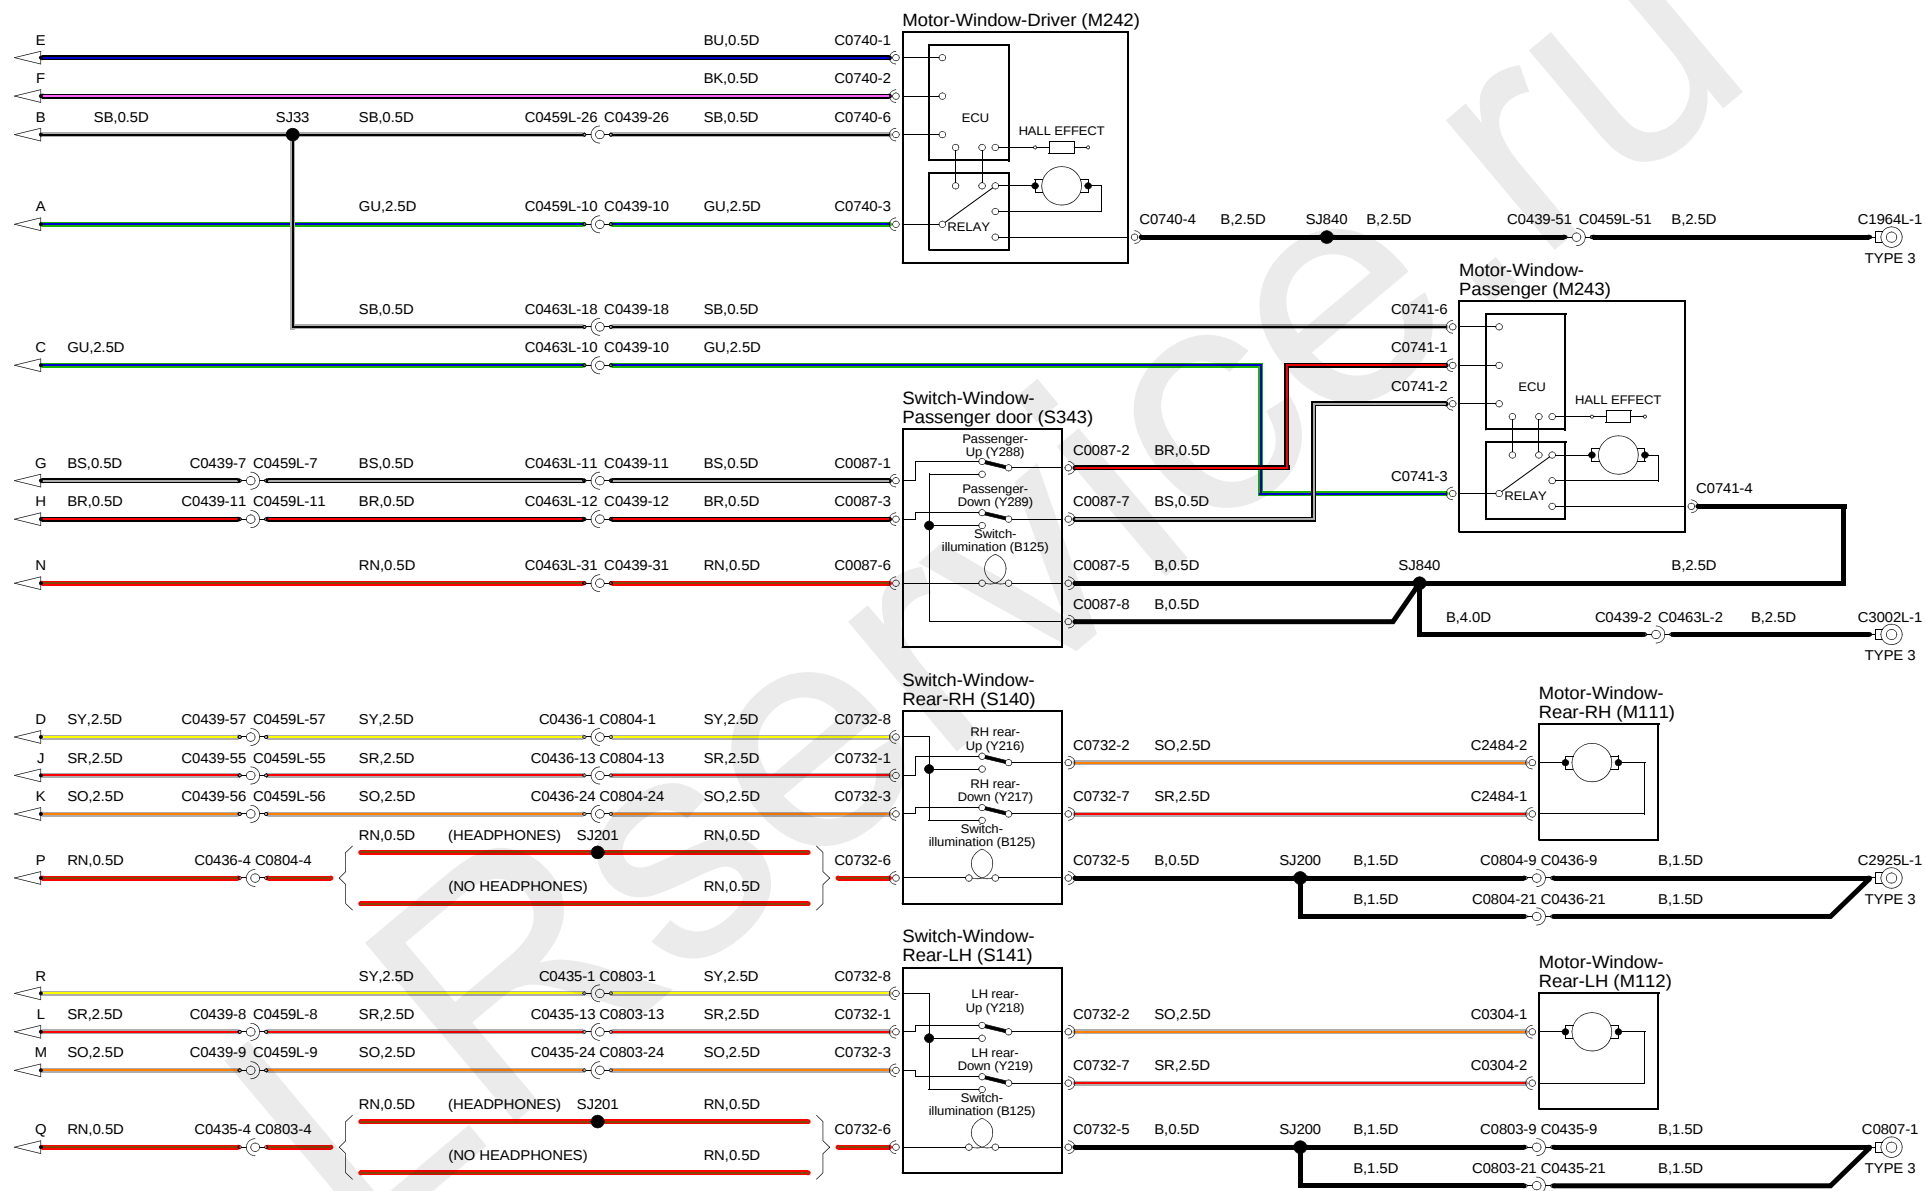


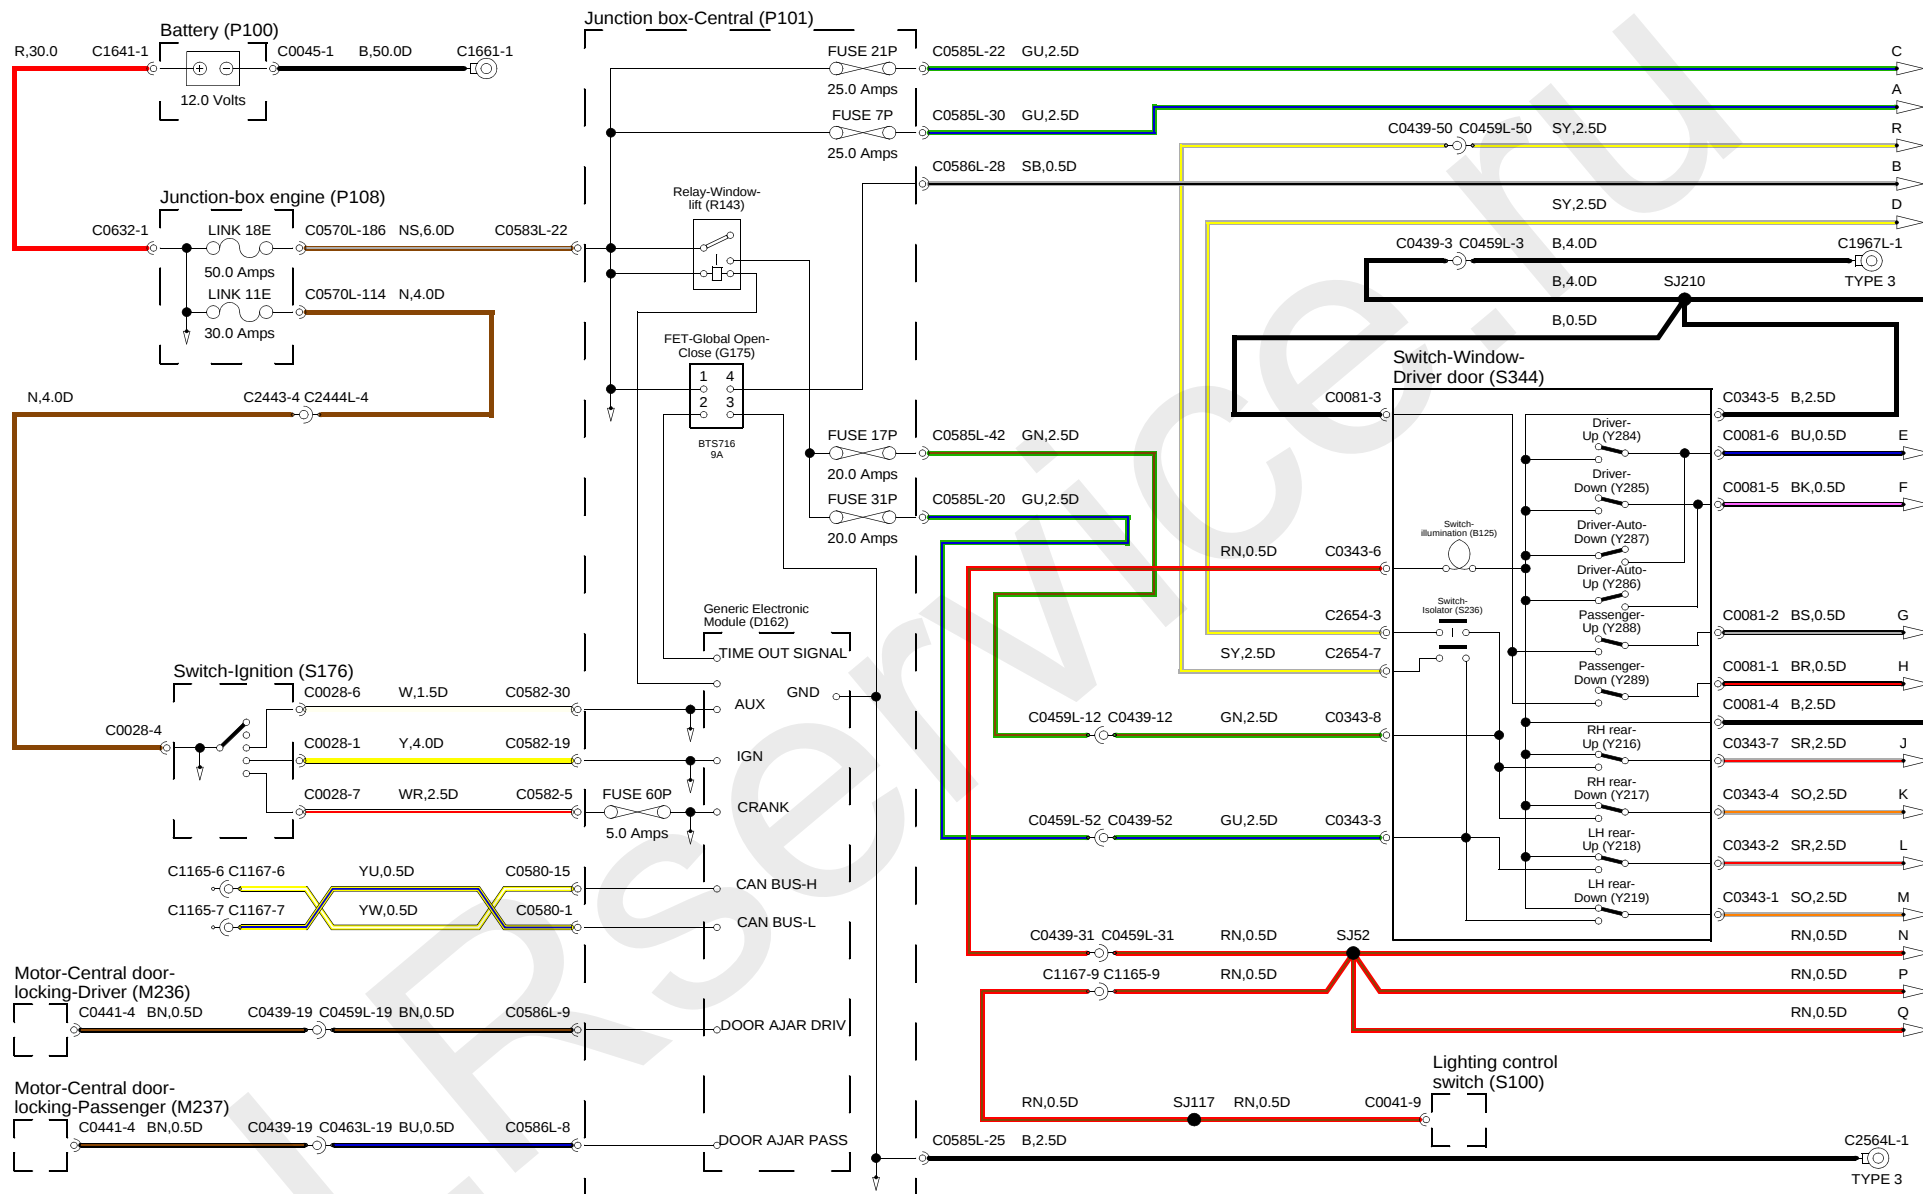





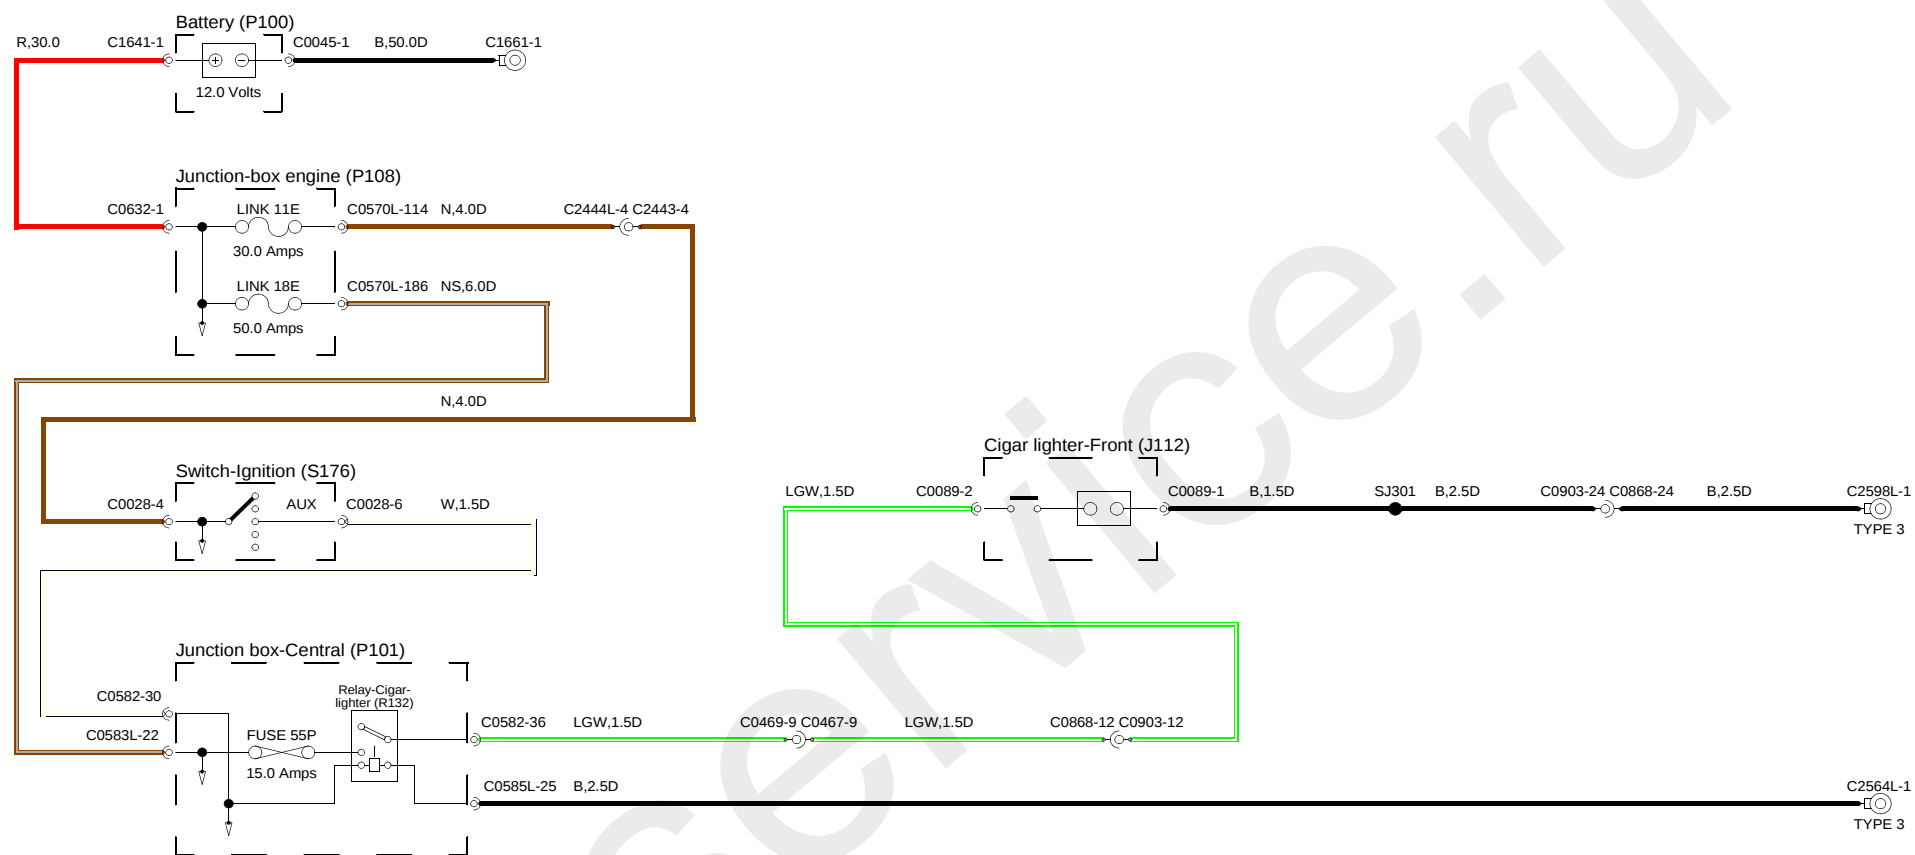

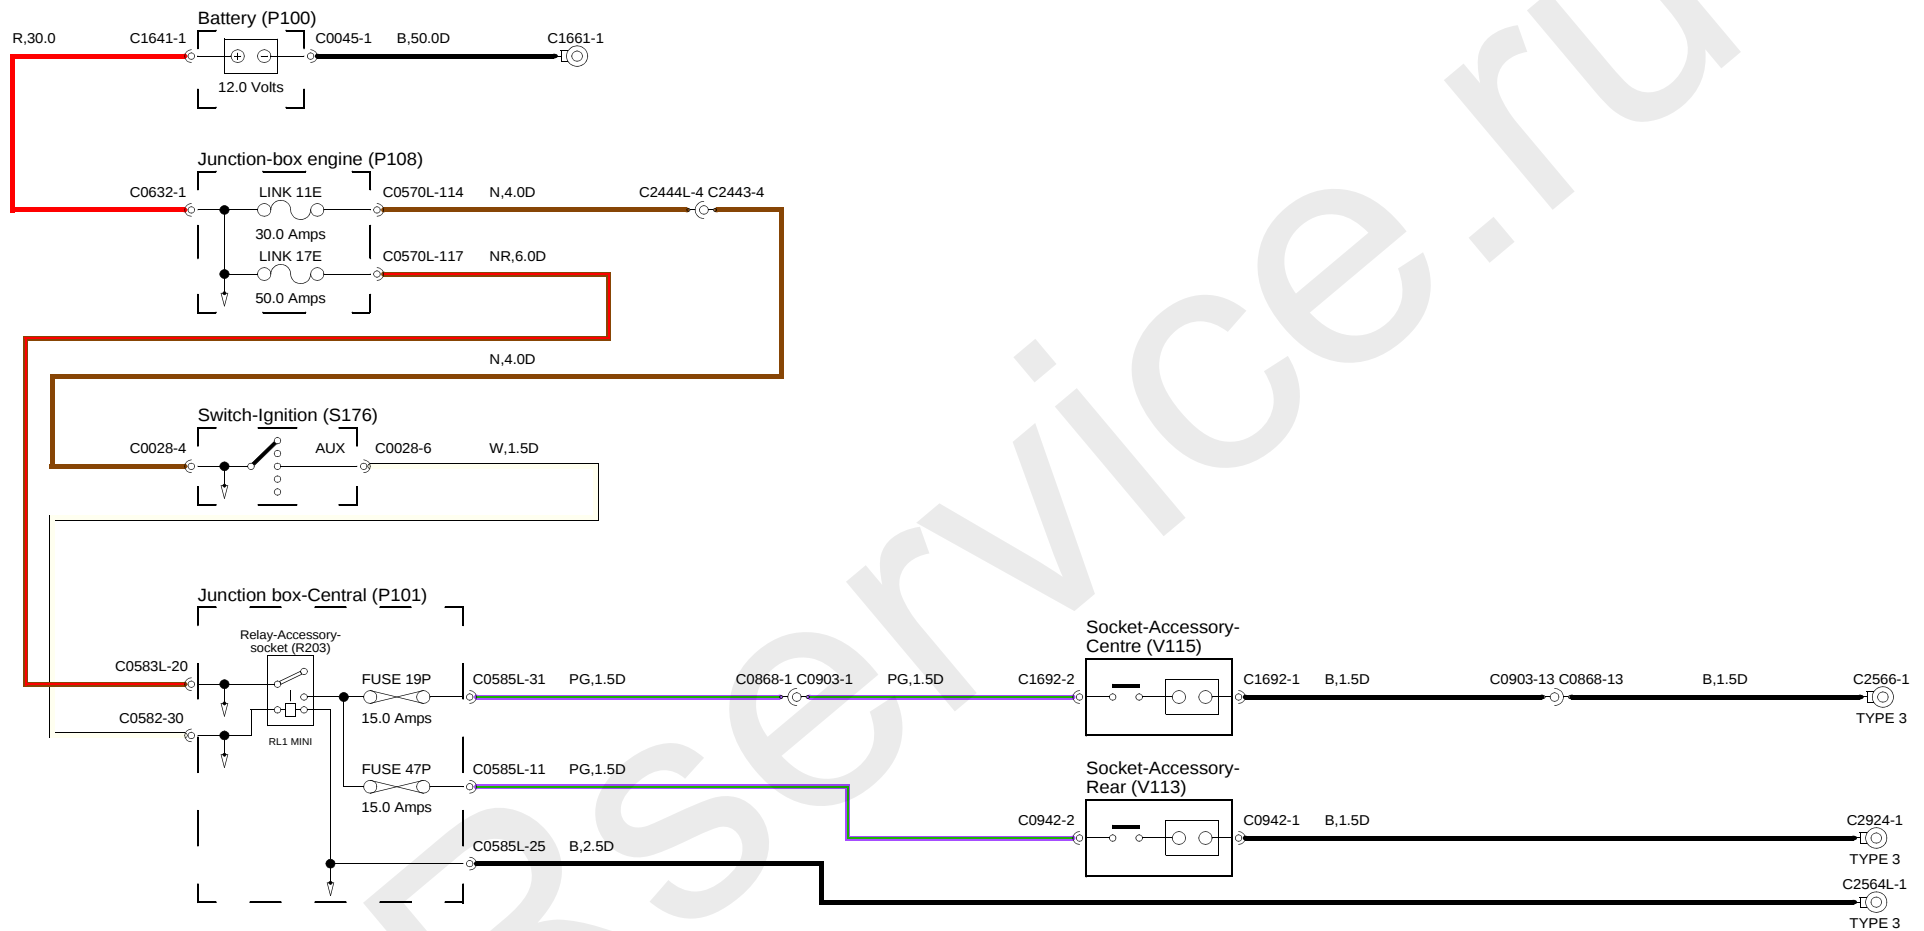


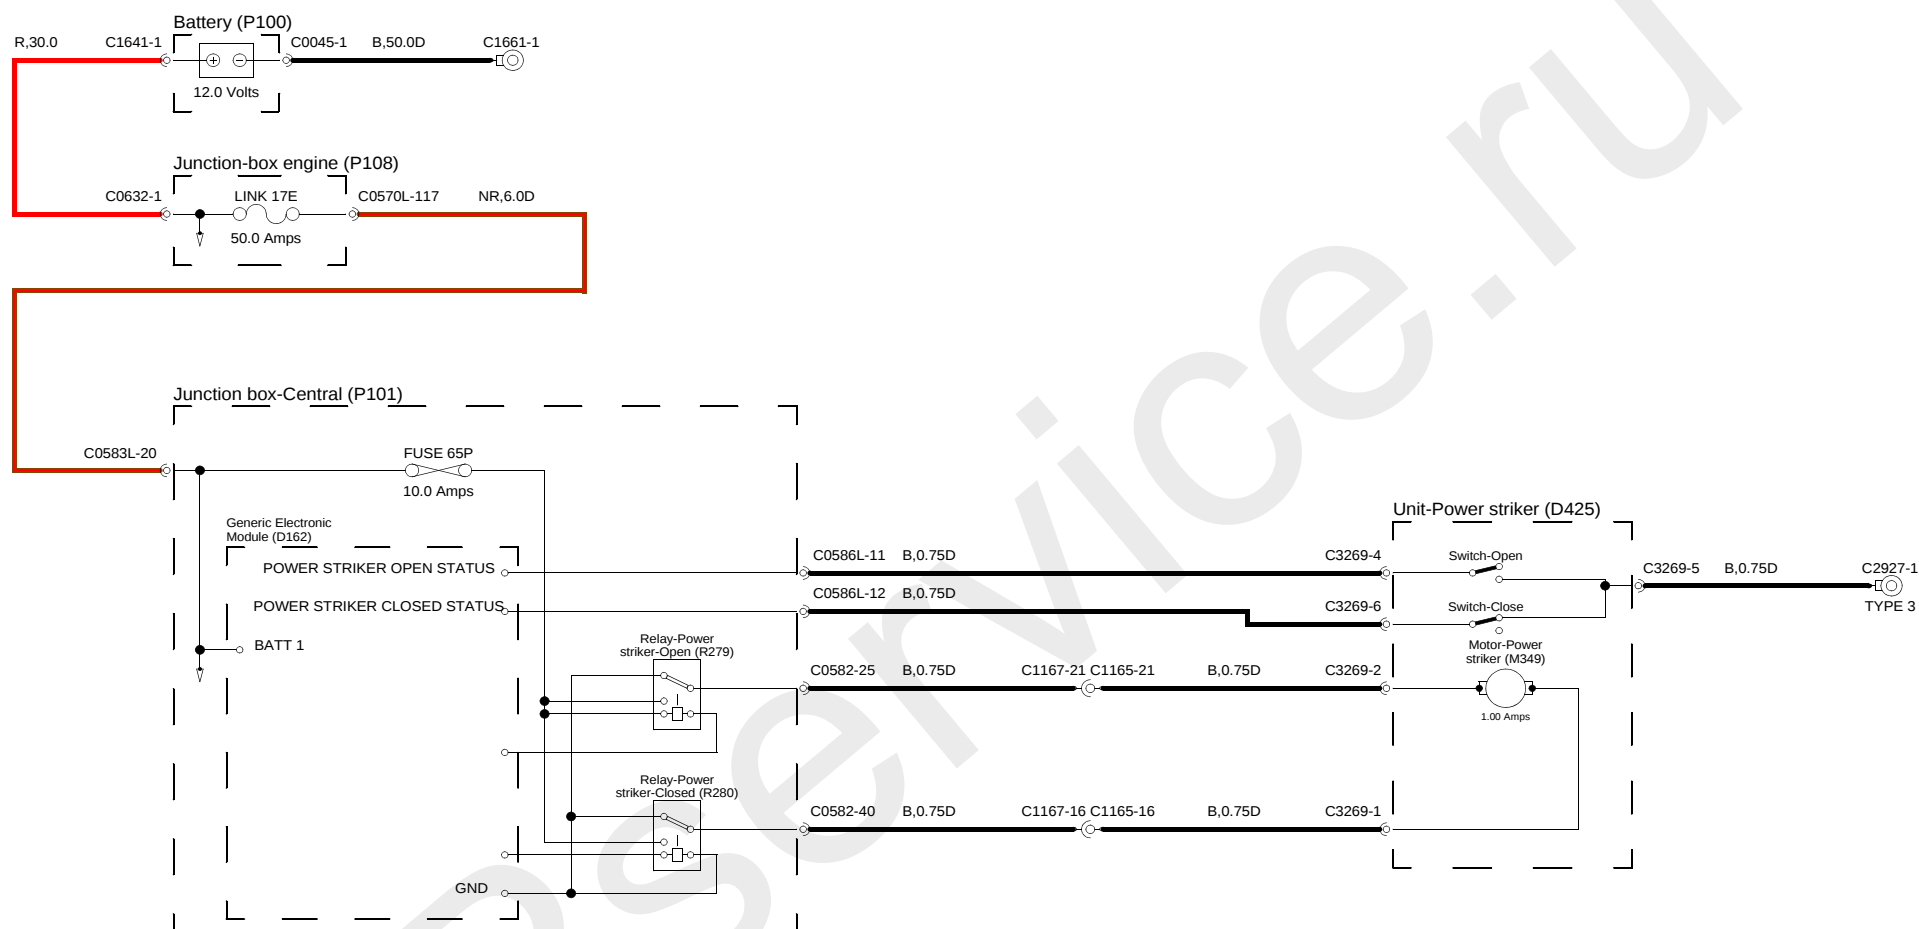


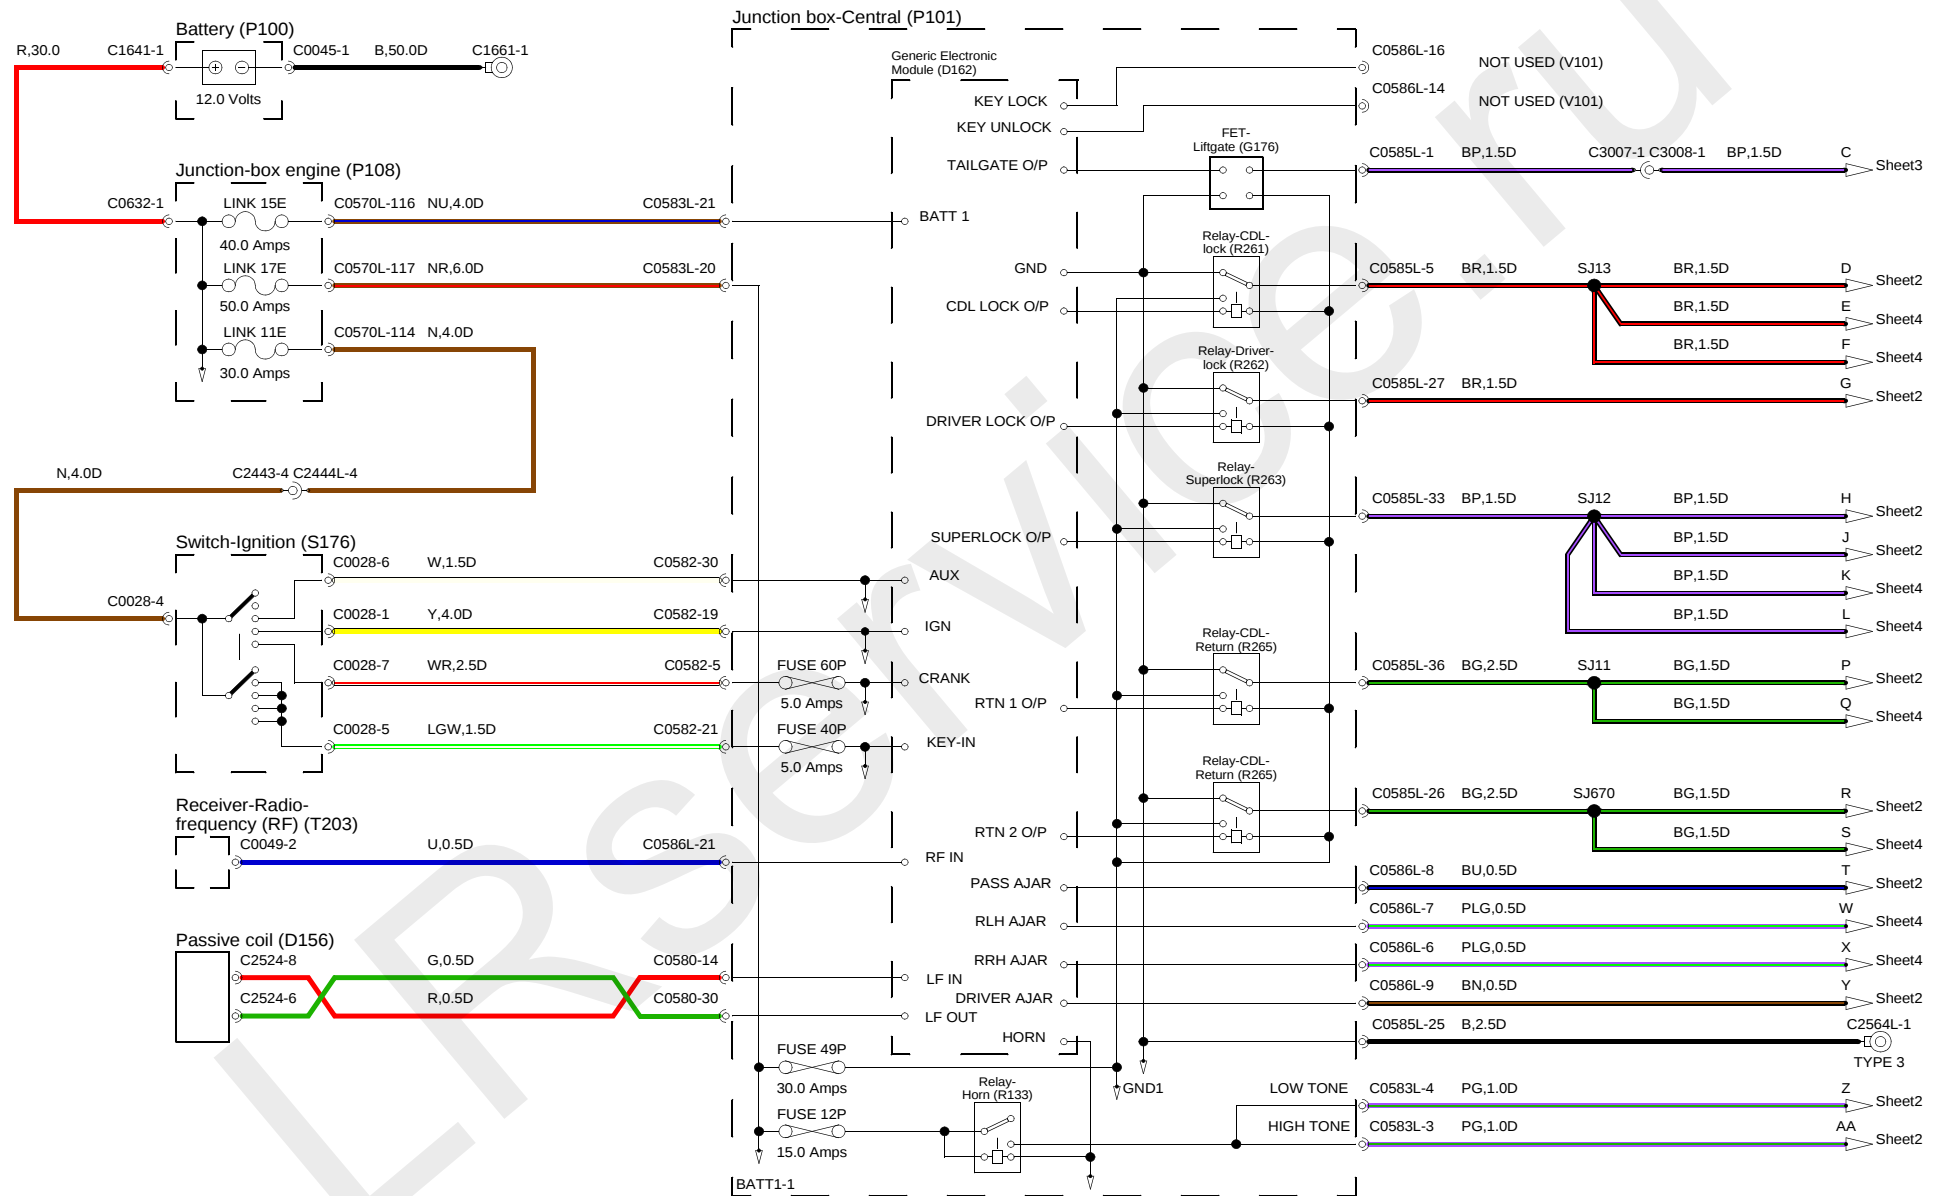


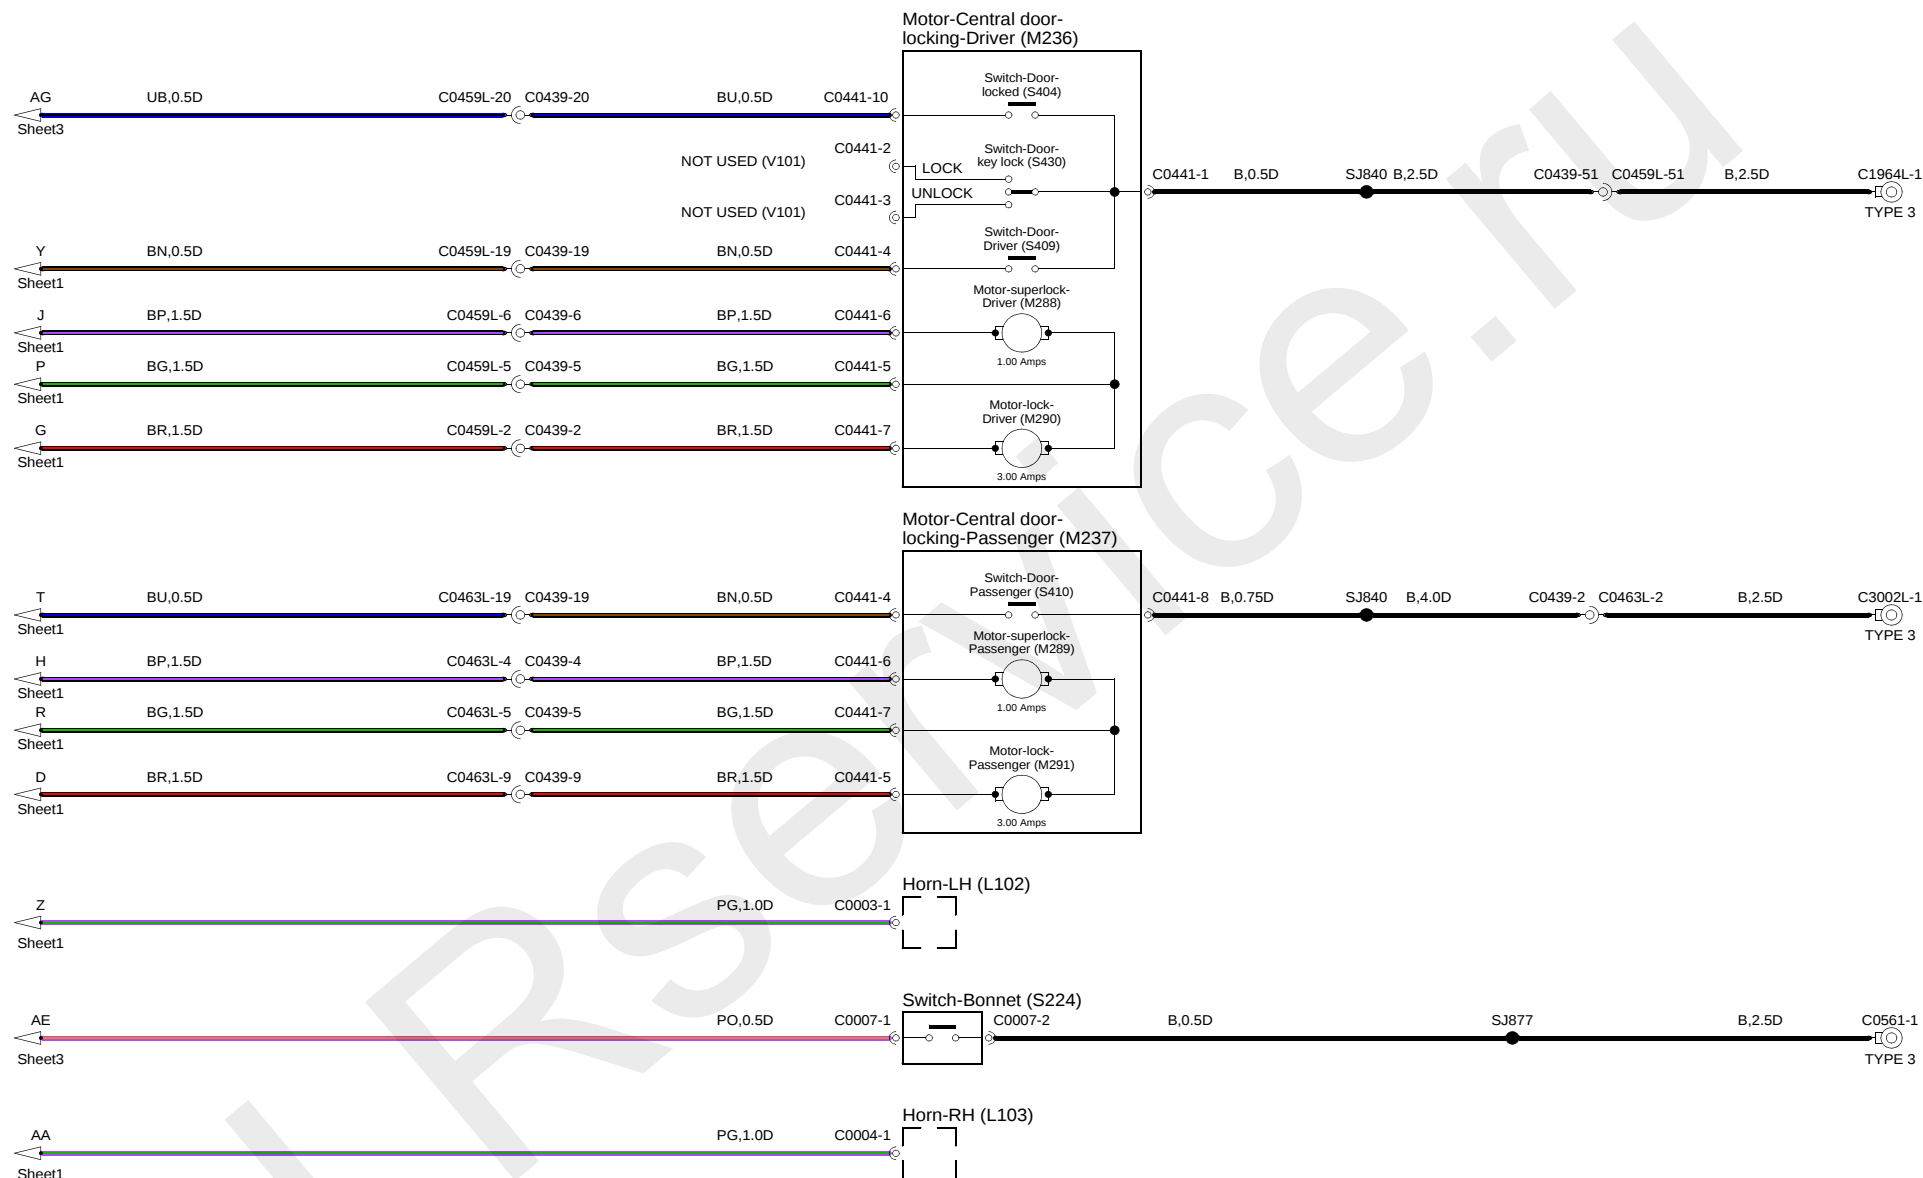





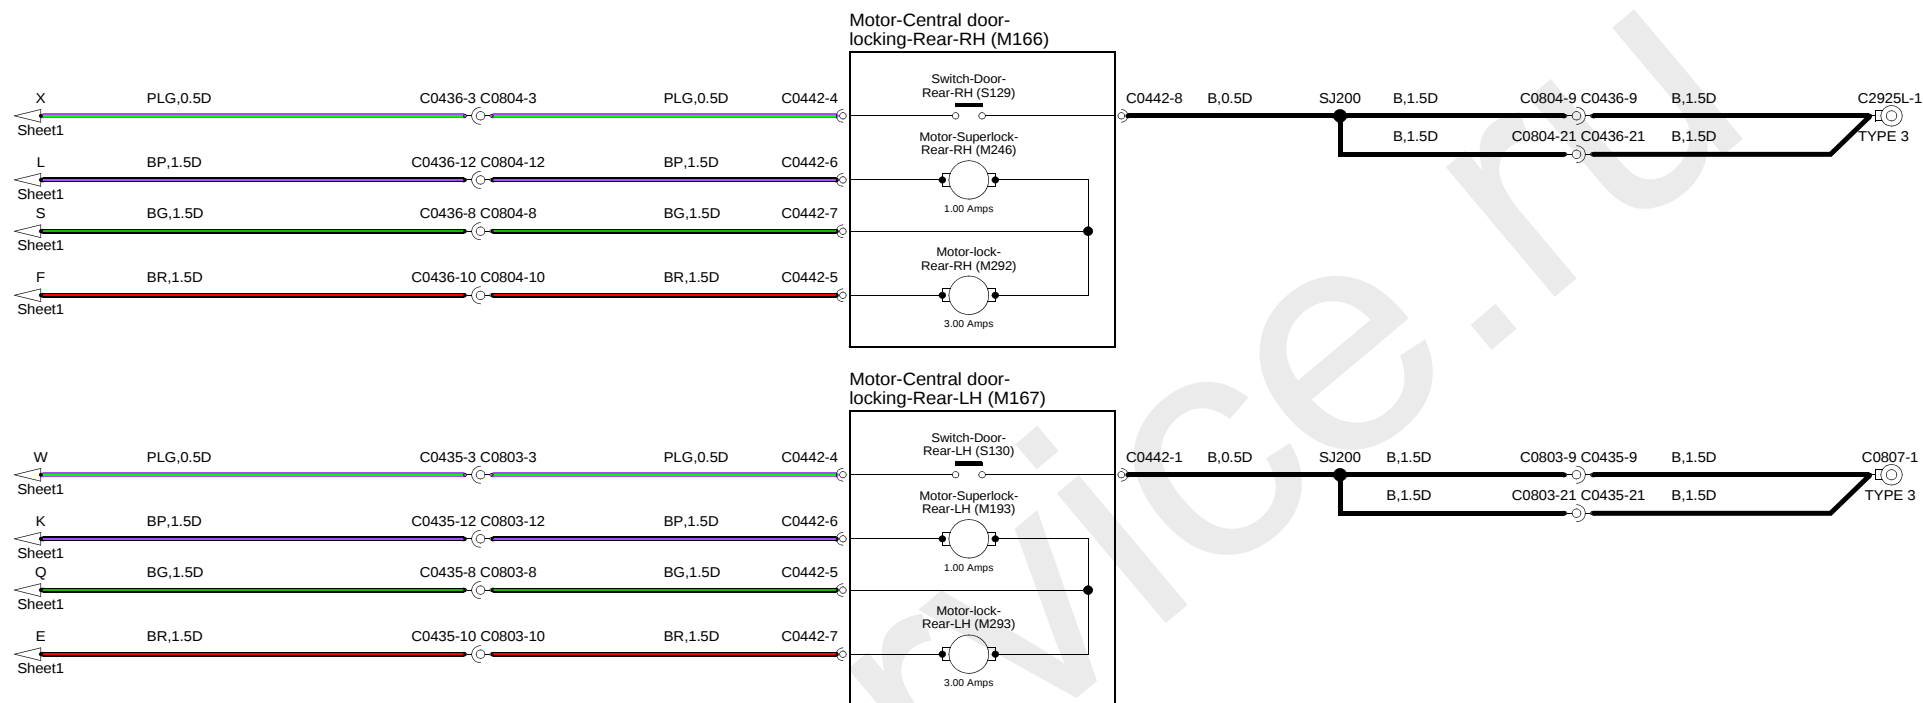


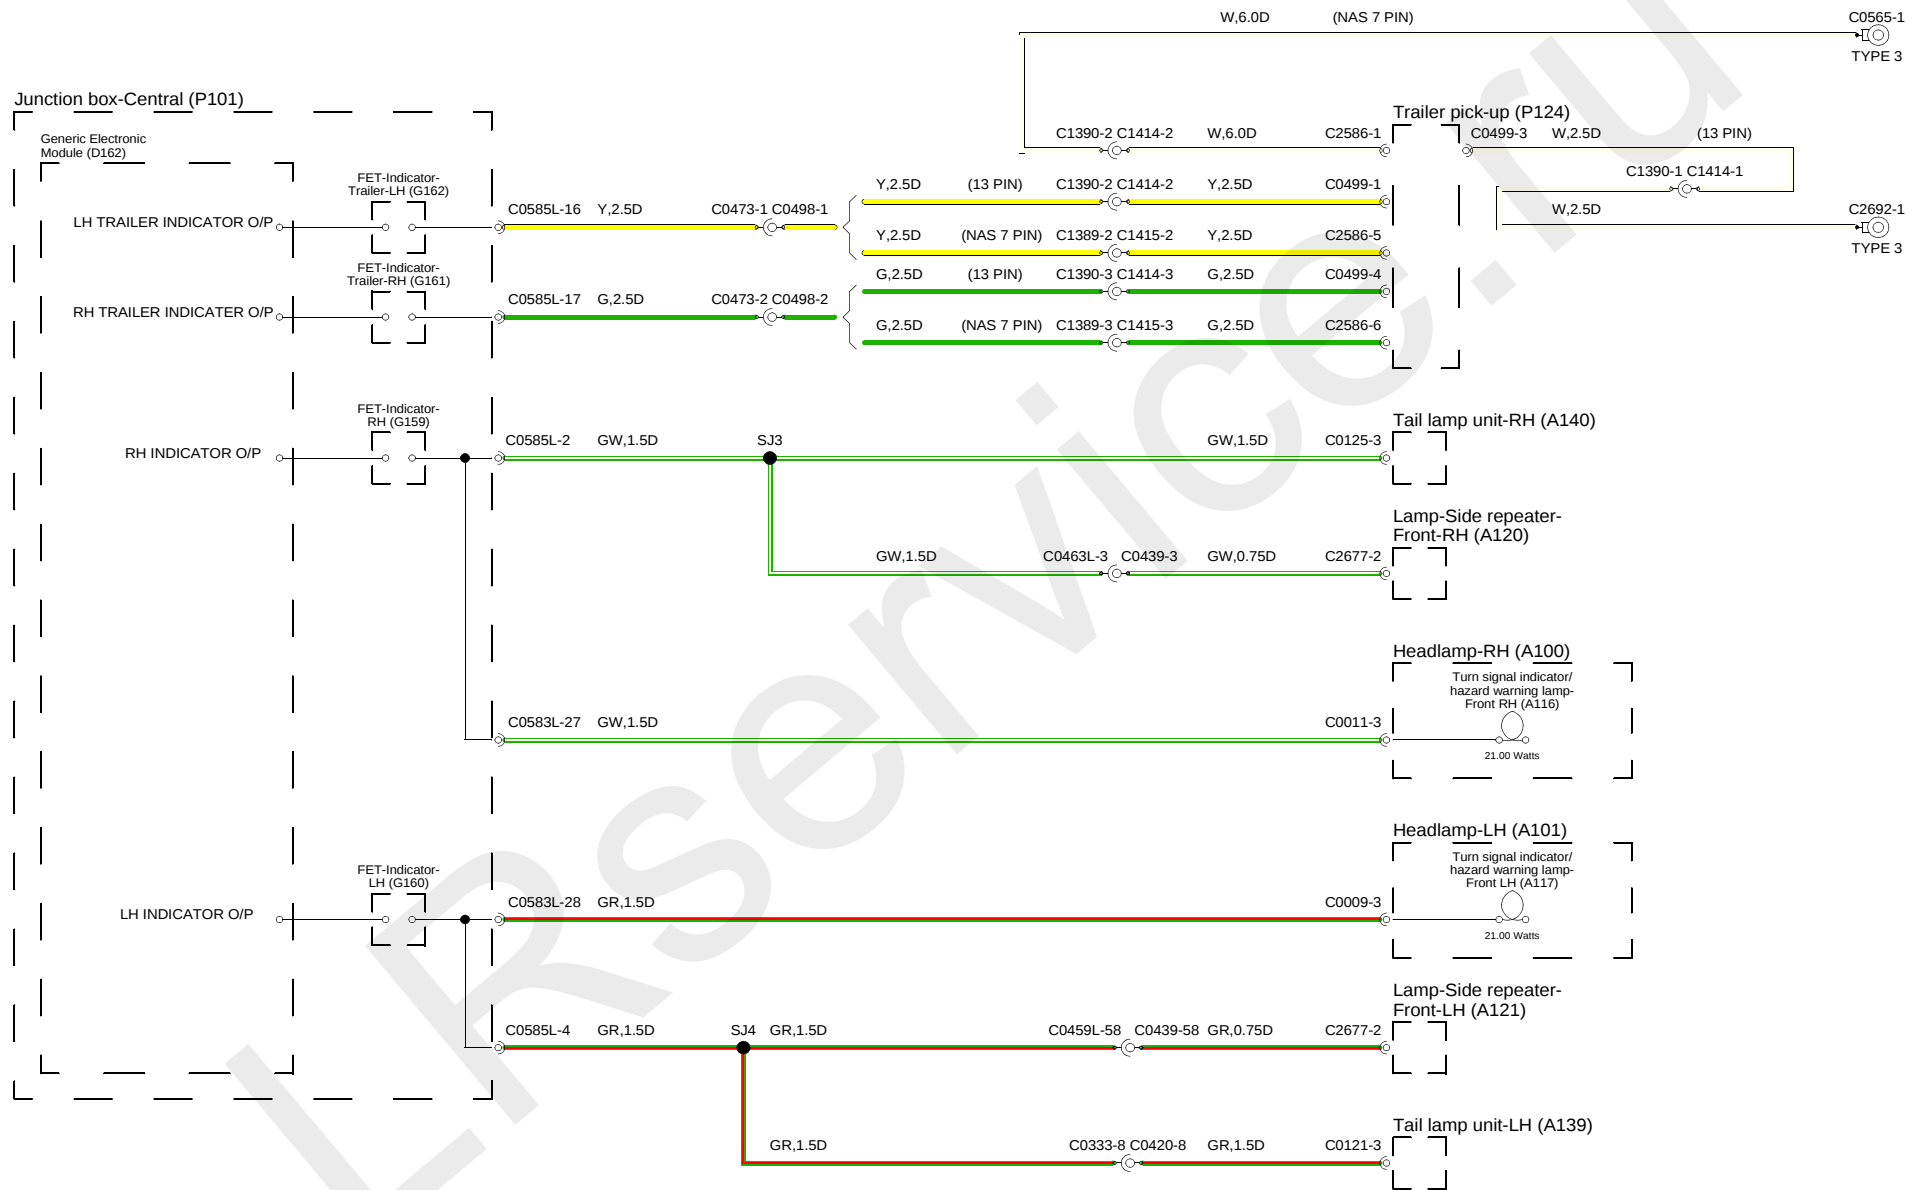


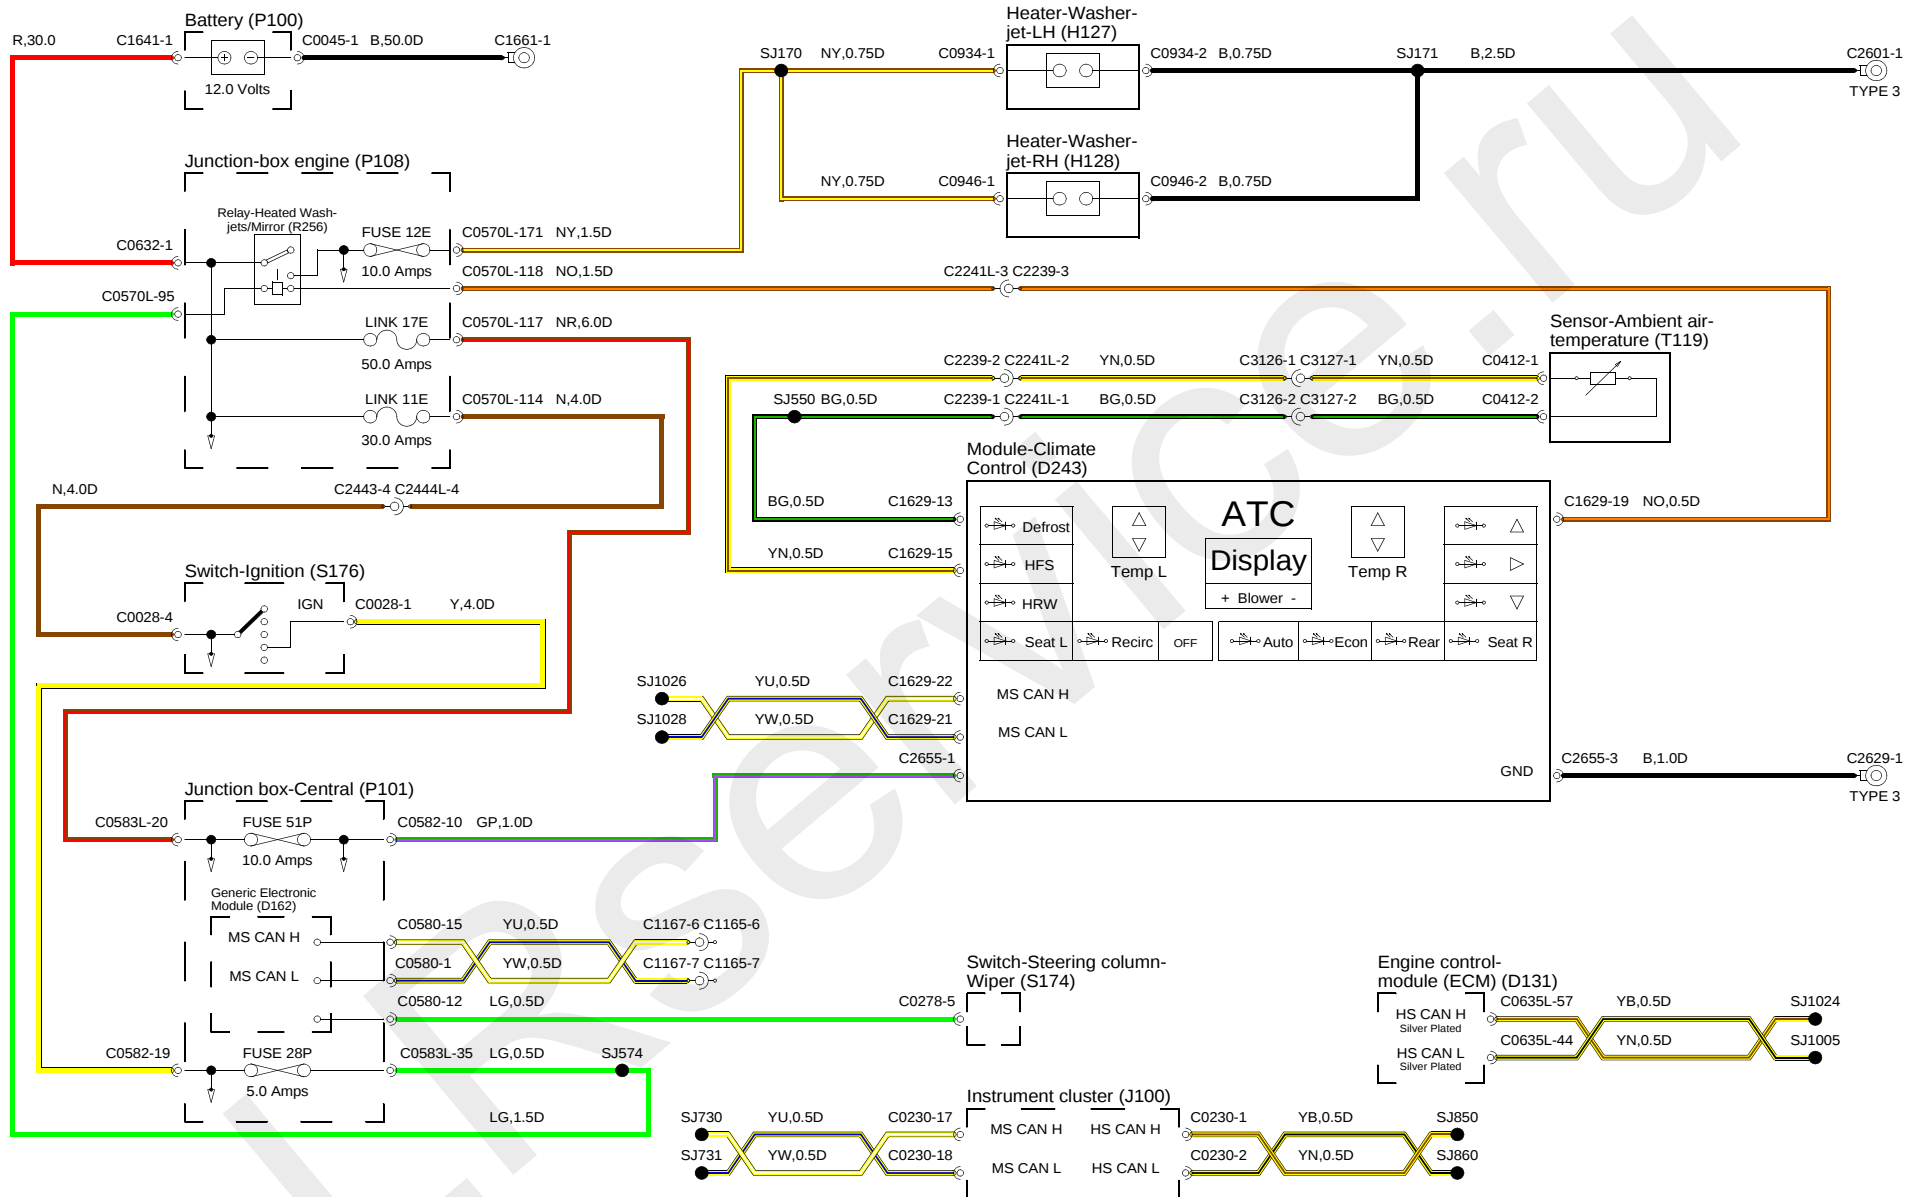

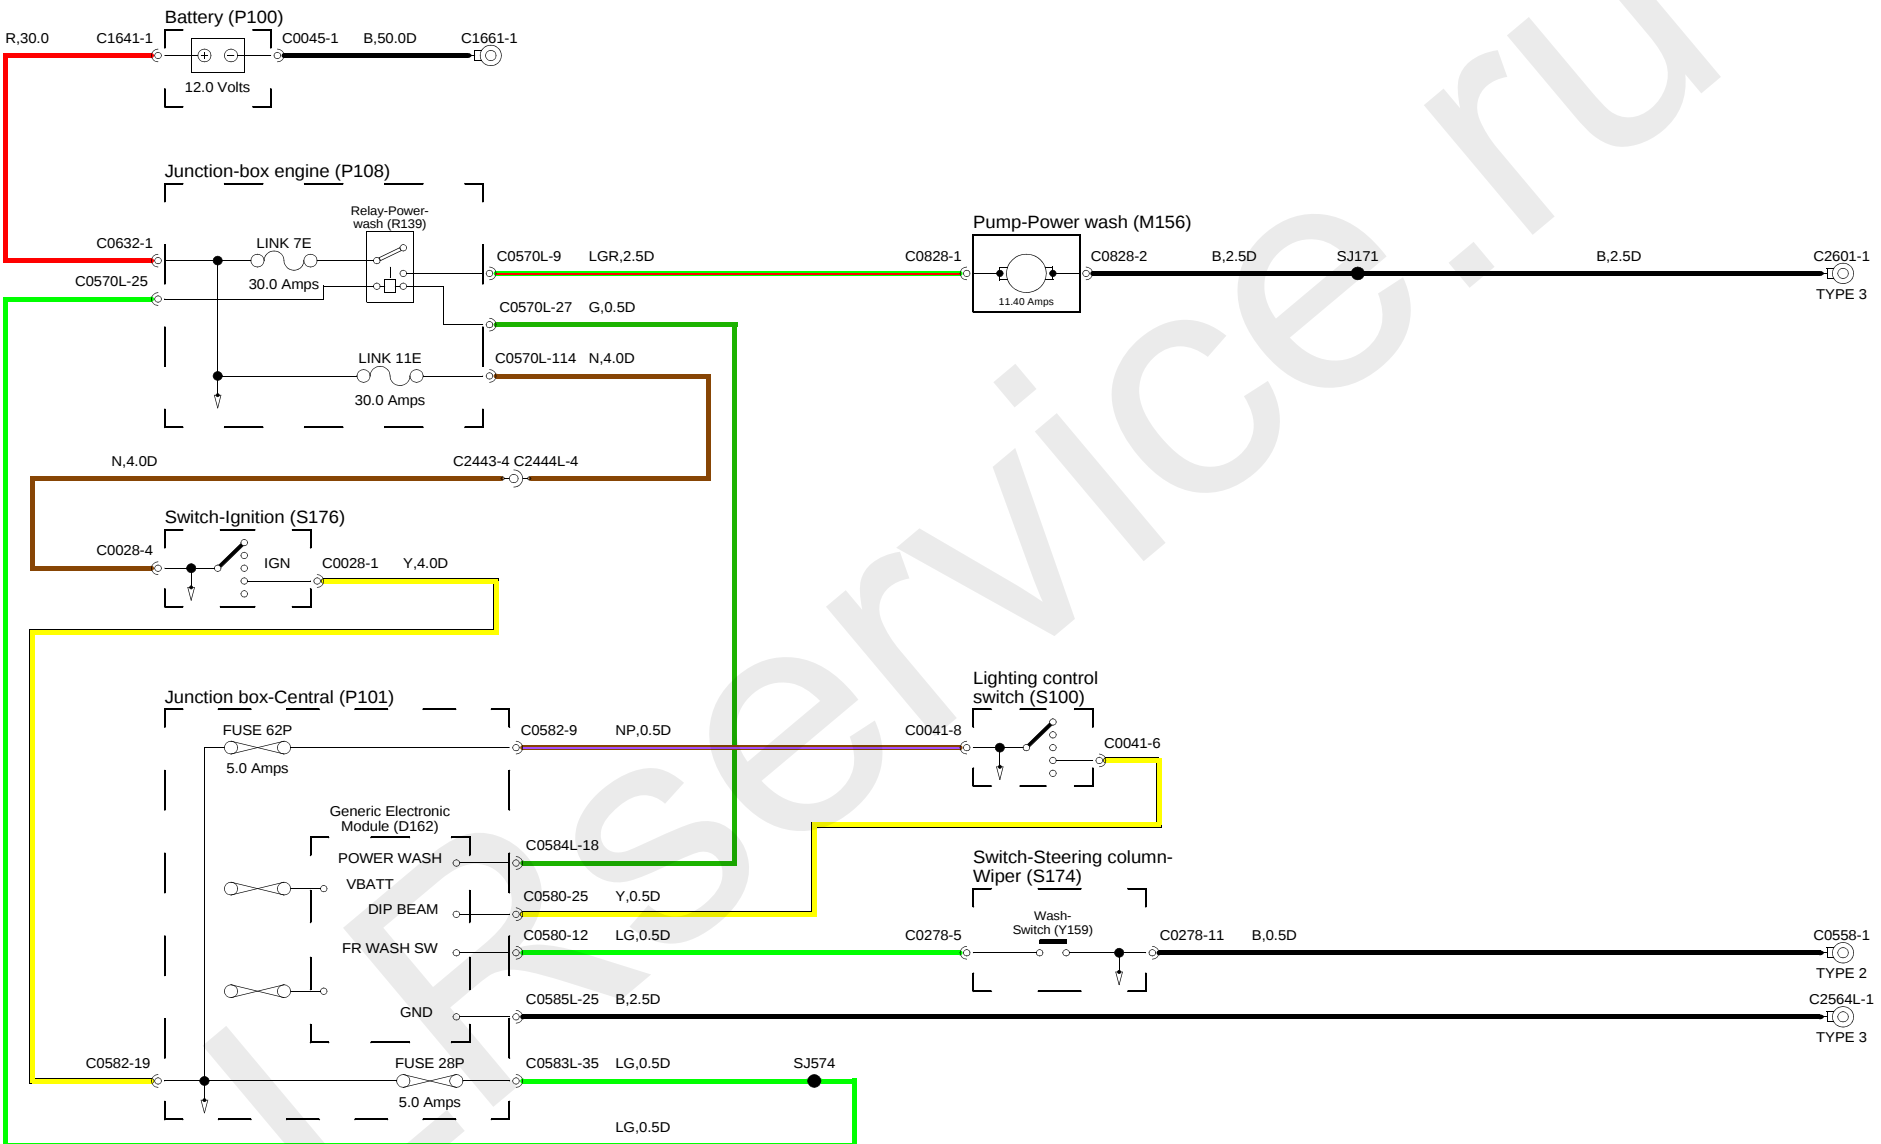


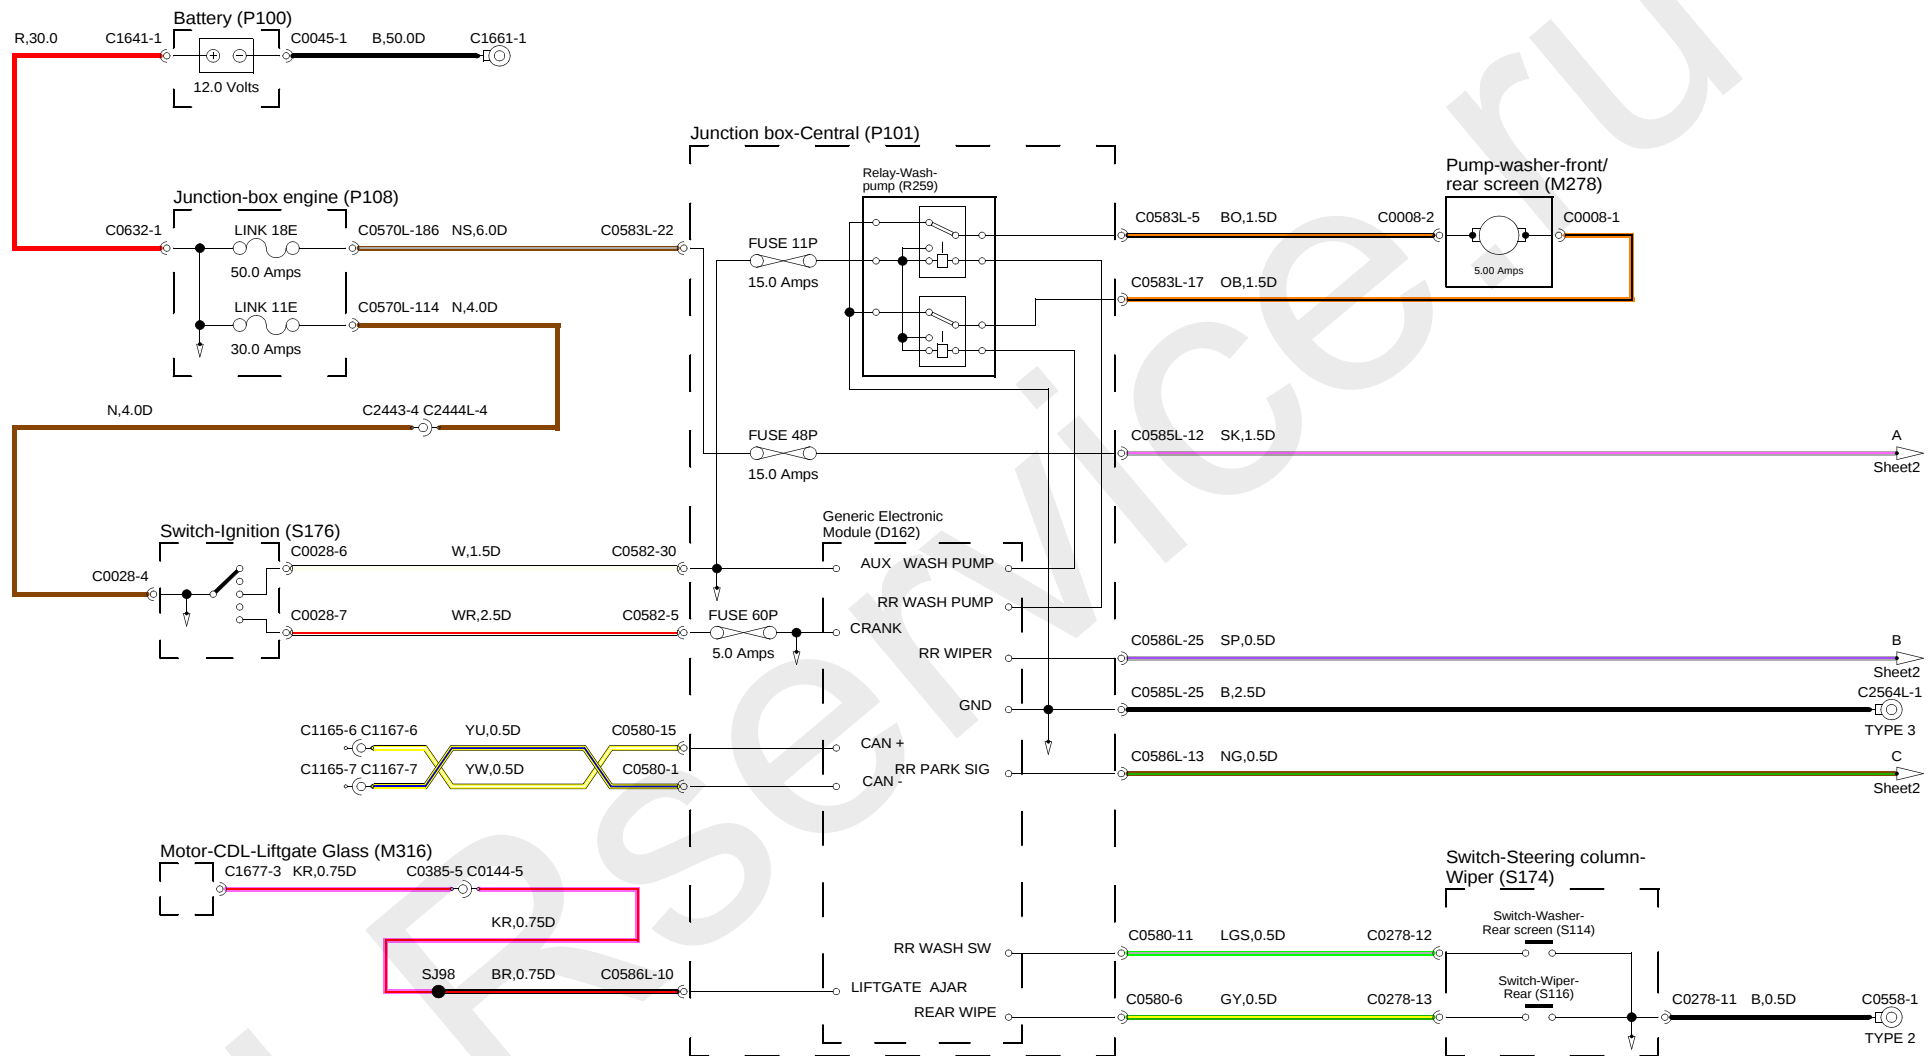


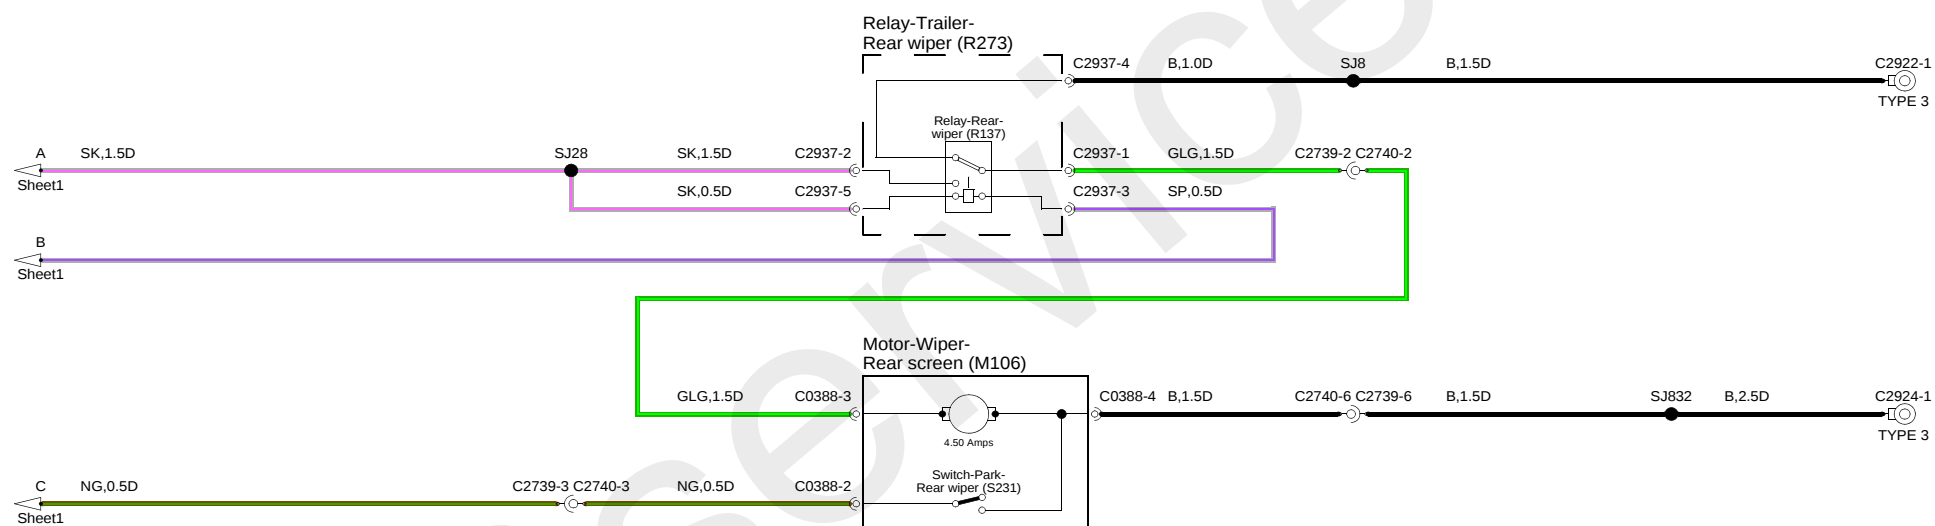



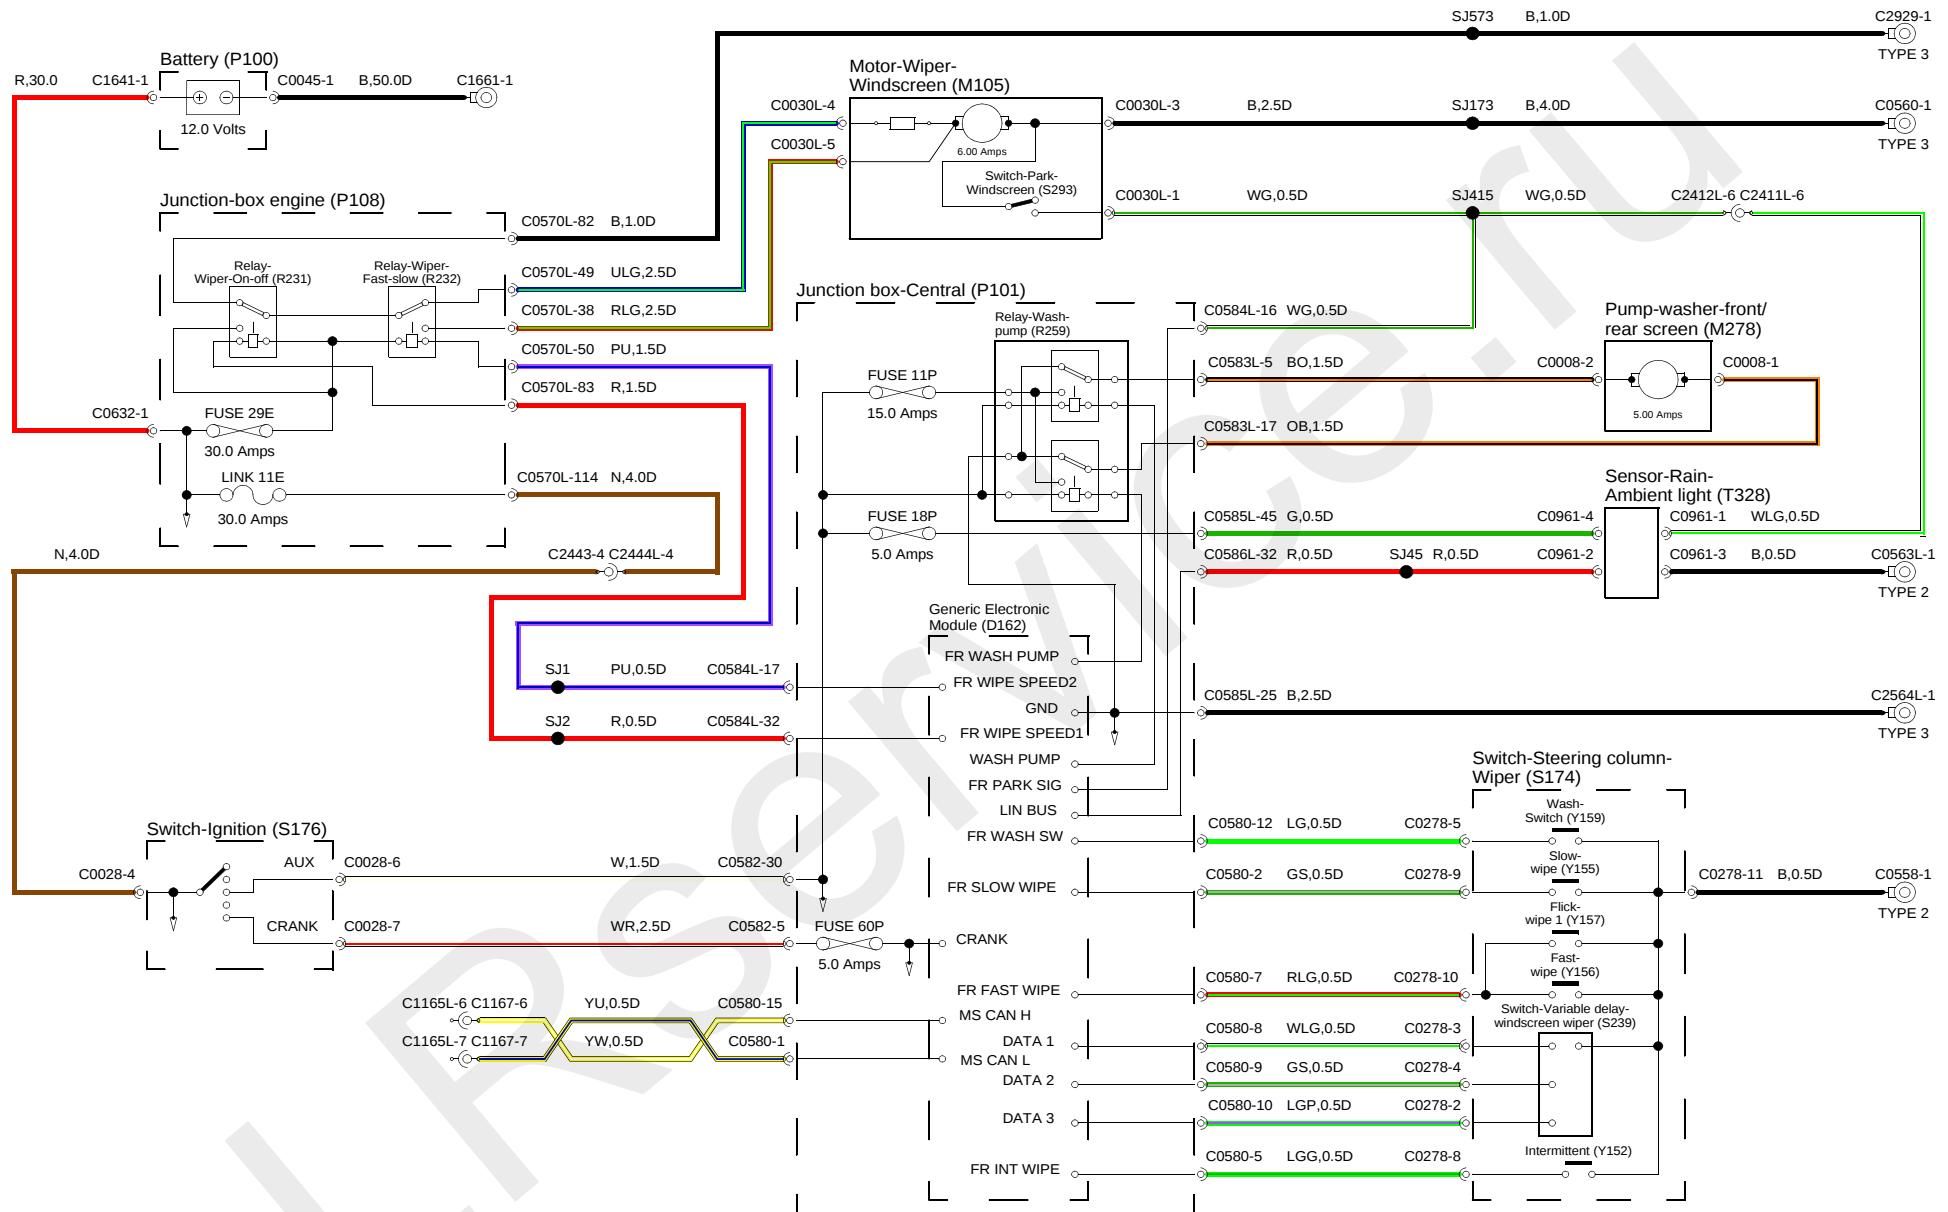


501-17 - ROOF OPENING PANEL








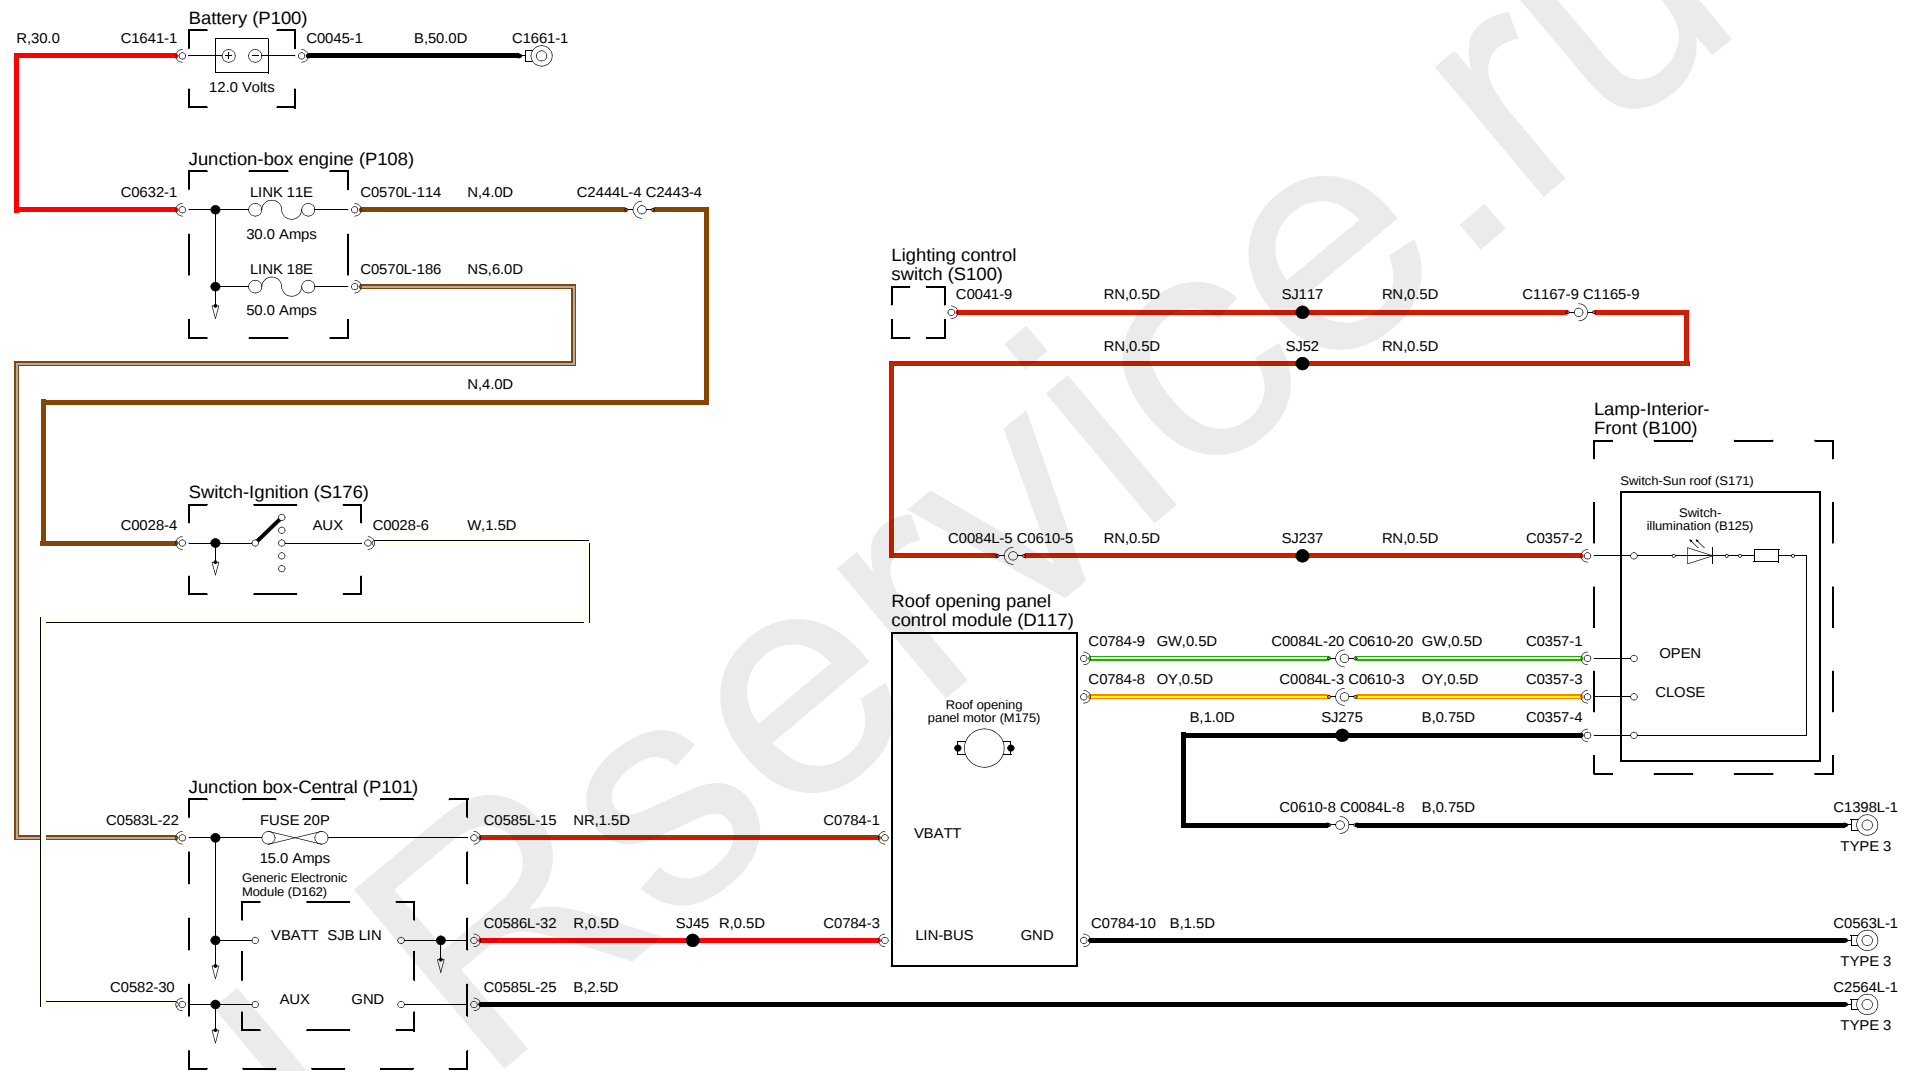


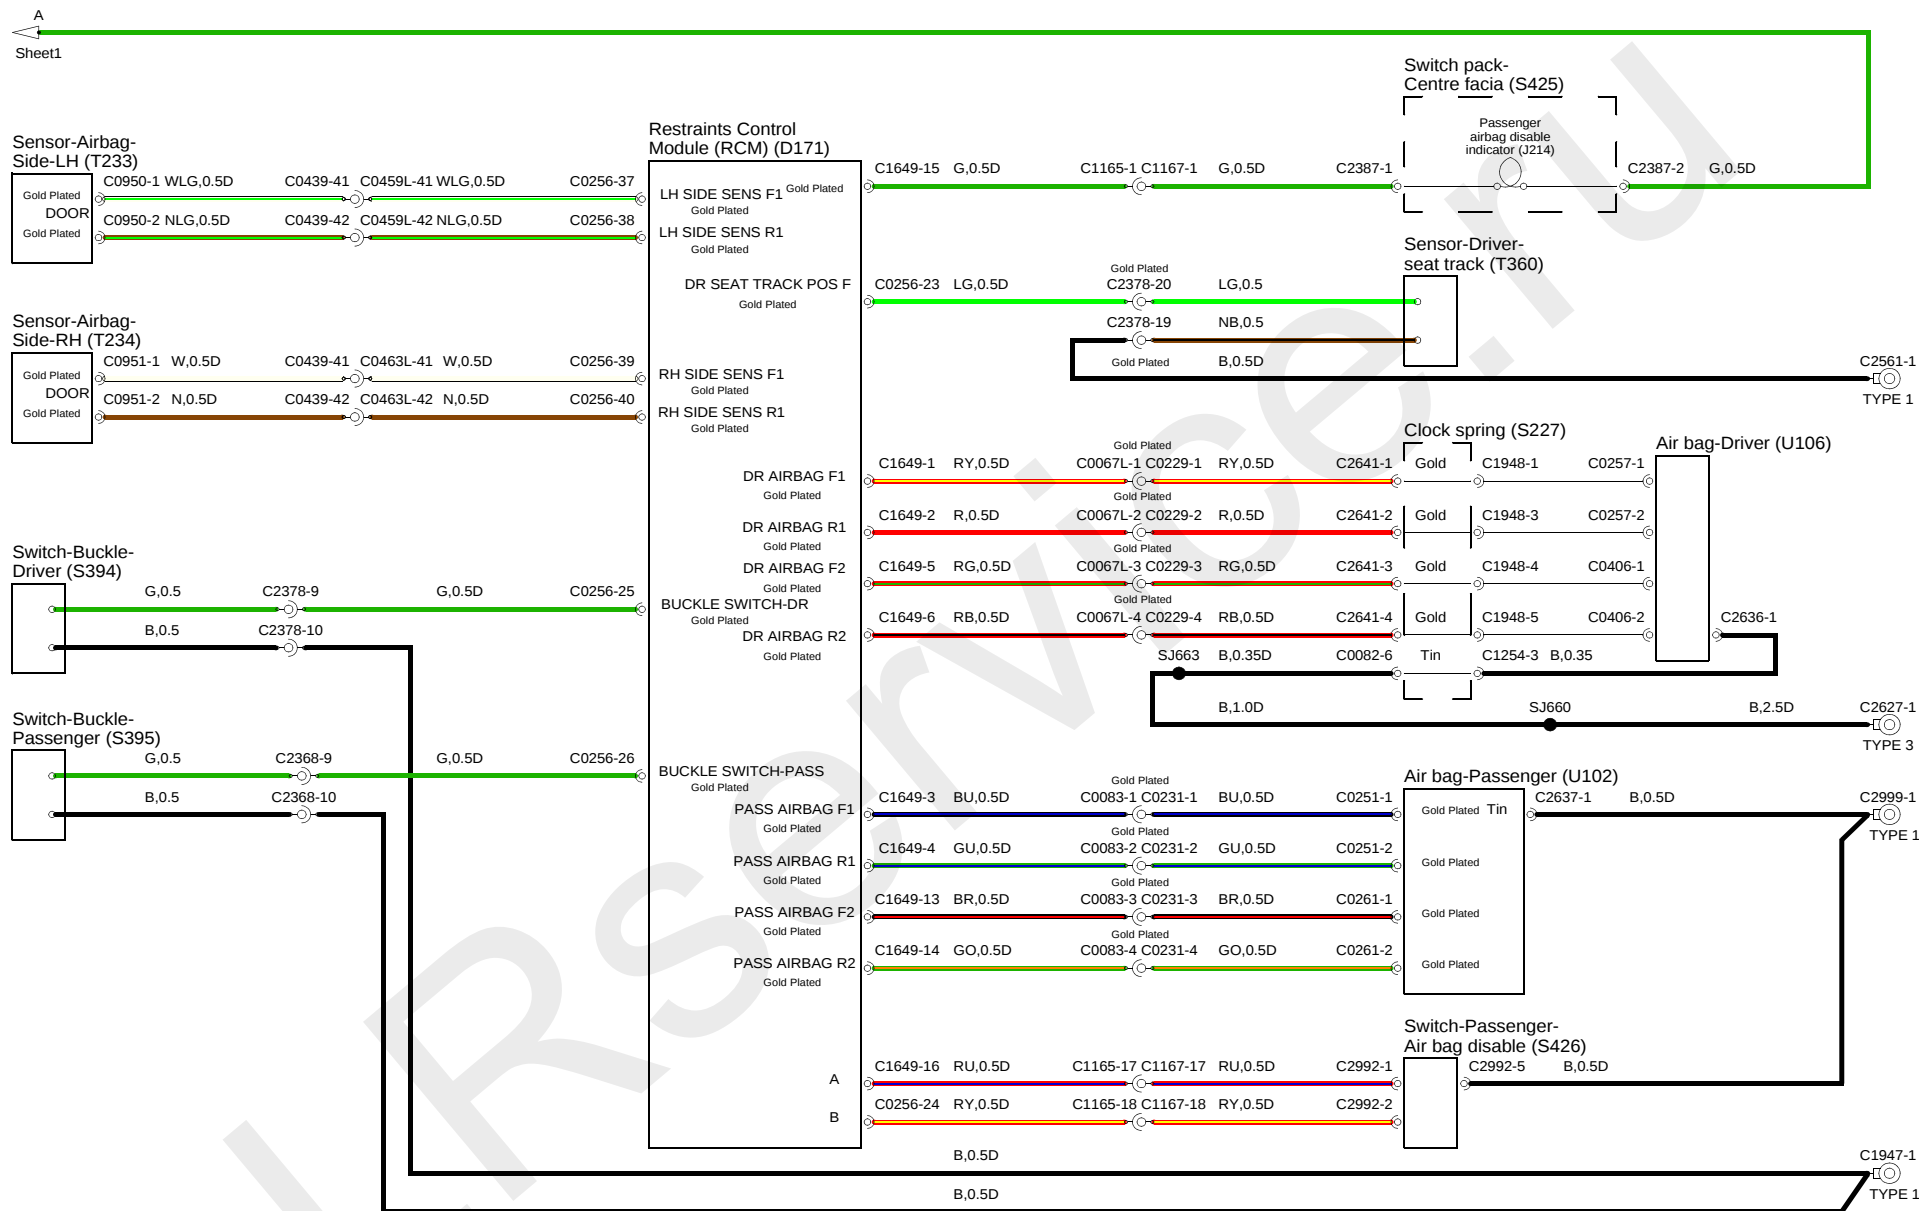



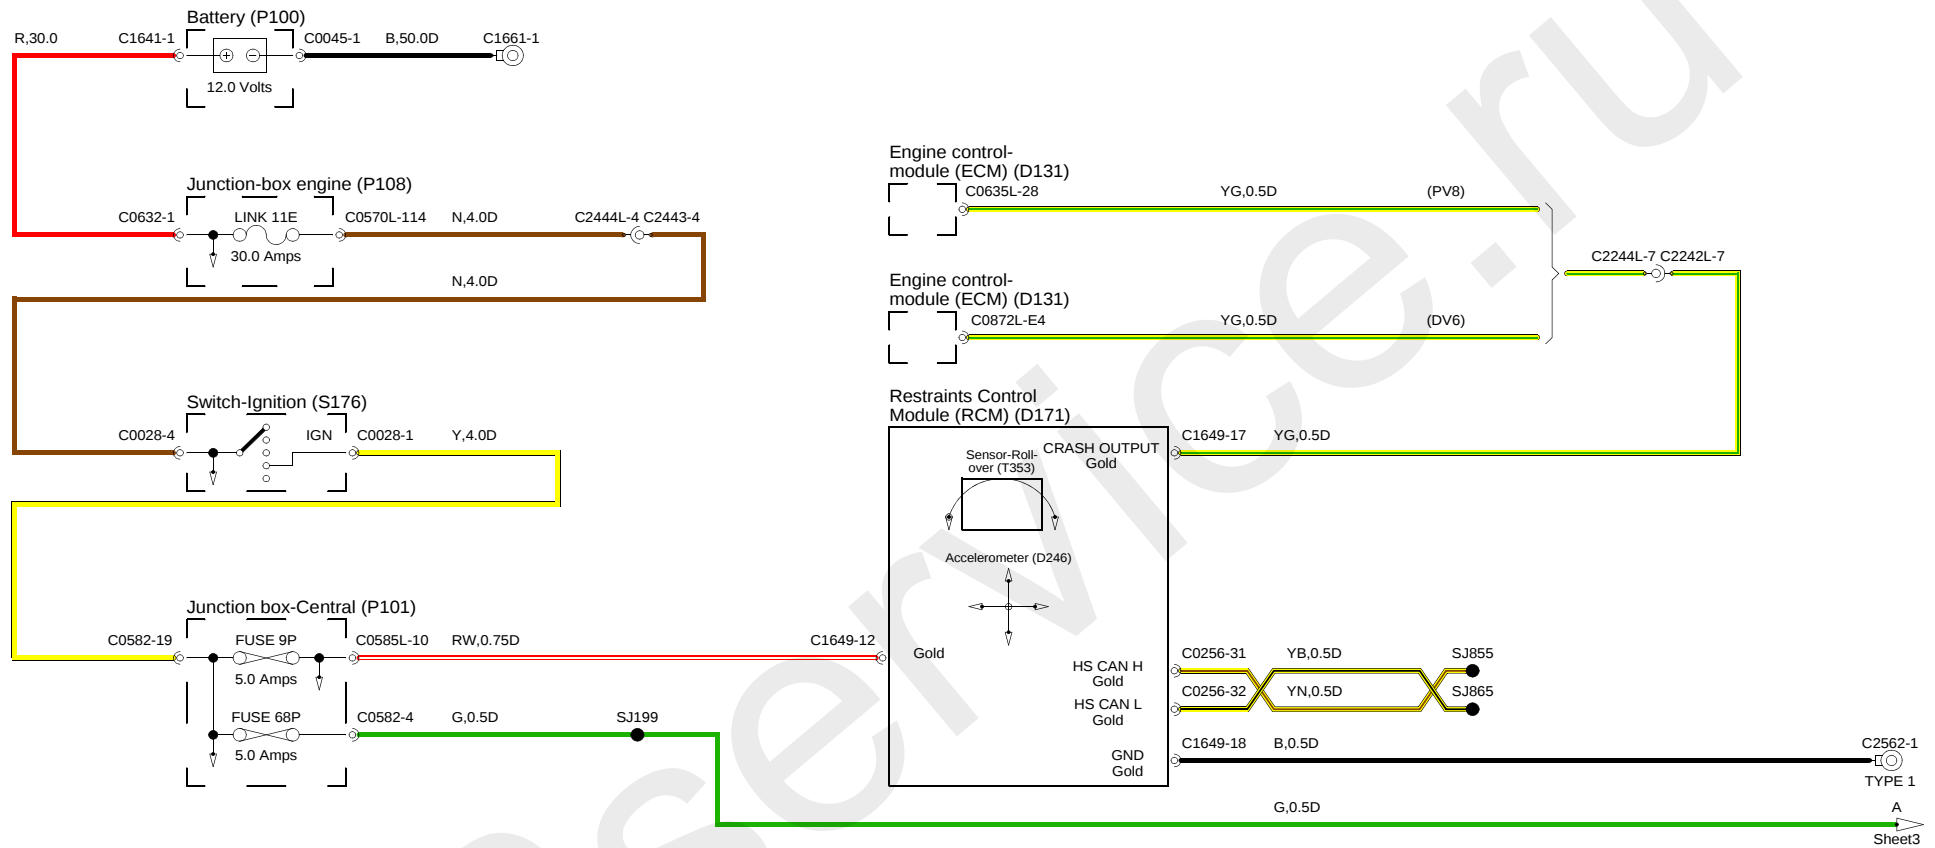


  
Sensor-Front impact-
LH side (T356)Sensor-Air bag-Side-
Rear-LH (T358)Sensor-Air bag-Side-
Rear-LH (T358)

       
Air bag-Side-LH (U108)

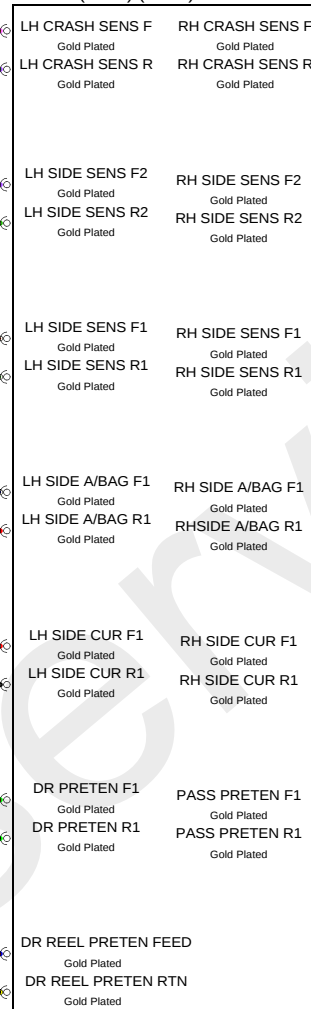Air bag-Side
curtain-LH (U123)Pre-tensioner-
Driver (U121)Tensioner-Safety
belt-Driver (U127)Restraints Control
Module (RCM) (D171)Sensor-Front impact-
RH side (T357)Sensor-Air bag-Side-
Rear-RH (T359)Sensor-Air bag-Side-
Rear-RH (T359)






 
 
 
Air bag-Side-RH (U107)

 Air bag-Side
curtain-RH (U124)Pre-tensioner-
Passenger (U122)


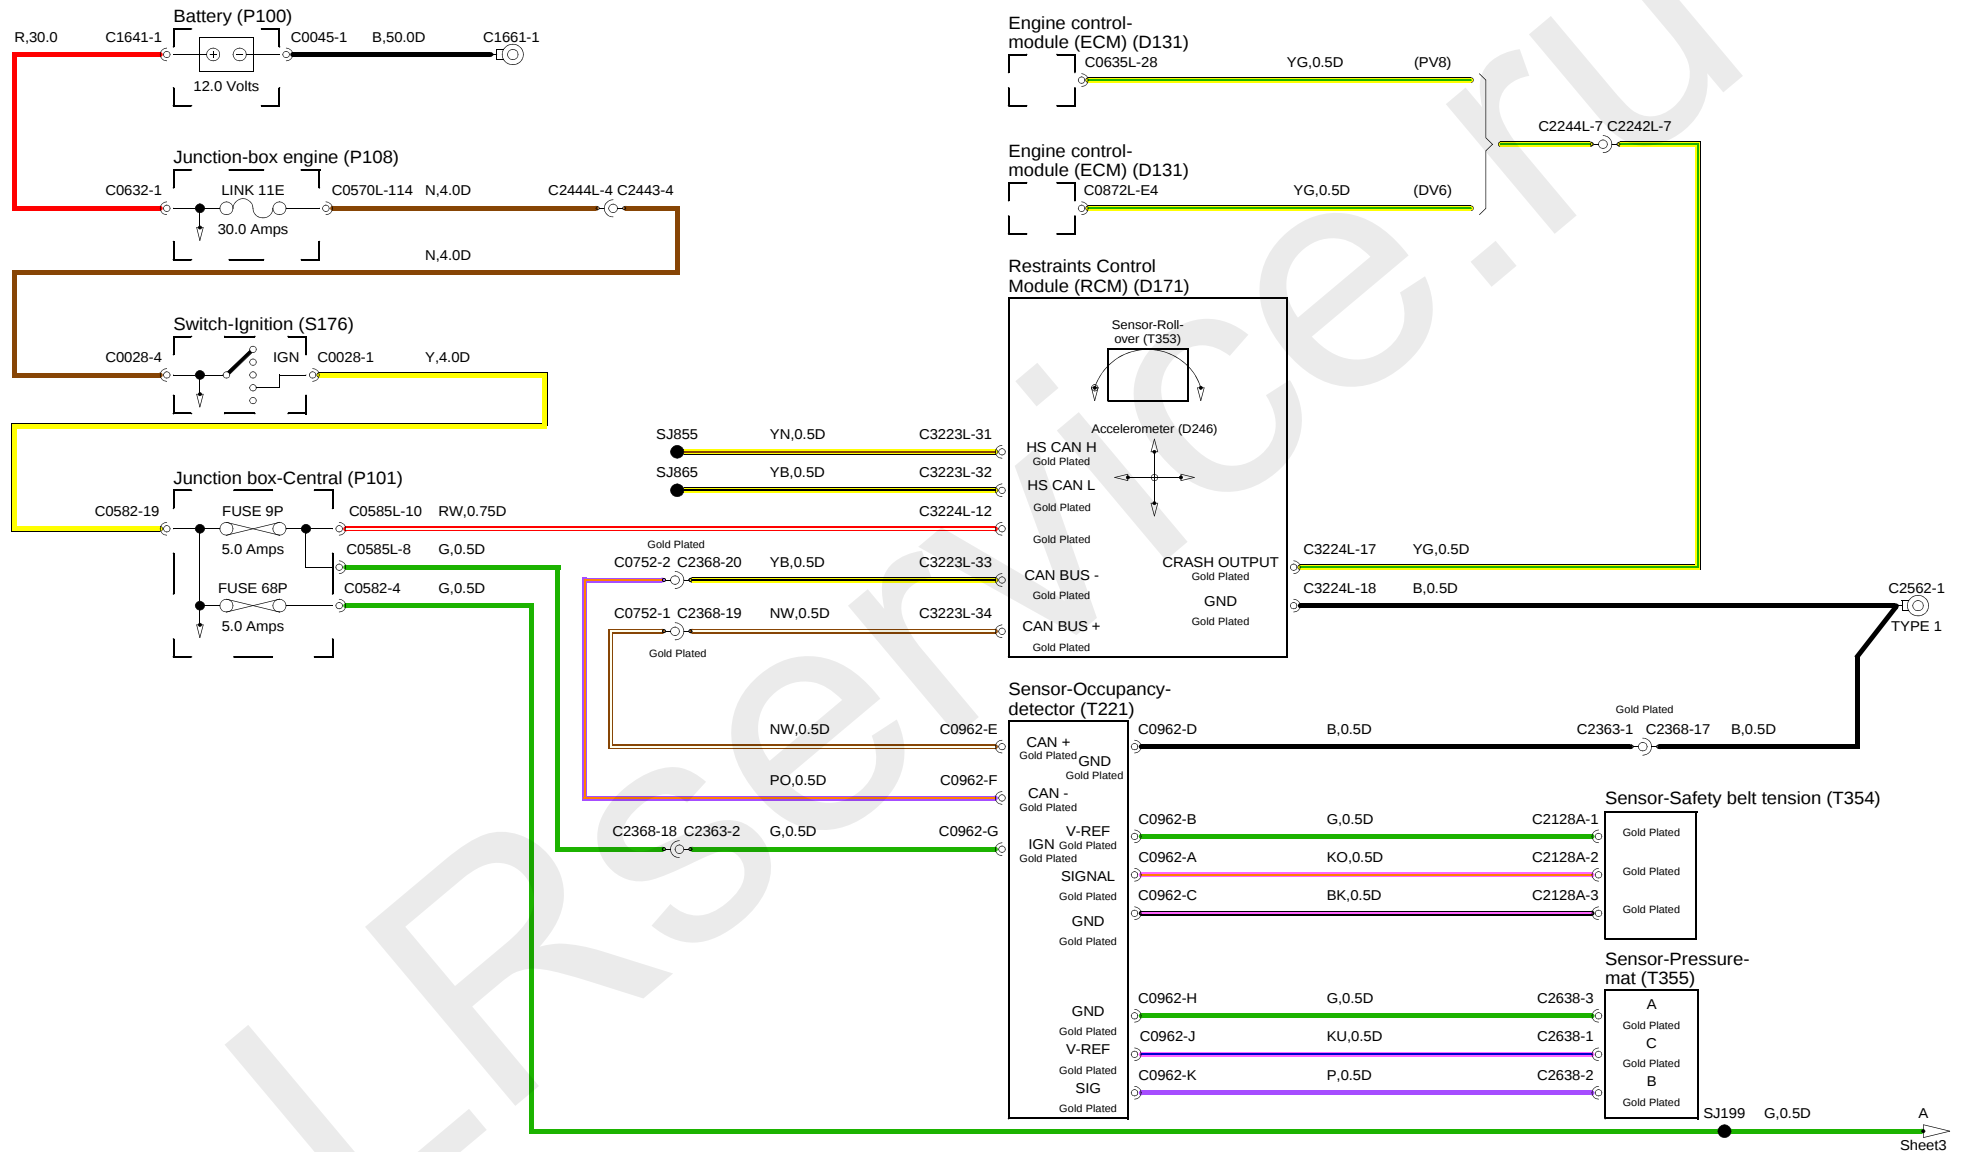


Sensor-Front impact-
LH side (T356)Sensor-Air bag-Side-
Rear-LH (T358)Sensor-Air bag-Side-
Rear-LH (T358)

       Air bag-Side-LH (U108)

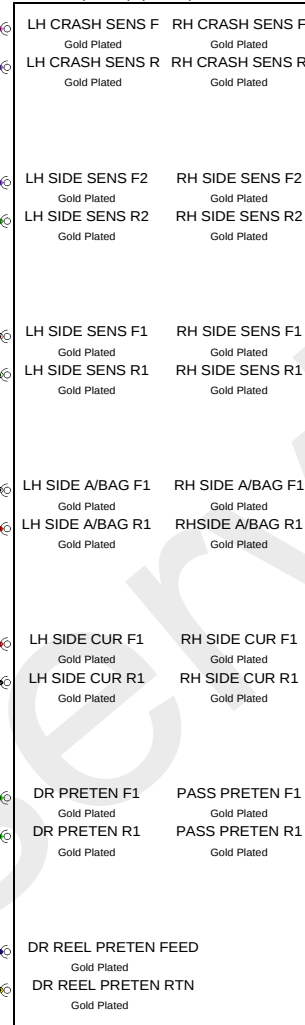Air bag-Side
curtain-LH (U123)Pre-tensioner-
Driver (U121)Tensioner-Safety
belt-Driver (U127)Restrains Control
Module (RCM) (D171)Sensor-Front impact-
RH side (T357)Sensor-Air bag-Side-
Rear-RH (T359)Sensor-Air bag-Side-
Rear-RH (T359)

  Air bag-Side-RH (U107)

Air bag-Side
curtain-RH (U124)Pre-tensioner-
Passenger (U122)